

Notebook Web Camera

RF-NBCAM

User Guide

Rocketfish RF-NBCAM Notebook Web Camera

Contents

Important safety instructions	2
Web camera components	3
Setting up the Web camera	3
Using the Web camera.....	6
Legal notices	8
One-Year Limited Warranty.....	11

Important safety instructions

Do not attempt to open the Web camera. Doing so voids your warranty.

Do not allow moisture of any kind to come in contact with the Web camera. Keep away from humidity and never immerse in water.

Do not drop the Web camera. A severe jolt may cause permanent damage and is not covered by your warranty.


Place the Web camera on a flat, stable surface before setting it up.

Follow this User Guide carefully and keep it for future reference. Follow the correct procedures when setting up the Web camera.

Have the Web camera checked by a service technician if any the following conditions are true:

- The Web camera has been exposed to moisture
- The Web camera has been dropped and damaged.
- The Web camera has obvious signs of breakage.
- The Web camera is not working correctly or you can't get it to work according to this *User Manual*.

Web camera components

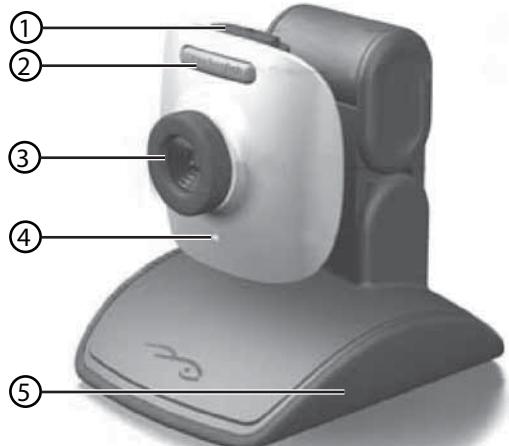

Item	Description	Function
1	Snapshot button	Use to capture still images.
2	LED indicator	Turns on when the Web camera is connected.
3	Lens	Provides the image to the Web camera.
4	Microphone	Provides sound reception for the Web camera.
5	Removable base	The base can be removed so you can clip the camera to your notebook computer.

Setting up the Web camera

Installing the driver

Note: Install the driver first, then connect the Web camera to a USB port on your computer.

Windows Environment

To install the Windows driver:

- 1 Insert the Rocketfish Installation CD into the CD drive in your computer. The installation program automatically starts.
If the installation program does not start automatically, click **Start, Run**, type **D:\Setup.exe** (where "D" is your CD drive), then press **Enter**. The installation screen opens.



- 2 Click **Driver**, then follow the on-screen instructions.
- 3 Install **DirectX** from the CD, if necessary.
Note: To remove the Windows driver, click **Start, All Programs, Rocketfish**, then click **Uninstall**. Follow the on-screen instructions to remove the driver.
Note: Arcsoft Webcam Companion is automatically installed after the driver installation.

Mac Environment

To install the Mac driver:

- 1 Insert the Rocketfish Installation CD into the CD-ROM drive in your computer, then double click on the CD-ROM drive.
- 2 Click the **Rocketfish Driver OSX 1.0** file folder.

- 3 Click on **Rocketfish Driver Install**, then follow the on-screen instructions.

Note: This Rocketfish Web camera is not compatible with iChat, because iChat only supports Apple's Web cameras or IEEE 1394 Web cameras.


To uninstall the Mac driver:

- 1 Insert the Rocketfish Installation CD into the CD-ROM drive in your computer, then double click on the CD-ROM drive.
- 2 Click the **Rocketfish Driver OSX 1.0** file folder.
- 3 Click on **Rocketfish Driver Uninstall**, then follow the on-screen instructions.

Installing the hardware

To install the hardware:

- 1 Insert the Web camera's USB cable into your computer's USB port.

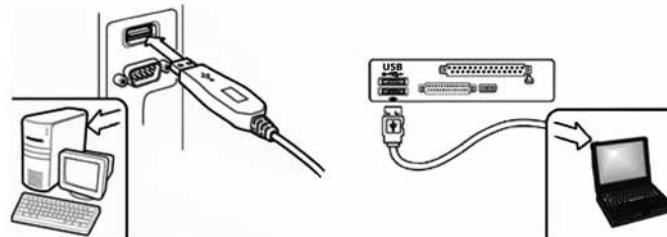

- 2 Place the Web camera on your desk with the lens facing you.

Third-party software


You can install your choice of software for video conferencing or video chat. For more information on video chat software, see "Video chat" on page 6.

Using the Web camera

ArcSoft WebCam Companion

This program offers a broad range of functions designed and optimized for Webcam use. Whether you use it to launch a video chat client or to automatically record movement detected by the device, WebCam Companion lets you get the most out of any Webcam.

If you would like to know more about WebCam Companion, use the built-in Help file. You can access it from the **Help** menu along the top of the program screen or by pressing **F1**. It explains each button and option and also shows you how to perform most common operations and individual commands.

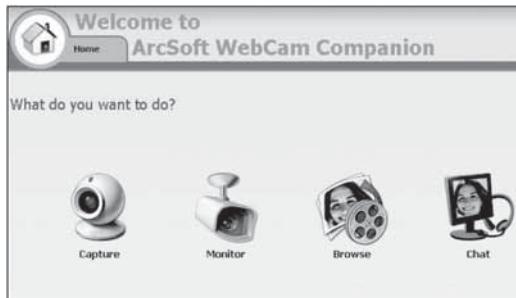

Video chat

Video chat using MSN Messenger

To use MSN Messenger:

- 1 If you don't have MSN Messenger version 6.0 or later, go to <http://messenger.msn.com> to download it.
- 2 After you download and install the software, sign on to the MSN Messenger service.
- 3 Choose a friend on your contact list, then click **OK** to confirm.
- 4 Double-click a friend on your contact list who is available to chat, then click on the Webcam icon. Your friend receives an invitation message to chat with you.

- 5 When your friend accepts, the video chat starts.
For additional information, go to <http://messenger.msn.com> .

Video chat using Yahoo Messenger

To use Yahoo Messenger:

- 1 If you don't have Yahoo Messenger, go to <http://messenger.yahoo.com> to download it.
- 2 After you register, download, and install the software, sign on to the Yahoo Messenger service.
- 3 From the main window, click **Tools**, then select **Start My Webcam**.
- 4 Right-click on a friend's name in your Messenger List, then choose **View Webcam**. Your friend receives an invitation message to chat with you.
- 5 When your friend clicks **YES**, the video chat starts.
For additional information, go to <http://messenger.yahoo.com> .

Video chat using AOL Instant Messenger

To use AOL Instant Messenger:

- 1 If you don't have AOL Instant Messenger, go to <http://www.aim.com> to download it.
- 2 After you register, download, and install the software, sign on to the AOL Instant Messenger service.
- 3 Click **Show Messenger Lists**, then choose the friend you want to video chat with. Your friend receives an invitation message to chat with you.
- 4 When your friend accepts, the video chat starts.
For additional information, go to <http://www.aim.com> .

Adjusting Skype settings

To adjust Skype settings:

- 1 Open the Skype program and click **Tools**, **Options**, then **Sound Devices**.
- 2 Uncheck the **Enable automating sound-device** setting adjustment box.

Changing the Windows sound configuration

To change the Windows sound configuration:

- 1 Click **Start**, **Programs**, **Accessories**, **Entertainment**, then **Volume Control**.

- OR -

Right-click the loudspeaker icon in the system tray. The *Volume Control* menu opens.

- 2 Click **Options, Properties**, then click the **Microphone** button.
- 3 Check **Microphone**, then click **OK**.
- 4 In the *Volume Control* main menu, click **Options, Advanced Properties**, then click the **Advanced** button under the **Microphone** slider.
- 5 Click **Mic Boost**, if available, then click **Close**.
- 6 Set the microphone volume manually to 50% or greater (ignore the fact that the microphone is muted - it is controlled by Skype).

For additional information, go to <http://www.skype.com> .

Legal notices

FCC statement

United States Regulatory Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

ICES-003 Statement:

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

RSS Statement:

Operation is subject to the following two conditions : (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.



Copyright

© 2008 Rocketfish. Rocketfish and the Rocketfish logo are trademarks of Best Buy Enterprise Services, Inc. Other brands and product names are trademarks or registered trademarks of their respective holders. Specifications and features are subject to change without notice or obligation.

For service and support call 1-800-620-2790.



One-Year Limited Warranty

Rocketfish Products ("Rocketfish") warrants to you, the original purchaser of this new **RF-NBCAM** ("Product"), that the Product shall be free of defects in the original manufacture of the material or workmanship for one (1) year from the purchase of the Product ("Warranty Period"). This Product must be purchased from an authorized dealer of Rocketfish brand products and packaged with this warranty statement. This warranty does not cover refurbished Product. If you notify Rocketfish during the Warranty Period of a defect covered by this warranty that requires service, terms of this warranty apply.

How long does the coverage last?

The Warranty Period lasts for one year (365 days), beginning on the date you purchased the Product. The purchase date is printed on the receipt you received with the product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Rocketfish repair center or store personnel, Rocketfish will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Rocketfish and are not returned to you. If service of Products and parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Rocketfish Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a retail store location, take your original receipt and the Product to the store you purchased it from. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from an online web site, mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

Where is the warranty valid?

This warranty is valid only to the original purchaser of the Product in the United States, Canada, and Mexico.

What does the warranty not cover?

This warranty does not cover:

- Customer instruction
- Installation
- Set up adjustments
- Cosmetic damage

- Damage due to acts of God, such as lightning strikes
- Accident
- Misuse
- Abuse
- Negligence
- Commercial use
- Modification of any part of the Product, including the antenna

This warranty also does not cover:

- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage supply
- Attempted repair by anyone other than a facility authorized by Rocketfish to service the Product
- Products sold as is or with all faults
- Consumables, such as fuses or batteries
- Products where the factory applied serial number has been altered or removed

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY. ROCKETFISH SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. ROCKETFISH PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Rocketfish:

For customer service please call 1-800-620-2790
www.rocketfishproducts.com

Distributed by Best Buy Purchasing, LLC
7601 Penn Avenue South, Richfield, Minnesota, U.S.A. 55423-3645
© 2008 Best Buy Enterprise Services, Inc.

All rights reserved. ROCKETFISH is a trademark of Best Buy Enterprise Services, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.





