

INSIGNIA™

QUICK SETUP GUIDE

Rocker Gaming Chair

NS-GGCH19

PACKAGE CONTENTS

- Gaming Rocking Chair
- Quick Setup Guide

 


FEATURES


- Foldable
- Breathable material
- Padded seat
- Counter weighted rocking motion
- Fold-n-stow construction

SETTING UP YOUR GAMING ROCKING CHAIR

- 1 After unpacking your gaming chair, place it on carpeted floor with the base on the bottom.
- 2 Grip the back of the chair by the top edge and fold open the chair.

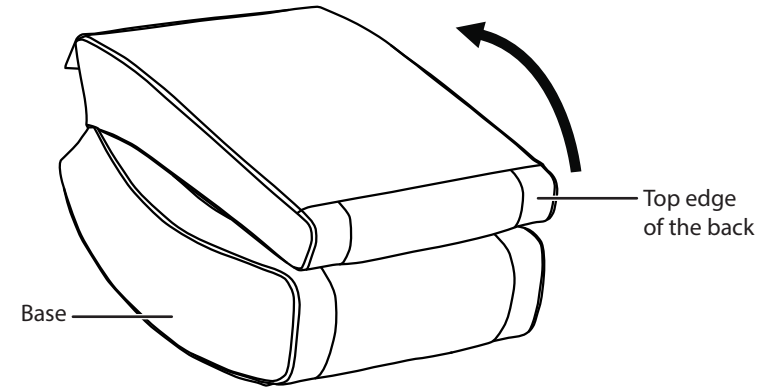


 - 3 Secure the gaming chair open with the Velcro strip. Your chair is ready for use.

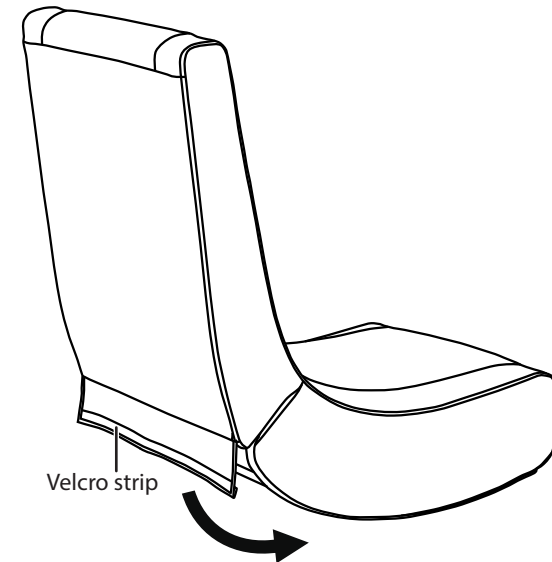


USING YOUR GAMING ROCKING CHAIR

 - 1 Move the gaming chair to the location you want.

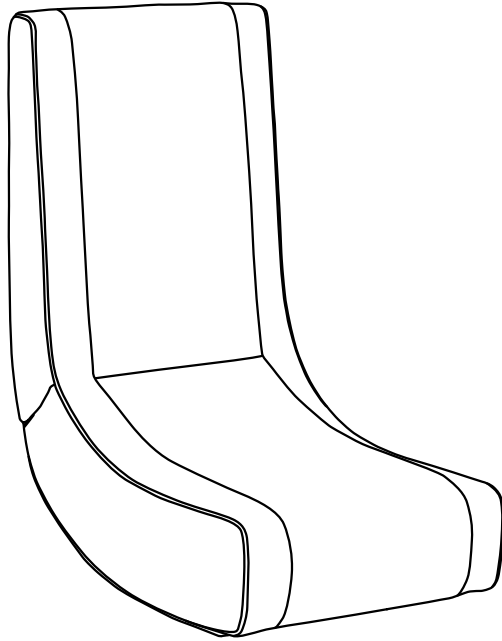

- 2 Enjoy your gaming chair.

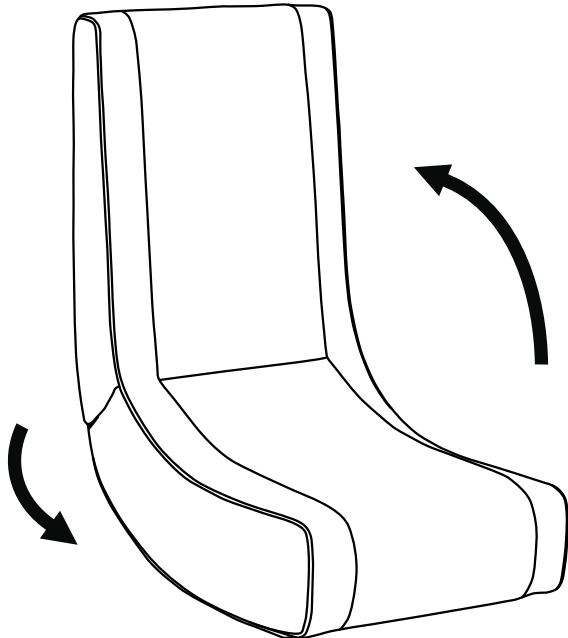 

CLEANING AND MAINTENANCE

To clean, use a clean damp towel to wipe the surface and then wipe dry with a clean dry towel.

SPECIFICATIONS

- Dimensions (W×H×D): 16.9 × 28.7 × 29.1 in. (43 × 73 × 74 cm)
Folded (W×H×D): 16.9 × 12.2 × 23.2 in. (43 × 31 × 59 cm)
- Maximum weight allowed: 250 lbs (113.6 kg)
- Product weight: 23.8 lbs (10.8 kg)

SAFETY INFORMATION/WARNING

This product is intended to hold the maximum weight (evenly distributed) indicated. Exceeding the maximum weight will result in instability and may cause possible injury.

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 1-877-467-4289 (U.S. and Canada) or
01-800-926-3000 (Mexico)
www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2018 Best Buy. All rights reserved.

Made in China