





32" LCD TV/Blu-ray Combo, 1080p

QUICK SETUP GUIDE

NS-32LB451A11


Thank You

for purchasing this fine Insignia television.
We hope you enjoy the quality and reliability
of this product for years to come.

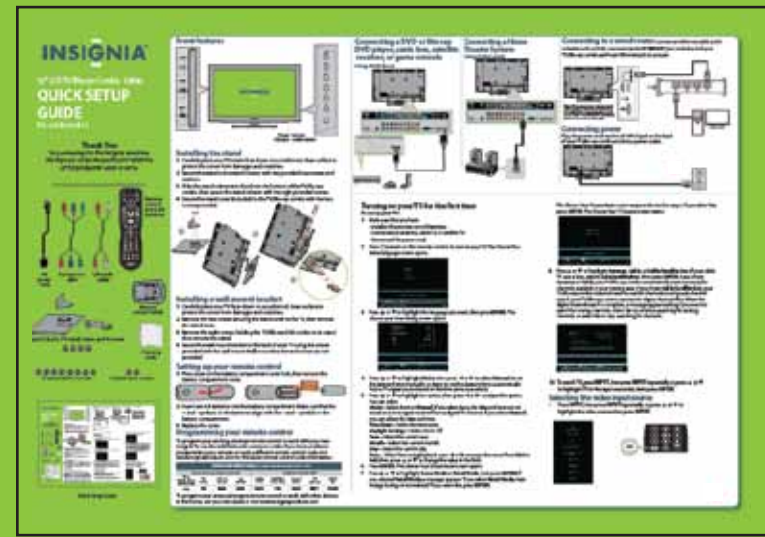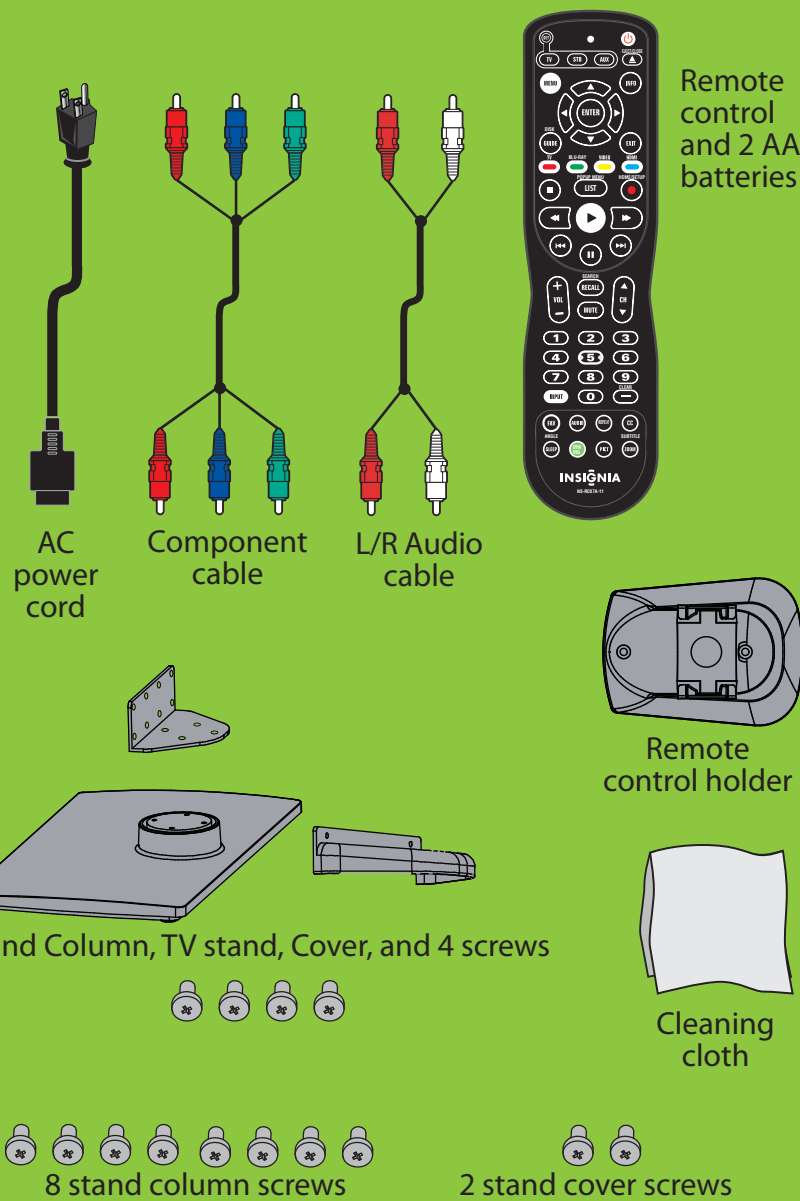


Quick Setup Guide

Front features

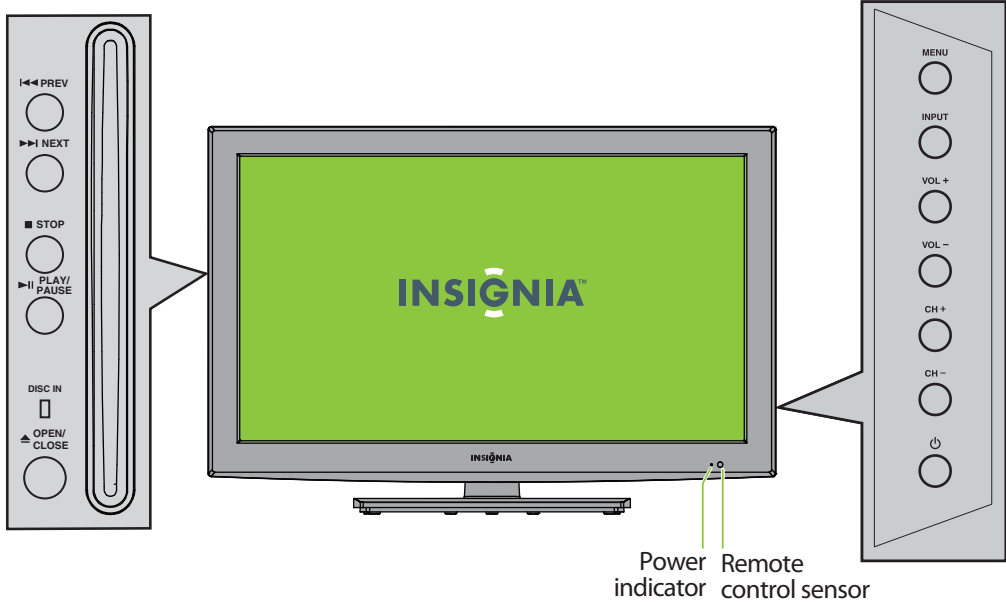

Installing the stand

- 1 Carefully place your TV screen face-down on a cushioned, clean surface to protect the screen from damages and scratches.
- 2 Secure the stand to the stand column with the provided four screws and washers.
- 3 Slide the stand column into the slot in the bottom of the TV/Blu-ray combo, then secure the stand column with the eight provided screws.
- 4 Secure the stand cover (included) to the TV/Blu-ray combo with the two screws provided.

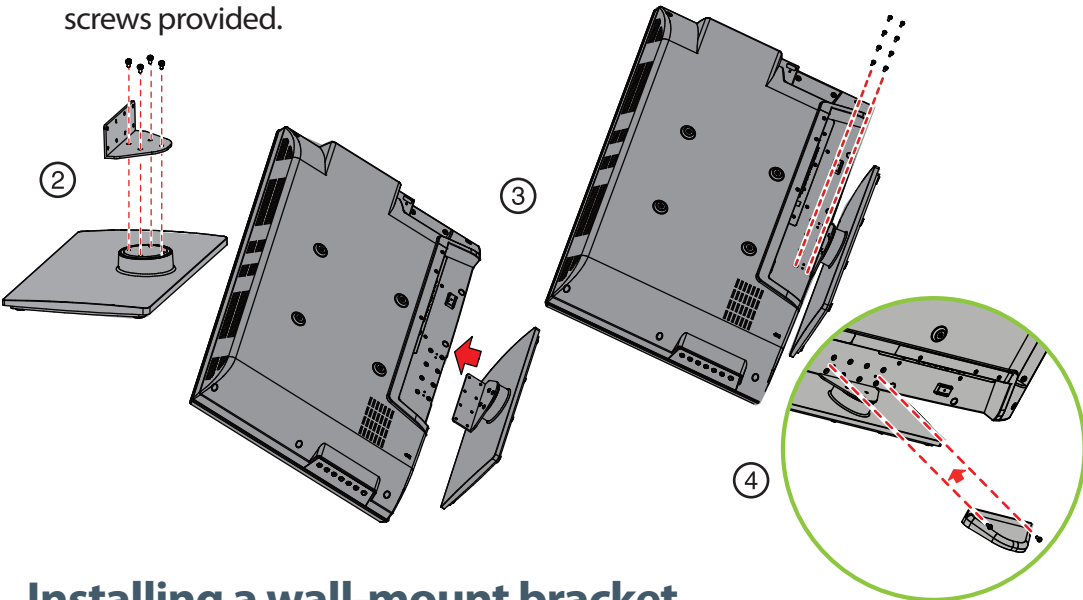


Installing a wall-mount bracket

- 1 Carefully place your TV face-down on a cushioned, clean surface to protect the screen from damages and scratches.
- 2 Remove the two screws securing the stand cover to the TV, then remove the stand cover.
- 3 Remove the eight screws holding the TV/Blu-ray DVD combo to its stand, then remove the stand.
- 4 Secure the wall-mount bracket to the back of your TV using the screws provided with the wall mount. Wall-mount bracket and screws are not provided.

Setting up your remote control

- 1 Press down on the battery compartment cover lock, then remove the battery compartment cover.

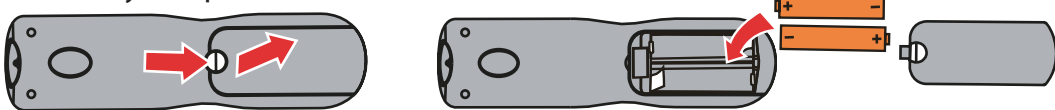

- 2 Insert two AA batteries into the battery compartment. Make sure that the + and - symbols on the batteries align with the + and - symbols in the battery compartment.
- 3 Replace the cover.

Programming your remote control


To program your existing universal remote control to work with your new Insignia TV, see the table below for common codes. If you have problems programming your remote or need a different remote control code, visit www.insigniaproducts.com for the latest remote control code information.

Universal remote control TV codes (for all Insignia TVs manufactured after Jan. 1, 2007)								
Universal remote control makers and models				Set-top box makers and models				
Philips PHDVDS, PHSDSS, PMDVRB, PDVBR	RCA RCU807	One for All URC-6690	Sony RM-VL600	Comcast M1057	Dish Network VIP508, VIP622	Motorola DRC800	TIVO Series 3, HD	DirectTV RC23
115	135	0464	8043	0463	720	0463	0091	10463

To program your universal Insignia remote control to work with other devices in the home, see your *User Guide* or visit www.insigniaproducts.com.


Connecting a DVD or Blu-ray DVD player, cable box, satellite receiver, or game console

Using HDMI (best)

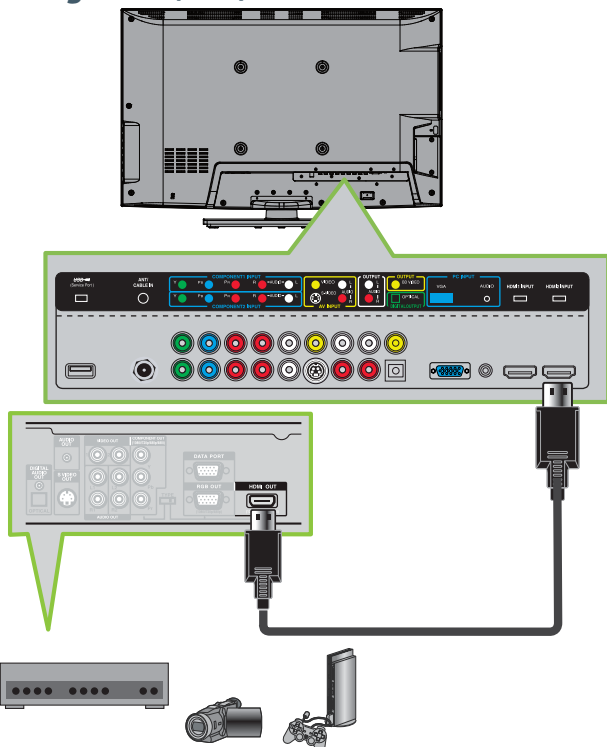


Connecting a Home Theater System

Using digital audio

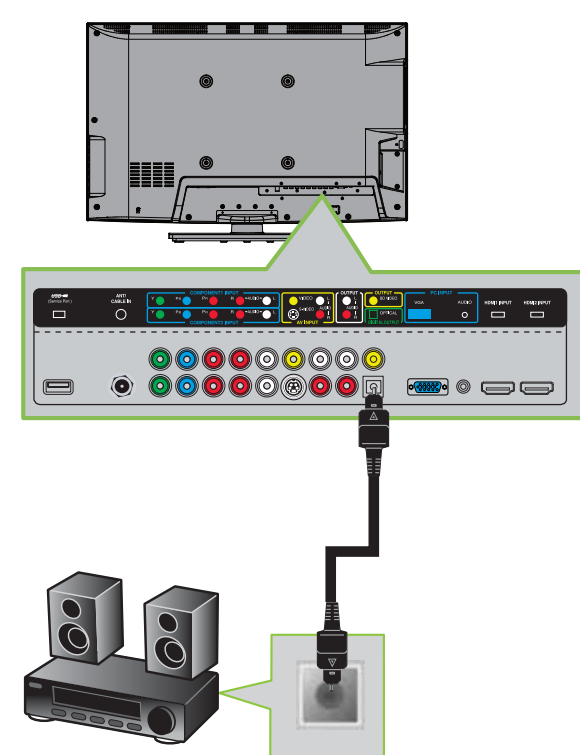


Connecting to a wired router Connect an Ethernet cable (CAT5 or better with an RJ45 connector) to the **ETHERNET** jack on the back of your TV/Blu-ray combo and to an Ethernet jack on a router.

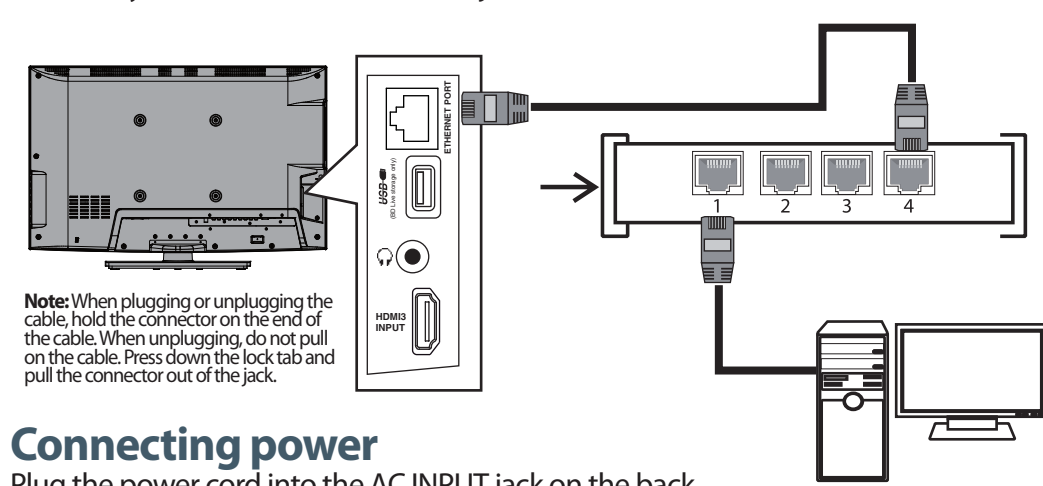

Connecting power

Plug the power cord into the AC INPUT jack on the back of your TV/Blu-ray combo and into a power outlet.

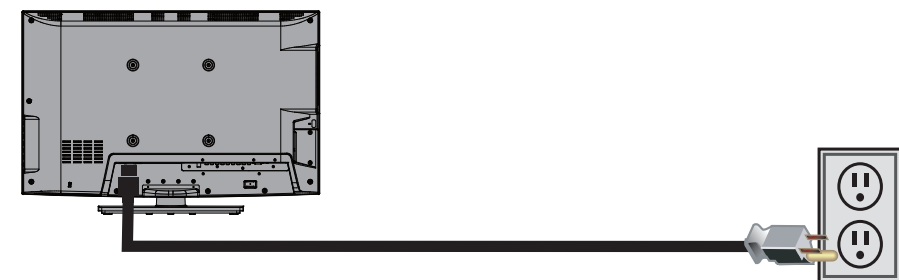

Turning on your TV for the first time

To set up your TV:

- 1 Make sure that you have:
 - Installed the remote control batteries.
 - Connected an antenna, cable TV, or satellite TV.
 - Connected the power cord.
- 2 Press **POWER** on the remote control to turn on your TV. The *Choose Your Menu language* screen opens.




- 3 Press **▲** or **▼** to highlight the language you want, then press **ENTER**. The *Choose your Time Setting* screen opens.



- 4 Press **▲** or **▼** to highlight **Mode**, then press **◀** or **▶** to select **Manual** (to set the date and time manually) or **Auto** (to set the date and time automatically from a TV signal source based on the time zone you select).
- 5 Press **▲** or **▼** to highlight an option, then press **◀** or **▶** to adjust the option. You can select:
 - Mode**—Select **Auto** or **Manual**. If you select Auto, the date and time are set based on a time signal received from a digital TV channel. If you select **Manual**, you can adjust the date and time.
 - Time Zone**—Select the time zone.
 - Daylight Savings**—Select On or Off.
 - Year**—Select the current year.
 - Month**—Select the current month.
 - Day**—Select the current day.
 - Time**—When Time is highlighted, press **◀** or **▶** to move the cursor from field to field, then press **▲** or **▼** to change the value in the field.
- 6 Press **ENTER**. The *Choose Your Picture Mode* screen opens.
- 7 Press **▲** or **▼** to highlight **Home Mode** or **Retail Mode**, then press **ENTER**. If you selected **Retail Mode**, a message appears "If you select **Retail Mode**, then Energy Savings is not realized." If you select **No**, press **ENTER**.

The *Choose Your Picture Mode* screen reopens. Go back to step 6. If you select **Yes**, press **ENTER**. The *Choose Your TV Source* screen opens.

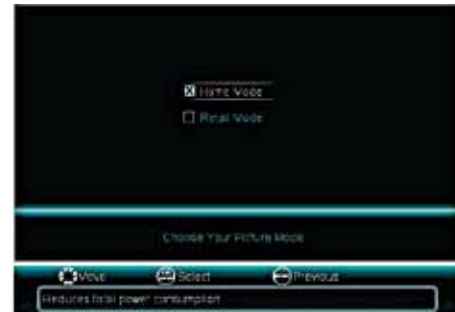


- 8 Press **▲** or **▼** to highlight **Antenna**, **Cable**, or **Cable/Satellite Box** (if your cable TV uses a box, select **Cable/Satellite Box**), then press **ENTER**. If you chose **Antenna** or **Cable**, your TV/Blu-ray combo automatically starts scanning for channels available in your viewing area. If you chose **Cable/Satellite box**, your TV/Blu-ray combo does not need to scan for channels. During auto channel search, your TV/Blu-ray combo searches for digital channels first. When the digital channel search is complete, a message appears asking if you want to search for analog channels. Select **Yes** to continue searching for analog channels, or select **No** to stop searching for channels.



- 9 To watch TV, press **INPUT**, then press **INPUT** repeatedly or press **▲** or **▼** to highlight **TV** in the input source list, then press **ENTER**.

Selecting the video input source


- Press **INPUT**, then press **INPUT** repeatedly or press **▲** or **▼** to highlight the video source, then press **ENTER**.

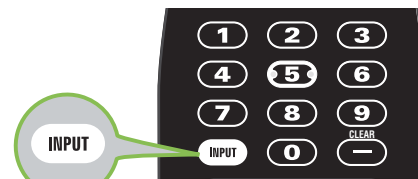


Navigating menus with your remote control




Press to open the on-screen menu

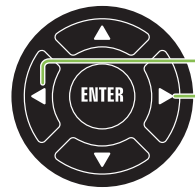

Press to select menus, to adjust selected items, or to move the on-screen cursor left or right.

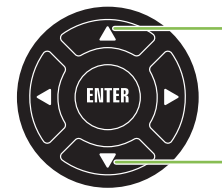

Press to select menu items.

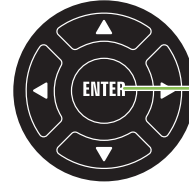

Press to confirm a selection or to enter a sub menu.



Press to return to the previous menu.



Press to close the menu.

Connecting to the Internet to download BD-Live content


Your TV/Blu-ray combo has an Ethernet jack and a built-in Wi-Fi antenna. You can connect to the Internet using a:

- Wired connection (Ethernet jack)
- Wireless connection (Wi-Fi antenna)

Configuring a wired Internet connection

To configure a wired Internet connection:

- 1 Press **ENTER**. The *Settings* menu opens.
- 2 Press **▲** or **▼** to highlight **Network**, then press **ENTER**. The *Network* menu opens.
- 3 Press **▲** or **▼** to highlight **Wired**, then press **ENTER**. The *IP Settings* screen opens.

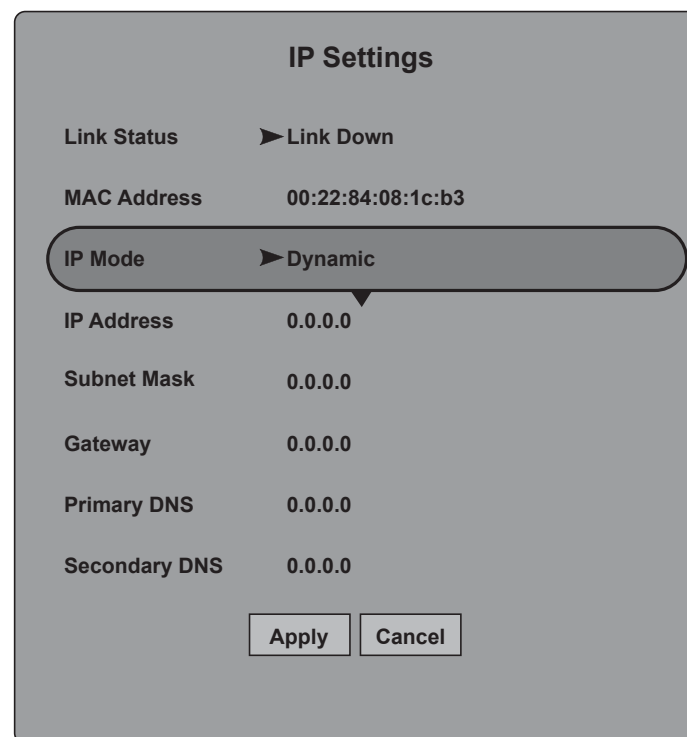


- 4 Press **▲** or **▼** to highlight **IP Mode**, then press **ENTER**.
- 5 Press **▲** or **▼** to highlight an IP mode, then press **ENTER**. You can select:
 - **Off**—Disables the network interface.
 - **Manual**—Lets you manually configure network settings, such as IP address, subnet mask, and gateway settings
 - **Dynamic**—Uses DHCP to automatically obtain an IP address.
- 6 Press **▲** or **▼** to highlight **Apply**, then press **ENTER**. To cancel manual setup, select **Cancel**, then press **ENTER**.
- 7 Press **◀** to go to the previous menu. You are ready to access the Internet.


Configuring a wireless Internet connection

To configure a wireless Internet connection:

- 1 Press **ENTER**. The *Settings* menu opens.
- 2 Press **▲** or **▼** to highlight **Network**, then press **ENTER**. The *Network* menu opens.
- 3 Press **▲** or **▼** to highlight **Wireless**, then press **ENTER**. The list of wireless options opens.

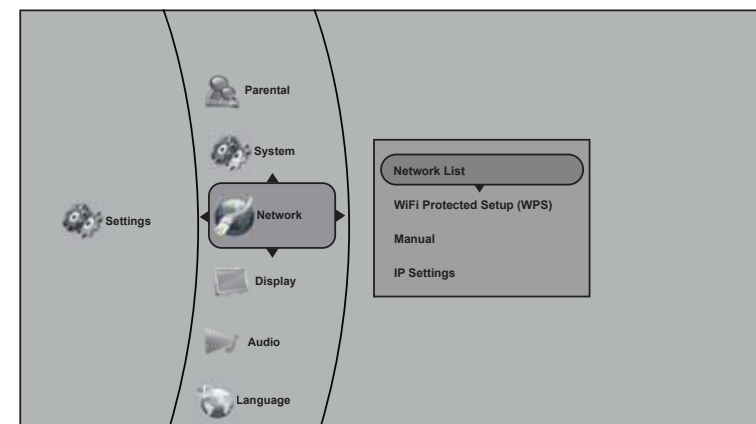

- 4 Press **▲** or **▼** to highlight **IP Settings**, then press **ENTER**. The *IP Settings* screen opens.

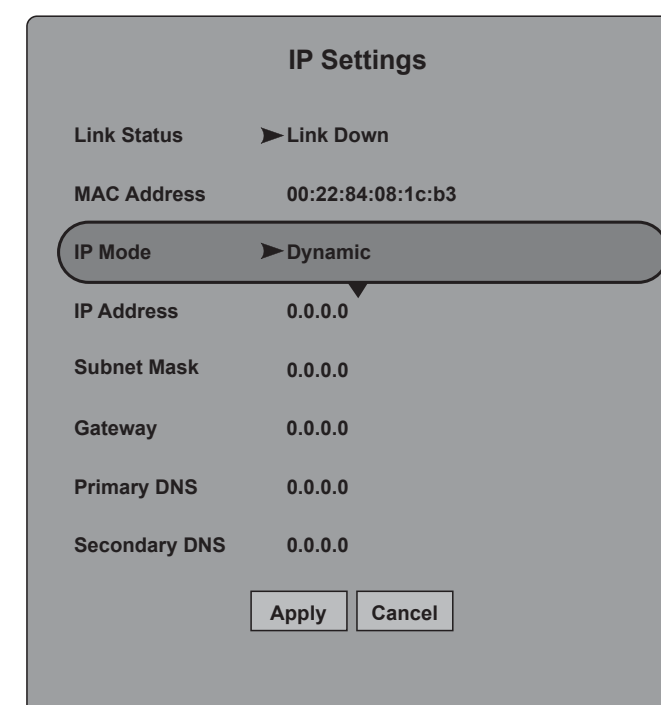

- 5 Press **▲** or **▼** to highlight **IP Mode**, then press **ENTER**.

- 6 Press **▲** or **▼** to highlight an IP mode, then press **ENTER**. You can select:

- **Off**—Disables the network interface.
- **Manual**—Lets you manually configure network settings, such as IP address, subnet mask, and gateway settings
- **Dynamic**—Uses DHCP to automatically obtain an IP address.

- 7 Press **▲** or **▼** to highlight **Apply**, then press **ENTER**. To cancel manual setup, select **Cancel**, then press **ENTER**.

- 8 Press **◀** to go to the previous menu. The method you use to connect to a wireless network depends on the network type. For information about how to connect to a wireless network and access the Internet, see your User Guide.



Two-year limited warranty

See your *User Guide* or visit www.insigniaproducts.com for details.

Need additional help?

See your *User Guide*! This comprehensive guide includes everything from basic how-to steps to more advanced features.

Check out our **online community forum** at www.insigniaproducts.com for helpful information from other Insignia TV owners.

We're here for you

www.insigniaproducts.com

For customer service, call:

877-467-4289 (U.S./Canada markets)

01 800-926-3000 (Mexico market)

Distributed by Best Buy Purchasing, LLC
7601 Penn Avenue South, Richfield, MN USA
55423-3645

Best Buy Imports, S. de R.L. de C.V. Av. Santa Fe 485,
Segundo Piso, Colonia Cruz Manca, Programa Parcial de
Desarrollo Santa Fe, Delegación Cuajimalpa, Distrito
Federal, México 05349


RFC#BBI0802114Q2

© 2010 BBY Solutions, Inc.

All rights reserved. INSIGNIA is a trademark of BBY Solutions, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.

Registering your TV/Blu-ray combo with Netflix


To register your TV/Blu-ray combo with Netflix:

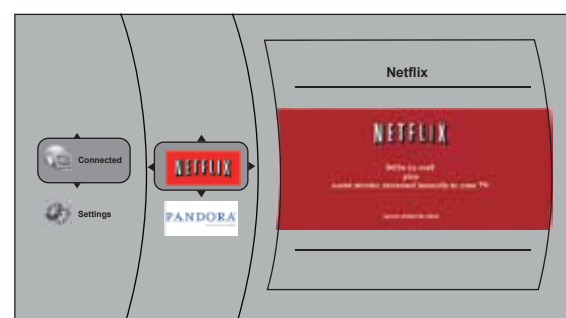

- 1 Press **INPUT**, press **▲** or **▼** to highlight **BLU-RAY**, then press **ENTER**. The *Settings* menu opens.
- 2 Press **▲** or **▼** to highlight **Connected**, then press **ENTER**. The *Connected* screen opens.
- 3 Press **▲** or **▼** to highlight **NETFLIX**, then press **ENTER**. A message asks "Are you a member of Netflix?"
- 4 Press **▲** or **▼** to highlight **Yes**, then press **ENTER**.
- 5 Follow the on-screen instructions to activate your TV/Blu-ray combo, and link it to your Netflix account. Your TV/Blu-ray combo will be registered, and you can begin enjoying movies from Netflix.

Registering your TV/Blu-ray combo with Pandora

To register your TV/Blu-ray combo with Pandora:

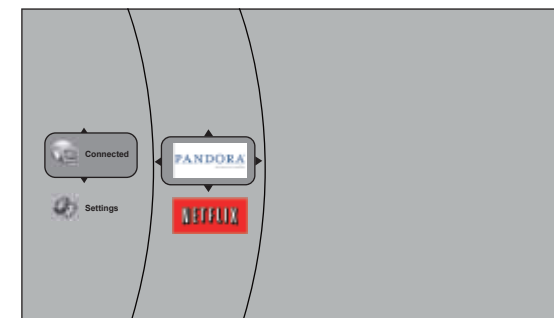

- 1 Press **INPUT**, press **▲** or **▼** to highlight **BLU-RAY**, then press **ENTER**. The *Settings* menu opens.
- 2 Press **▲** or **▼** to highlight **Connected**, then press **ENTER**. The *Connected* menu opens
- 3 Press **▲** or **▼** to highlight **Pandora**, then press **ENTER**. Then follow the on-screen instructions to operate.