
Lenovo Smart Frame

Launch Feature List 1.0

We capture thousands of digital memories only to hide them away on the cloud, rarely to be seen again. The Lenovo Smart Frame lets you relive that magnificent sunset, magical wedding moment or a tranquil Christmas morning back home. Bring your moments back to life on a beautifully designed Smart Frame, custom made for your home.

Below are a list of launch day features that will be available on your Lenovo Smart Frame. We endeavor to constantly improve and optimize the Lenovo Smart Frame user experience and feature sets.

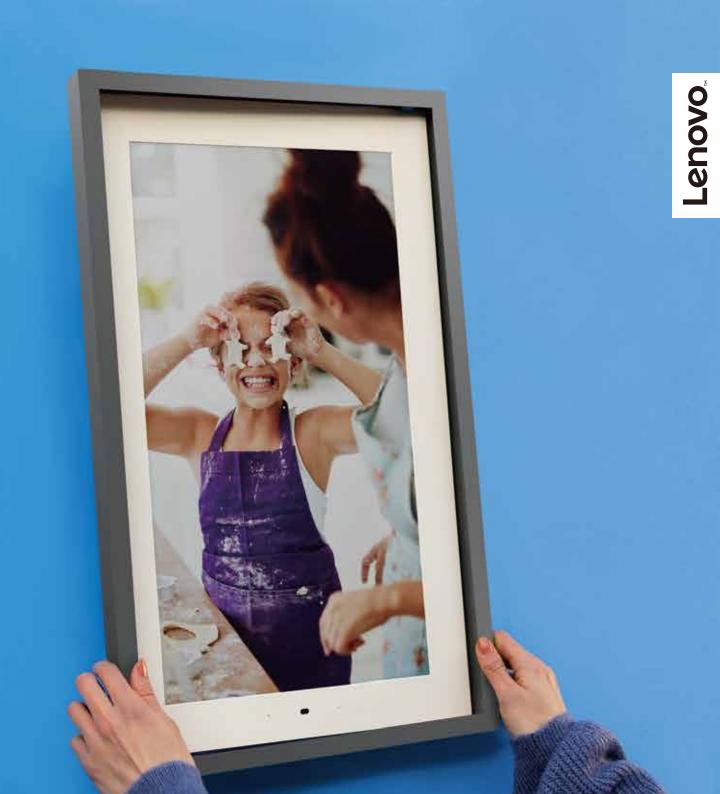

CONTENT SET UP

Album channel (custom)

Shows a selected album as a dedicated channel

Function	Default state	In-App settings		
Add Google Photos account Link Google Photos account	Google Photos account required to use Lenovo Smart Frame Limit to 1 synced Google Photos account / device	Remove Google Photos account		
Show / Hide / Create channels Manage visible channels on the Lenovo Smart Frame	 Smart Photo Recommendations is on Art Gallery channel is on Selected photos channel is on 	 Show / Hide Selected Photos channel Show / Hide Clock channel Create Channel from a Google Photos Album Show / Hide Smart Photo Recommendation Organize channel order (move channel up or down) 		
CHANNEL MANAGEMEN	IT.			
Function	Default state	In-App settings		
Selected photos channel Shows selected photo albums from Google Photos	 Default state is active Photos that are uploaded on selected albums will be refreshed ever Does not display any videos or animations 	Must select a minimum of 1 Google Photos album; can select y hour multiple albums		
Art Gallery channel Shows a curated selection of hundreds of famous artwork, the artwork is displayed in a randomized order depending on Smart Frame orientation.	Default state is active			
Recommendation channel Recommendation channel selects up to 100 photos from all* available photos following pre-determined curation criteria	 This is the default channel Default state is active Does not display any videos or animations Excludes: archived photos *Includes: People, Birthdays, Weddings, Sport, Pets, Flowers, Landscapes; Condition 1 - Today in History: Displaying photos that are of today's date (+/- 3 days) from all previous years (starting from most recent). (Max - 25) Condition 2 - Holiday: In the week of a certain holiday, displaying photos tagged said holiday from previous years. (starting from most recent). (Max - 25) Condition 3 - Travel: Based on "travel" filter, photos from previous week/month/year will display. (Max - 25) Condition 4 - Randomly selected photos from all photos that are from a year ago or older (remaining quantity) *Excludes: Receipts, Screenshots, Whiteboards, Documents, Utility *Selection is revisited every 1 days 			
Clock channel Clock Channel displays a full screen clock face of the users choice	Default state is hidden			

DISPLAY SETTINGS

Function	Default state	In-App settings
Show time Shows time overlaid with all channels, at all times	Default state is off	 On / off 12-hours format selection 24-hours format selection
Show Pair Allows to display 2 pictures of opposite orientation to the frame to fill-in space	 Default state is on When off, blank screen space will be filled with content-awar background blur 	On / off
Curated Collage Collates 3 to 5 images periodically from your photo-related channels	 Default state is off Does not apply to Art Gallery and Clock channels 	On / off
Slideshow speed Adjust speed at which the photo slideshow plays	Default is 30s	 Select speed 10-30s Select speed 1-3-5min Disable slideshow
Show date Show date overlaid with smart recommendation and custom album displayed content	Default state is off	On / off

DISPLAY MODES

Function Default state		In-App settings	
Active mode When screen is showing content		Auto-brightness on/offBrightness setting (0%-100% slider)	
Sleep mode When screen is off and device is still powered on	 Sleep mode on Scheduled from 11PM to 6AM Exit sleep mode if ambient light > 5 lux 	 Sleep mode on/off Schedule from XX AM/PM to YY AM/PM 	

CONTROL METHODS

Function	Default state	In-App settings	On-Device settings	
Next / previous image Change to the previous or next image on screen		Press next or back arrow to change the image shown on screen	Gesture: • Swipe left in front of the motion sensor to go to the next image • Swipe right in front of the motion sensor to go to the previous image	 Touch: Tap "+" capacitive button to go to the next image Tap "-" capacitive button to go to the previous image
Change channel Change to the previous or next active channel	Default will circle down the list of active channel to the first channel with content to display	Press channel list icon then press active channel icon to change the channel	Gesture: • Swipe up to go to the next active channel	Touch: • Tap "star" capacitive button to go to the next channel
Favorite Set the on-screen image as favorite		Tap the heart icon overlayed on the picture currently showing	Long-press "star" capacitive button (>1.5s) to favorite/un-favorite the on-screen image	

OTHER SETTINGS

Function		Default state	In-App settings	On-Device settings
Add device	Add a Lenovo Smart Frame to the app		Add	
Name	Change smart frame device name			
Room	Assigns a room location to the Lenovo Smart Frame	Default is Living Room	Change location Add new rooms	
Wi-Fi	Edit Wi-Fi settings	Wi-Fi with Internet access is required at all times	Connect to a new network	
Google Photos	Edit Google Photos account details	Only one account at a time is supported	Change Google Photos account Disconnect Google Photos account	
Remove device	Disconnect & removes user data of the Lenovo Smart Frame from paired mobile device		Disconnect	
Gesture controls	Turn on/off gesture control	Default is on	On/off	
Factory reset	Reset the Lenovo Smart Frame to its original out-of-the-bo	ox status	Settings icon > About device > factory reset	Long press "star" and "-" capacitive keys for 5 seconds