



### Package contents

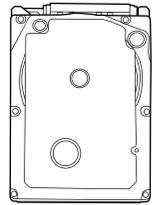

500 GB hard drive

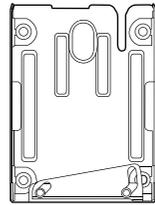

Mounting bracket for Model CECH-4000 series PlayStation 3 system only



Blue screw (1)

Silver screws (4)

- Quick Setup Guide


### Compatibility

- Mounting bracket compatible with CECH-4000 series PlayStation 3 system only.
- Hard drive compatible with all PS3 systems if using the hard drive bracket already installed in the PS3 system.


### Installing the hard drive in a CECH-4000 series PS3

**NOTE:** For instructions on how to replace the hard drive on an older PS3 using an existing mounting bracket, see *Using an existing mounting bracket* below.

- 1 Remove the new hard drive from the protective plastic wrap.
- 2 Slide the hard drive into the included mounting bracket so that the connectors are facing out. The screw holes on the hard drive should align with the holes on the mounting bracket.

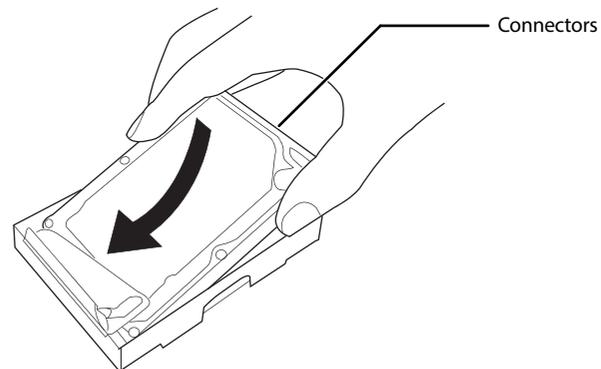


- 3 While holding the hard drive in place, carefully turn the mounting bracket over and place it on a soft and dry cloth.

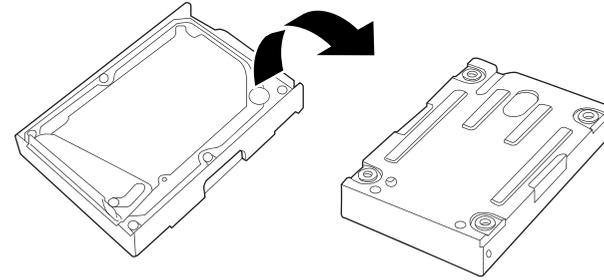


- 4 Use a screwdriver to insert the four silver screws into the screw holes, then tighten the screws.


**WARNING:** Do not overtighten.

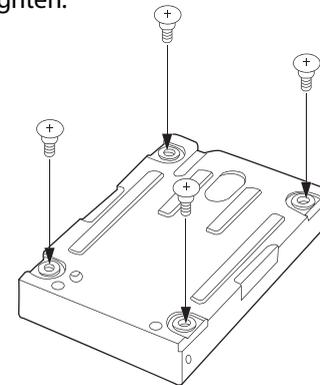

- 5 Turn off your PS3 and unplug all the cables connected to it.
- 6 Open the hard drive bay cover on your PS3 by sliding it to the right.

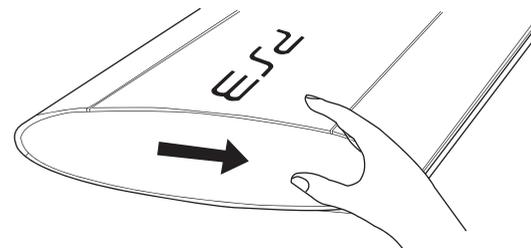


- 7 Line up the screw hole in your PS3 with the screw hole on the mounting bracket, then slide it into the bay.

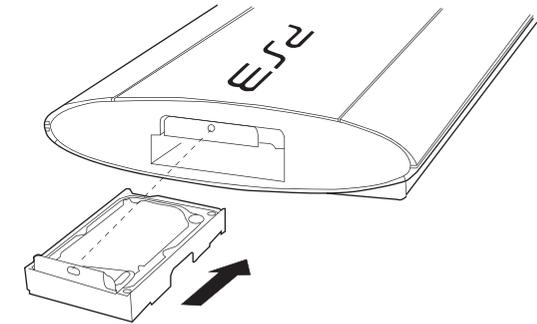


- 8 Make sure that the new hard drive is fully inserted, then secure the blue screw with a screwdriver.

**WARNING:** Do not overtighten.

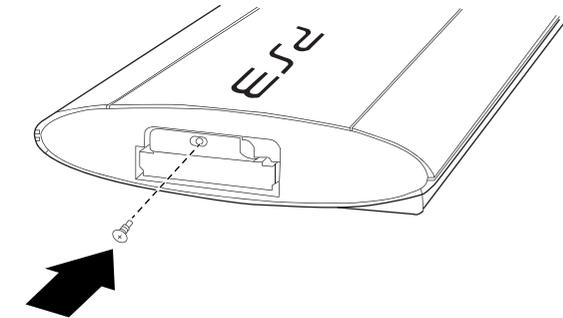

- 9 Reattach the hard drive bay cover on your PS3 by sliding it to the left.

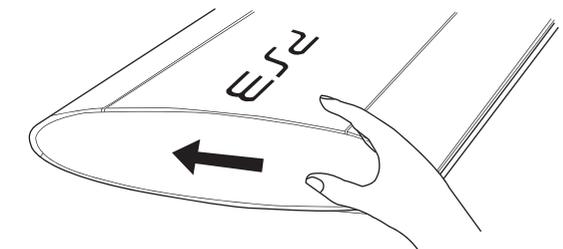

- 10 Connect the cables, turn on your PS3, then follow the on-screen instructions.

## Replacing an existing hard drive

**NOTE:** If you have one of these models: 120GB (CECH-2001A, CECH-2101A), 160GB (CECH-2501A, CECH-3001A), 250GB (CECH-2001B, CECH-2101B), 320GB (CECH-2501B, CECH-3001B) visit [www.rocketfishproducts.com/PS3HDD](http://www.rocketfishproducts.com/PS3HDD) for detailed instructions on replacing the hard drive. For all other models, follow the instructions below.

**1** Back up the data from your existing hard drive and transfer it to the replacement hard drive. See the documentation that came with your PS3 for detailed instructions.


**IMPORTANT:** Some game saves may not transfer. To transfer games saves, use the PlayStation Network Online Storage system. See the documentation that came with your PS3 for more information.

**2** Turn off your PS3 and unplug all the cables connected to it.

**3** Remove the hard drive bay cover on your PS3. If needed, gently use a small screwdriver to pry the cover off, being careful not to damage the system or the cover.




220GB (model CECHB01), 40GB (model CECHG01), 60GB (model CECHA01), and 80GB (model CECE01)

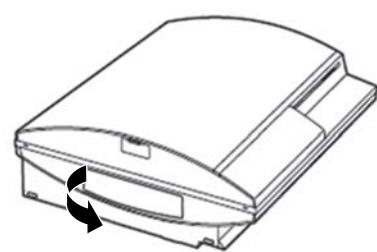


140GB (model CECHH01), 80GB (models CECHK01, CHL01), and 160GB (model CECHP01)

**4** Remove the blue screw that is holding the old hard drive in place.

**5** Slide the old hard drive out.

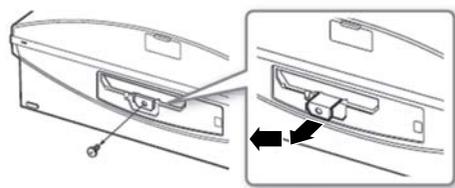

220GB (model CECHB01), 40GB (model CECHG01), 60GB (model CECHA01), and 80GB (model CECE01)

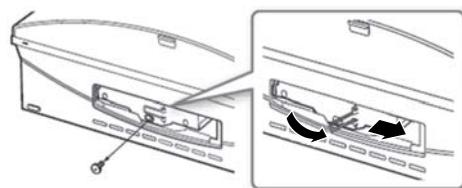


140GB (model CECHH01), 80GB (models CECHK01, CHL01), and 160GB (model CECHP01)

**6** Remove the four screws holding the hard drive in the bracket, then remove the hard drive.

**7** Remove the new hard drive from the protective plastic wrap.

**8** Slide the new hard drive into the mounting bracket so that the connectors are facing out. The screw holes on the hard drive should align with the holes on the mounting bracket.

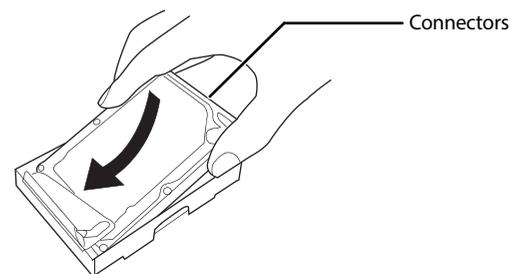

**9** While holding the hard drive in place, carefully turn the mounting bracket over and place it on a soft and dry cloth.

**10** Reinsert the four screws you removed earlier, then tighten the screws.

**WARNING:** Do not overtighten.

**11** Line up the screw hole in your PS3 with the screw hole on the mounting bracket, then slide it into the bay.

**12** Make sure that the new hard drive is fully inserted, then secure the blue screw with a screwdriver.

**WARNING:** Do not overtighten.

**13** Reattach the hard drive bay cover on your PS3.

**14** Connect the cables, turn on your PS3, then follow the on-screen instructions.

**15** Go to *Reinstall the system software*.

## Reinstall the system software

**Note:** Follow these steps only if you replaced an existing hard drive.

**1** Insert a USB device or other storage media into a computer.

**Note:** Supported media includes USB flash drives, CD-R, CD-RW, DVD-R, DVD-RW, DVD+RW, BD-RE discs, and Memory Stick Duo or other card-type storage media. If using this type of media, a card reader/writer (USB connector type) is required.

**2** On that device create a folder named PS3, then create a folder within the PS3 folder named *UPDATE*.

**Note:** Both folder names must be uppercase. If the folders are not created correctly, the PS3 will not recognize the update data.



**3** Go to [http://us.playstation.com/support/systemupdates/ps3/pc\\_update/index.htm](http://us.playstation.com/support/systemupdates/ps3/pc_update/index.htm), then select **Download Now** under *Update data download procedure*.

**4** Save as file name **PS3UPDAT.PUP** in the *PS3 > UPDATE* folder on the storage device.

**5** Turn on the PS3, then insert the storage media.

**6** Follow the on-screen instructions to reinstall the system software.

## NOTES:

- Do not turn off the system or remove the storage media during the installation. If the installation is cancelled before completion, the system software may become damaged, and the system may require service.
- During the installation, the power button on the system and the PS button on the wireless controller are not active.

## Troubleshooting

**I need to transfer data from my old hard drive to the new hard drive.**

See the documentation that came with your PS3 for more information.

**The hard drive won't fit in the hard drive bay.**

- Make sure that this hard drive kit is compatible with your PS3 model.
- Make sure that you have removed the old hard drive.
- Make sure that the hard drive is correctly installed in the mounting bracket.
- Make sure that you are installing the hard drive and mounting bracket in the correct direction.

**The hard drive won't save or load data.**

- Reinsert the disc or re-download the game.
- Check for software updates. See the documentation that came with your PS3 for more information.
- The game file may be corrupted. Delete the game file.
- Reset your PS3 back to factory defaults.
- Make sure that this hard drive kit is compatible with your PS3 model.
- Make sure that the hard drive is installed correctly.

## One-year limited warranty

Visit [www.rocketfishproducts.com](http://www.rocketfishproducts.com) for details.

## Contact Rocketfish:

For customer support, call 1-800-620-2790 (U.S. and Canada) or 01-800-926-3010 (Mexico) [www.rocketfishproducts.com](http://www.rocketfishproducts.com)

Manufactured and distributed under license by Sony Computer Entertainment America LLC. "PS" and "PlayStation" are registered trademarks of Sony Computer Entertainment Inc. "PS3" is a trademark of the same company.

ROCKETFISH is a registered trademark of BBY Solutions, Inc. Registered in some countries. Distributed by Best Buy Purchasing, LLC, 7601 Penn Ave South, Richfield, MN 55423 U.S.A. ©2013 BBY Solutions, Inc. All Rights Reserved.