

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:


- Read all instructions carefully before you use the appliance.
- Make sure your electricity supply is the same as the one shown on the rating label.
- To protect against risk of electrical shock, do not put the blender base in water or other liquid.
- This appliance should not be used by children and close supervision should be taken when used near children.
- Unplug from the electrical outlet when it is not in use, before putting on or taking off parts, and before cleaning.
- Avoid contacting moving parts.
- Keep hands, hair, clothing, as well as spatulas and other utensils away from beaters during operation to reduce the risk of injury to persons, and/or damage to the mixer. A scraper may be used but only when the blender is not running.
- Never add to the blender jar while the blender is operating.
- Check the filler cap for the presence of foreign objects before using.
- Do not operate the appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged. Return the appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.
- The use of attachments is not recommended by the manufacturer and may cause a risk of personal injury.
- Do not use outdoors.
- Do not let the cord hang over edge of a table or counter.

- Never let the cord touch hot surfaces, including the stove, or hang down where a child could grab it.
- Blades are sharp, handle carefully.
- To reduce the risk of injury, never place the blade assembly on the base without the jar properly attached.
- Always operate the blender with the cover in place.
- Make sure that fingers are kept well away from the blades when in use.
- Do not blend hot ingredients.
- Always operate on a flat surface.
- Make sure that the control dial is in the off '0' position before plugging into the power outlet.
- Do not operate for more than one minute at a time.
- Always turn the power off before you insert or remove a plug. Remove by grasping the plug. Do not pull on the cord.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element, or on a heated oven. Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- Never touch the blades while the machine is plugged in.
- Take special care when emptying and cleaning the blender jar, as the blades are extremely sharp.
- The blender jar must be properly in place before operating the blender.
- This appliance has a polarized plug (one blade is wider than other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit contact a qualified electrician. Do not modify the plug in any way.
- This product is for household use only.

## SAVE THESE INSTRUCTIONS

## PACKAGE CONTENTS

- Blender
- Quick Setup Guide

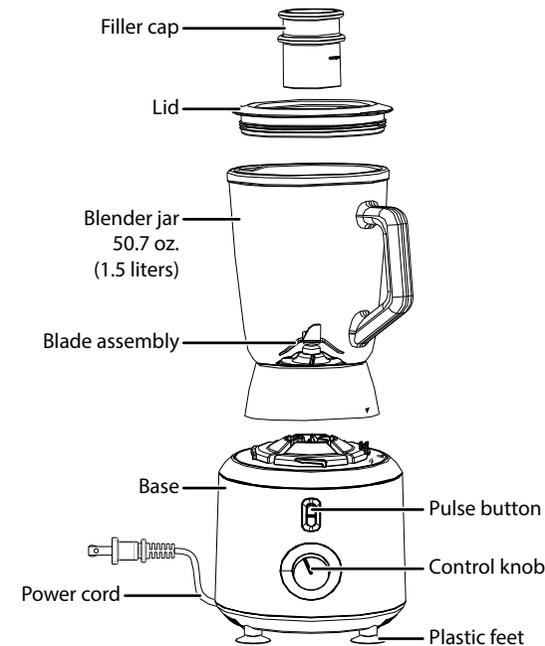

## FEATURES


- A quick and easy way to prepare your favorite foods and refreshments
- Three speeds with pulse for precise blending
- Tough stainless steel blade for crushing ice
- Filler cap with 3 oz measuring cup

**Note:** Before using your blender for the first time, wash all parts and dry thoroughly. Do not immerse the base in water.

## USING YOUR BLENDER


- 1 Place the base on the table, with the control knob facing toward you.
- 2 Place the blender jar onto the base, then turn the blender jar to the right until it clicks into place. The arrows on the blender jar should be aligned with the lock mark on the base to make sure the jar is locked into place.

**Note:** Your blender will not work unless the blender jar is locked into place.

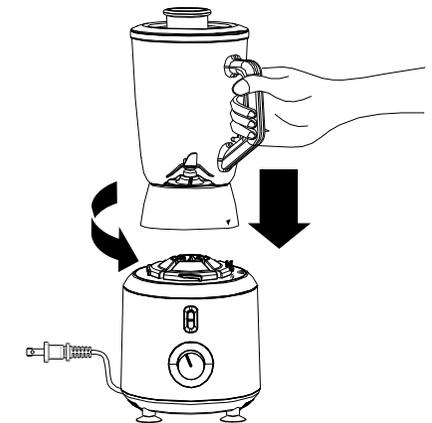


- 3 Remove the lid or the filler cap from the blender jar and place ingredients into the jar. Do not exceed the maximum indicated level (1.5 liters).

- 4 Mount the measuring cup onto the lid, then secure the lid onto blender jar.

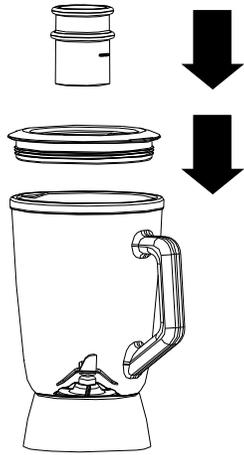

- 5 Plug the power cord into a wall outlet.  
6 Use the control knob to select desired blending speed (1, 2, 3) or use the **PULSE** button.

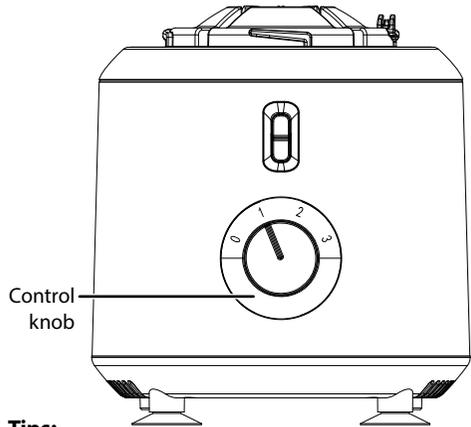

**Tips:**

- Press and hold the **PULSE** button for short bursts of power while blending.
- Settings 1, 2, and 3 will provide continuous blending.

- 7 After you have completed blending, turn the control knob to the '0' position.

**USAGE TIPS**

PROCESSING TASK:	EXAMPLE FOODS:	SUGGESTED SETTING:	SUGGESTED PROCESSING PROCEDURE:
Aerating	Milkshakes, smoothies	2, 3	Use chilled milk with frozen yogurt or ice cream. Blend to the desired consistency.
Crushing ice	Ice (max. 1.8 oz [50 g.])	1, 2, 3, PULSE	Add 1/4 cup of water. Use any setting or the PULSE button 3-4 times in succession for crushed ice.
Pureeing	Soups, vegetables, fruits	2, 3	Blend until smooth.

**Note:** All the ingredients and foods must be below 104° F (40° C).

**ATTENTION!** Times for processing will vary with the quantity in the blender jar. Times shown are only a guide.

**TIPS**

- Food items for blending should be cut into 1" (2-3 cm) cubes.
- Never fill the blender jar above the maximum level.
- To ensure efficient mixing when blending dry mixtures, stop the blender and push ingredients down the sides of the jar with a spatula.
- When pureeing fruits or vegetables (cooked or raw) cut them into small pieces before blending.
- When blending a variety of ingredients together, blend the liquids first, then add dry ingredients.
- Always make sure that pits are removed from fruit and bones from meat as these can harm the blades.
- Do not process hot liquids in your blender. Allow them to cool before processing.
- When blending warm liquids, remove the filler cap from the lid.

**CARE AND CLEANING**

**Quick cleaning method:**

- 1 Fill the blender half full with warm water and add a small amount of detergent.
- 2 Press the **Pulse** button and hold for 1-2 seconds, then release. Repeat 3-4 times.
- 3 Remove the jar and rinse it under running water.

**For thorough cleaning:**

- Wash the blender lid, filler cap and blender jar in warm soapy water.

**Caution:** Take care when cleaning the blades as they are extremely sharp.

**Note:** Do not clean any part of the blender in the dishwasher.


**To clean the base:**

- Use a damp, soft sponge with detergent and wipe over the base.

**Note:** Never immerse the base in water.

**Storage:**

- 1 Coil the power cord around the cord storage at the bottom of the base.

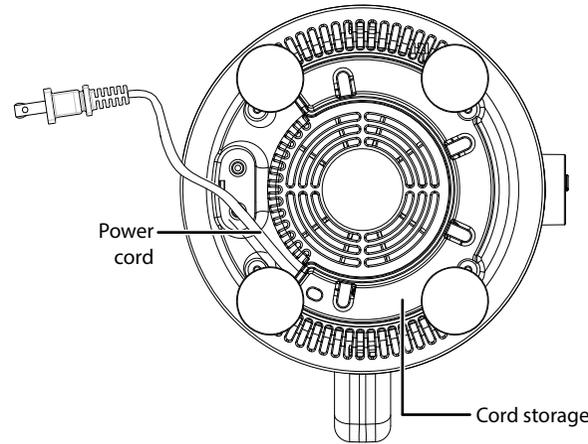

- 2 Store in a cool and dry place.

**SPECIFICATIONS**

- Capacity: 50.7 oz. (1.5 liters)
- 120V~, 60Hz, 475W

**ONE-YEAR LIMITED WARRANTY**

Visit [www.insigniaproducts.com](http://www.insigniaproducts.com) for details.

**CONTACT INSIGNIA:**

For customer service, call 877-467-4289 (U.S.) or 01-800-926-3000 (Mexico)

[www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies. Registered in some countries. Distributed by Best Buy Purchasing, LLC 7601 Penn Ave South, Richfield, MN 55423 U.S.A. ©2014 Best Buy. All rights reserved. Made in China