 


W Walker[®]
Edison
furniture company

Item # : W52FP32
Assembly Instructions

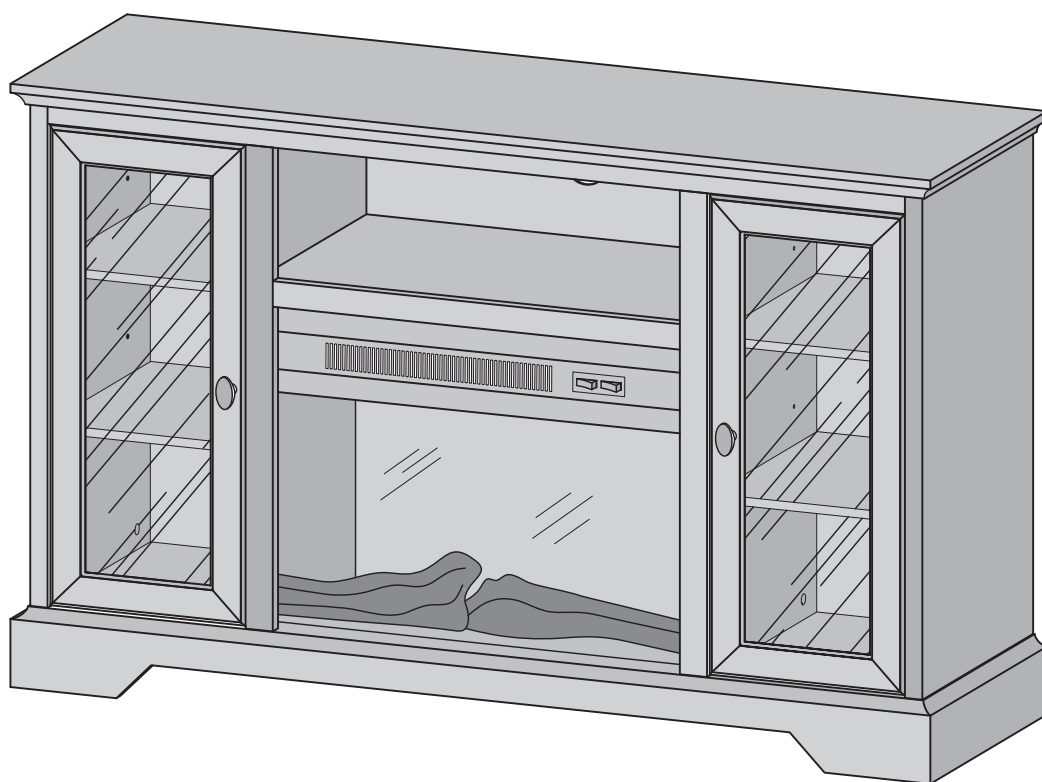 


*To request missing, lost or broken parts , or for any other customer service issues,
please visit our website at **www.walkeredison.com** or call us at 877-207-5906.*


Revised 11/2016

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

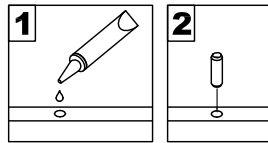

 
In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

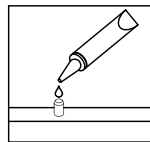

 
- VI. A Phillips head screwdriver is required for the assembly of this product .

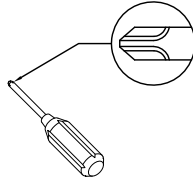

 
- VII. Power tools should not be used to assemble this product .

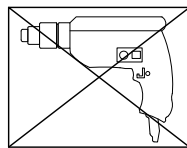

 
- VIII. Concealed hinges are three-way adjustable.

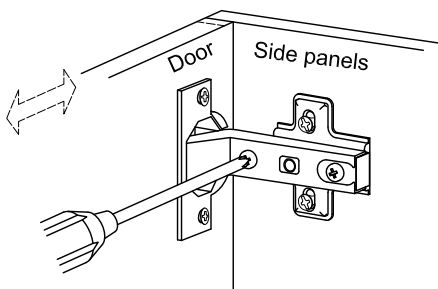

Horizontal
by screw adjustment

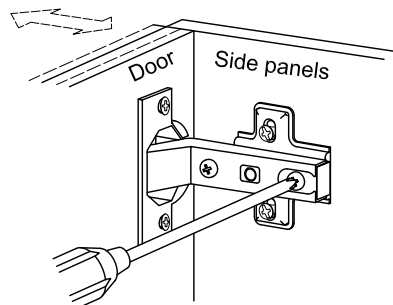 


  In-and-Out
by loosening the hinge-arm
mounting screw or via cam
adjustment

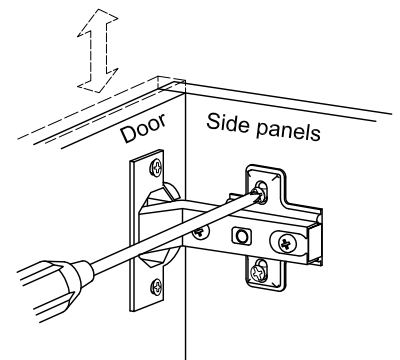
 

 

 
 
 

 
 

 



Vertical
Via slots in the mounting
plate or via cam adjustment

Parts List

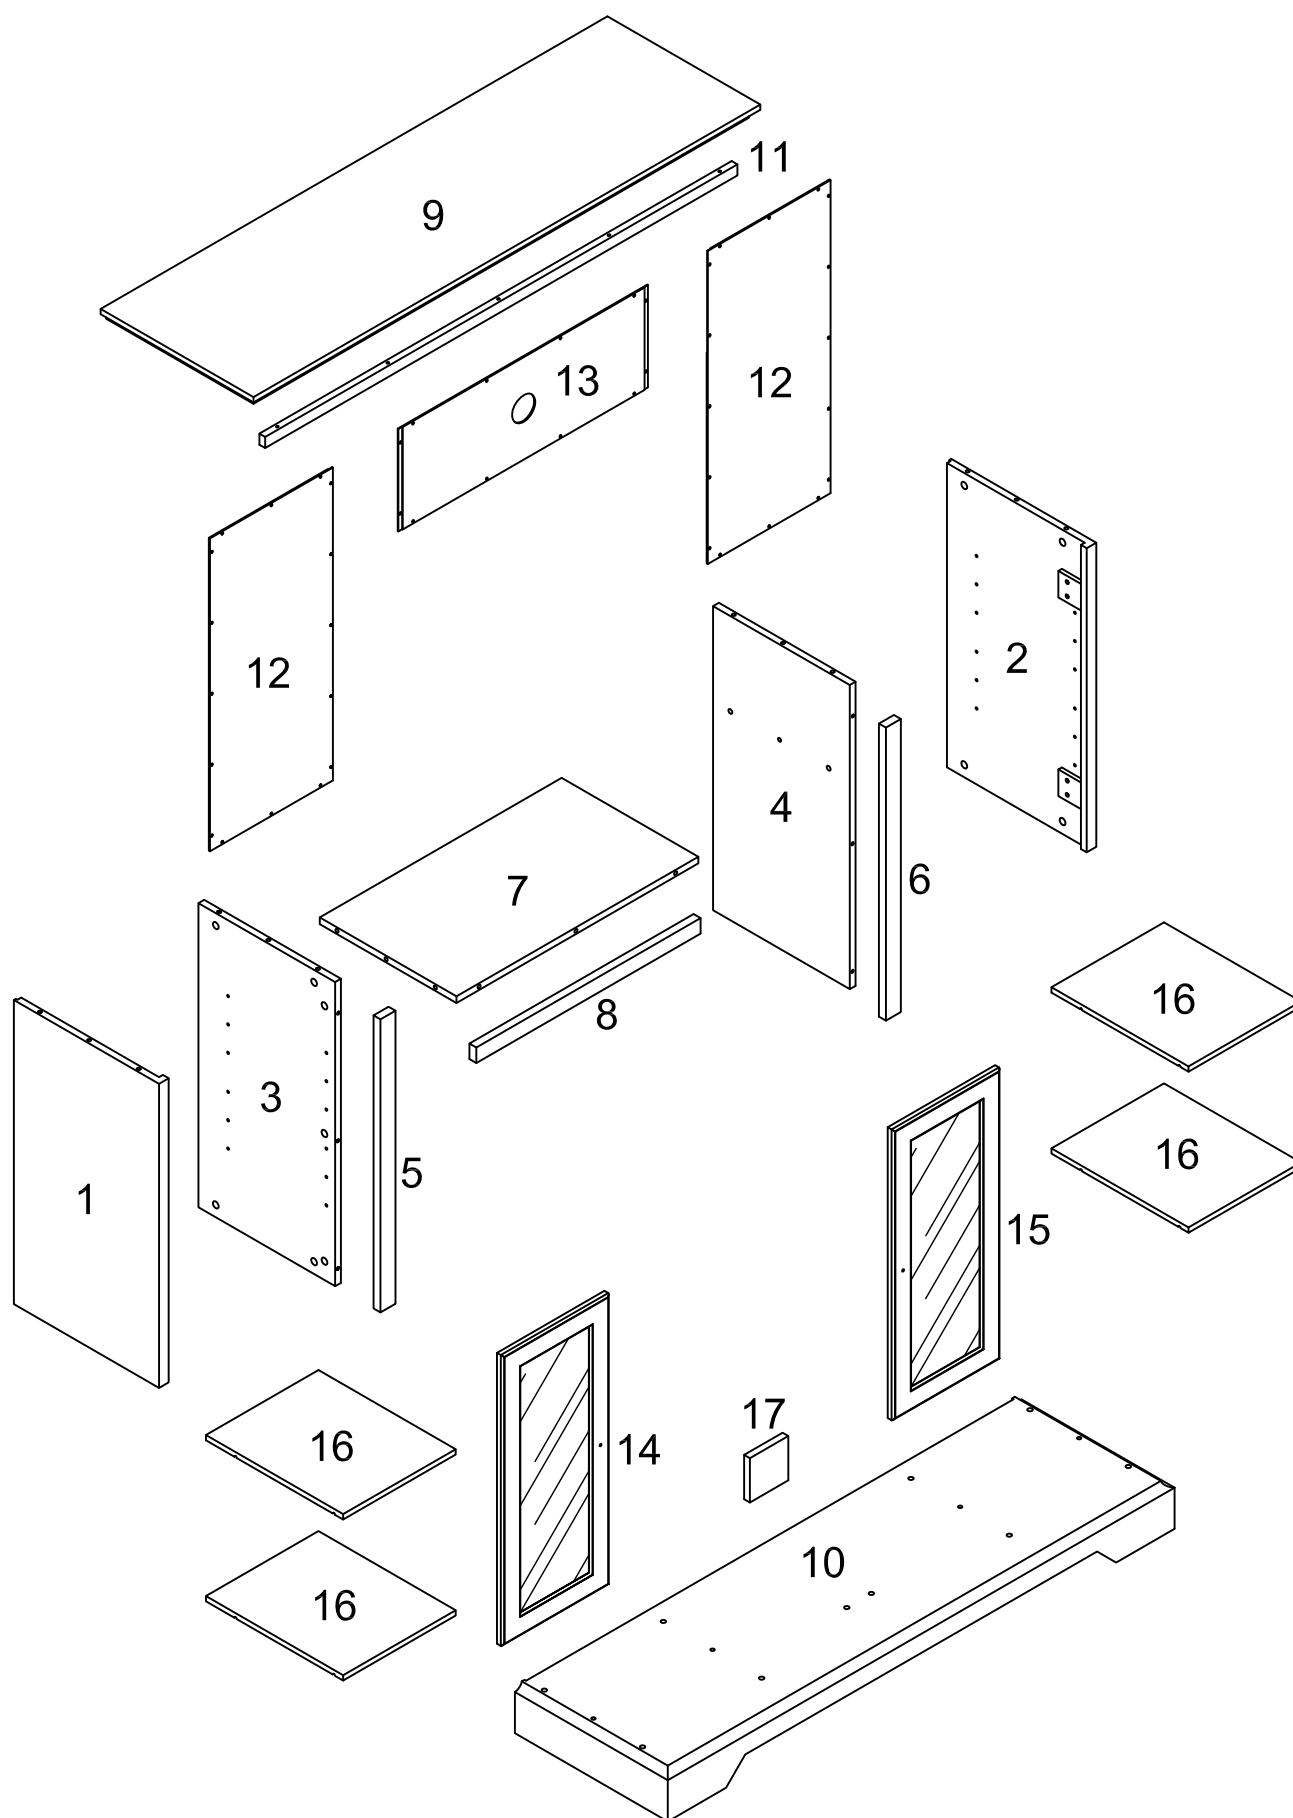

Hardware List


A		Ø8x30mm	Wooden dowel	10 pcs
B		Ø8x30mm	Cam bolt	31 pcs
C		Ø15x12mm	Cam lock	31 pcs
D			Screw	5 pcs
E			Handel	2 pcs
F			Bolt	4 pcs
G			Hinge	4 pcs
H		Ø4x12	Bolt	16 pcs
J			Shelf support pin	16 pcs
K			Fireplace Insert (F18V66L)	1 pc
L		Ø3x12	Screw	46 pcs
M		Ø30	Sticker	31 pcs
N			Glue tube	1 pc

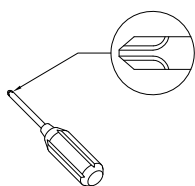 


Philips head screwdriver required for assembly
(not included)

*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

 
Step 1

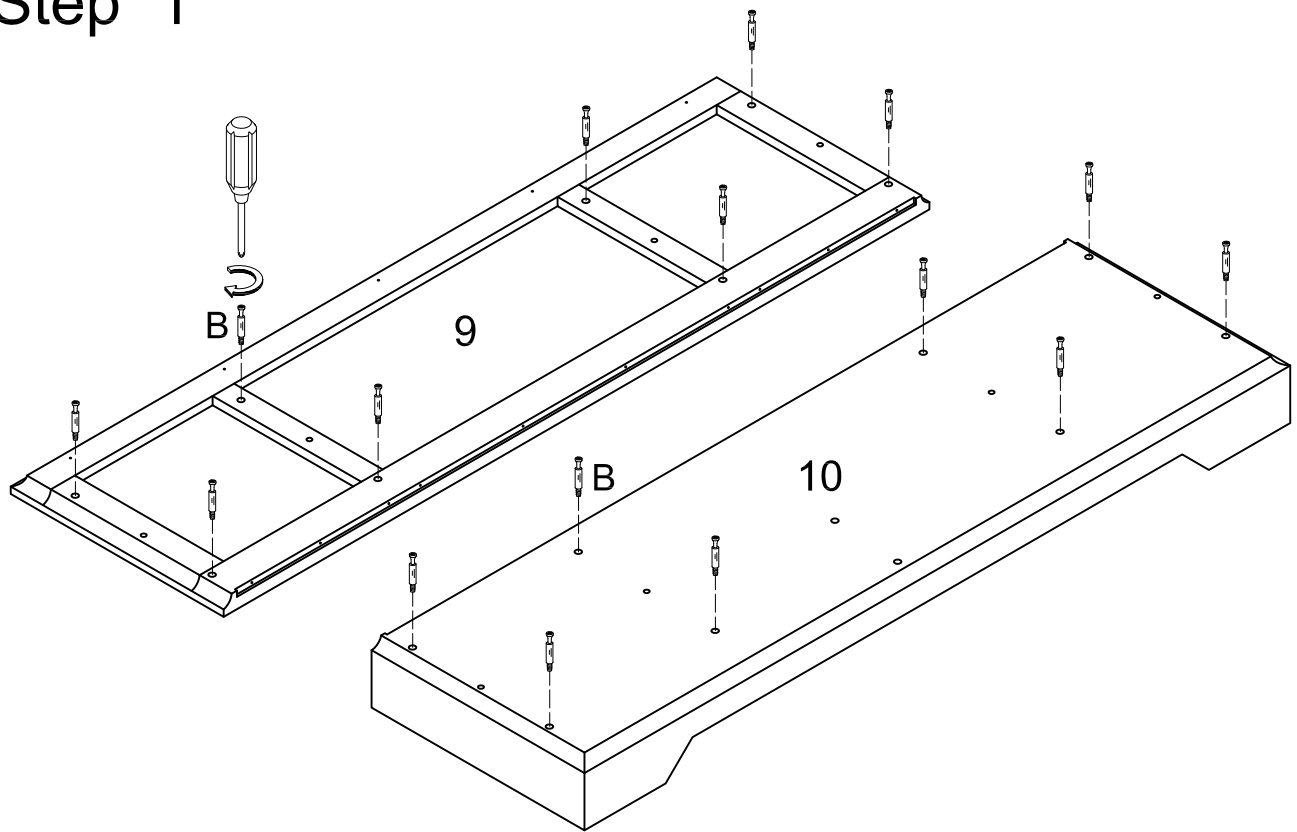


 
Step 2

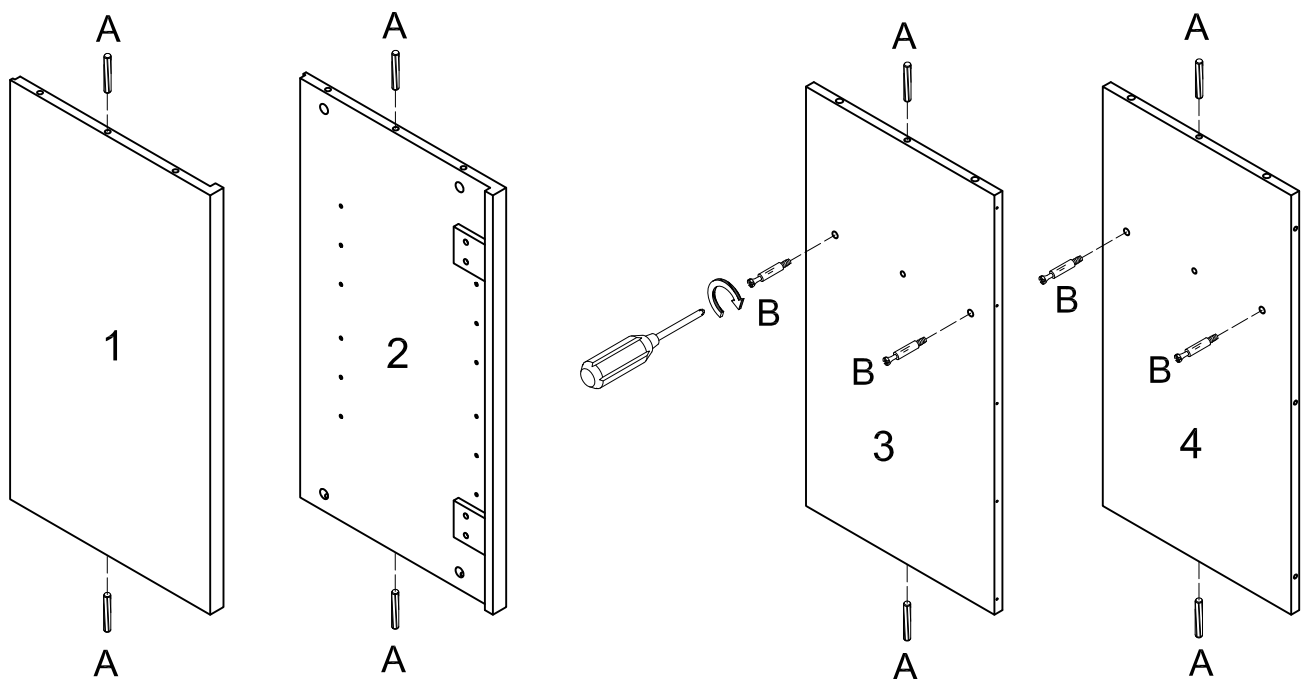

 
Step 3

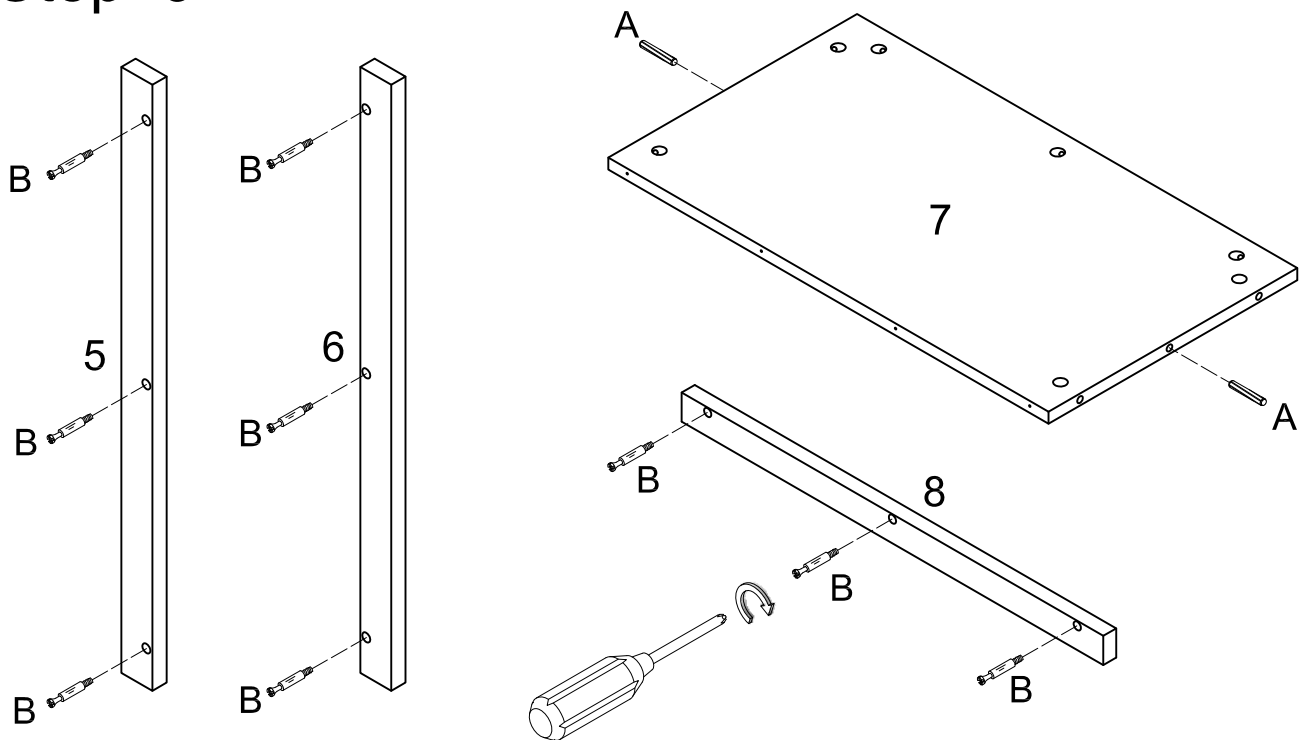

  
Step 4

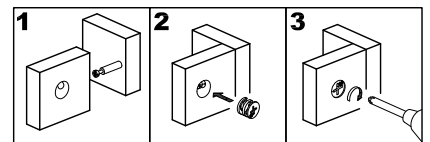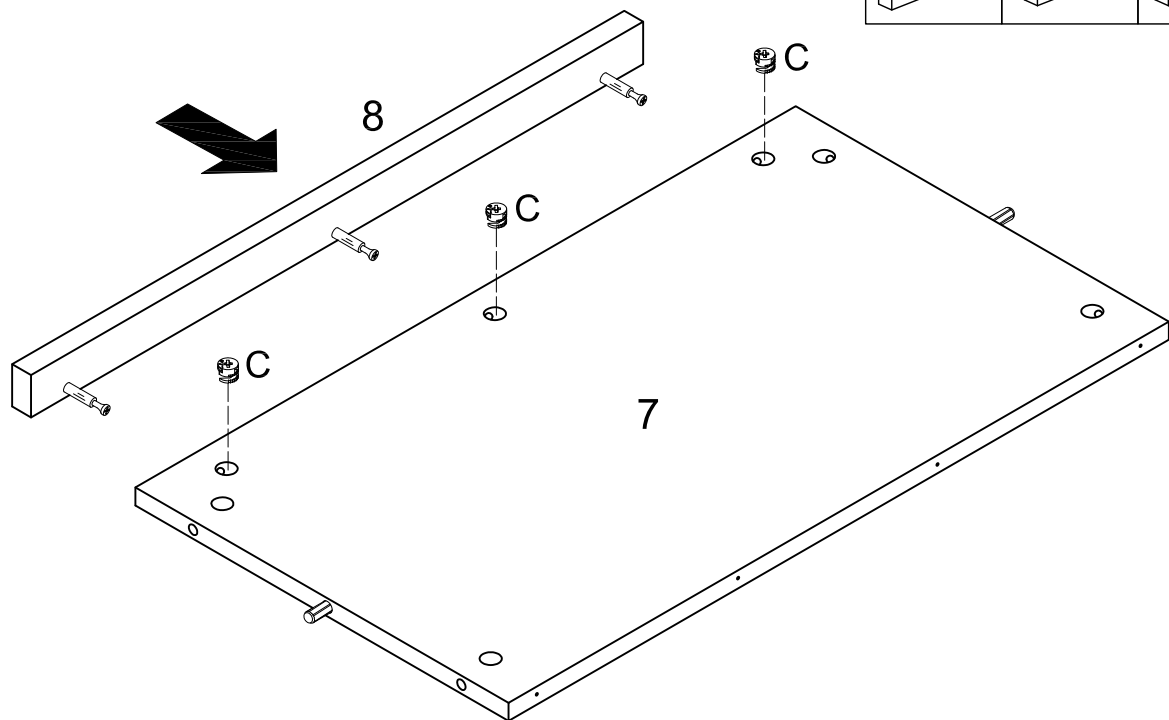


 
Step 5

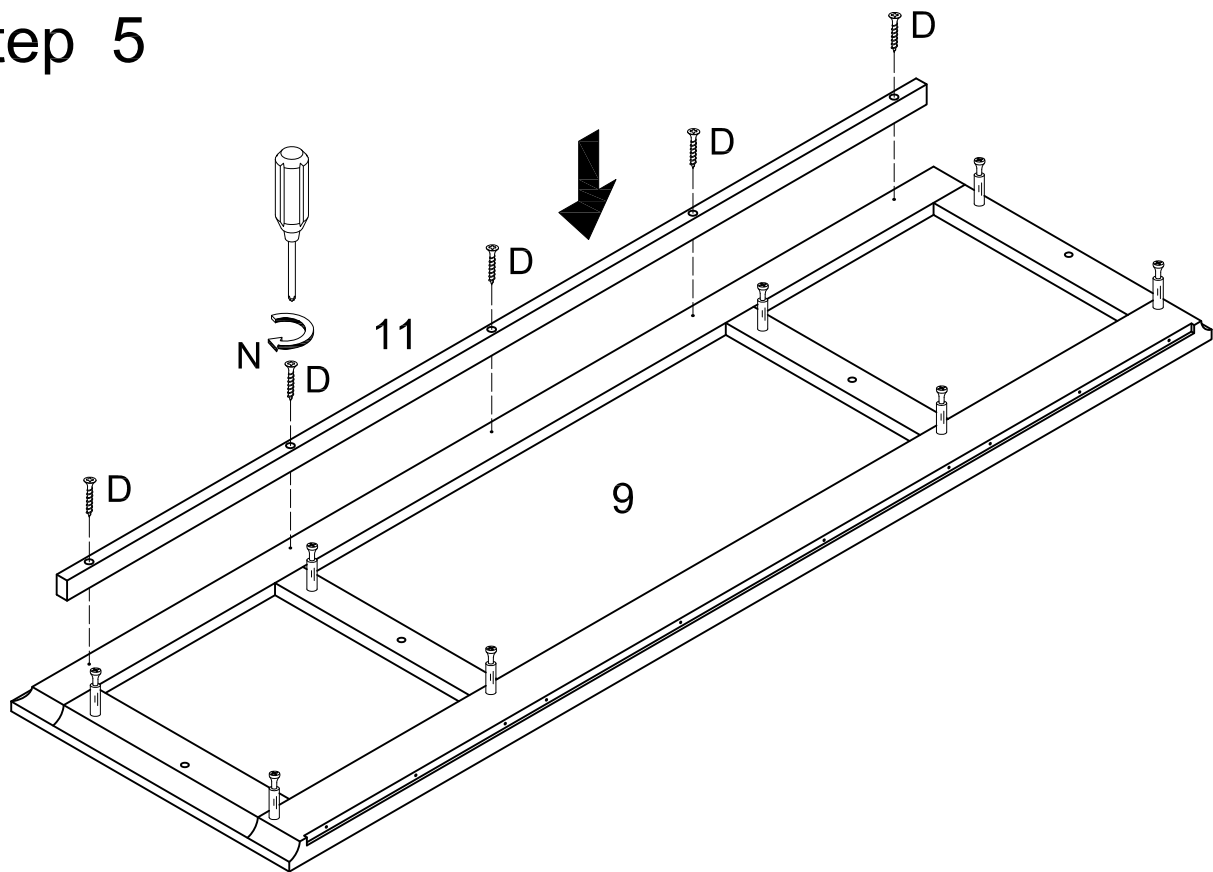


 
Step 6

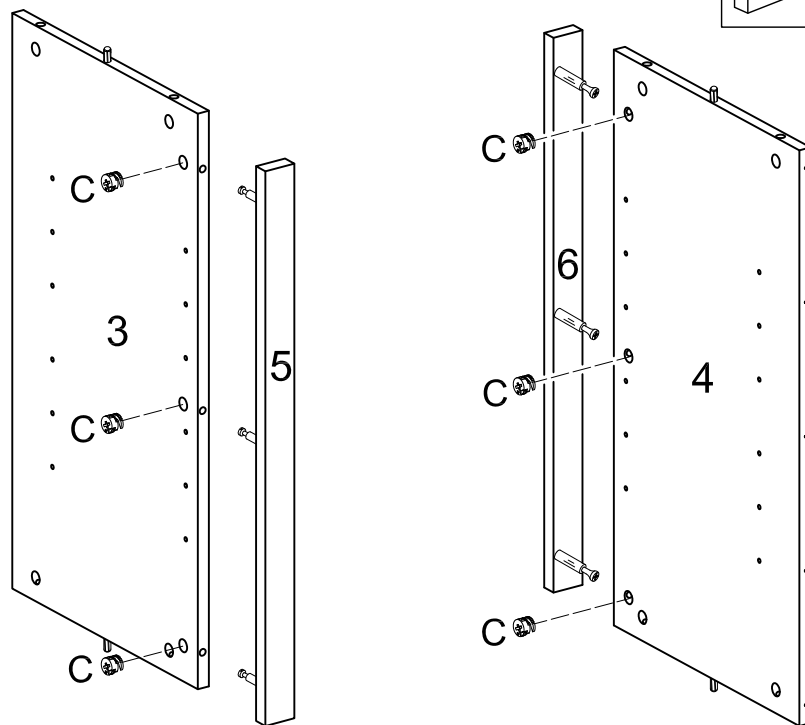

  
Step 7

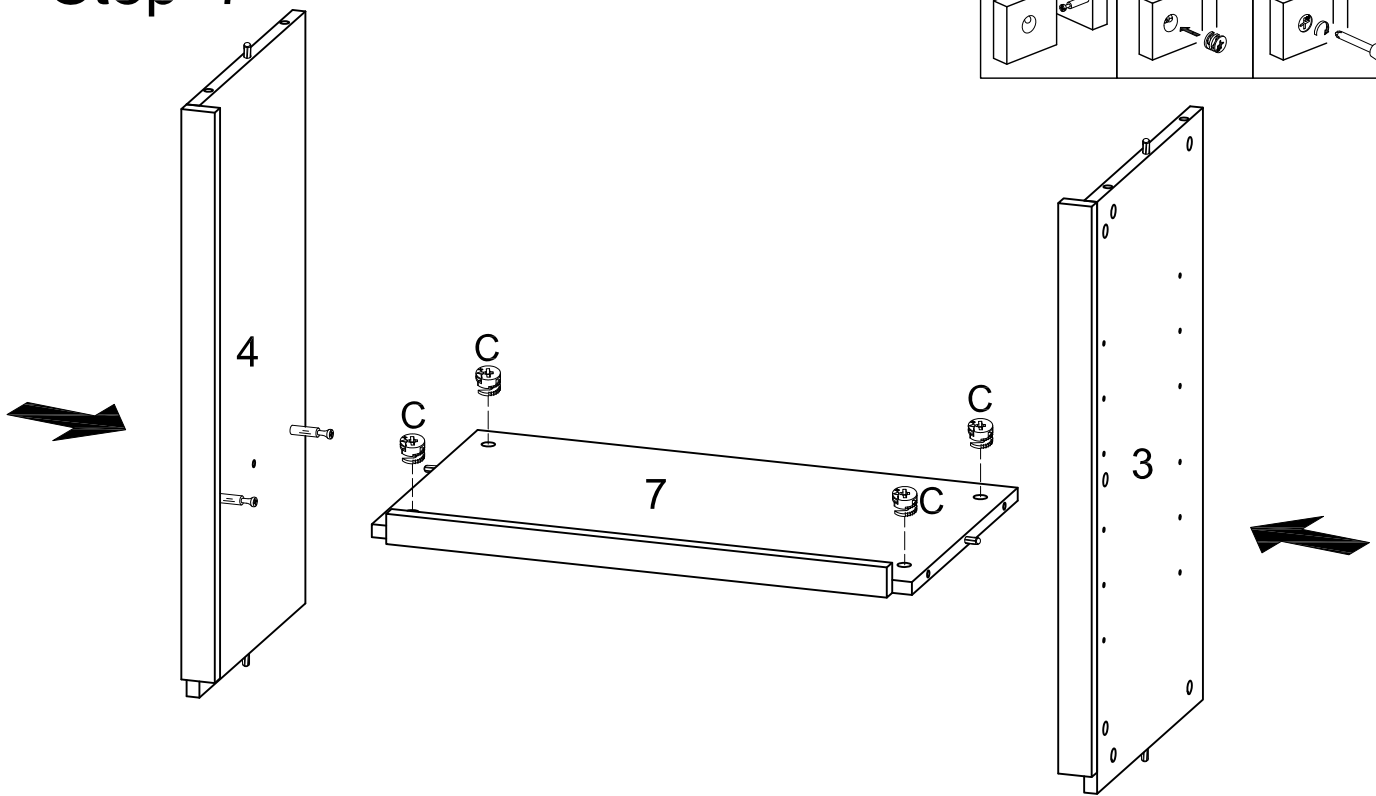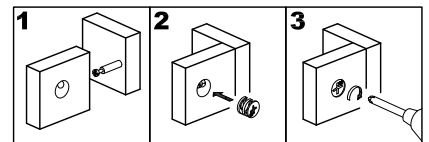

  
Step 8

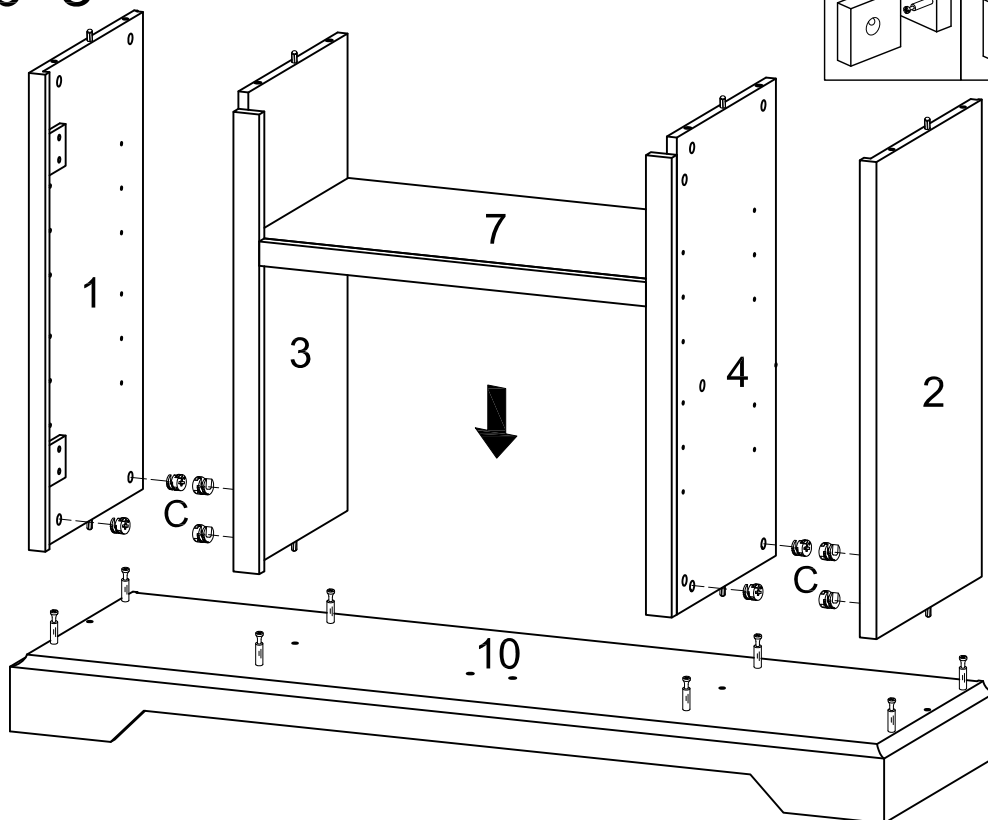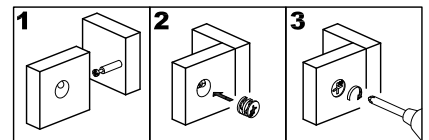

 
Step 9

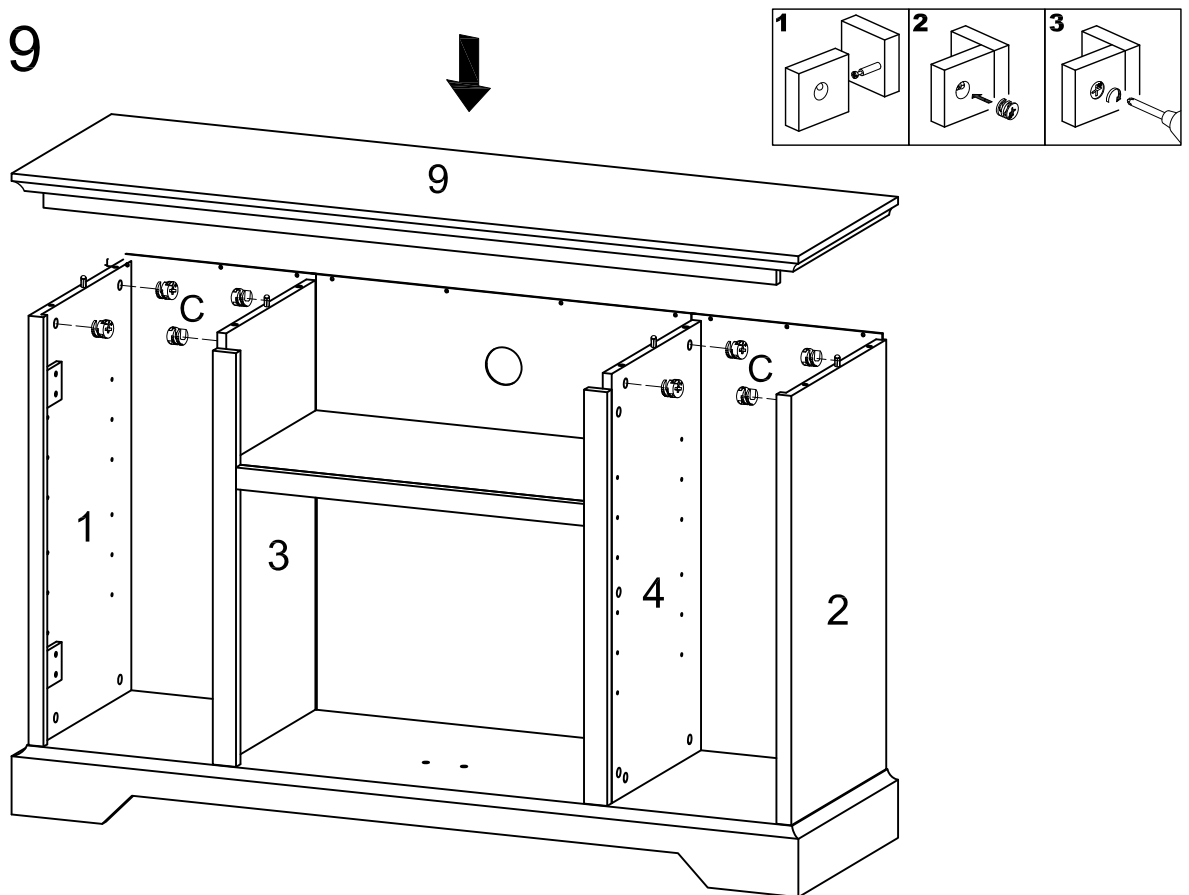

 
Step 10

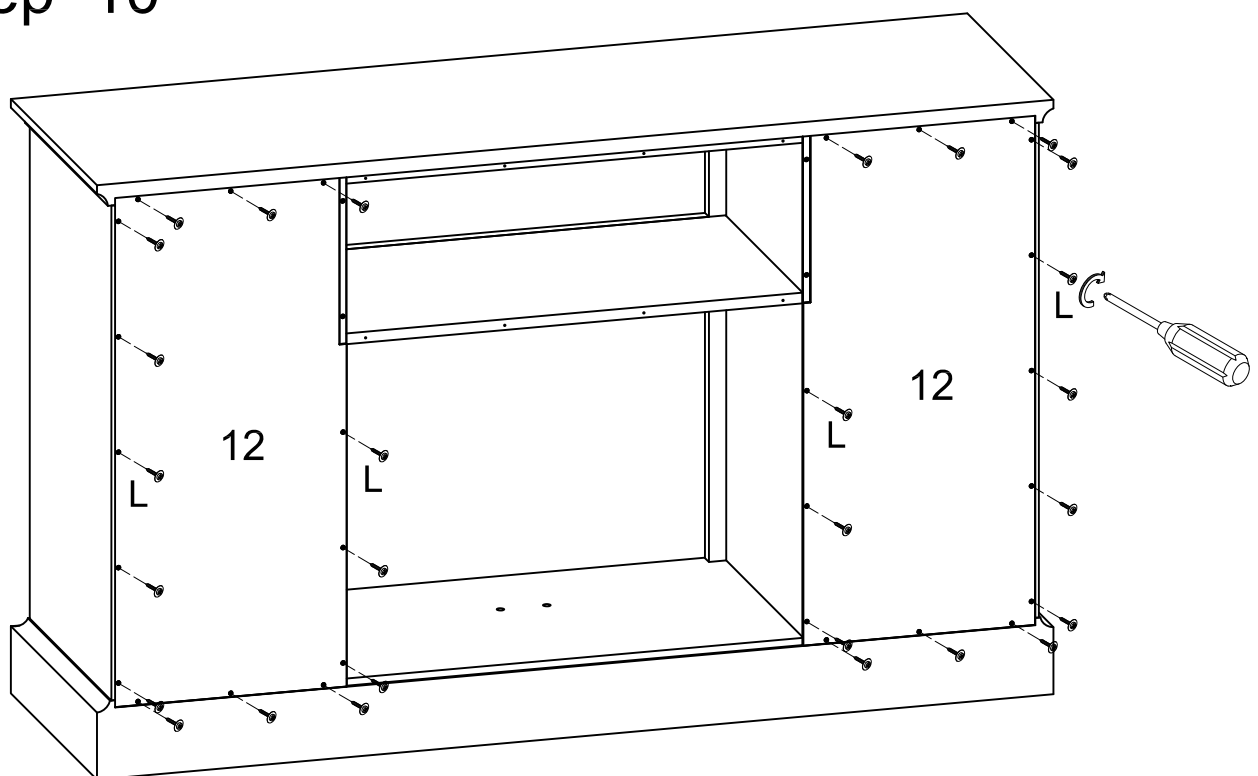

 
Step 11

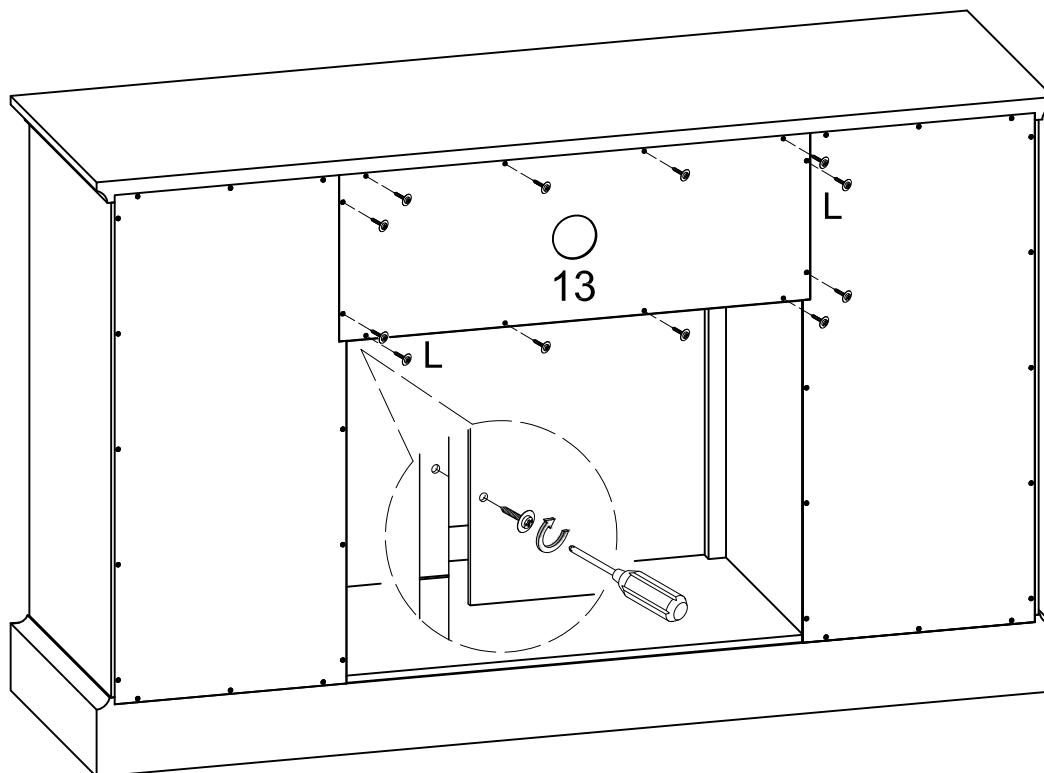

 
Step 12

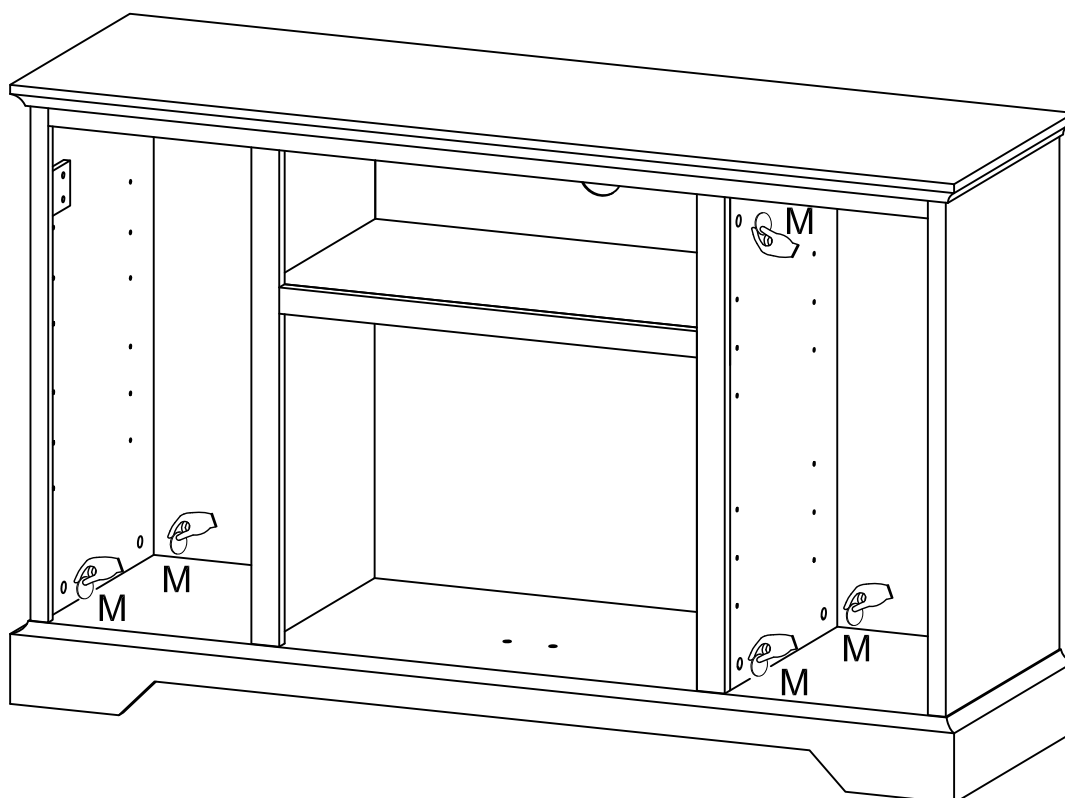

 
Step 13

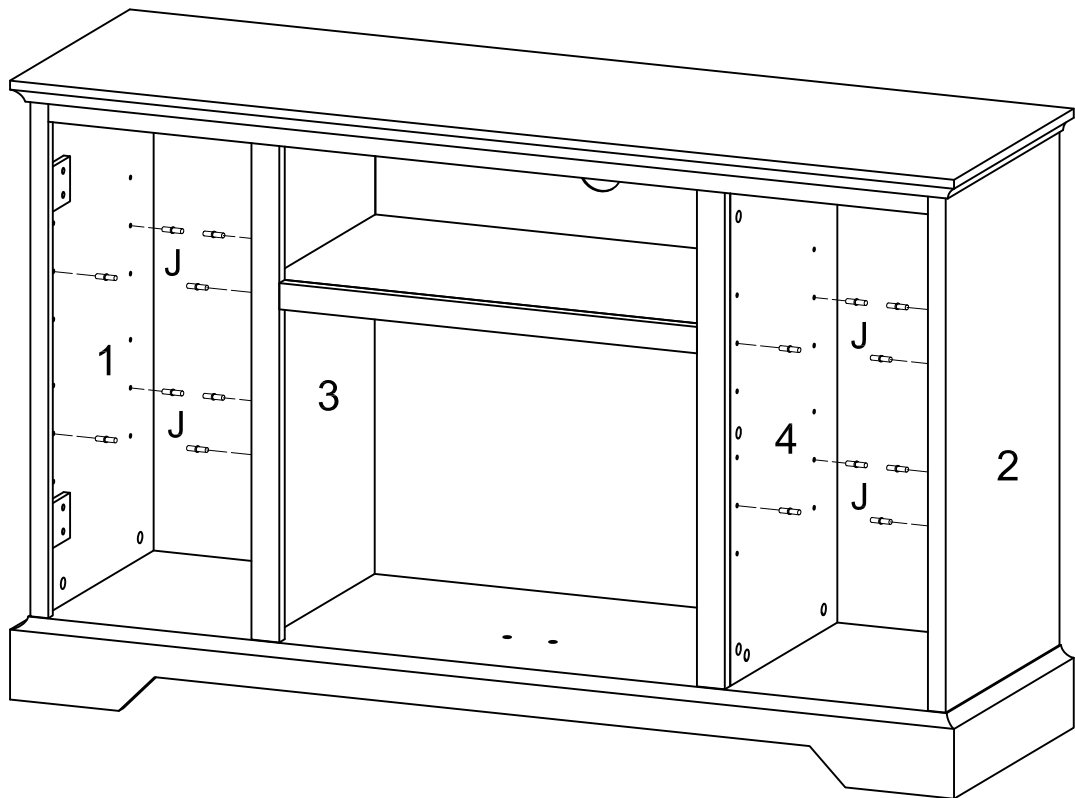

 
Step 14

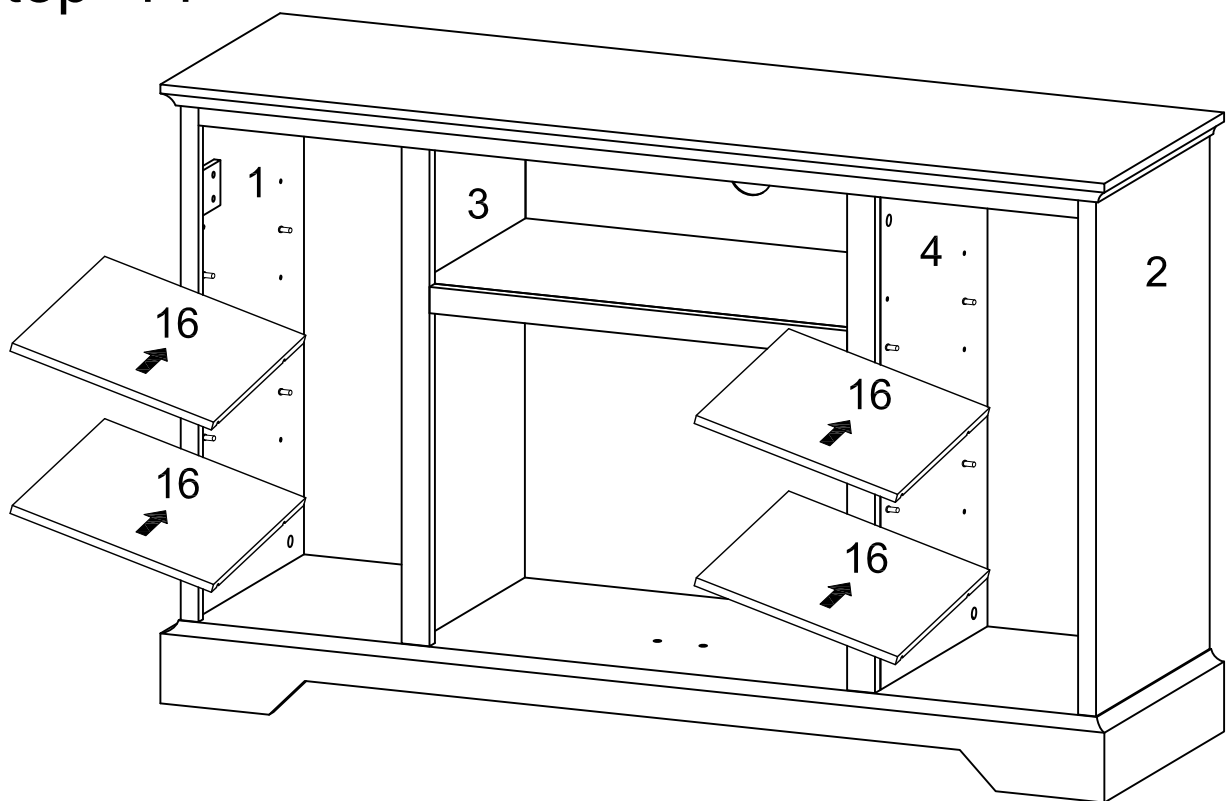

 
Step 15

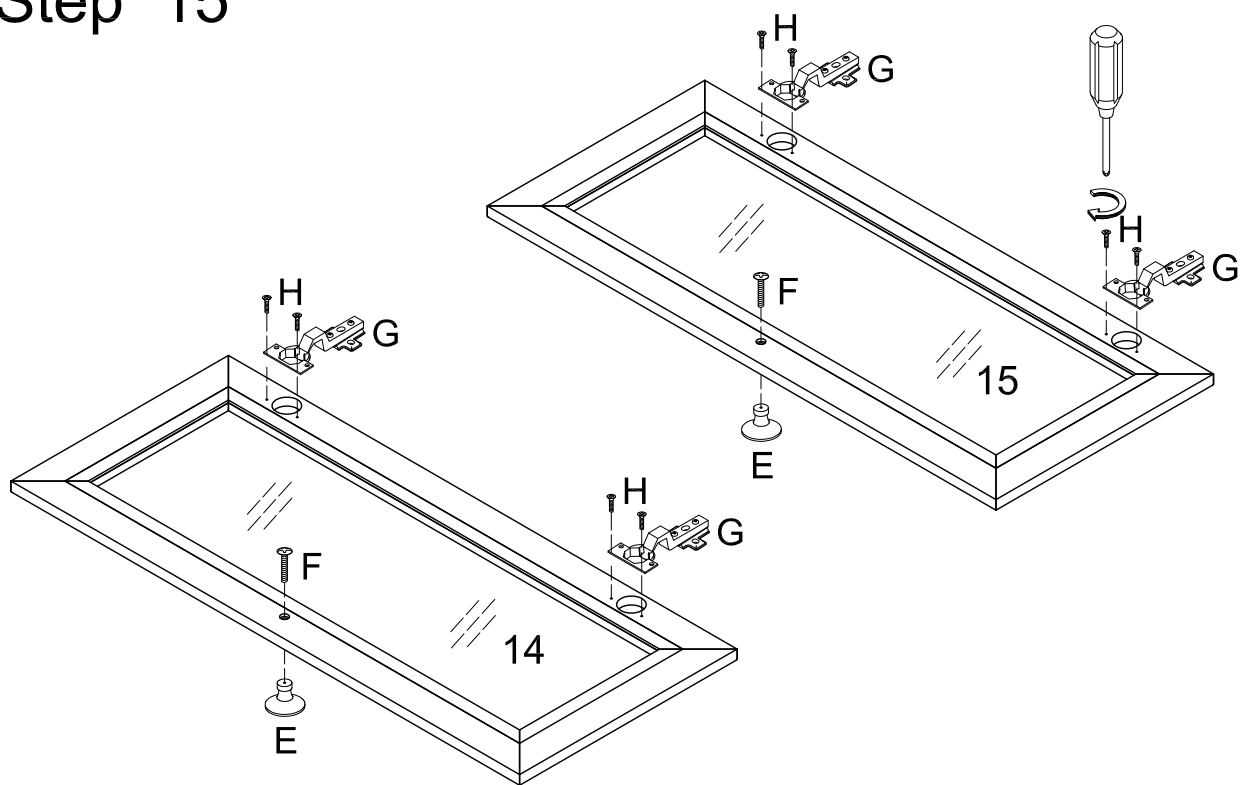

 
Step 16

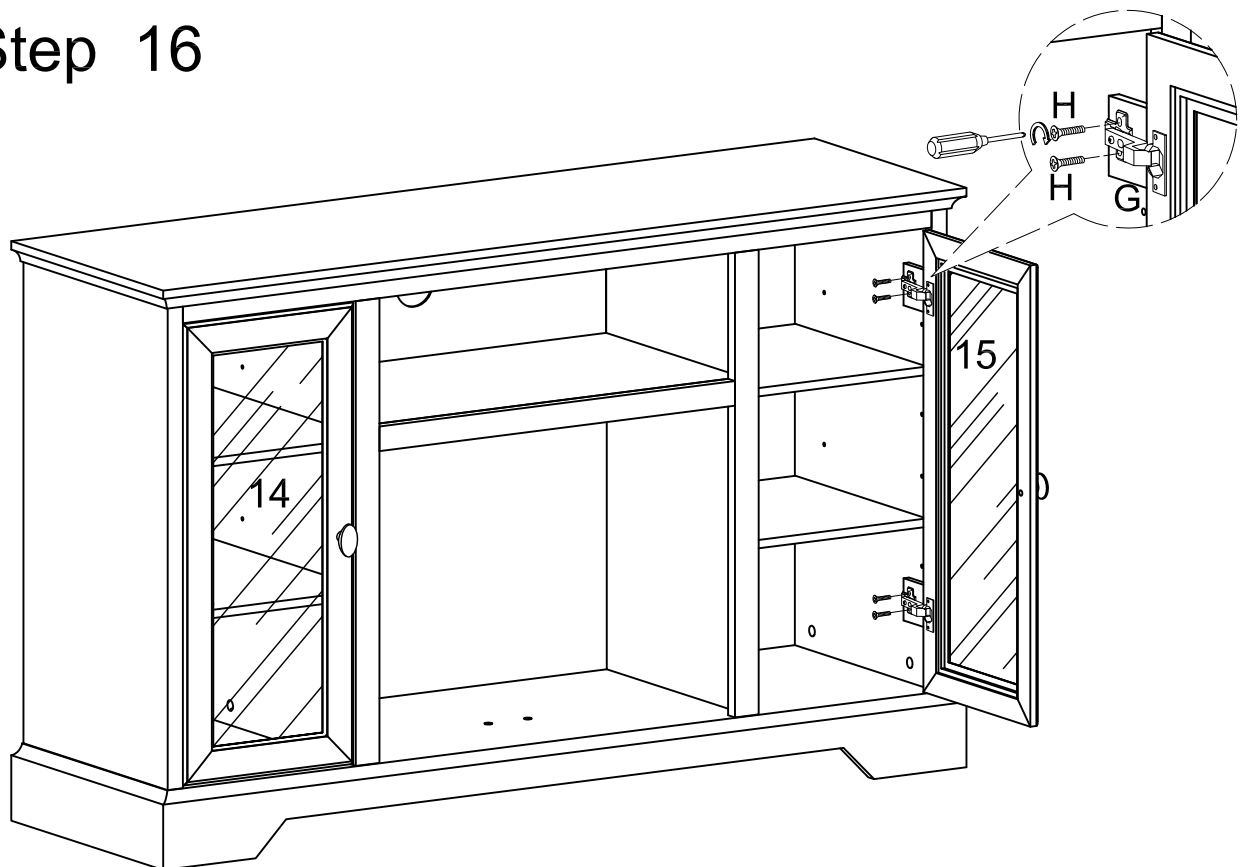

 
Step 17

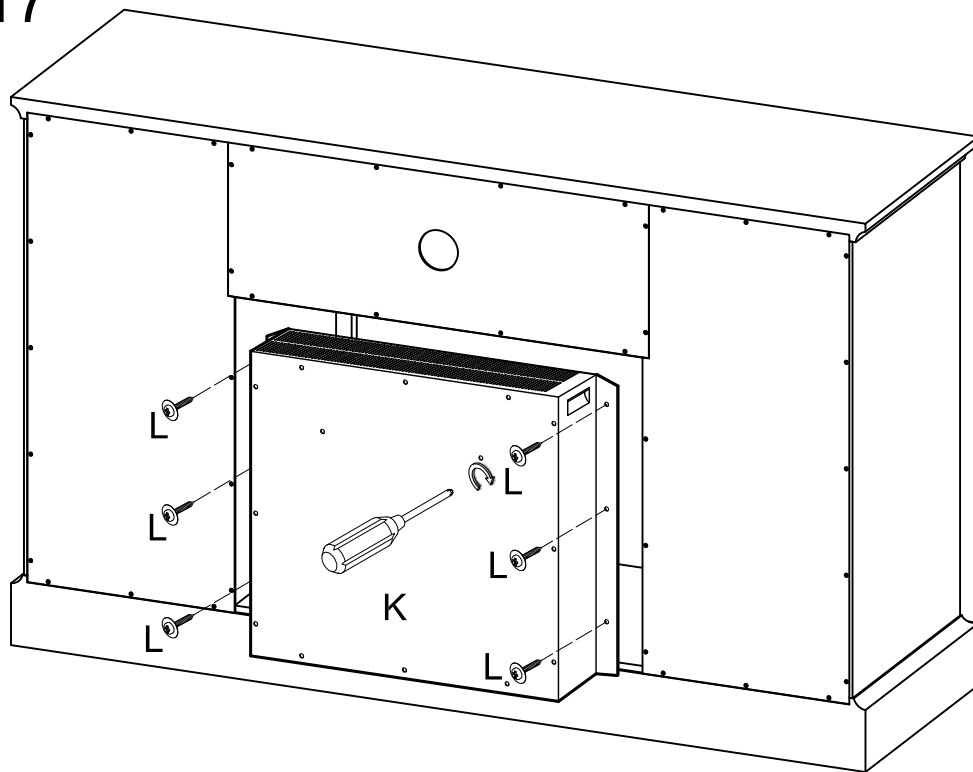

 
Step 18

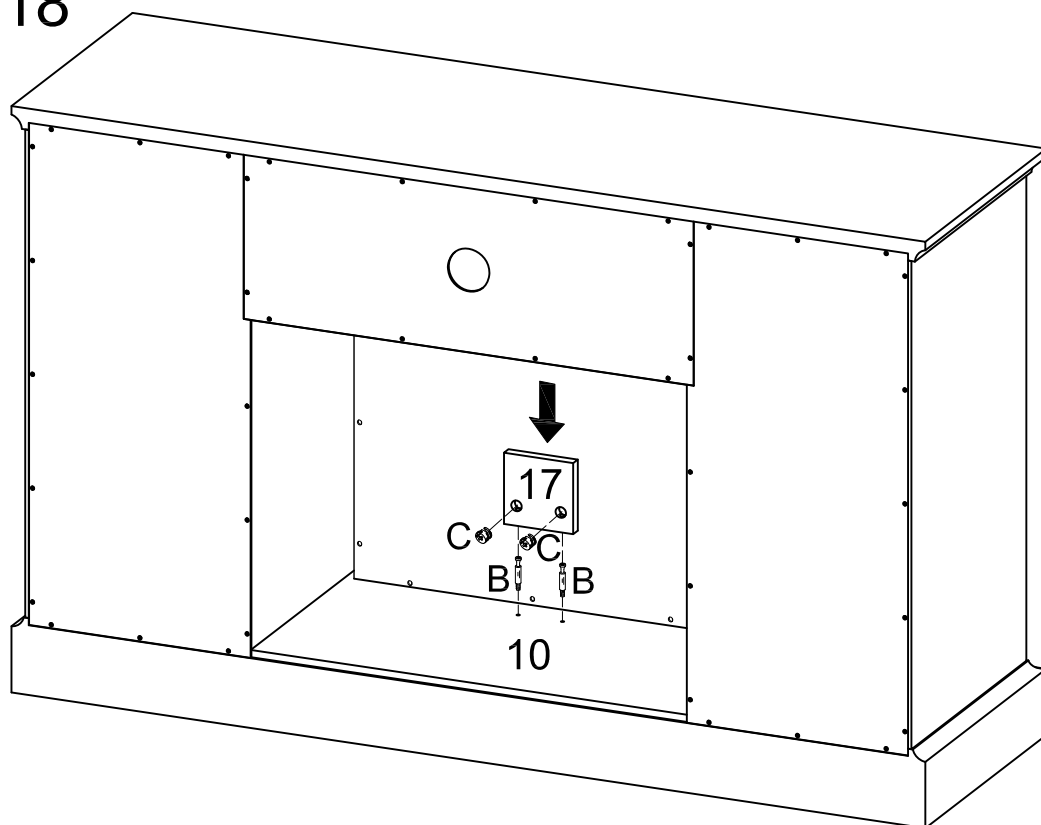

 Step 19

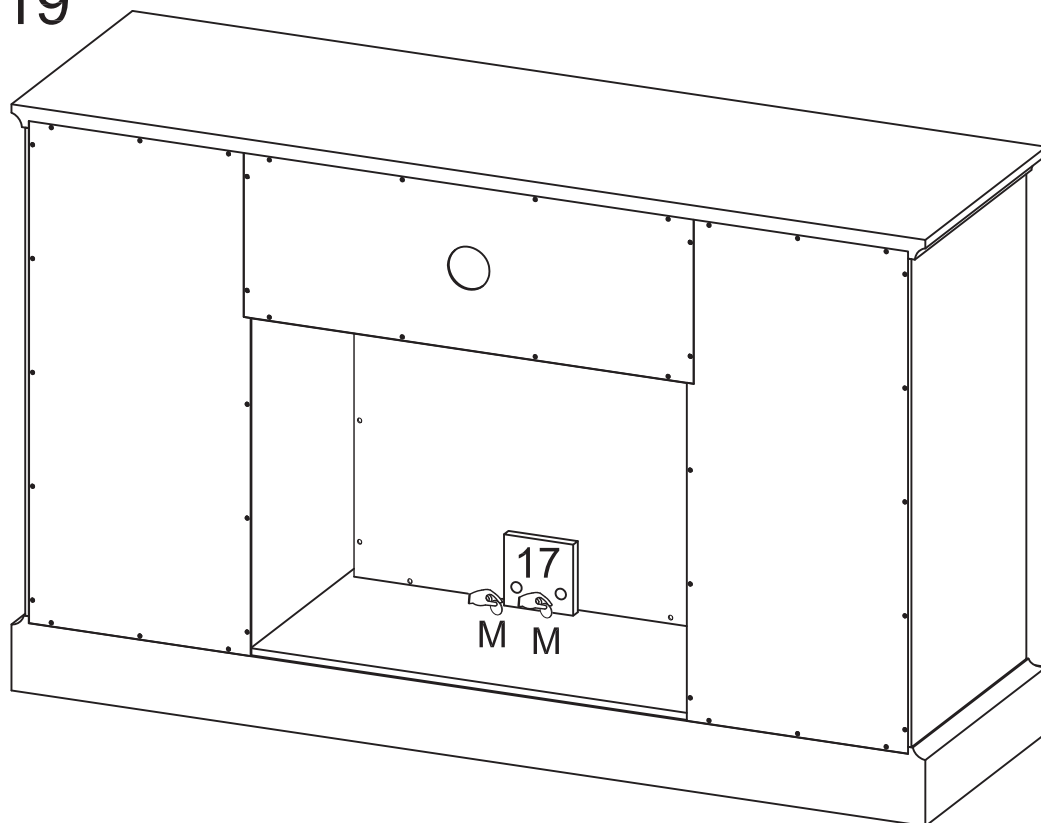

 Step 20

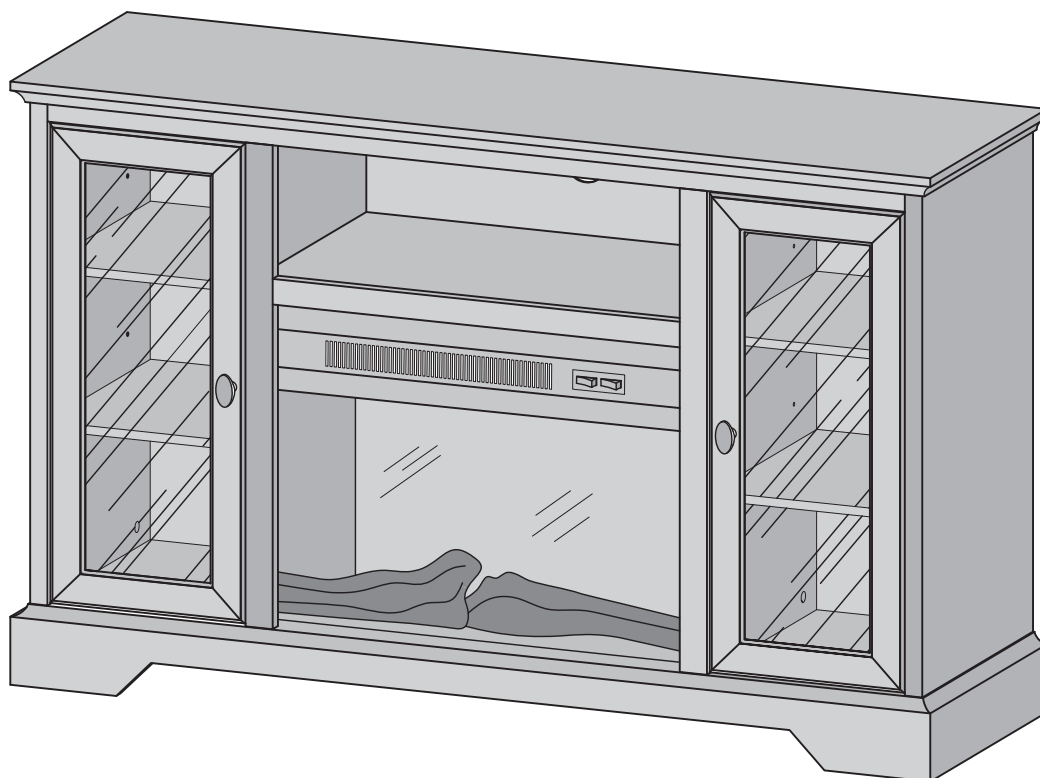

Final Assembly