


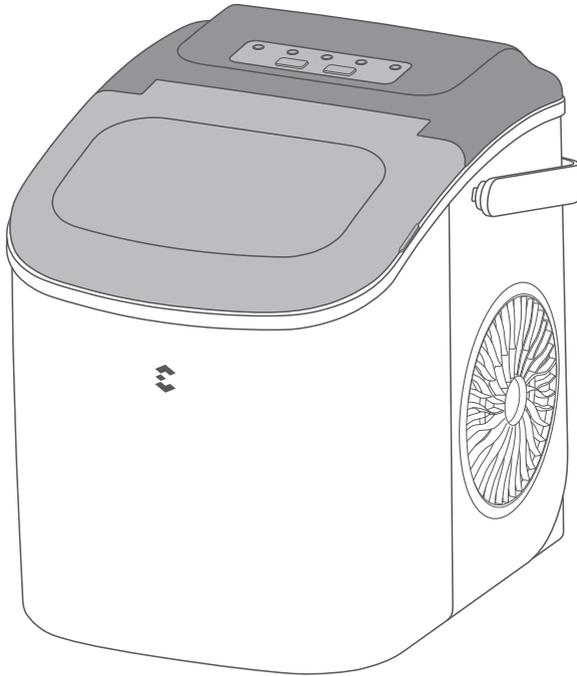

ICE MAKER

IM-BS261G | 26lbs



User Manual

It is important that you read these instructions before using your ice maker and we strongly recommend that you keep them in a safe place for future reference.

ENGLISH ▶

Thank you for purchasing from easyera.
If you have any questions or need further assistance,
please contact us at
support@easy-era.com.

CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	01
PACKAGE CONTENTS	03
PRODUCT OVERVIEW	03
Ice Maker	03
Control Panel	04
BEFORE FIRST USE	05
USE YOUR ICE MAKER	06
1. Add Water	06
2. Select Ice Cube Size	07
3. Star/Stop Making Ice	08
4. Ice Full Reminder	08
5. Self-cleaning Mode	09
6. Water Drain	09
SPECIFICATIONS	10
TROUBLESHOOTING	11

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury during ice-making operation, always read carefully and obey all safety information.

ALL SAFETY INFORMATION WILL FOLLOW THE SAFETY ALERT SYMBOLS BELOW



SAFETY PRECAUTIONS

You need to follow these instructions and execute.



PROHIBITED MATTERS

Prohibit these operations; otherwise, it will cause danger.



Read and follow these instructions.



Plug the ice maker into a grounded 3 prong outlet with 110~120V/60Hz power supply.



Use this ice maker only for its intended purpose as described in this user manual.



It is suggested to put the ice maker in a cool and ventilated place, which will greatly improve the ice producing capacity.



Do not use other liquid to make ice cubes other than water.



If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.



Unplug the ice maker before cleaning, repairing or servicing.



Do not use flammable liquid to clean the ice maker.



Do not turn the ice maker upside down or tilt it more than 45° during transportation or use. If it happens, let it stand upright for at least one hour before plugging in and using it again.



Place this ice maker away from direct sunlight and make sure that there is at least 4 inches(10 cm) of free space between all sides of your ice maker and surrounding objects.



Keep flammable materials and vapors, such as gasoline, away from the ice maker.



Do not use an extension cord.



Packaging materials can be dangerous for children. There is a potential risk of suffocation! Keep all the packaging materials away from children.



To avoid a hazard due to instability of this ice maker, it must be placed on an even or flat surface.



Do not operate this or any other ice maker with a damaged cord.



Do not tip over the ice maker.



Do not remove the ground prong. This ice maker must be properly grounded. Never plug the power cord into a receptacle that is not grounded well and not in accordance with local and national codes.



Children should be supervised to make sure that they do not play with the appliance.



Do not place the power cord over carpets, rugs, etc. Do not cover the cord and do not submerge it in water.




This ice maker must be positioned well so that the plug is accessible.



If the ice maker is brought in from outside in winter, please give it a few hours to warm up to room temperature before plugging in.

WARNING: This appliance must be earthed.


PACKAGE CONTENTS

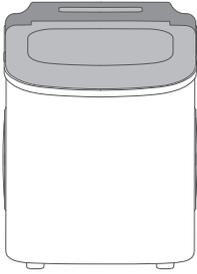

Ice Maker x 1



Ice Scoop x 1

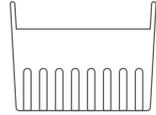

Ice Basket(pre-assembled) x 1



Handle x 1



User Manual x 1





Quick Guide x 1

* If there is any part missing, please contact our customer service: support@easy-era.com


PRODUCT OVERVIEW

Ice Maker

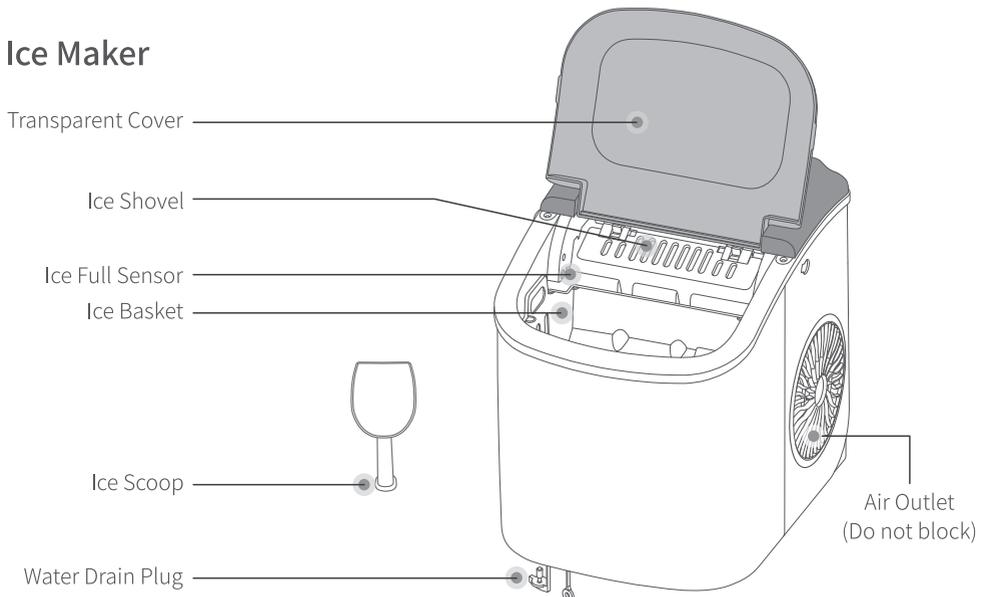

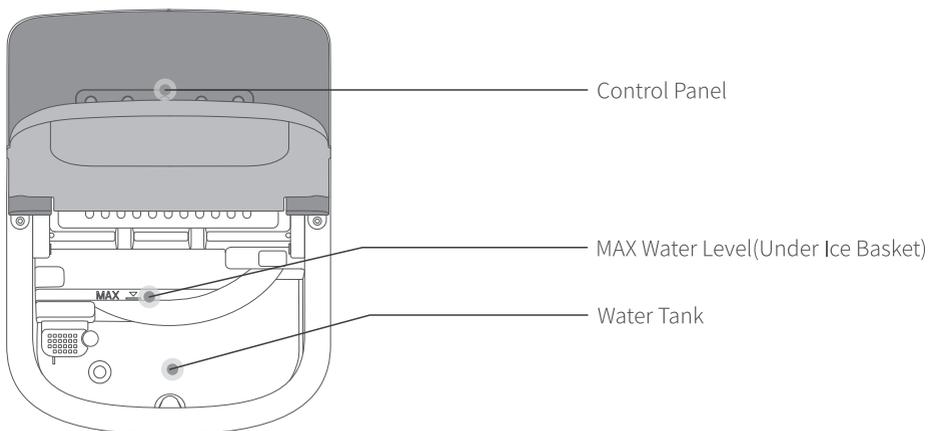

Control Panel

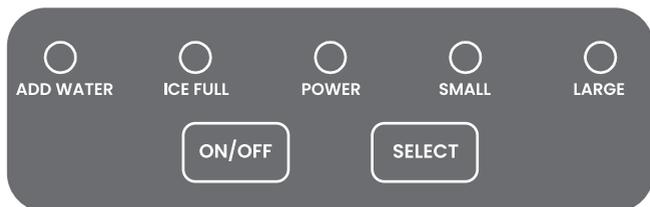

ON/OFF

ON/OFF Button

Press this button to start or stop making ice.

Press and hold the button for more than 5 seconds to enter self-cleaning mode.

SELECT

SELECT Button

Press this button to select the ice cube size: LARGE or SMALL.

ADD WATER

ADD WATER Indicator

Lights up when there is not enough water in the water tank.

ICE FULL

ICE FULL Indicator

Lights up when the ice basket is full.

POWER

POWER Indicator

Flashes when the ice maker is plugged in and becomes solid on when the ice maker is making ice.



SMALL

SMALL Indicator

Lights up when you select SMALL.




LARGE

LARGE Indicator


Lights up when you select LARGE.

BEFORE FIRST USE


- ① Unpack the ice maker, then remove all the packaging materials.
- ② Clean the interior of the ice maker, the ice basket and the ice scoop with warm water and a soft cloth for 3-5 times to remove possible odor or residue caused by the manufacturing or transportation.
- ③ Install the handle into the ice maker.

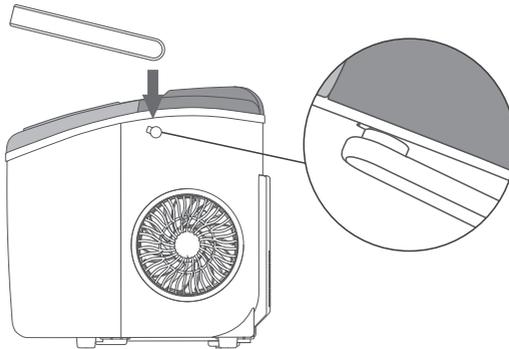


- ④ Place the ice maker on a level surface in a location where your ice maker is protected from direct sunlight and other sources of heat (such as a stove, furnace, or radiator).

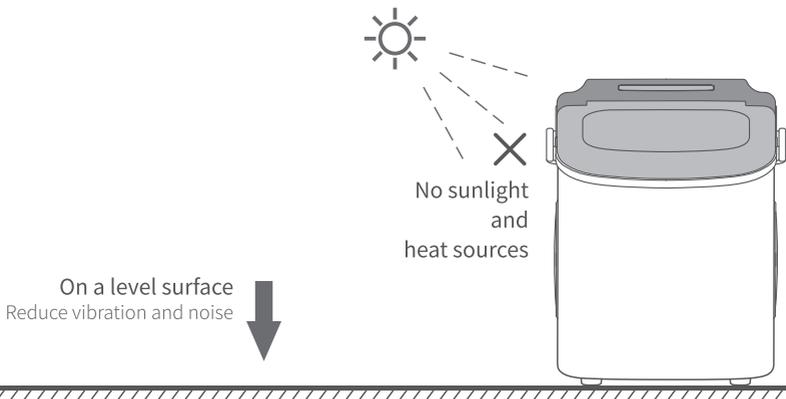

- 5 Make sure to leave at least 4 inches(10 cm) clearance on all sides of the ice maker for proper air circulation.

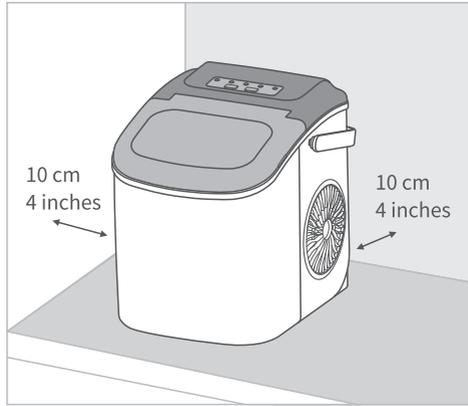

- 6 Before plugging in, please let the ice maker stand upright for 1 hour to allow the refrigerant to settle.
- 7 Plug the ice maker into a well-grounded outlet.

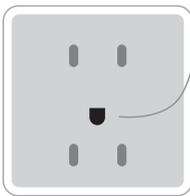

Must be grounded well.

DANGER!


Improper use of the plug may result in the risk of electric shock.

- 8 There may have water vapor in the product, which is normal because we have tested all our products before they left the factory.

USE YOUR ICE MAKER

1. Add Water

Open the transparent cover, remove the ice basket, then fill the water tank with clean drinking water. Make sure that the water level is below the **MAX** line. After adding water, please place the ice basket back and close the cover.

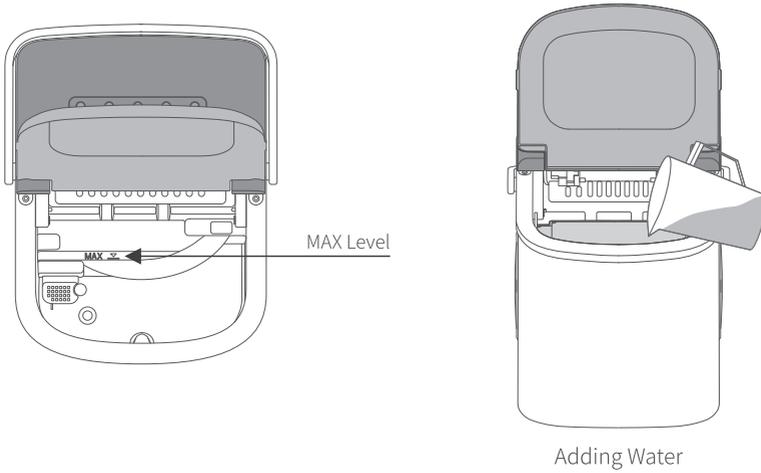


Notes:

- The **ADD WATER** indicator lights up when there is not enough water in the water tank.
- Please use clean drinking water. Do not use distilled water, beverages including sparkling water or coke.

2. Select Ice Cube Size

Press the **SELECT** button to select the ice cube size. You get two sizes of ice selectable: **SMALL** and **LARGE**. Selecting **SMALL** means the ice-making cycle takes a relatively shorter time.

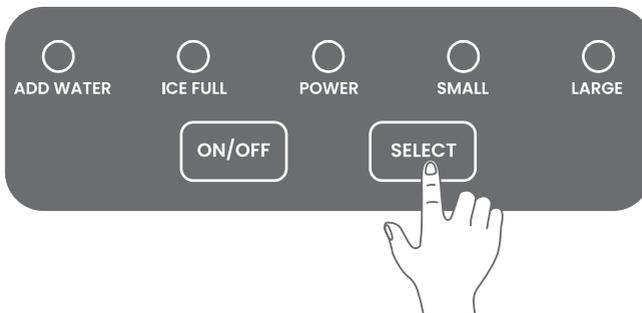


Note:

If the ice maker is shut down within 5 minutes, please wait at least 5 minutes to restart the ice maker.

3. Start/Stop Making Ice


Press **ON/OFF** to start making ice; the **POWER** indicator becomes solid on. Press **ON/OFF** it again to stop making ice; the **POWER** indicator flashes again.

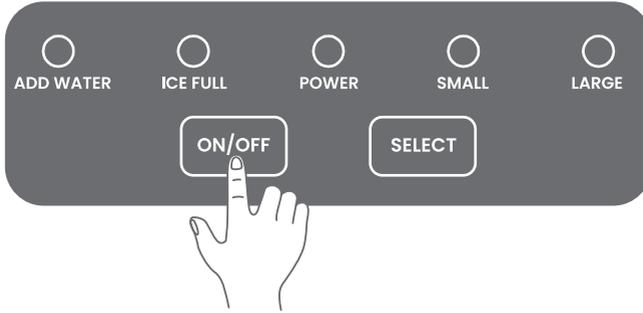

Every single ice-making cycle can produce 9 ice cubes. When the cycle ends, the ice cubes will be automatically collected into the ice basket.

Notes:


- When the ice-making cycle ends, open the top cover and transfer the ice cubes to a freezer in time. If the ice cubes melt and the water flows to the water tank, the ice maker will start making ice again.
- Depending on the ambient and water temperature, the ice-making cycle may last for 6 to 13 minutes. If the ambient temperature is too high, the cycle may take longer.

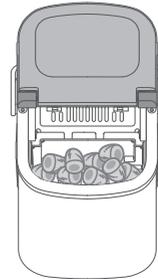

4. Ice Full Reminder


The **ICE FULL** indicator will light up when the ice basket is full, and then the ice maker will stop making ice automatically. Gently remove the ice cubes from the ice basket with the scoop, then restart the ice maker.

Lights up

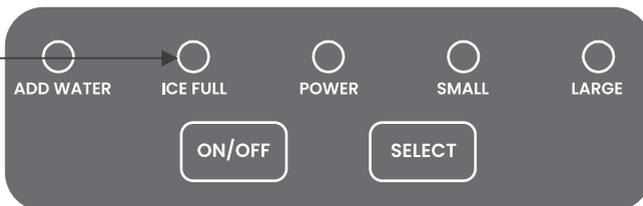

5. Self-cleaning Mode

When the ice maker is connecting to power and not making ice, press and hold the button **ON/OFF** for more than 5 seconds until the S and L indicators starts flashing alternately. It means that the ice maker enters self-cleaning mode and starts to clean itself automatically. The process takes about 30 minutes.

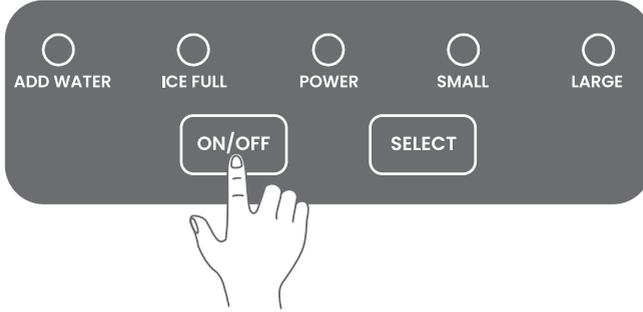


Tip:

This process can be manually terminated by pressing the button **ON/OFF** at any time.

6. Water Drain

After the ice maker finishes the ice-making, you can take out the cap on the water drain plug to drain the water in the tank.

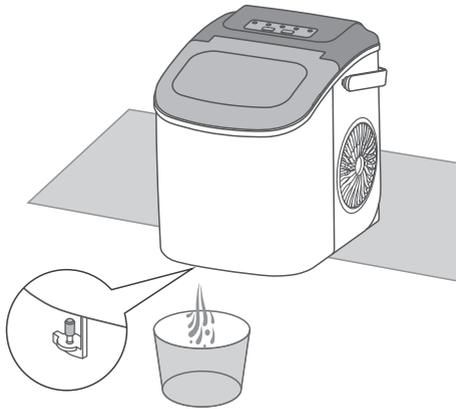

Tips:

- It is better to change water every 24 hours.
- If the ice maker is not in use, please clean it and dry all the parts of it.

SPECIFICATIONS

Model	IM-BS261G
Rated Voltage/Frequency	115 V~ 60 Hz
Power Consumption	100W(25°C); 120W(40°C)
Ice Making Rated Current	1.5 A
Ice Harvest Rated Current	1.8 A
Refrigerant	R600a 0.74oz/21g
System Pressure	High Side: 290 psig Low Side: 88 psig
Net Weight	13.7lbs(6.2kg)
Dimensions(H x W x D)	8.7*11.6*11.4inches(222*294*290mm)
Enclosure	ABS Plastic

TROUBLESHOOTING

Issue	Possible Cause(s)	Solution
ADD WATER indicator lights up	Not enough water	Please turn off the ice maker and add some water into the water tank.
ICE FULL indicator lights up	Ice basket is full	Remove the ice cubes from ice basket.
Ice cubes are sticking together	The time of ice-making is too long	Turn off the ice maker, and restart it after the ice cubes melt. Making small ice cubes takes a relatively shorter time.
	Water temperature in the water tank is too low	The water temperature should range from 45°F(7°C) to 90°F(32°C).
The ice-making cycle seems normal, but no ice cubes are formed	Room temperature or water temperature in the water tank is too high	The room temperature should be in the range of 50°F-105°F(10°C-40°C), and water temperature should be in the range of 45°F-90°F(7°C-32°C).
	Refrigerant in cooling system leaks	Contact a qualified service technician for repair or customer service.
	Pipe in the cooling system is blocked	Contact a qualified service technician for repair or customer service.
The ice maker can't stop making ice	Direct sunlight or sunlight reflection cause the sensor to malfunction	Move your ice maker to somewhere shady.
The ice maker is noisy	Improper setup or component failure	Follow the instruction and check if you set up the ice maker properly. If the issue still exists, please contact a qualified service technician or customer service.

If there is any issue unresolved, please contact us at: support@easy-era.com.



Intertek

3149457

Conforms to

UL 60335-1 & 60335-2-24

Certified to CSA C22.2

No. 60335-1 & 60335-2-24