




# Betty Crocker™

## 5-SPEED Hand Mixer

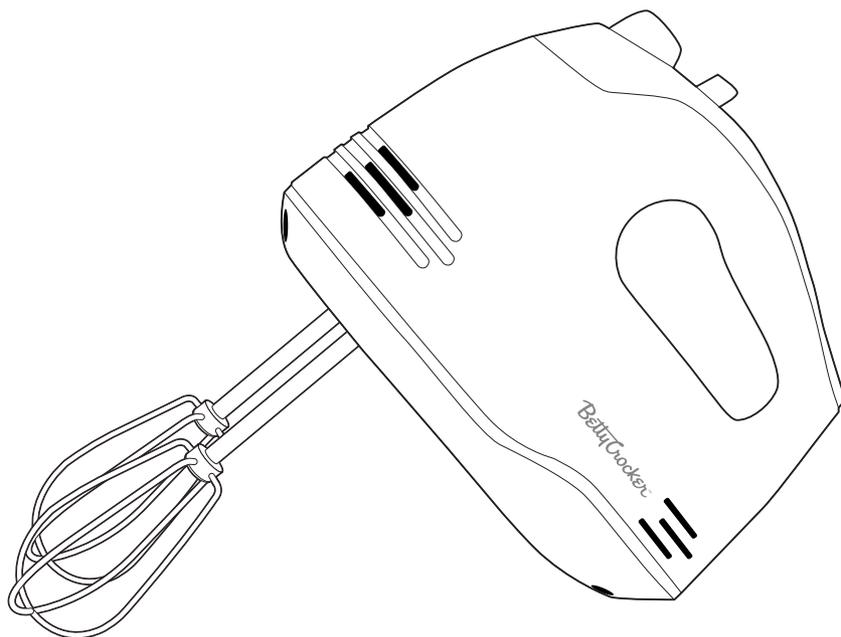

HOUSEHOLD USE ONLY

BC-4203WT

# Table of Contents

<b>Important Safeguards .....</b>	<b>3</b>
<b>Before Your First Use.....</b>	<b>5</b>
<b>Know the Parts of Your Hand Mixer.....</b>	<b>6</b>
<b>Using Your Hand Mixer.....</b>	<b>7</b>
<b>Cleaning Your Hand Mixer.....</b>	<b>8</b>
<b>Mixing Guide .....</b>	<b>8</b>
<b>Limited Warranty.....</b>	<b>9</b>
<b>To Return for Service.....</b>	<b>10</b>
<b>Replacement Parts.....</b>	<b>11</b>

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury, including the following:

1. **Read all instructions carefully before use.**
2. To protect against risk of electric shock, do not put mixer, cord or plug in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. This appliance is not intended for use by children or by persons with reduced physical, sensory, or mental capabilities, or lack of experience or knowledge. Close supervision is necessary when any appliance is used near children. Children should be supervised to ensure they do not play with this appliance.
5. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
6. Avoid contacting moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from beaters during operation to reduce the risk of injury to person and/or damage to the mixer.
7. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
8. The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock or injury.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter or touch hot surfaces, including the stove.
11. Do not place on or near a hot gas or electric burner or in a heated oven.

12. To disconnect, turn the control to off, grasp plug and remove it from wall outlet. Never yank the cord to remove the plug.
13. Remove beaters from mixer before washing.
14. Do not use this appliance for other than intended use.
15. Do not twist, kink or wrap the power cord around the appliance as this may cause the insulation to weaken and split, particularly in the location where it enters the unit.
16. **Do not leave appliance unattended while in use.**

## **SAVE THESE INSTRUCTIONS**

### **HOUSEHOLD USE ONLY**

#### **POWER CORD INSTRUCTIONS**

1. A short power-supply cord is provided to reduce the hazard resulting from entanglement or tripping over a long cord.
2. Extension cords may be used if care is exercised.  
If it is necessary to use an extension cord, it should be positioned so that it does not drape over the counter or tabletop where it can be pulled on or tripped over by children.
3. The electrical rating of the extension cord must be the same or more than the wattage of the appliance (the wattage is shown on the rating label located on the underside or back of the appliance).
4. Avoid pulling or straining the power cord at outlet or appliance connections.

## **POLARIZED PLUG**

1. Your appliance is equipped with a polarized plug (one blade is wider than the other).
2. To reduce the risk of injury this plug must be inserted into a properly installed outlet.
3. If the plug does not fit fully into the outlet, reverse the plug. If it does not fit, please consult a qualified electrician. Do not attempt to defeat this safety feature by modifying the plug in any way.

**WARNING:** Improper use of the power cord may result in electric shock. Consult a qualified electrician if necessary.

## **Before Your First Use**


Carefully unpack the hand mixer and beaters and remove all packaging materials. Set the mixer on a clean, dry table or counter. Wash the beaters in warm, soapy water. Dry thoroughly. The mixer may be wiped with a clean, damp cloth and dried thoroughly. Do not immerse the mixer body, cord or plug in water.

# Know the Parts of Your Hand Mixer

Beater Eject Button

Speed Selector Switch

Chrome Plated  
Beaters (2)

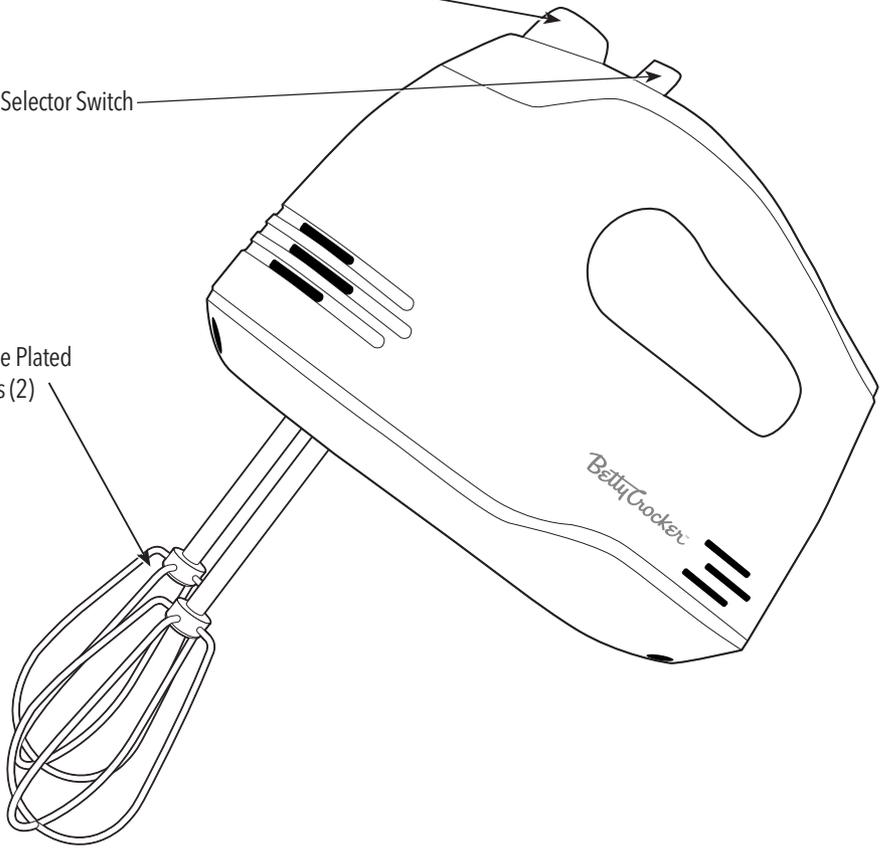

RATING: 120V, 60Hz, 150 WATTS, AC ONLY


# Using Your Hand Mixer

## INSERTING BEATERS

Be sure the unit is unplugged before inserting beaters. Ensure the beaters are inserted completely and not falling out. Ensure the speed selector switch is in the "0" position. Plug the mixer into a working 120 volt 60 Hz AC only outlet. Your mixer is now ready to use.

## CONTROLLING THE MIXER SPEED

To operate your hand mixer, simply move the speed selector switch from the "0" position to the desired speed. Your mixer will beat at the speed level you have selected.

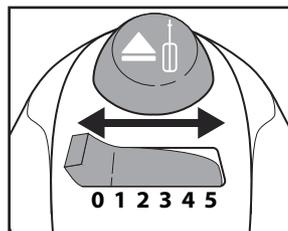

During operation, it is possible to alter the speed of the mixer by selecting a new speed setting. Your mixer has 5 Speed levels: (1 to 5).


## INTERRUPTING THE MIXING PROCESS

To stop your mixer, simply move the speed selector switch to the "0" position. This will stop the beaters' rotation.

**CAUTION:** To prolong the life of your mixer, avoid getting flour into the air vents. Do not use the mixer for more than 5 minutes consecutively. After 5 minutes of use, allow the mixer to rest for a few minutes before continuing to mix ingredients.

## REMOVING BEATERS

Your hand mixer has a beater eject button to allow easy removal of the beaters. Be sure the speed switch is set to "0" and the unit is unplugged before removing the beaters. With one hand holding the beaters, press down on the beater eject button. The beaters will drop out of their locks for easy cleaning.

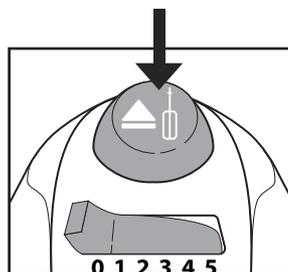

# Cleaning Your Hand Mixer

Be sure mixer is unplugged before cleaning. Remove beaters from mixer and wash them in warm soapy water. Dry thoroughly. The mixer body may be wiped clean with a damp cloth.

**CAUTION:** Do not immerse the cord, plug or mixer body in water or other liquid.

## Mixing Guide

Speed	Suggested Uses
1	Folding in delicate ingredients. Mixing dry ingredients.
2	Stirring liquids or pastry. Blending liquids.
3	Blending ingredients, such as butter and sugar. Mixing batters, such as quick breads.
4	Mixing cake mixes and thick batters.
5	Mashing potatoes, beating egg whites and whipping cream.

## LIMITED WARRANTY ONE (1) YEAR

This warranty is the only warranty for this product. This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase, as evidenced by the receipt of purchase, and provided it is used for the purpose for which the product is intended. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option. If the product should become defective within the warranty period, we will repair it or replace it free of charge. If the product or component is no longer available, we will replace with a similar one of equal or greater value. We will return your product, transportation charges prepaid provided it is delivered prepaid to Formula Brands Inc. Any and all remedies relating to this warranty are limited to the amount of the purchase price of the product. This warranty extends only to the original purchaser, consumer or gift recipient.

This warranty does not cover failure caused by food build-up, water deposits, normal cosmetic discoloration, and inadequate maintenance of the product. This warranty will not cover damage or failure to function if the product has been dismantled or tampered with, if it has been damaged due to exposure to water or any other liquid, if it is not used in conformity with the printed directions of this product or if it has been accidentally or intentionally damaged.

This warranty does not cover the following parts which may be supplied with the appliance: plastic parts, glass parts, glass containers, ceramic containers, cutter/strainer, filters or non-stick surfaces.

This product is intended for use in a single-family household. This warranty will become null and void if the product is used for commercial purposes or any other purpose other than for single-family household use.

We exclude all claims for special, incidental and consequential damages caused by breach of any express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental or consequential damages, so the foregoing limitations may not apply to you.

# TO RETURN FOR SERVICE:

1. Securely package and return the product PREPAID to:  
FORMULA BRANDS INC.  
45 Mural Street, Unit #7, Richmond Hill, Ontario, Canada L4B 1J4

**NOTE:** We recommend you insure your parcel for your protection.


2. Please enclose your name, return address, postal code, telephone number and a description of the defect.
3. To ensure prompt 'In-Warranty' service, be sure to include a proof of purchase (a copy of your store receipt).
4. For repairs not covered under warranty, you will be advised of the cost of the repair in advance, and upon receipt of your cheque or money order the repairs will be completed and the product returned to you.

If at any time you order parts or inquire about service, please quote the "MODEL NUMBER" stamped on the appliance nameplate.

For assistance regarding this appliance, please call  
1-877-244-1110  
between 9:00 am and 5:00 pm (EST) Monday to Friday  
or write  
FORMULA BRANDS INC.  
45 Mural Street, Unit #7, Richmond Hill, Ontario, Canada L4B 1J4  
or email:  
customerservice@formulabrands.com

© General Mills. Betty Crocker and designs are trademarks of General Mills used under license.

# REPLACEMENT PARTS

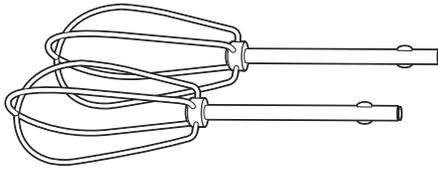

(2) Beaters

PLEASE WRITE MODEL NUMBER HERE:

PART	QTY	PRICE	TOTAL
Beaters (2)		\$3.99	
<b>TOTAL</b>			
<b>SHIPPING AND HANDLING TO CANADA:</b>			\$9.00*
<b>SHIPPING AND HANDLING TO USA:</b>			\$15.00*
<b>SUBTOTAL</b>			
<b>ADD 13% H.S.T. - CANADA ONLY</b>			
		<b>TOTAL</b>	

If you would like to order replacement or spare parts for this appliance, please complete and mail this form, along with a cheque or money order made payable to:  
**FORMULA BRANDS INC.**

**FORMULA BRANDS INC.**  
Parts Department  
45 Mural Street, Unit #7,  
Richmond Hill, Ontario  
Canada L4B 1J4

NAME \_\_\_\_\_

ADDRESS \_\_\_\_\_

CITY \_\_\_\_\_

PROVINCE/STATE \_\_\_\_\_

POSTAL/ZIP CODE \_\_\_\_\_

Prices are subject to change without notice.

**PLEASE NOTE:** WHEN ORDERING FROM USA, AN 'INTERNATIONAL' MONEY ORDER MUST BE USED.

\* Shipping costs may vary based on fuel surcharges and postage rates. Please call toll-free 1-877-244-1110 or email [customerservice@formulabrands.com](mailto:customerservice@formulabrands.com) to confirm shipping and handling charges.



Allow 3 to 6 weeks  
for delivery.

BC-4203WT  
07/25

