

2. Este aparato no debe ser usado por o

1. Nunca desculde ni abandone el aparato mientras está conectado.
2. Este aparato no debe ser usado por o

ADVERTENCIA — Para reducir el riesgo de quemaduras, electrocución, incendio o heridas:

5. **No trate de alcanzar el aparato después de que hubiese caído al agua; desconéctelo inmediatamente.**
4. No coloque el aparato ni lo deje caer al agua u otro líquido.
3. No lo use en el baño o la ducha.
2. No lo coloque ni guarde el aparato donde pueda caer o ser empujado a una bañera o un lavabo.

4. No coloque el aparato ni lo deje caer al agua

PELIGRO — Para reducir el riesgo de electrocución:

1. **Desconecte el aparato inmediatamente después del uso.**

2. No lo use en el baño o la ducha.

3. No lo coloque ni guarde el aparato donde pueda caer o ser empujado a una bañera o un lavabo.

MANTÉNGALO ALEJADO ANTES DE USARLO

LEA TODAS LAS INSTRUCCIONES

MEDIDAS DE SEGURIDAD IMPORTANTES

Al usar aparatos eléctricos, especialmente en la presencia de niños, siempre debe tomar precauciones básicas de seguridad, incluso las siguientes:

SIX 2-INCH ROLLER HAIRSETTER IN A POUCH

VOLUME LIFT & EMULSION



Model	Description	Price
RPPC-8	Six 4-Prong Clips	\$4.99
RP3HS7	3 Jumbo Rollers	\$8.99

Please add postage and handling to all orders. Postage and handling are as follows: Any order up to \$10.00 – add \$1.00 to order. Any order from \$10.01 and over – add \$1.50 to order.

Name: _____
Address: _____
City: _____ State: _____ Zip: _____
Daytime Phone: (____) _____

Note: Prices subject to change without notice. When ordering outside continental U.S.A., consumer must include cost for airmail and parcel post. Allow 4 to 6 weeks for delivery. Outside U.S.A., payments must be drawn on U.S. banks, in U.S. dollars only.

 
Please mail to:
Conair Corporation
150 Milford Road
East Windsor, NJ 08520

14. No utilice una extensión con este aparato.
15. Asegúrese de que el selector de voltaje esté

smooth and add volume to your hair. The length of the roller is 30% longer than traditional rollers. This makes the rollers able to accommodate more hair.

IMPORTANT: After using the hairsetter several times, you will find the best timing for the length and texture of your hair and for the result you desire.

Jumbo rollers create smooth, sleek lines for softer, sophisticated hair styles and also add volume.

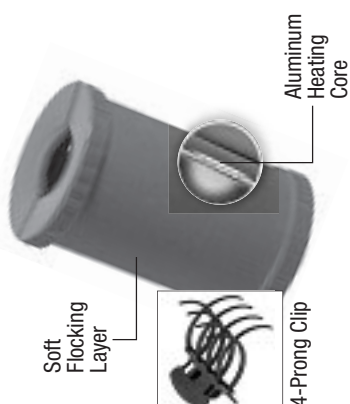

STYLING TIPS

For maximum results, use one or two rollers on the top front layer of your hair. Use the remaining rollers on the sides and back of the head. The hair should be taken in equal sections and rolled under, toward your neck. After approximately 10 minutes the rollers can be removed. Let hair cool for one minute and then style.

3. Su cabello debería estar limpio y seco, o ligeramente húmedo, no mojado.

For use in the U.S.A., the voltage selector switch should be placed in the position. For use in several countries overseas, the voltage selector may need to be placed in the 240V position. Confirm the voltage available at each overseas location before using the appliance. For connection to a 240 volt supply, use an attachment plug adapter of the proper configuration for the power supply receptacle. Adjust your setter to the higher voltage by changing the switch position, located on the bottom of the back of the unit.

HOW TO STYLE YOUR HAIR

1. Place ends of hair on roller and wind toward scalp. Roll hair up firmly. Open 4-prong clip, position on roller, and gently slide the clip toward the scalp for a firm hold. Do not place clip in roller slit.

2. The results are regulated by the temperature and the length of time the roller is left in your hair.

3. Leave rollers in hair for 10 minutes or until rollers are cool before removing.

4. Removing roller: When roller cools, hold roller in one hand and remove clip with other. Then gently remove roller from hair (do not pull) and let hair bounce back after roller has been completely removed. Let cool for one minute and then style your hair. These hot rollers are 2 inches in diameter, which help

3. Su cabello debería estar limpio y seco, o ligeramente húmedo, no mojado.

HOW TO OPERATE your hairsetter

OPERATING INSTRUCTIONS


How to operate your hairsetter

1. Place hairsetter on a firm, flat surface. With the pouch closed, plug cord into outlet. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
2. Never leave your hairsetter plugged in and unattended. Always unplug the hairsetter when not in use. Allow the hairsetter to cool down after use. Store unit in a safe place.
3. When using the hairsetter, your hair should be clean and dry (or slightly damp), never wet.

4. Para quitar los rulos: sostenga el rulo con una mano y retire el clip con la otra. Deslice suavemente el rulo (no lo jale) y permita que el cabello rebote libremente. Permita que el cabello se enfríe antes de peinarlo. Los rulos tienen un diámetro de 5 cm (2 pulgadas), la talla perfecta

CONSEJOS

Para conseguir resultados óptimos, utilice solamente uno o dos rulos encima de la cabeza. Utilice el resto de los rulos para marcar el cabello en los costados y en la parte trasera de la cabeza. Divida el cabello en secciones uniformes y enrolle cada sección hacia abajo, hacia la nuca. Quite los rulos después de aproximadamente 10 minutos. Permita que el cabello se enfríe por un minuto antes de peinarlo.

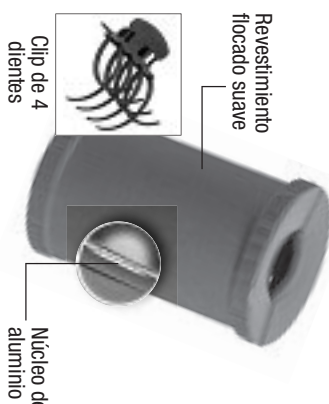

Los rulos "jumbo" son perfectos para crear estilos sofisticados, con líneas suaves y elegantes, y para agregar volumen.

IMPORTANTE: la experiencia le enseñará cuánto tiempo dejar los rulos en el cabello, según su largo y su textura, para conseguir los resultados deseados.


para suavizar y dar volumen. Los rulos son un 30 % más largos que los rulos tradicionales, lo que permite enrollar más cabello a la vez.

4. **Never operate the appliance if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.**

5. Keep the cord away from heated surfaces.
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and other debris.
7. Never use while sleeping.
8. Never drop or insert any object into any opening or housing.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Do not touch the bars that hold the rollers. They are hot.
11. Use hairsetter on a level surface.
12. The cord can be wrapped around the stand for storage. Do not wrap the cord around any other parts of the appliance.
13. Do not use with a voltage converter.
14. Do not use with an extension cord.
15. Be sure dual-voltage selector is in correct voltage position before operating. Before plugging in, read the information about dual voltage contained in the Operating Instructions section of this manual.
16. This appliance was set at the factory to operate at 120 volts. Refer to Operating Instructions section of this manual for conversion to 240 volts operation.

Teléfono: (____) _____
Dirección: _____
Ciudad: _____ Estado: ____ Código postal: _____
Nombre: _____
Modelo Producto Precio
RPPC-8 6 clips de 4 dientes \$4.99
RP3HS7 3 rulos "jumbo" \$8.99
Gastos de manejo y envío (dentro de los EE.UU.): US\$1.00 para pedidos de hasta \$10.00, US\$1.50 para pedidos de \$10.01 y más.
Nota: Los precios están sujetos a cambio sin previo aviso. Los consumidores que residen fuera de los Estados Unidos continentales también deben incluir el precio del envío de un paquete desde los EE.UU. La entrega demora entre 4 y 6 semanas. Solamente se aceptan pagos en dólares americanos, girados sobre bancos estadounidenses.
Favor de mandar su pedido a:
Conair Corporation
150 Milford Road
East Windsor, NJ 08520

PIEZAS DE REPUESTO

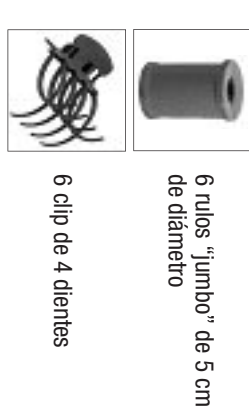

CUERPO Y VOLUMEN

JUEGO DE 6 RULOS CALIENTES DE 5 CM

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ THE INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER: To reduce the risk of electrocution:
1. **Always unplug this appliance immediately after using.**

2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquids.
5. **Do not reach for an appliance that has fallen into water. Unplug immediately.**

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:
1. **An appliance should never be left unattended when plugged in.**

2. This appliance should not be used by, on, or near children or individuals with certain disabilities.

3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Conair.

