 


BT-9875H

BT-9875H PARTS

ASSEMBLY INSTRUCTION

(1)X1		(6)X5	
(2)X1		(7)X2	
(3)X1		(8)X2	
(4)X1		(9)X4	
(5)X1		(10)X4	
		(11)X1	

