

Chair Assembly Instructions

Estimated Assembly
Time in Minutes

☆ <15 ★ <45 ☆ 60+

Your chair comes packaged in one box.

DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result.

Carefully remove all of the components from the packaging and set aside for assembly. Assemble on a soft surface to prevent scratching the finish.



Parts List

A 1 x Seat



B 1 x Back



* **C** 4 x Legs



* **D** 4 x Bolts



M8 x 70mm

* **E** 4 x Washers



M8 x 22 x 1.5mm

* **F** 4 x Lock Washers



M8 x 12 x 2mm

* **G** 1 x Hex Key



M5 x 77 x 27mm

* **H** 4 x Large Washers



φ10 x φ50 x 1.5mm


* Replaceable Parts




Hardware bag can be found under the seat.

Assembly


Step 1

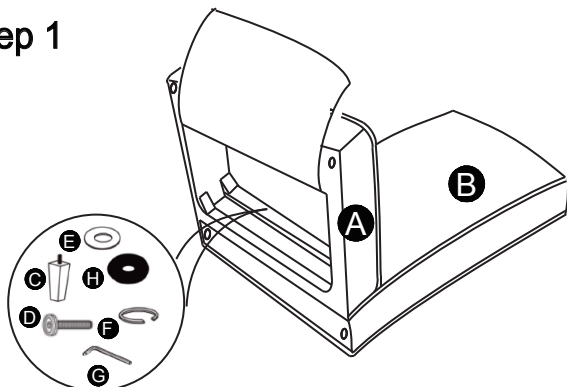

Step 2

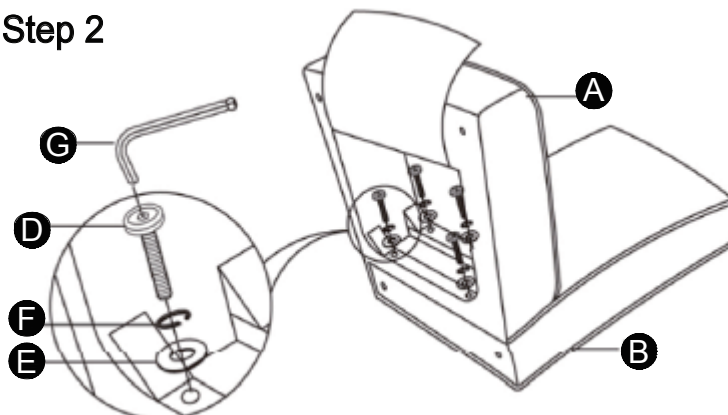


Step 3

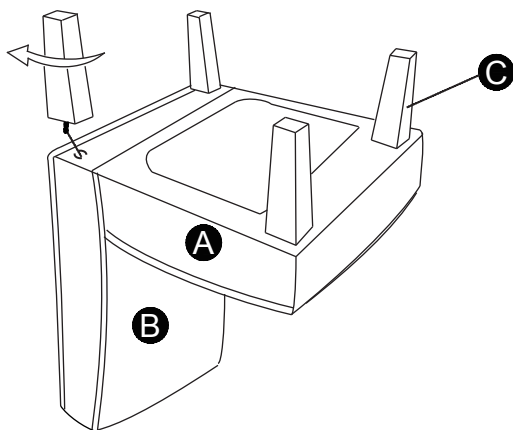

Step 4

OPTIONAL

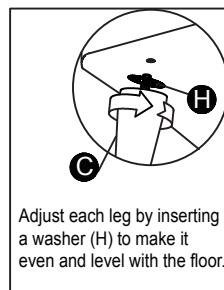

Adjust each leg by inserting a washer (H) to make it even and level with the floor.



Your chair style may differ from images. Care for your furniture by periodically tightening all bolts using the included hex key.

About your furniture piece:

- Softening of foam is natural and will happen over time with use.
- Fabric will fade or discolor in direct sunlight. Minimize exposure to direct sunlight to extend the life of your furniture.
- Wood grain, knots, streaks, and color variation occur naturally in wood and are not considered defects.

CAUTION: Tighten all components securely before use. Failure to do so may result in personal injury.

Customer Support: 866-238-0531
Mon-Fri 8:00am - 4:30pm CST
customerservice@furniturequestions.com