

## What's in the box?

 
- (1) Dreamweaver Shine Sound Soothing Projector
- (1) Power Adapter

## Power the Dreamweaver Shine

The Dreamweaver Shine offers 2 options for power:

- power adapter
- 3 AAA batteries (not included)

**To use the power adapter:** Plug the power adapter into the **DC IN 6V** jack on the back of the Dreamweaver Shine. Plug the other end of the power adapter into a working outlet or surge protector.

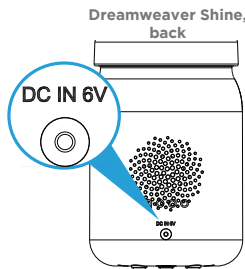


**To use batteries:** Use a flathead screwdriver (not included) to unlatch the battery door on the bottom of the Dreamweaver Shine.

Remove the battery door and insert 3 AAA batteries (not included) into the battery compartment. (Match the polarity signs on the inside of the compartment!)

Place the battery door back on the bottom of the Dreamweaver Shine. Screw the battery door latch back into place to lock the door.

 **IMPORTANT:** NEVER place the Dreamweaver Shine or cords of any kind inside the crib. NEVER place the Dreamweaver Shine or cords within reach of children. THIS IS NOT A TOY.

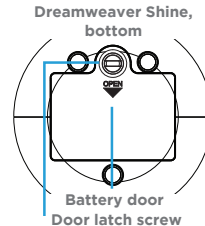

## Everyday use

 
### PLAYING SOUNDS

The Dreamweaver Shine offers a variety of soothing lullabies and nature sounds, as well as white noise, to calm baby.

**To cycle through these sounds:** Press the  button on the front of the Dreamweaver Shine. Each press goes to a different selection.

**To adjust the volume:** Press the **VOLUME +** or **-** button.

**To turn sounds off:** Press and hold the  button on the front of the Dreamweaver Shine.

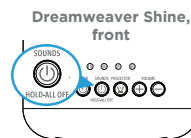

### USING THE PROJECTOR

**To turn the projector on:** Press the  button on the front of the projector.

**To adjust brightness of the projector (or turn it off):** Press the  button repeatedly to cycle through the settings (low, high, and off).



## CHANGING THE PROJECTOR IMAGES

The Dreamweaver Shine offers three sets of images.

### To change to a different image set:

Make sure the projector is off. Gently twist the lid on the top of the projector and lift it off.

On the bottom of the projector lid, there's a white image wheel with the three sets of images. Grab the outside edges of the wheel and gently rotate them to the left or right until you feel a click. **(If you can't go in one direction, try the other direction).** Each click is a different image set.

Hold the projector lid up to a light to see which set you're on. When you've found the one you want, place the projector lid back on top of the projector and twist it back into place.

Dreamweaver Shine, top


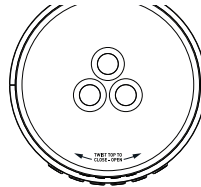 


Image wheel  
(on the underside of  
the projector lid)

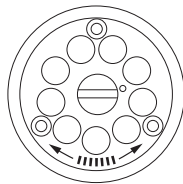 

## USING THE TIMER

The timer shuts the lights, sound, and projector off automatically after a set amount of time.

**To set the timer:** Press the  button on the front of the Dreamweaver. The minutes indicator on the front of the Dreamweaver shows the amount of time on the timer: **15, 30, 45, or 60** minutes.

Press  to cycle through these options or turn the timer off.

Dreamweaver Shine,  
front

 


## USING THE NIGHTLIGHT

The Dreamweaver Shine offers two firefly light modes.

**To turn the light on, change light modes, and turn it off again:** Press the  button on the front of the projector.

Dreamweaver Shine,  
front



## Questions?

Just call 1-844-393-7338 or visit [ProjectNursery.com](http://ProjectNursery.com)

project nursery®

**Dreamweaver Shine**  
Sound Soothing Projector

## Quick Start Guide