


INSIGNIA™

2-Drawer File Cabinet - Dark Oak

NS-FCBN3

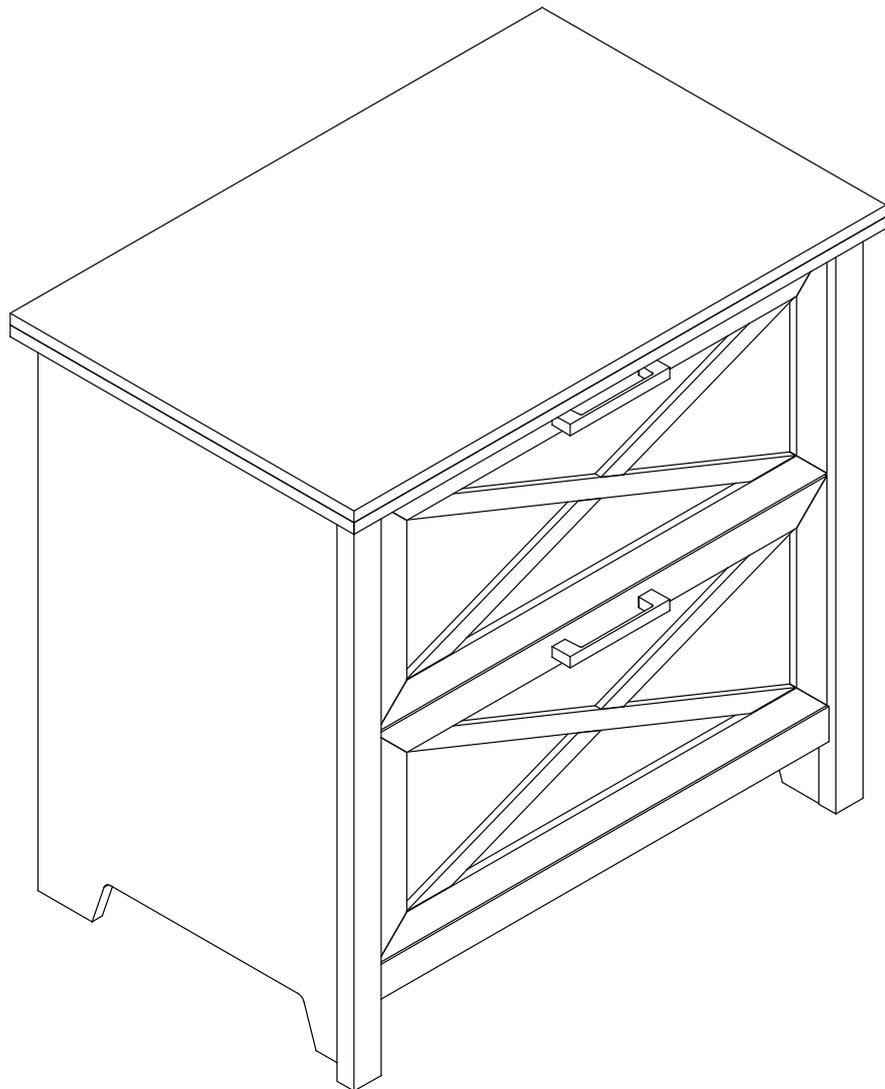

Before using your new product, please read these instructions to prevent any damage.

Contents

Introduction	2
Safety information	3
Features	4
Dimensions	4
Parts included	5
Hardware included	6
Tools needed	6
Preparing to assemble your file cabinet	7
Understanding KD cams and KD bolts	7
Assembling your file cabinet	8
STEP 1: Preparing the cabinet back and bottom	8
STEP 2: Preparing the cabinet front and sides	11
STEP 3: Assembling the cabinet side panels	13
STEP 4: Assembling the cabinet sides and bottom	15
STEP 5: Preparing the cabinet top	17
STEP 6: Installing the back panel	18
STEP 7: Installing the cabinet top	19
STEP 8 (Optional): Attaching the cabinet to a supporting wall	20
STEP 9: Preparing the drawer faces	21
STEP 10: Preparing the drawers	23
STEP 11: Installing the drawer bottoms	25
STEP 12: Installing the drawer faces	26
STEP 13: Installing the file bars and extrusions	27
STEP 14: Installing the drawers	28
Cleaning your file cabinet	30
Specifications	30
Troubleshooting	30
ONE-YEAR LIMITED WARRANTY	31

Introduction


Congratulations on your purchase of a high-quality Insignia product. Your NS-FCBN3 represents the state of the art in file cabinet design and is designed for reliable and trouble-free performance.

Safety information




WARNINGS:

- Units must be assembled with the instructions, parts, and hardware provided. Improper assembly or use could cause structural failure, instability, tip over, and/or serious injury.
- Do not move unit when loaded. Doing so could cause instability, product collapse, and/or serious injury.
- This product is intended to hold the maximum weight indicated:
 - **Top:** Up to 150 lbs. (68 kg)
 - **Drawer:** Up to 50 lbs. (22.7 kg)
- This product is designed and intended for use with computer, fax, and printer equipment only. Improper loading with television or other heavy equipment could cause instability, and/or serious injury.
- Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:
 - Verify that furniture is stable on it's own.
 - Place heaviest items in the lower drawer.
 - Never allow children to climb or hang on drawers, doors, or shelves.
 - Never open more than one drawer at a time.
 - Use of tip-over restraints may only reduce, but not eliminate, the risk of tip-overs.
 - Proper installation of the anti-tip mechanism is crucial to the stability and safety of this product. It's imperative that the mechanism is properly installed and working correctly to prevent multiple drawers from opening at the same time. Failure to properly install and maintain the anti-tip safety device could lead to instability, which could cause serious injury or death, especially to a child.
- Remove items that might tempt children to climb, such as toys and remote controls, from the top of the furniture.
- File cabinets may tip over causing serious injury if not assembled, installed, or used properly.
 - Before using, check that only one drawer opens at a time. If both drawers can open at the same time, the interlock mechanism is not functioning properly due to incorrect assembly and must be corrected before use.

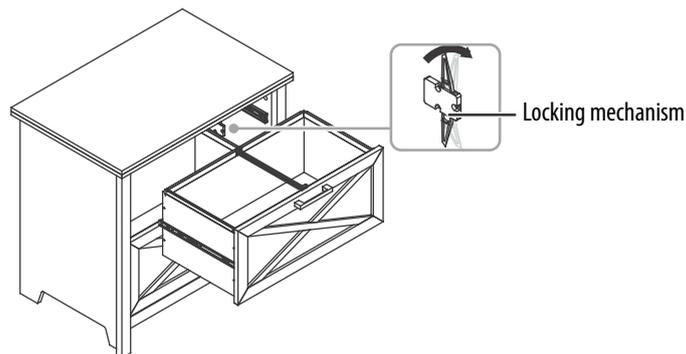

- Cabinets equipped with nails should have the front positioned .2 in. (5 mm) HIGHER than the back so the drawers tilt slightly backward.

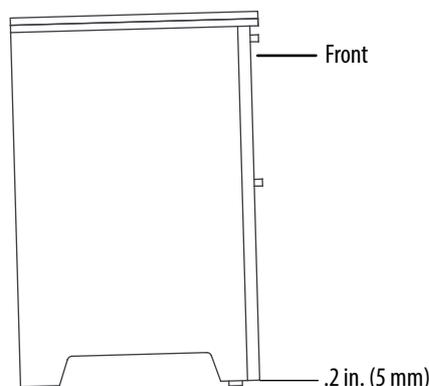



- Always load the bottom drawer first, then the top.
- Do not exceed the maximum load limit for each drawer.
- Distribute files evenly front-to-back in each drawer.
- Before moving the cabinet, empty the contents of each drawer, starting with the top drawer first.

Features

- Two drawers accommodate both letter- and legal-size files
- Metal handles and rails make opening and closing drawers smooth and easy
- Safety mechanism prevents both drawers from being opened and risking a tip-over
- Wood design adds a rustic charm to your decor

Dimensions


- Maximum weight for the top is 150 lbs. (68 kg)
- Maximum weight for the drawers is 50 lbs. (22.7 kg)

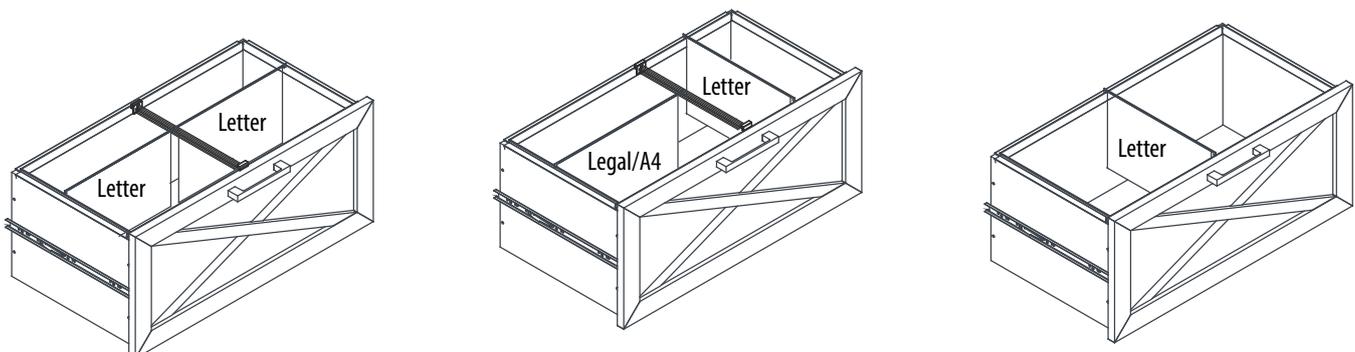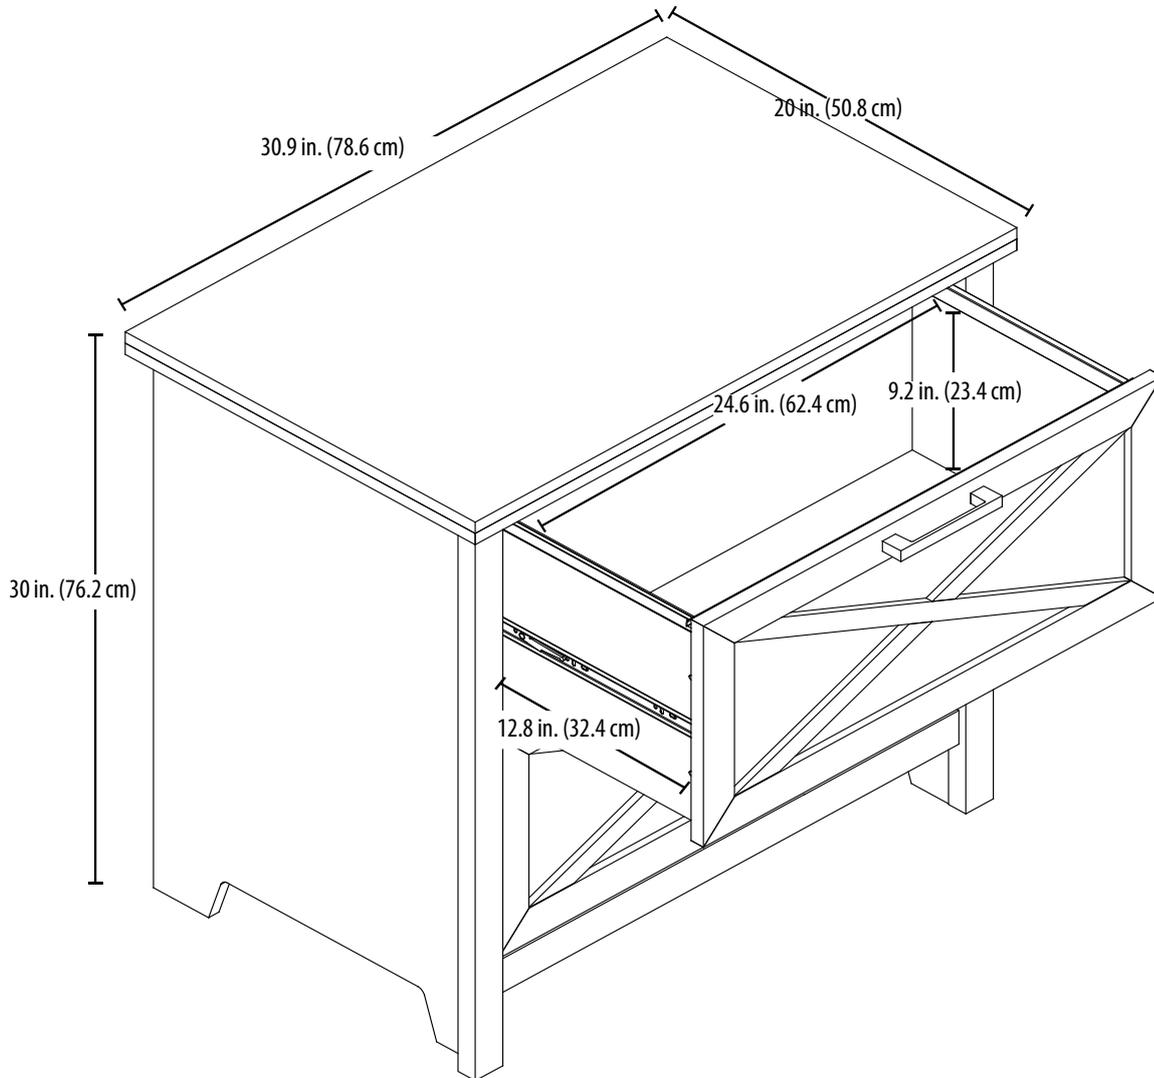


Note: You can only open one drawer at a time.

Parts included

Note: Parts are labeled on the side of each panel.

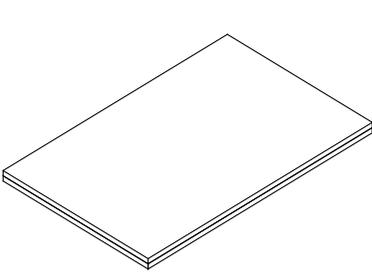


1 Cabinet top

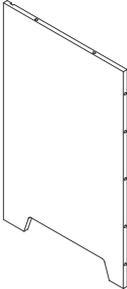


2 Left side panel




3 Right side panel

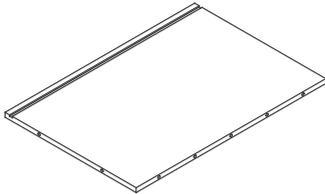


4 Bottom panel

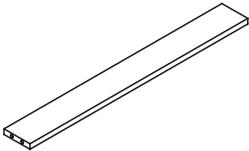


5-1 Mid-cabinet horizontal brace

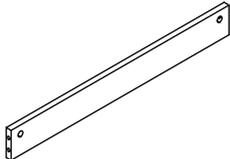


5-2 Mid-cabinet back brace

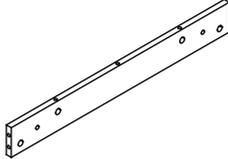


6 Upper back brace

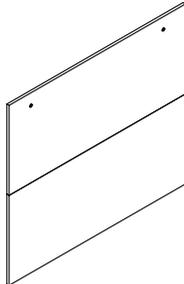

7 Back panel

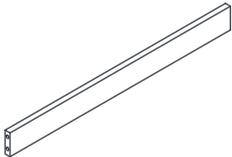


8 Bottom front trim

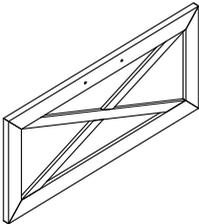


9 Drawer front (2)




10 Drawer left side panel (2)

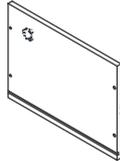


11 Lower drawer right side panel

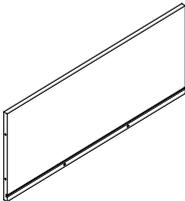

12 Drawer back (2)

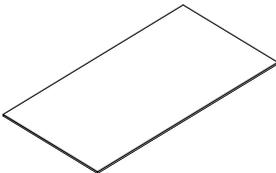

13 Drawer bottom (2)

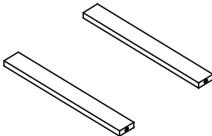


14 Drawer bottom support bars (4)




15 Left front vertical trim



16 Right front vertical trim

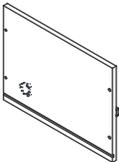






17 Upper drawer right side panel

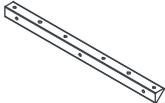

18 Connection bar (4)

Hardware included

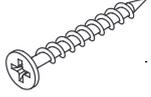
LABEL	HARDWARE	QTY.
A	 7.8 x 30 mm wooden dowels	23
B	 5 x 50 mm screw	2
C	 3.8 x 40 mm screw	12
D	 KD Bolt (long)	19
E	 KD Cam (large)	19
F	 KD Bolt (short)	4
G	 KD Cam (small)	4
H	 Anchors	2
I	 4 x 12 mm screw	10
J	 Plastic drawer face bracket	4
K	 M6 x 12 mm bolt	8
L	 3.5 x 12 mm screw	8

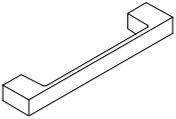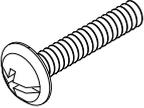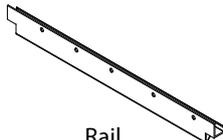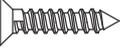LABEL	HARDWARE	QTY.
M	 Handle	2
N	 M4 x 25 mm bolt	4
O	 Rail	2
P	 File side extrusion	4
Q	 File back extrusion	2
R	 File bar	2
S	 3 x 16 mm screw	6
T	 Plastic triangle back support	6
U	 5.8 x 20 mm wooden dowel	8
V	 4 x 22 mm screw	28

Tools needed



Phillips #2 screwdriver

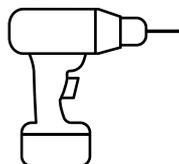

Drill with M8 bit




Carpenter square

Preparing to assemble your file cabinet


- 1 Follow the assembly instructions carefully.
- 2 Make sure that all parts and hardware are included.
- 3 To prevent product damage, assemble your file cabinet on top of the box.
- 4 Have another person help you with lifting and assembly.
- 5 For the best results, do not fully tighten the screws until you have assembled all the other parts.

Understanding KD cams and KD bolts


- 1 Screw the KD bolts (**D** or **F**) into each piece with a Phillips screwdriver. Make sure that they are straight and flush with each panel.

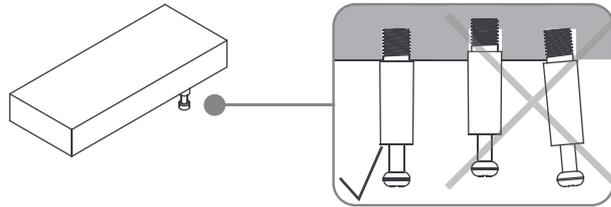

- 2 Align the KD cam (**E** or **G**) arrow toward to the hole, then insert the KD bolt into the hole of the cam lock.

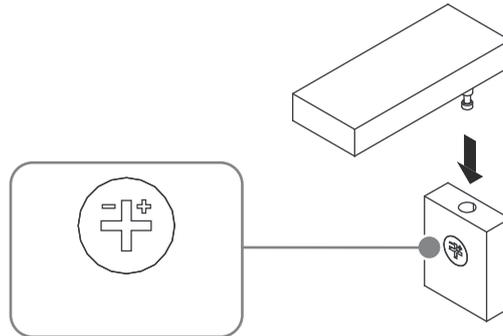


- 3 Use a Phillips screwdriver to turn the KD cam (**E** or **G**) clockwise until it is locked. The locked position is about a 1/2 turn (160°–185°). Do not overturn the KD cam.

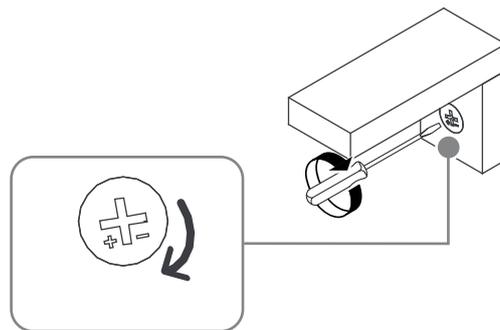


Assembling your file cabinet

STEP 1: Preparing the cabinet back and bottom


You need:

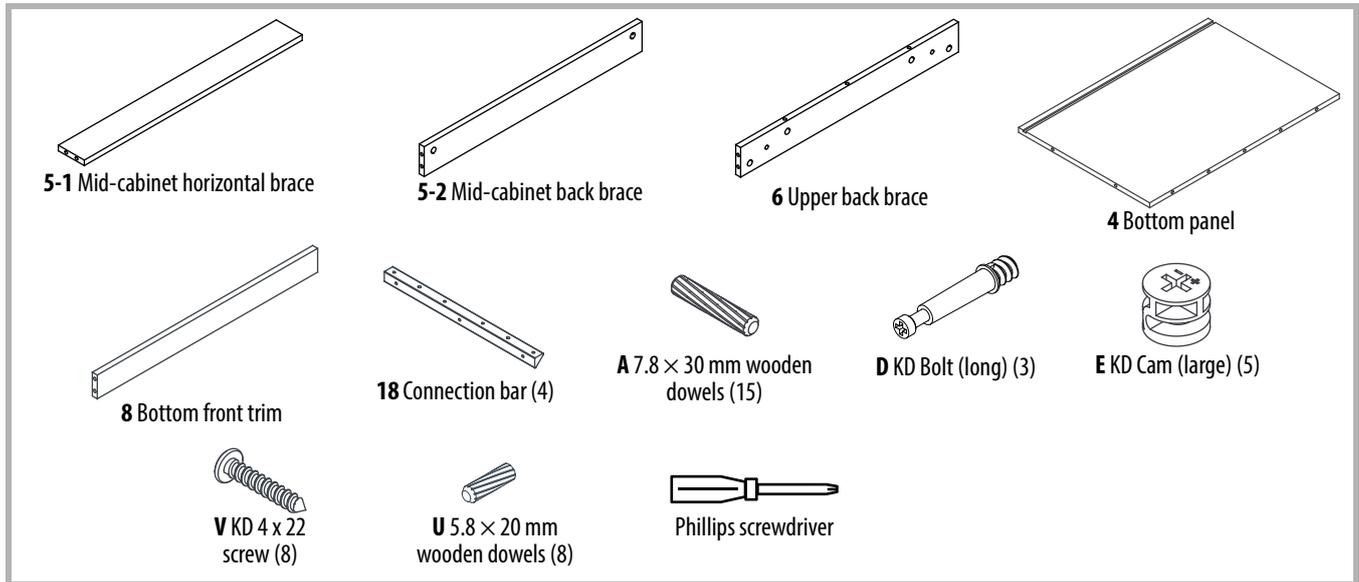


- 1 Insert three wooden dowels (A) into the edges of the upper back brace (6). Be careful not to insert the dowels into the KD bolt holes.
- 2 Insert two large KD cams (E) into the outside holes in the upper back brace (6).

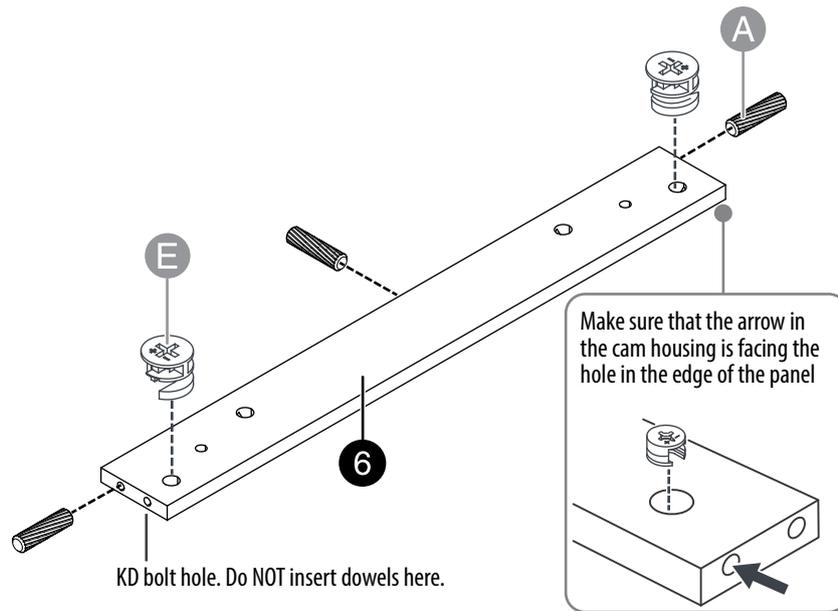


- 3 Insert two wooden dowels (**A**) into the edges of the mid-cabinet horizontal brace (**5-1**) and mid-cabinet back brace (**5-2**). Be careful not to insert the dowels into the KD bolt holes.

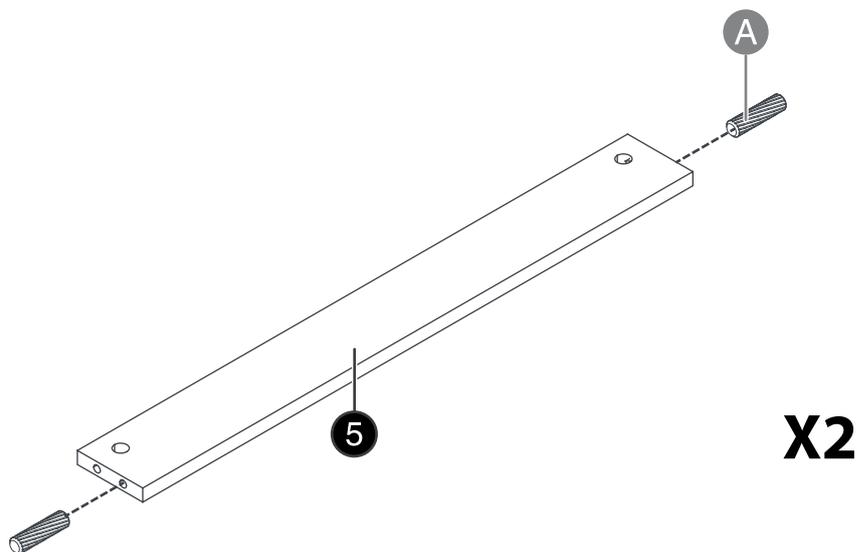


- 4 Insert six wooden dowels (**A**) into the edges of the cabinet bottom (**4**). Be careful not to insert the dowels into the KD bolt holes.

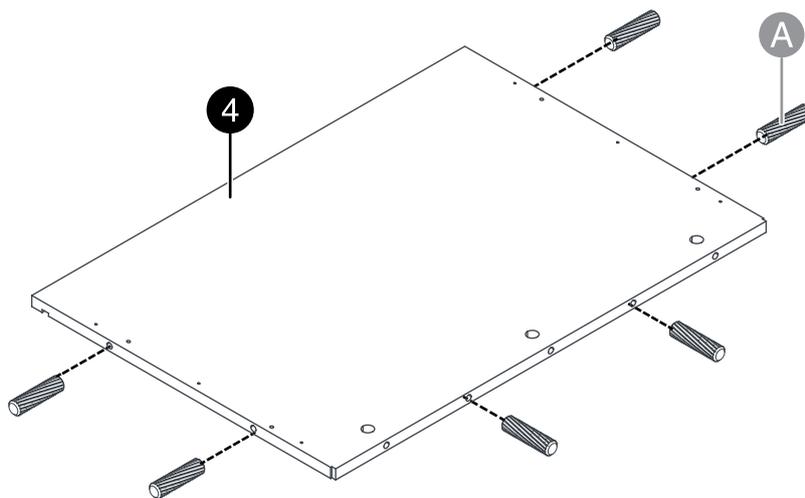


- 5 Use a Phillips screwdriver to attach three long KD bolts (**D**) into alternate holes in the back face of the bottom front trim (**8**). Don't overtighten. Insert one wooden dowel (**A**) in each end.

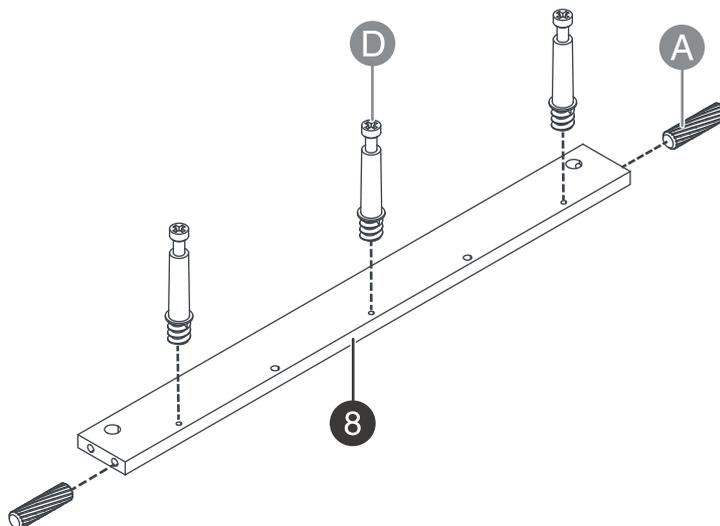

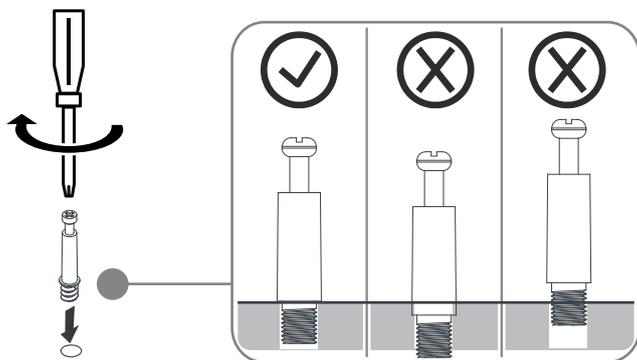


- 6 Insert two wooden dowels (**U**) into the holes on the bottom of each connection bar (**18**).

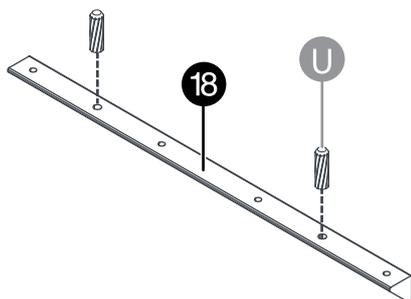

X4


- 7 Insert three large KD cams (**E**) into the three holes on the top front edge of the cabinet bottom (**4**). Align as instructed in [Understanding KD cams and KD bolts](#) on page Z, then push the bottom front trim strip together with the bottom so that the top of the trim strip is flush with the top of the cabinet bottom (**4**). Tighten the KD cams (**E**) with a Phillips screwdriver.

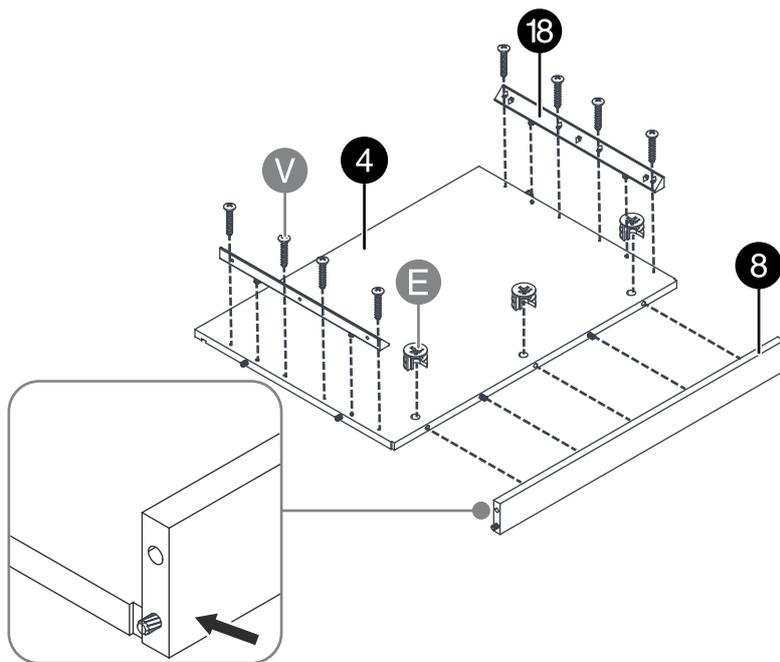


- 8 Use a Phillips screwdriver to attach eight 4 x 22 mm screws (**V**) into the holes on both sides of the cabinet bottom.

STEP 2: Preparing the cabinet front and sides

You need:

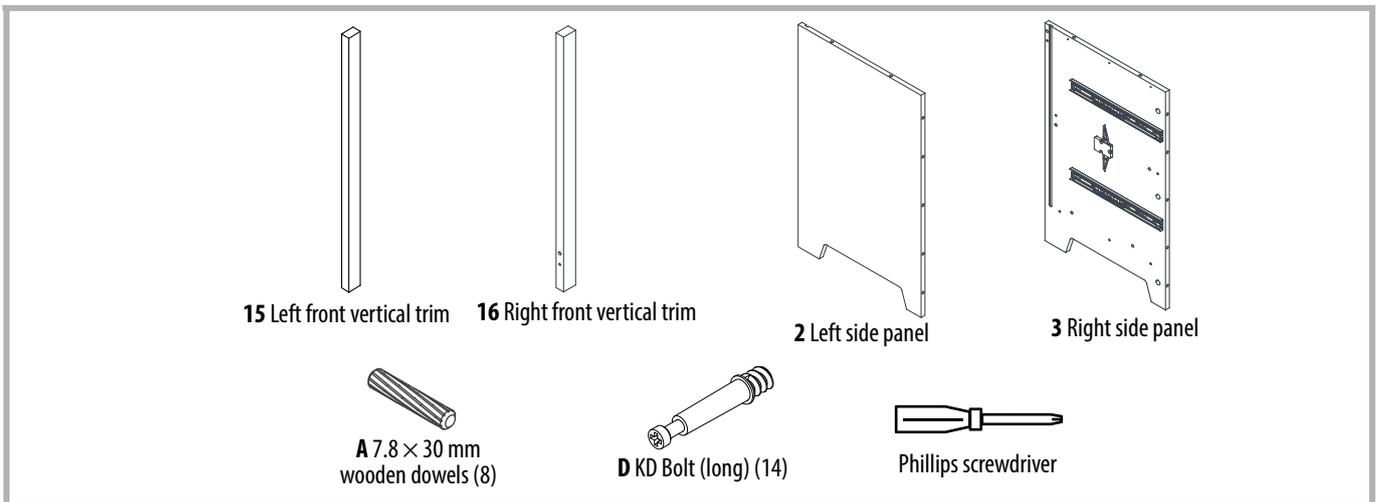


- 1 Use a Phillips screwdriver to attach three long KD bolts (D) into alternate holes in the left (15) and right (16) front vertical trim pieces. Don't overtighten.


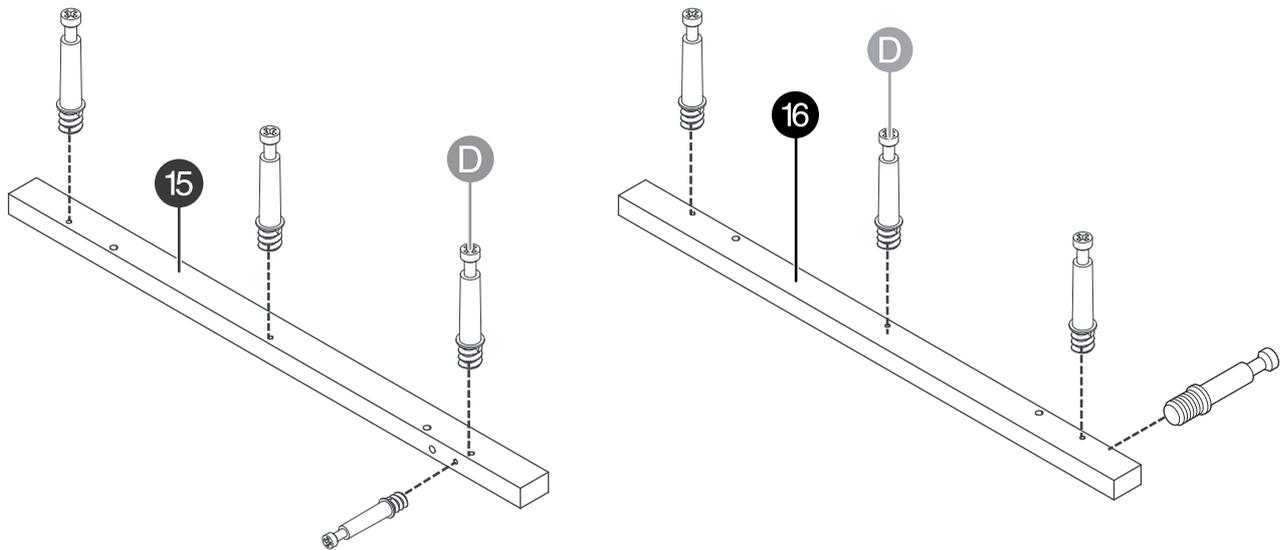


- 2 Attach one long KD bolt (D) on the left side of the left front vertical trim (15) and one long KD bolt (D) on the right side of the right front vertical trim (16).

- 3** Insert four wooden dowels (**A**) into the edges of the left side panel (**2**), then use a Phillips screwdriver to attach three long KD bolts (**D**) to the holes indicated below. Don't overtighten.

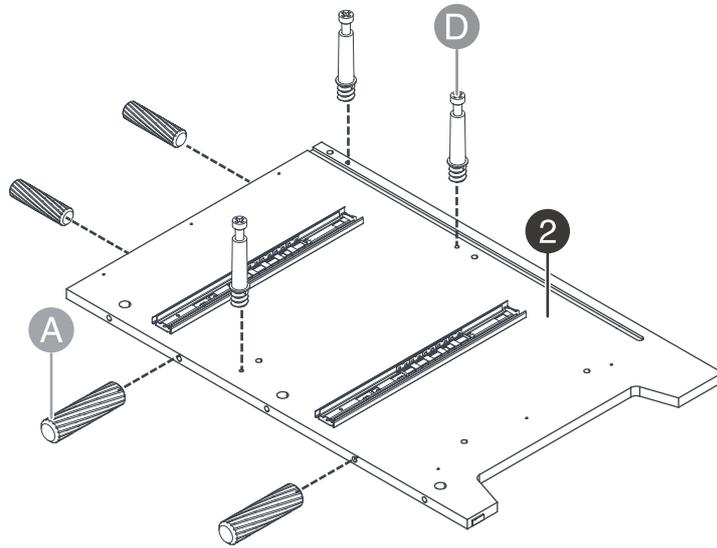


- 4** Insert four wooden dowels (**A**) into the edges of the right side panel (**3**), then use a Phillips screwdriver to attach three long KD bolts (**D**) to the holes indicated below. Don't overtighten.

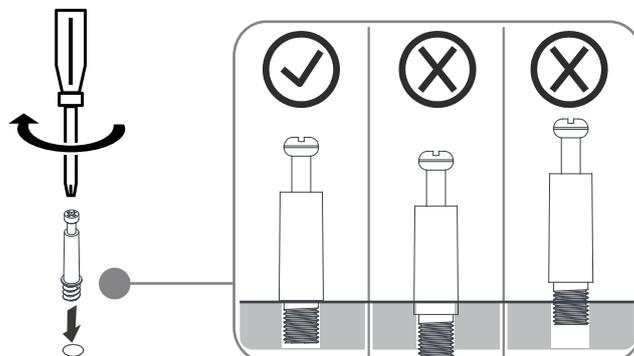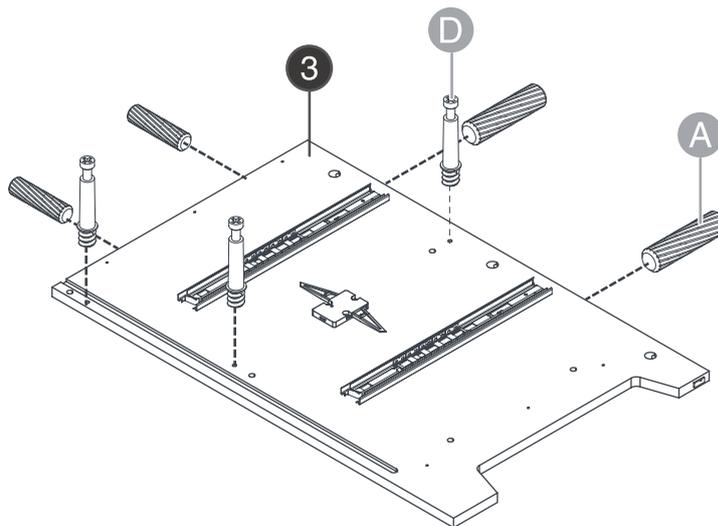


STEP 3: Assembling the cabinet side panels


You need:

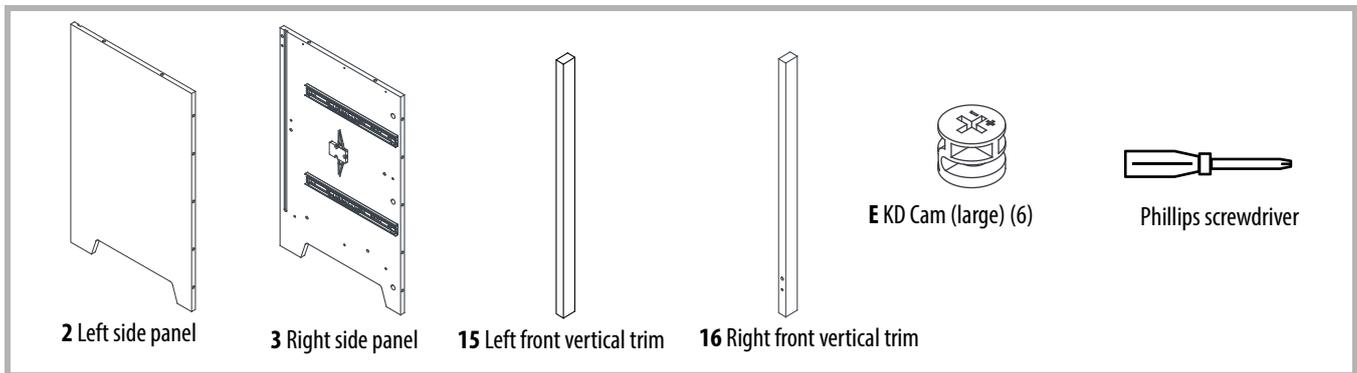


- 1 Insert three large KD cams (E) into the left side panel (2). Make sure that the cam lock arrows are pointing toward their corresponding cam-lock screw holes.

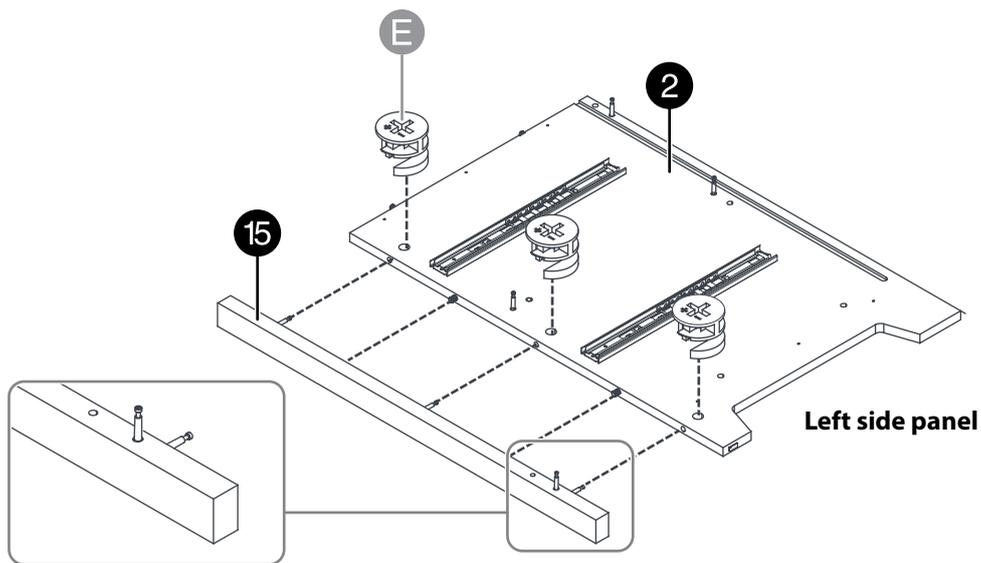




- 2 Align the wooden dowels on the left side panel and KD bolts on the left front vertical trim piece with the holes in the corresponding piece, then push the two pieces together. Make sure that the edges of the panels are flush with each other, then tighten the KD cams.

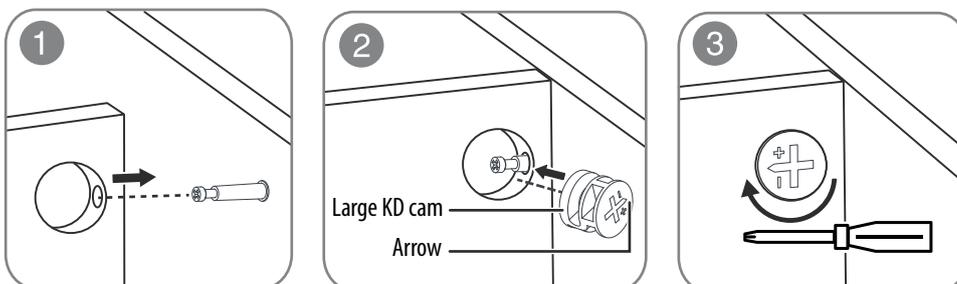

- 3 Insert three large KD cams (E) into the right side panel (3). Make sure that the cam lock arrows are pointing toward their corresponding cam-lock screw holes.
- 4 Align the wooden dowels on the right side panel and KD bolts on the right front vertical trim piece with the holes in the corresponding piece, then push the two pieces together. Make sure that the edges of the panels are flush with each other, then tighten the KD cams.

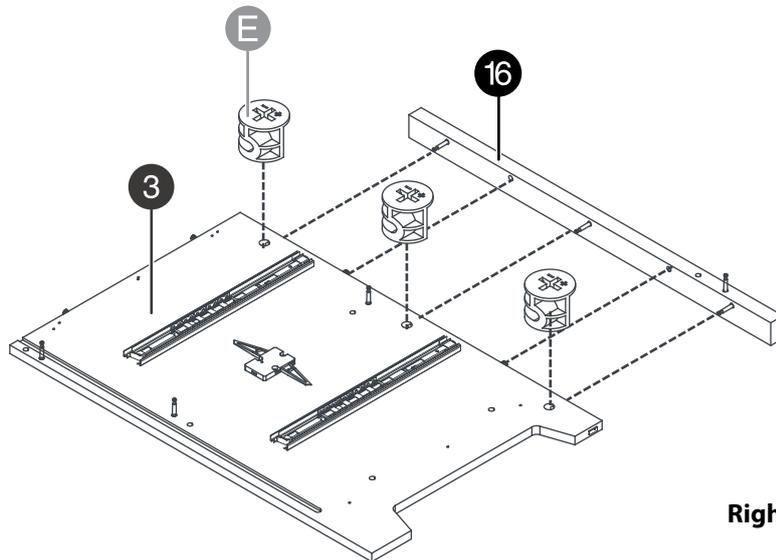


Right side panel

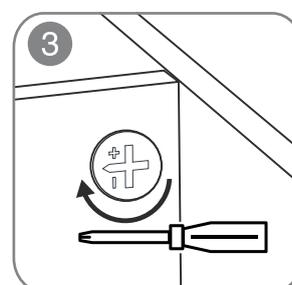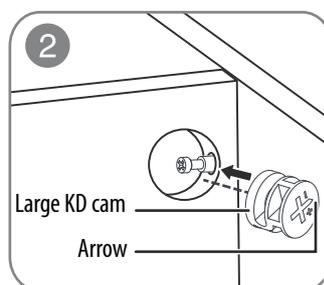
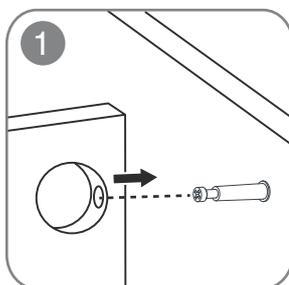


STEP 4: Assembling the cabinet sides and bottom


You need:

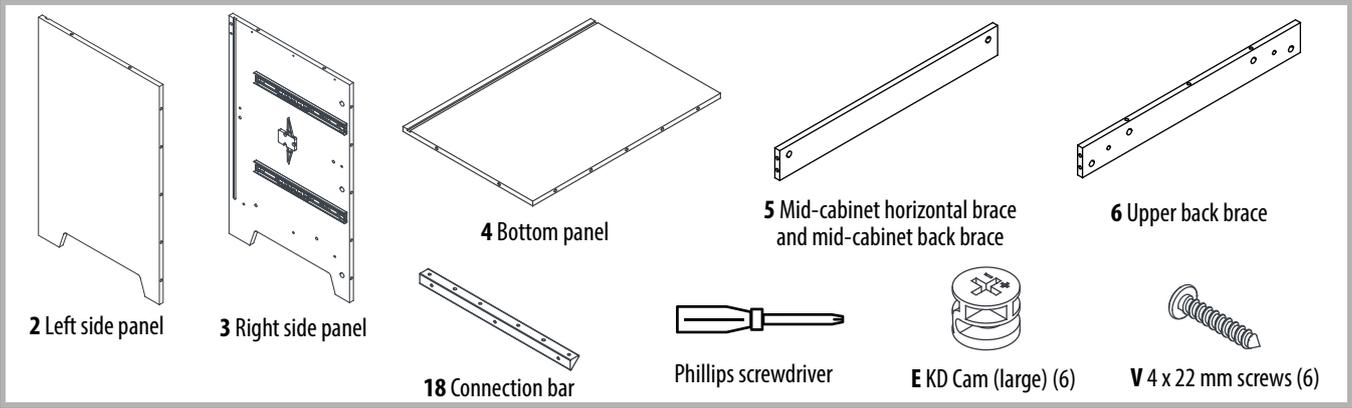





- 1 Place the assembly upright on the floor.
- 2 Attach the mid-cabinet back brace (5), mid-cabinet horizontal brace (5), and upper back brace (6) into the left side panel (2) with two large KD cams (E). Make sure that the cam lock arrows are pointing toward their corresponding cam-lock screw holes, then tighten the cam lock with a Phillips screwdriver.

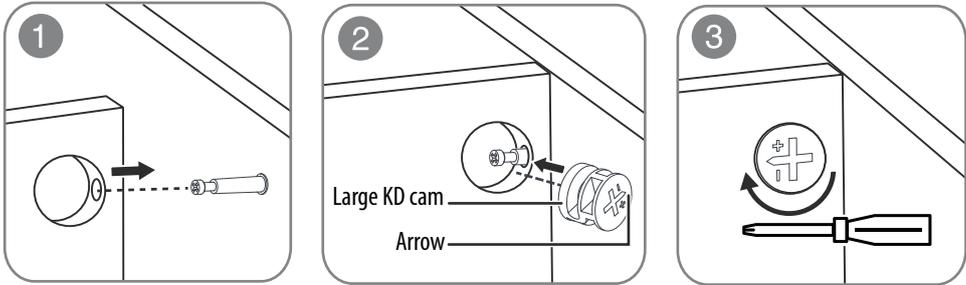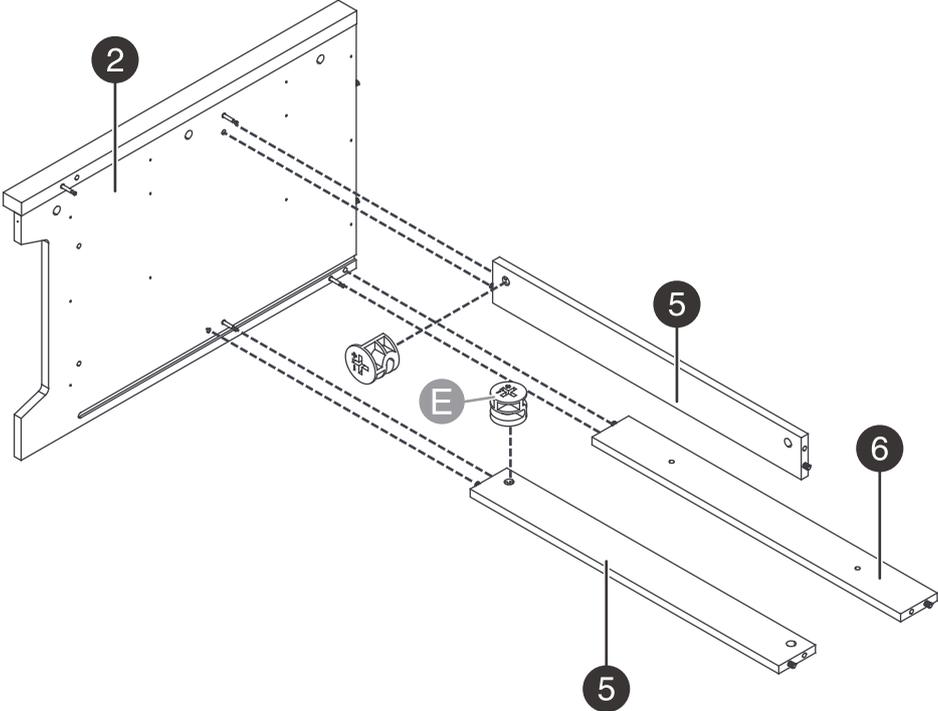

- 3** Attach the bottom panel (4) to the left side panel (2) with one large KD cam (E) and three 4 x 22 screws (V). Make sure that the cam lock arrow is pointing toward the corresponding cam-lock screw hole, then tighten the cam lock with a Phillips screwdriver.

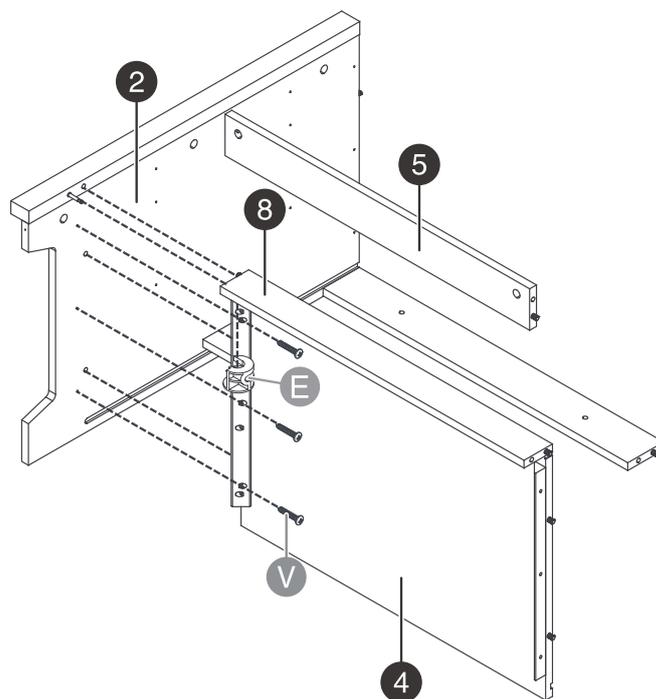


- 4** Connect the right side panel (3) to the assembly with three large KD cams (E) and three 4 x 22 screws (V). Make sure that the cam lock arrows are pointing toward their corresponding cam-lock screw holes, then tighten the cam lock with a Phillips screwdriver.

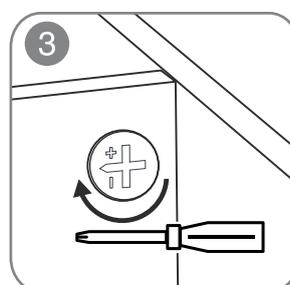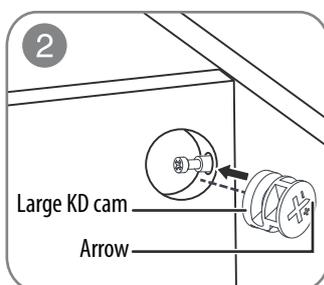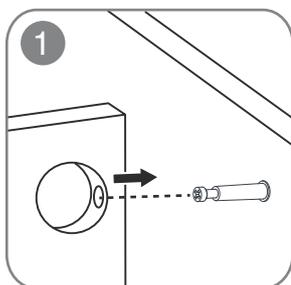
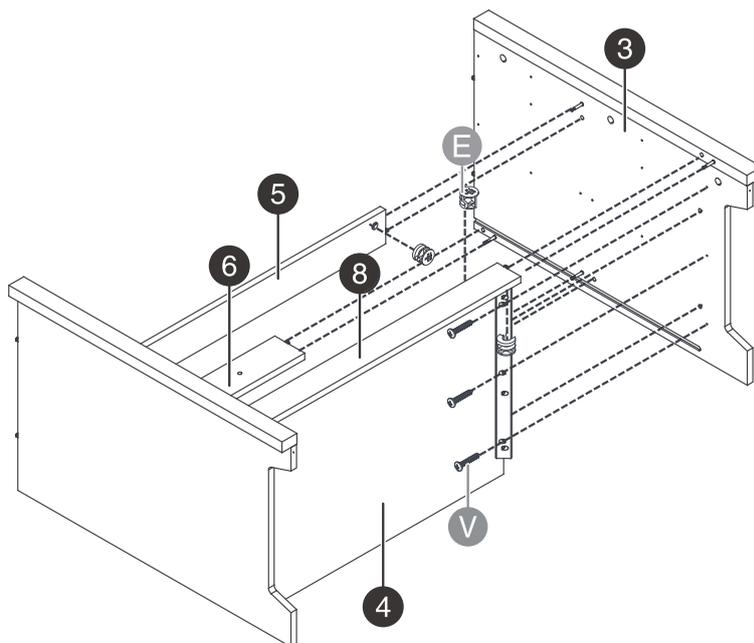


STEP 5: Preparing the cabinet top

You need:

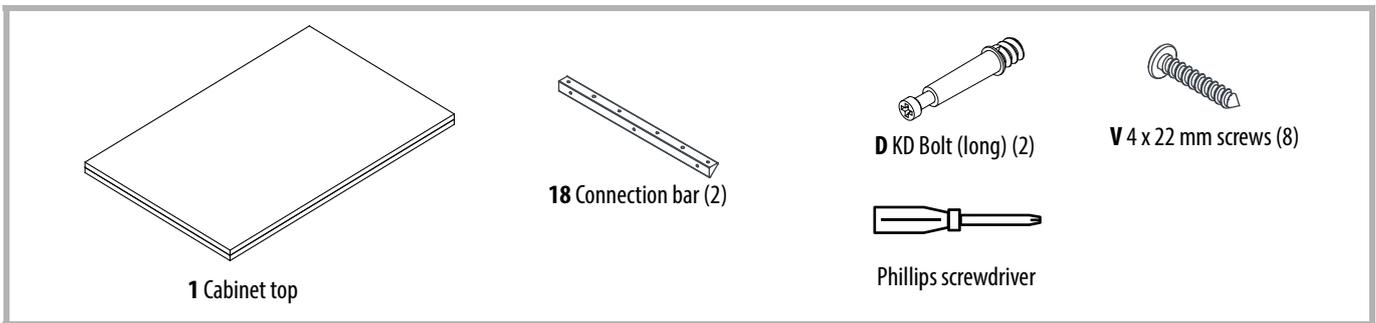


- 1 Use a Phillips screwdriver to attach two long KD bolts (D) into the outside holes in the cabinet top (1). Don't overtighten.
- 2 Use a Phillips screwdriver to attach a connection bar (18) to each side of the top (1) with four 4 x 22 screws (V).

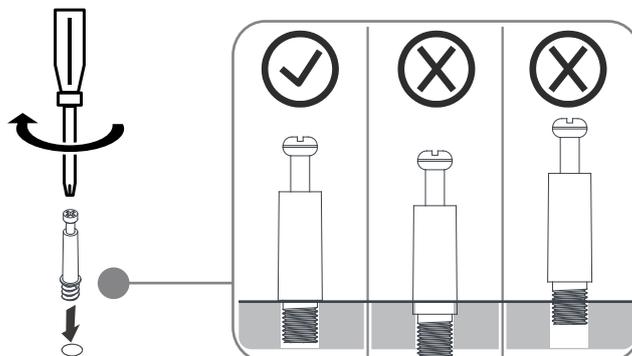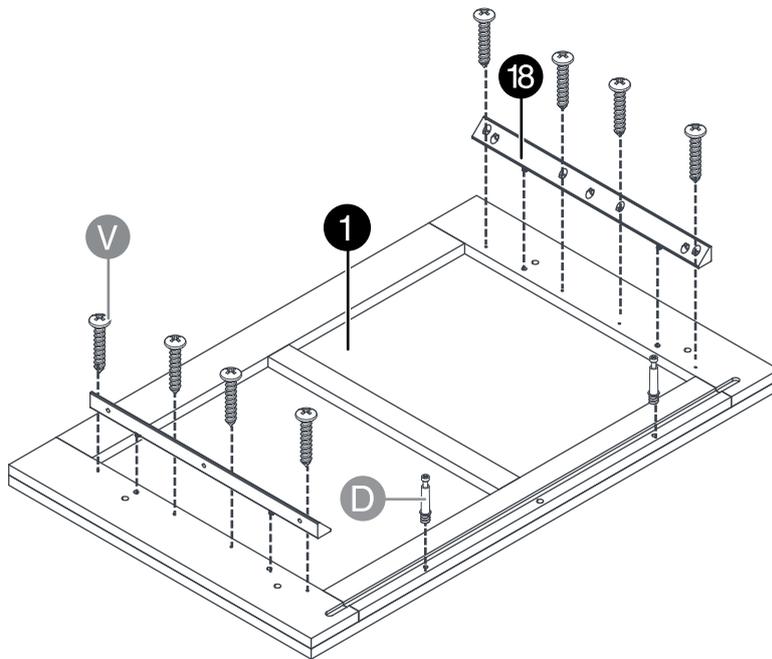


STEP 6: Installing the back panel

You need:

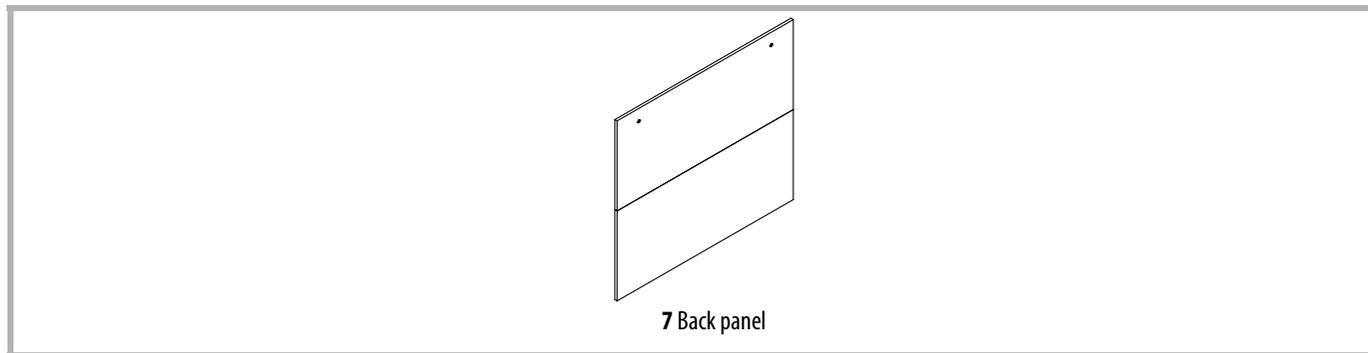


- Unfold the back panel (7), then insert it into the channel in the back of the assembly (as shown). Make sure that the back panel is fully inserted and that the top of the back panel is flush with the top of the assembly.

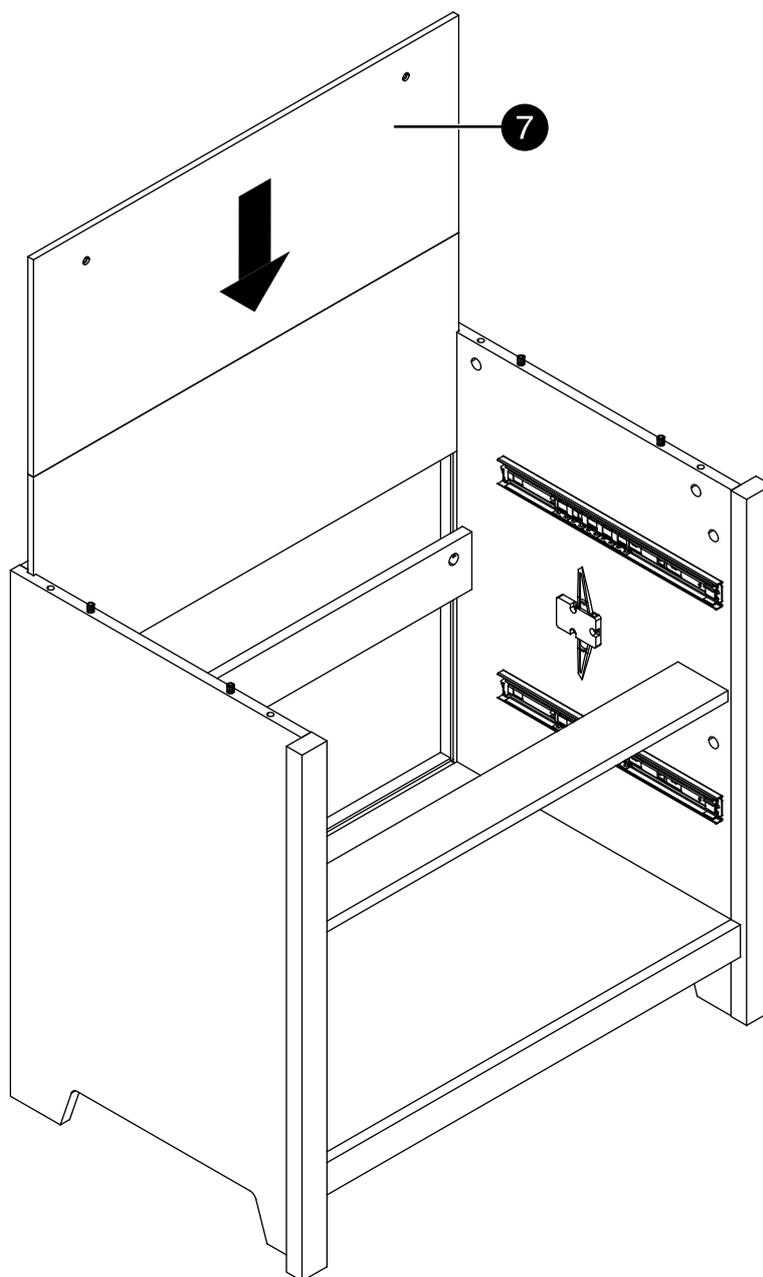


STEP 7: Installing the cabinet top

You need:

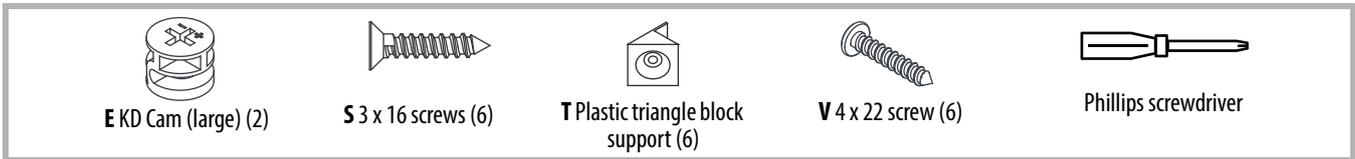


- 1 Insert two large KD cams (E) into the upper back brace (6). Make sure that the cam lock arrows are pointing toward their corresponding cam-lock screw holes.
- 2 Place the cabinet top (1) on top of the assembly, align the KD bolts and dowels with the holes in the corresponding pieces, then push the pieces together. Make sure that the edges of the panels are flush with each other, then tighten the KD cams.
- 3 Use a Phillips screwdriver to attach the top panel (1) to the right and left side panels (2 and 3) with six 4 x 22 screws (V) through the holes in the connection bars (18).
- 4 Use a carpenter's square to make sure that the cabinet is square.
- 5 Use a Phillips screwdriver to install six plastic triangle block supports (T) into the cabinet sides at equal intervals around the back of the cabinet, using the 3 x 16 mm screws (S).

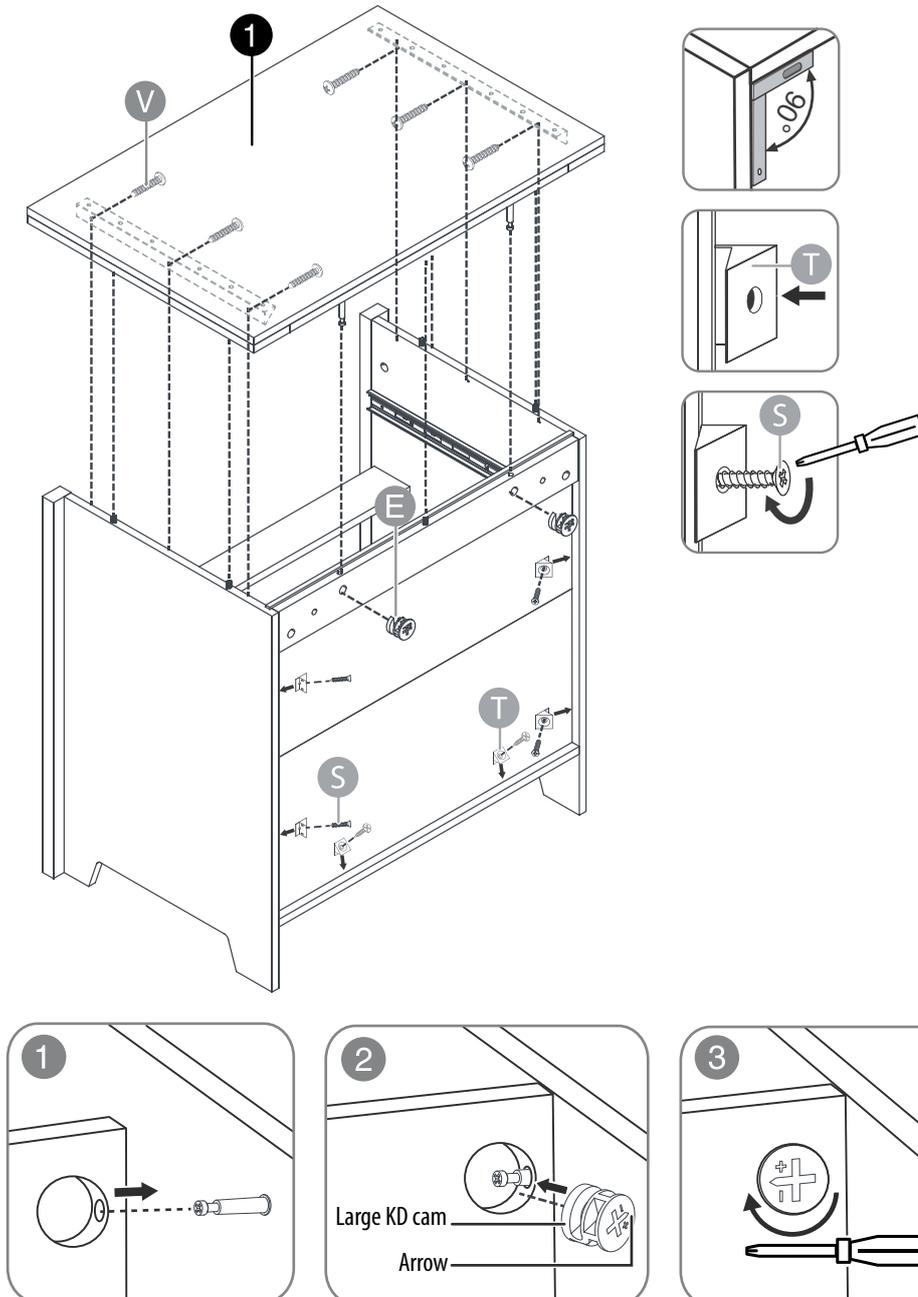


STEP 8 (Optional): Attaching the cabinet to a supporting wall

You need:

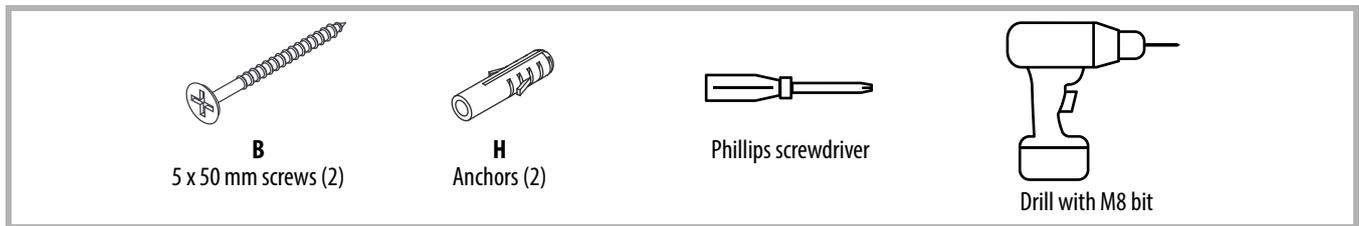


- 1 Move the assembled cabinet up against the wall where it will be placed, then mark the position of the two holes in the back panel on the wall.
- 2 Move the assembled cabinet away from the wall and drill where the two holes are marked, then insert anchors (**H**) into the holes.
- 3 Move the assembled cabinet back to the wall, aligning the holes in the back panel with the installed anchors, then attach the cabinet to the wall with the two 5 x 50 mm screws (**B**) through the two holes in the back panel.

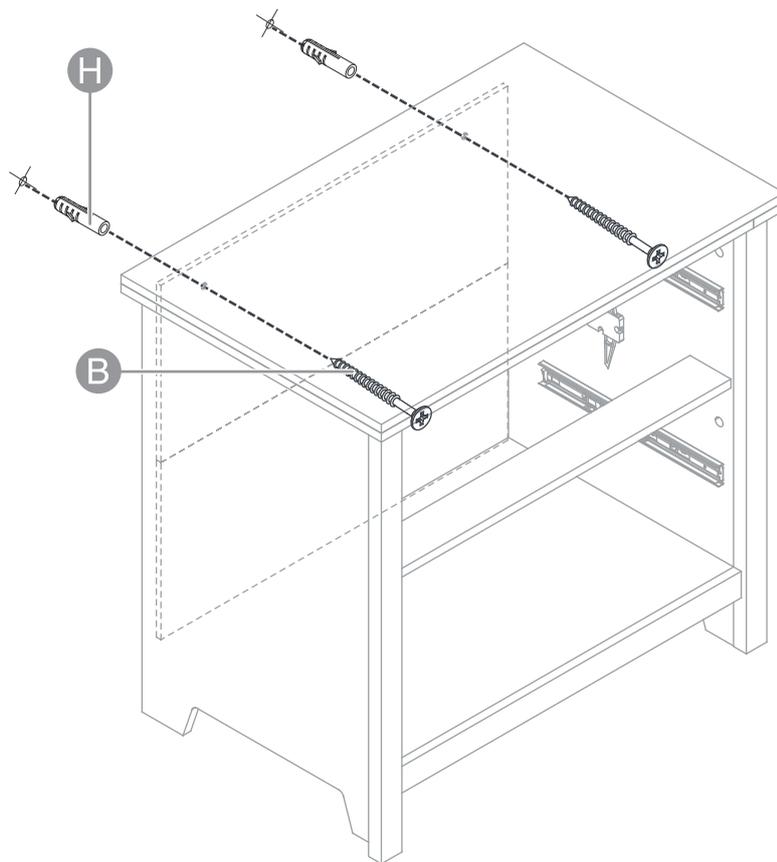


STEP 9: Preparing the drawer faces



You need:

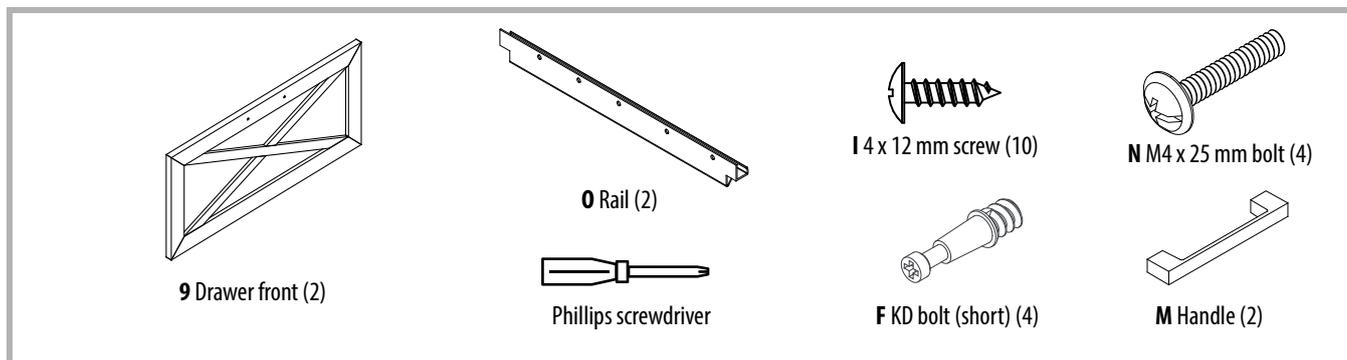

- 1 Use a Phillips screwdriver to attach two short KD bolts (**F**) into the bottom back of the drawer face (**9**). Repeat for the second drawer face. Don't overtighten.
- 2 Use a Phillips screwdriver to attach the handle (**M**) to the front of the drawer face with two M4 x 25 mm bolts (**N**). Repeat for the second drawer face.

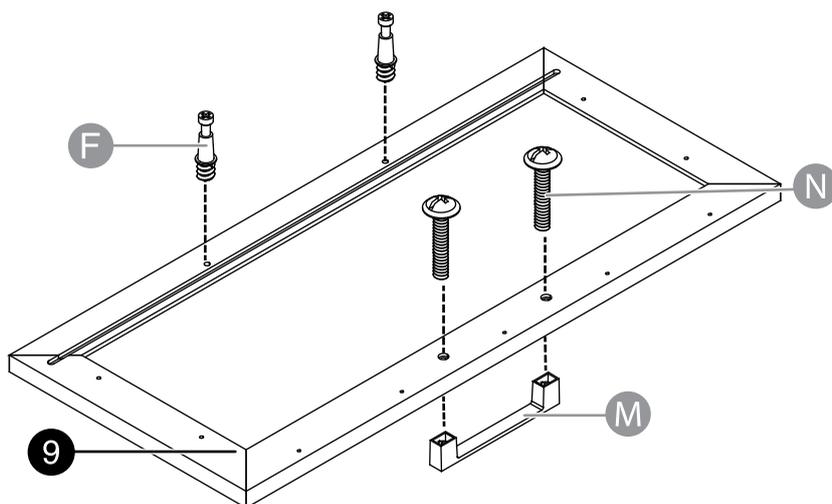


- 3 Attach the rail (O) to the back side of the drawer face (9) with five 4 x 12 screws (I). Repeat for the second drawer face.

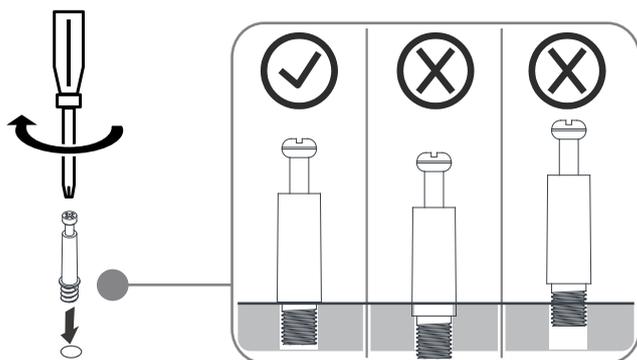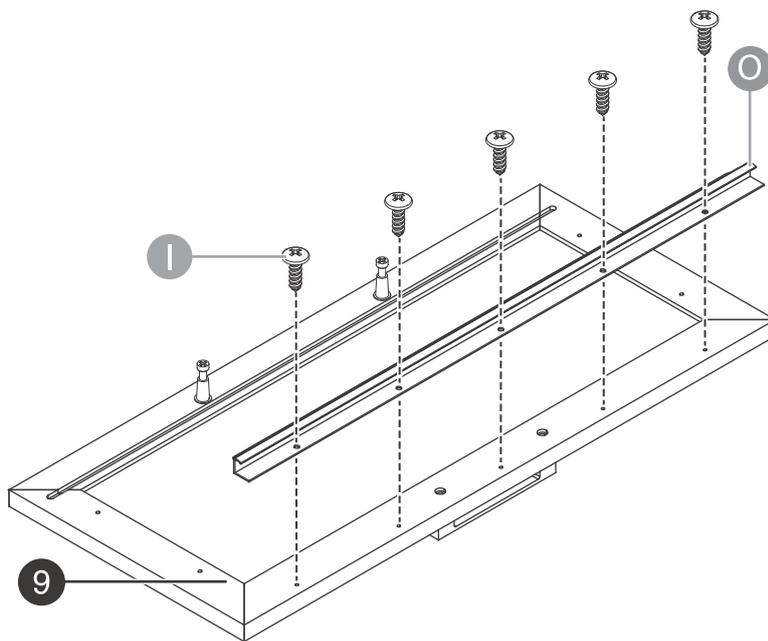


STEP 10: Preparing the drawers

You need:

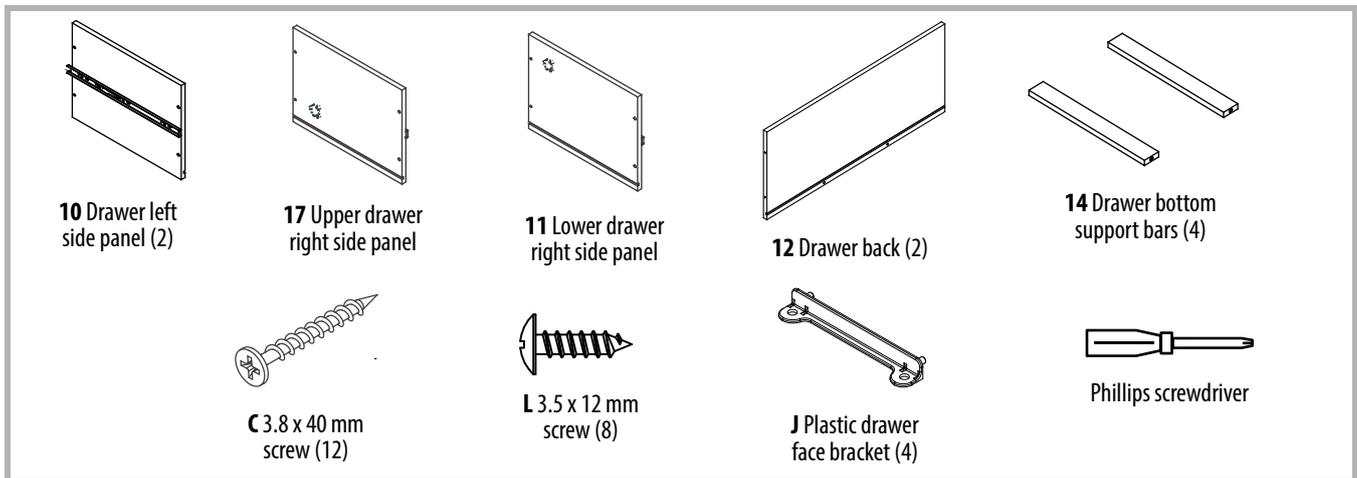


- 1 Use a Phillips screwdriver to attach the left drawer side panel (10) and the upper right drawer side panel (17) to the drawer back (12) with six 3.8 x 40 mm screws (C). Make sure that the grooves on the back and side panels face the inside of the drawer. Don't overtighten.
- 2 Use a Phillips screwdriver to attach the two plastic drawer face brackets (J) to the insides of the left and right drawer side panels using four 3.5 x 12 mm screws (L). Don't overtighten.
- 3 Use a Phillips screwdriver to attach the drawer bottom support bars (14) to the drawer back panel (12). Make sure that the large holes for the KD cams are toward the front of the drawer and facing down. Don't overtighten.

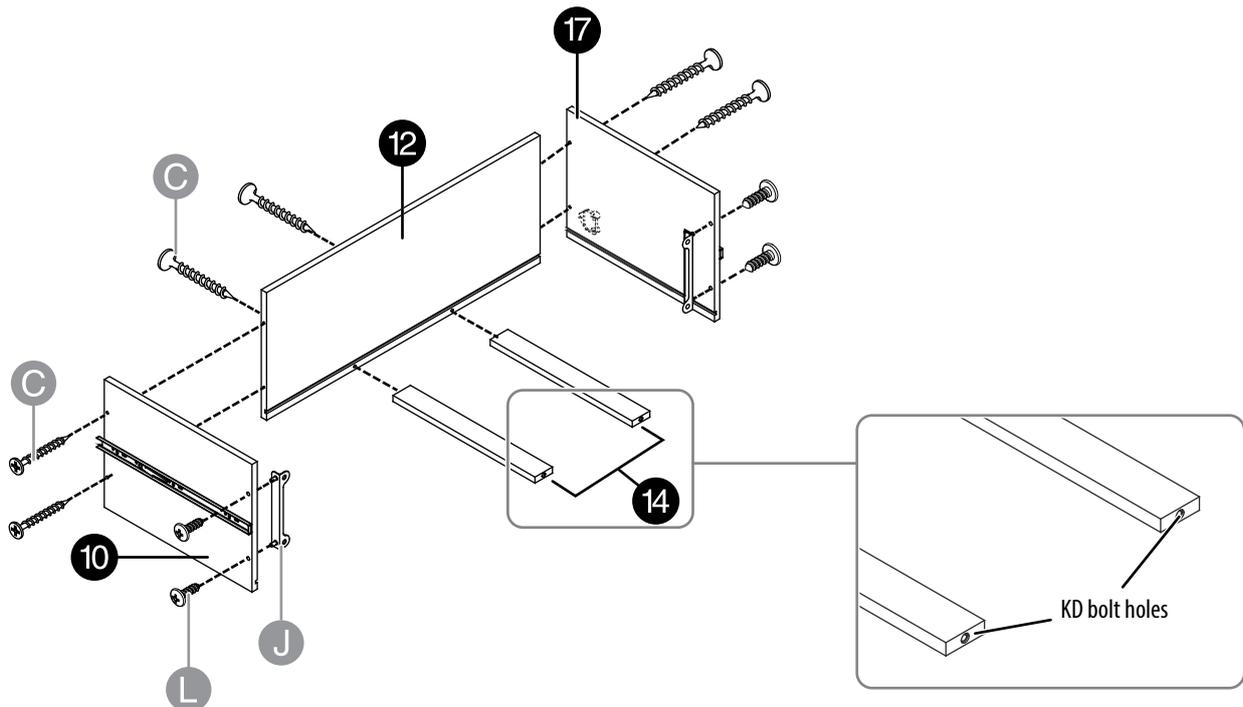


- 4 Use a Phillips screwdriver to attach the left drawer side panel (10) and the lower right drawer side panel (11) to the drawer back (12) with six 3.8 x 40 mm screws (C). Make sure that the grooves on the back and side panels face the inside of the drawer. Don't overtighten.
- 5 Use a Phillips screwdriver to attach the two plastic drawer face brackets (J) to the insides of the left and right drawer side panels using four 3.5 x 12 mm screws (L). Don't overtighten.

- 6 Use a Phillips screwdriver to attach the drawer bottom support bars (14) to the drawer back panel (12). Make sure that the large holes for the KD cams are toward the front of the drawer and facing down. Don't overtighten.

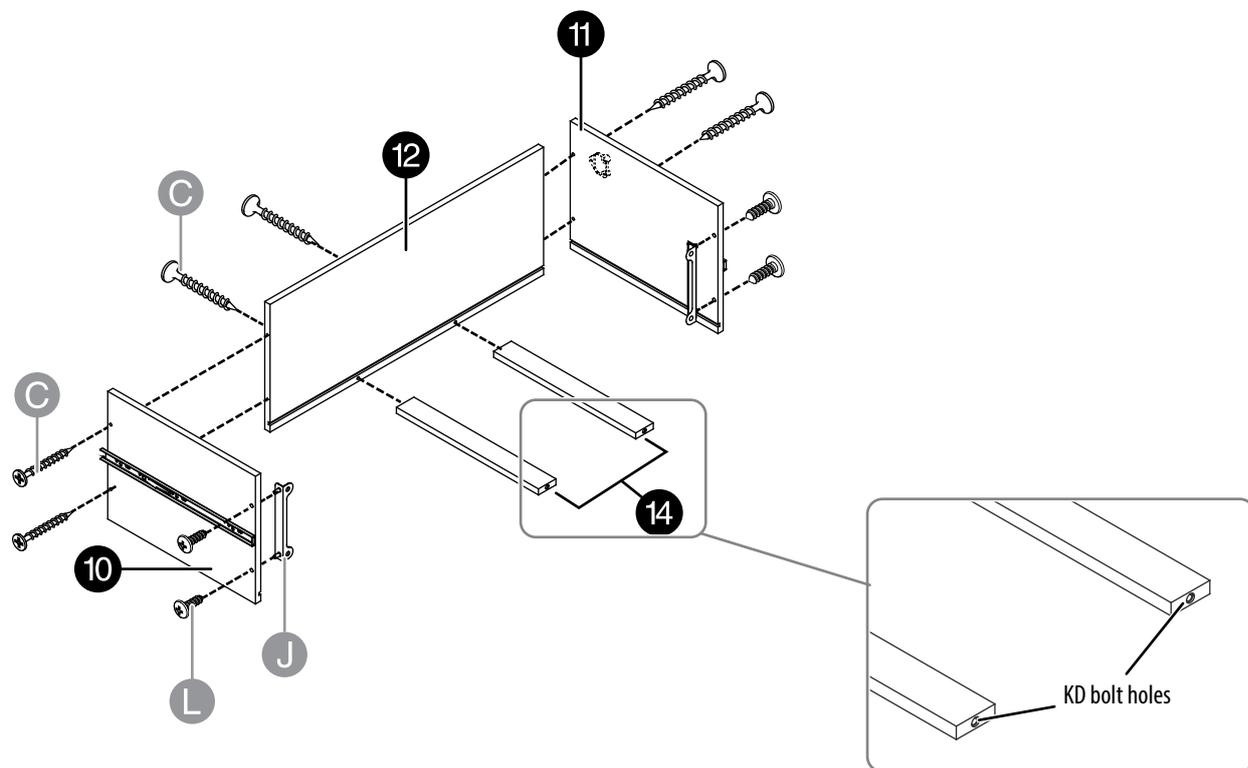


STEP 11: Installing the drawer bottoms

You need:

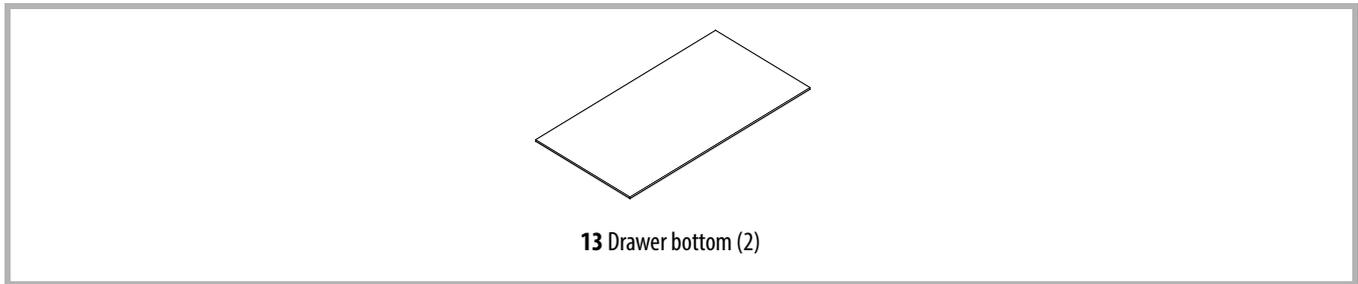


- Insert the drawer bottoms (13) into the channels in the sides and back of the drawer. Make sure that the drawer bottoms are fully inserted (the front of the drawer bottom will protrude slightly from the front of the drawer).

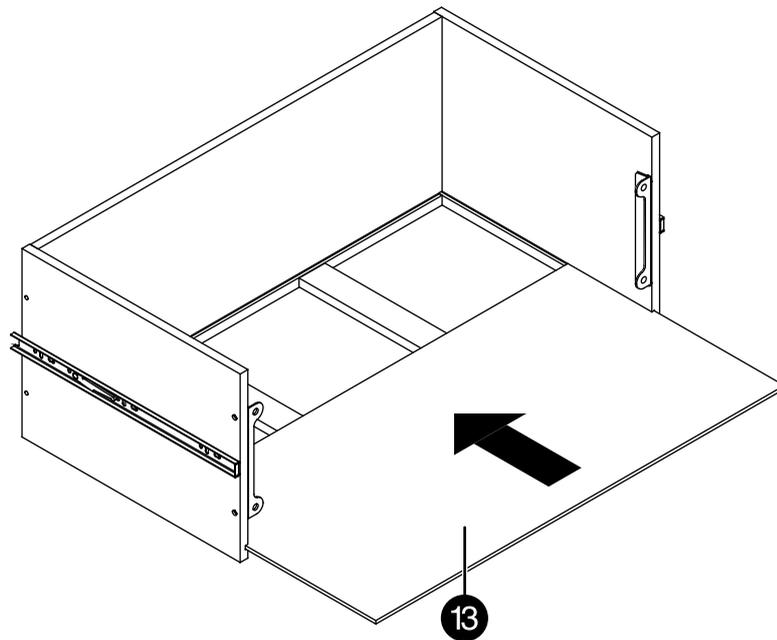


X2

STEP 12: Installing the drawer faces




You need:

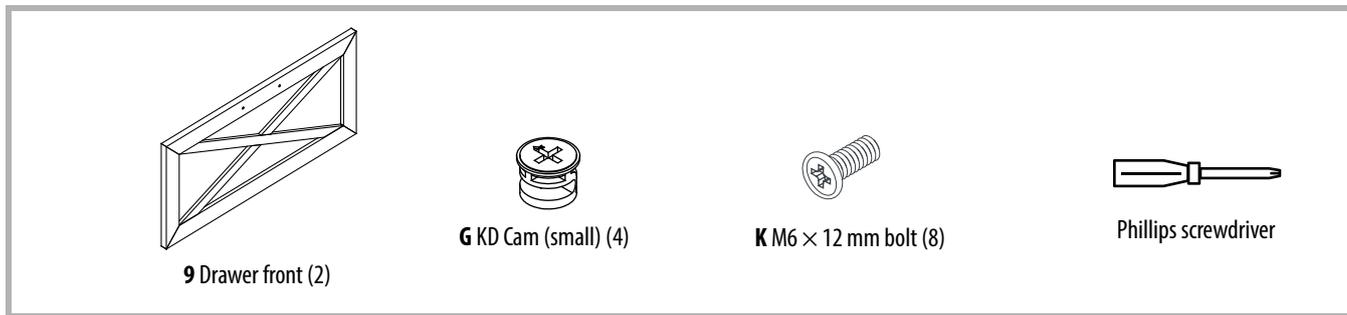

- 1 Insert two small KD cams (G) into the bottoms of both drawer bottom support bars (14), then align the drawer face with the drawer assembly and push the parts together.
- 2 Attach the drawer face (9) to the drawer assembly with four M6 × 12 mm bolts (K) through the plastic drawer face brackets, then tighten the KD cams on the bottoms of the drawer bottom support bars.

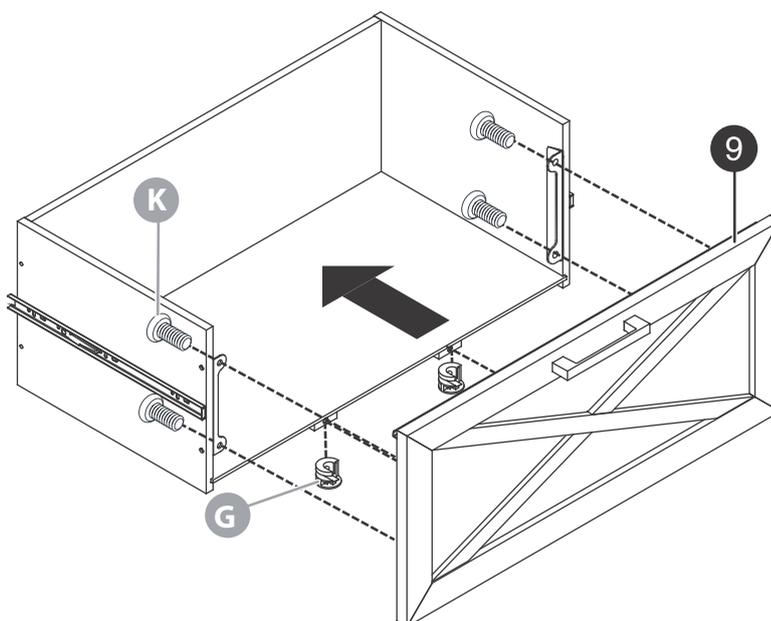


- 3 Repeat for the other drawer.

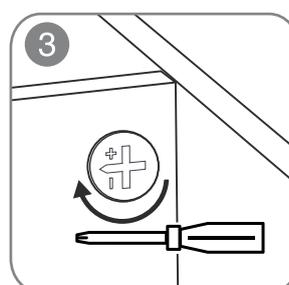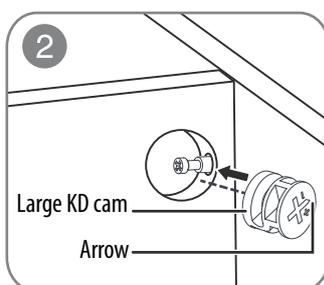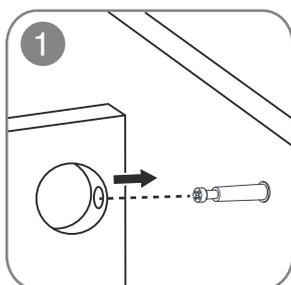


STEP 13: Installing the file bars and extrusions

You need:

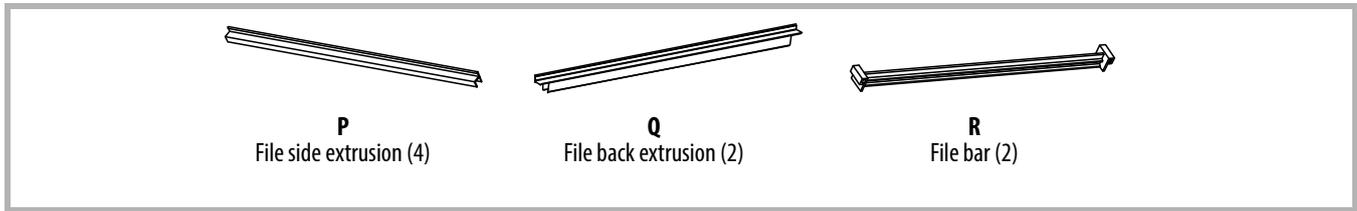

- 1 Fit two file side extrusions (**P**) to the sides of the upper drawer and push them into place, then fit the file back extrusion (**Q**) to the back of the upper drawer and push it into place.
- 2 (Optional for letter size files) place the file bar (**R**) in between the file rails on the front and back of the drawer.

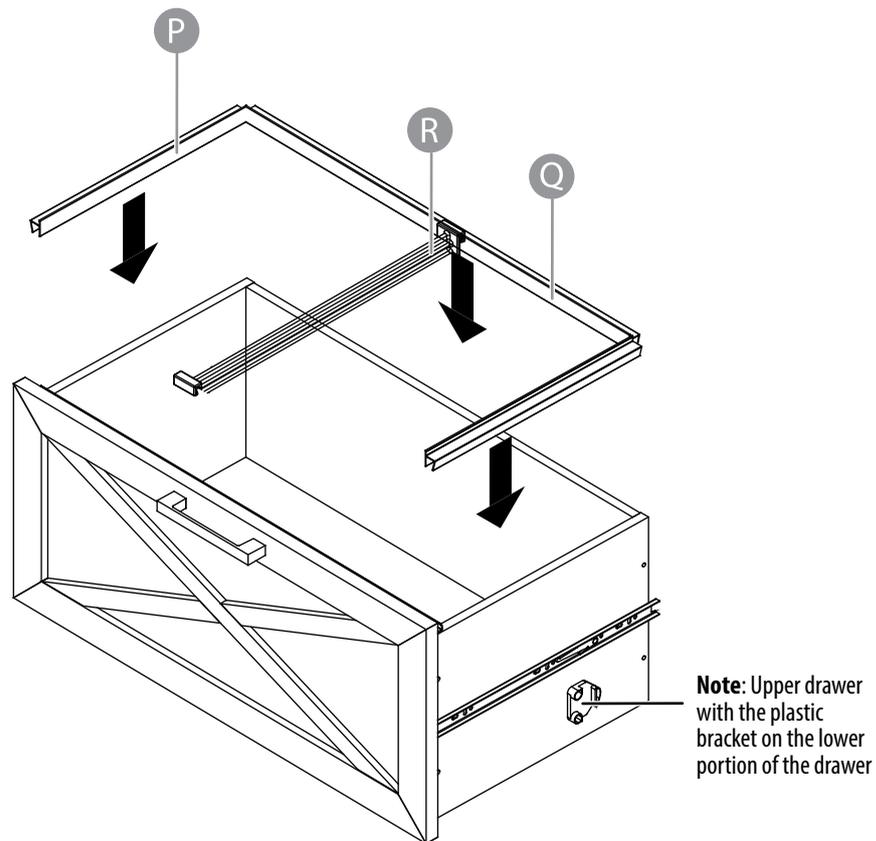

- 3 Repeat for the lower drawer (the drawer with the plastic bracket on the upper portion of the drawer).


STEP 14: Installing the drawers

You need:




Phillips screwdriver


- 1 Adjust the safety mechanism (by swinging the lower arm forward) that prevents both drawers from opening at the same time, then align the rails on the sides of the drawer with the tracks on the sides of the cabinet and push the drawer into the cabinet.

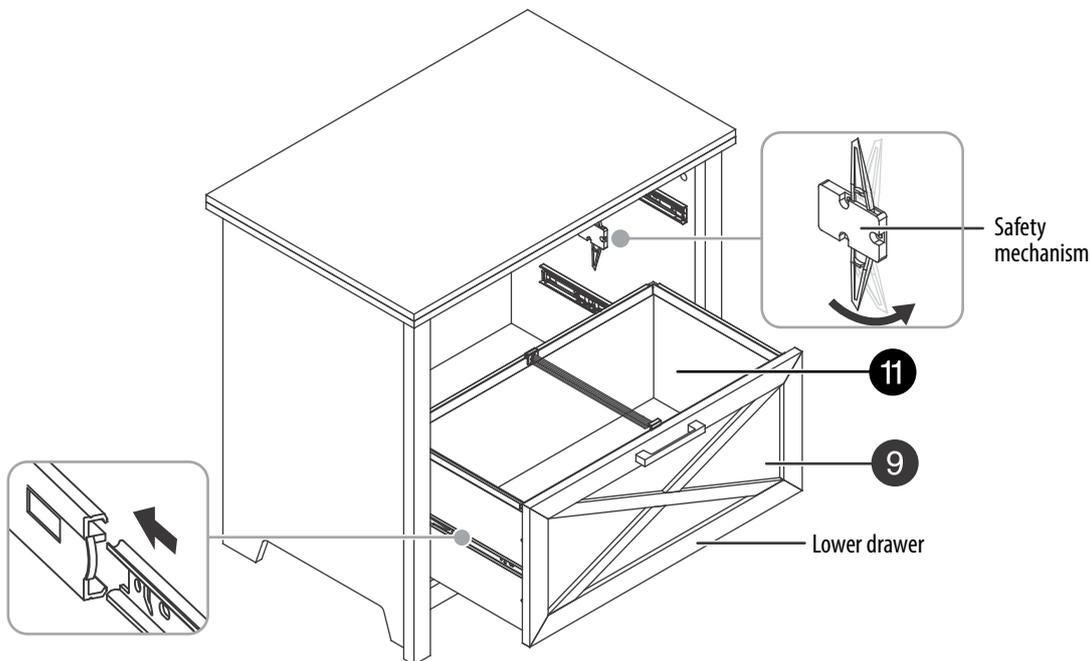



- 2 Adjust the safety mechanism (by swinging the upper arm forward) that prevents both drawers from opening at the same time, then align the rails on the sides of the drawer with the tracks on the sides of the cabinet and push the drawer into the cabinet.

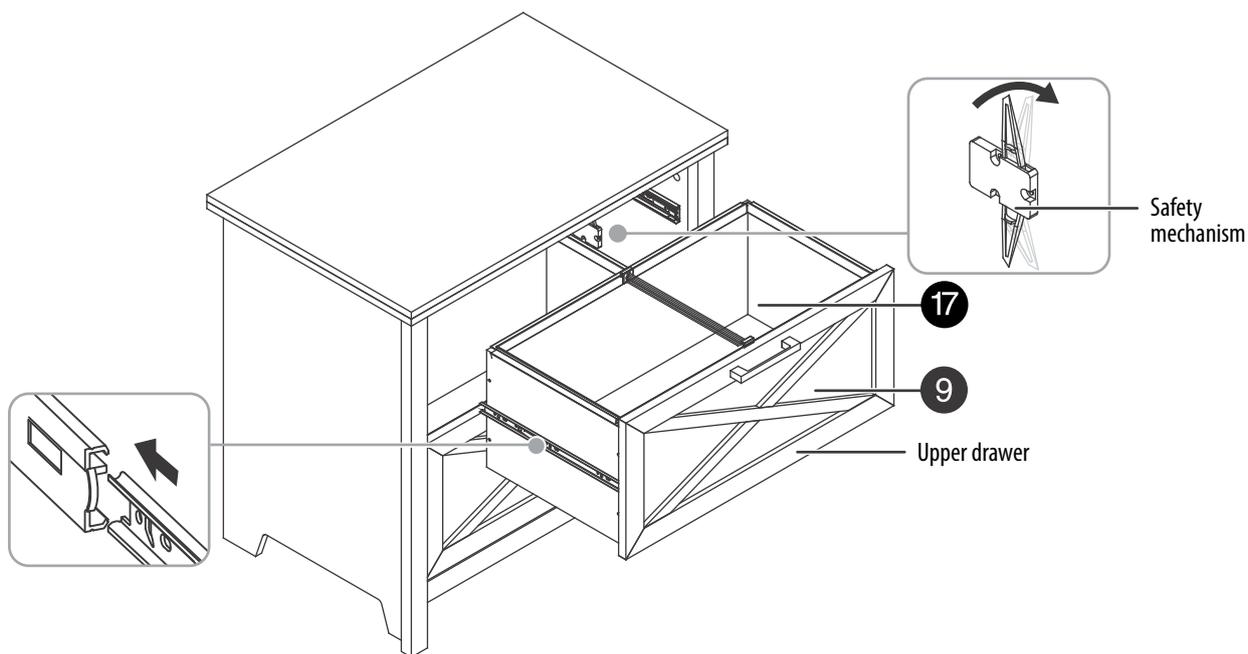

3 Use a Phillips screwdriver to loosen the screws holding the drawer faces, to align them with the file cabinet as needed.

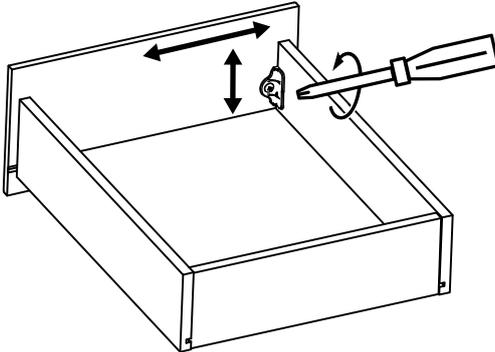

Drawer front view

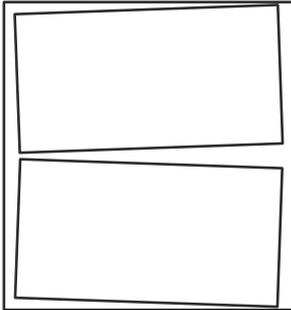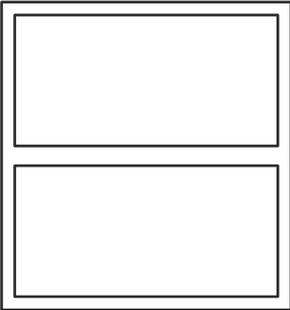

Cleaning your file cabinet

- Clean the surface of your file cabinet with a duster or damp cloth only.
- Do not use abrasive cleaners.

Specifications

Dimensions (H × W × D)	Cabinet: 30.9 x 20 x 30 in. (78.6 × 50.8 × 76.2 cm) Drawer: 24.6 x 12.8 x 9.2 in. (62.4 x 32.4 x 23.4 cm)
Weight	76.8 lbs. (34.9 kg)
Maximum supported weight	Top: 150 lbs. (68 kg) Drawers: 50 lbs. (22.7 kg)

Troubleshooting

PROBLEM	POSSIBLE SOLUTIONS
My file cabinet wobbles.	Place your file cabinet on a solid, sturdy surface. Carpet may cause your file cabinet to wobble.
A piece won't fit.	Loosen screws to let the pieces move more freely. After your file cabinet is assembled, fully tighten the screws.

ONE-YEAR LIMITED WARRANTY

Definitions:

The Distributor* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at www.bestbuy.com or www.bestbuy.ca and is packaged with this warranty statement.

How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location or from a Best Buy online website (www.bestbuy.com or www.bestbuy.ca), please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States and Canada call 1-877-467-4289. Call agents may diagnose and correct the issue over the phone.

Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the country where the original purchase was made.

What does the warranty not cover?

This warranty does not cover:

- Food, beverage, and/or medicine loss/spoilage.
- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

1-877-467-4289

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

*Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A

©2022 Best Buy. All rights reserved.

INSIGNIA™

For product inquiries, please contact us with the information below:

1-877-467-4289

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2022 Best Buy. All rights reserved.

V2 ENGLISH
22-0884