

ring

Contact Sensor



² Home security beyond the front door

Ring Video Doorbells began a Ring of Security around your entire property.

Ring Protect is the security system that takes the Ring of Security a step further giving you another level of protection for your property.

Now, you can arm and disarm your system, prevent crime and protect your home - all from your phone, tablet or PC.


Contents

1. Diagram
2. In-app Setup
3. Connecting the Device
4. Physical Installation
5. Troubleshooting

1.

Say hello
to your
Ring
Contact
Sensor.

Diagram

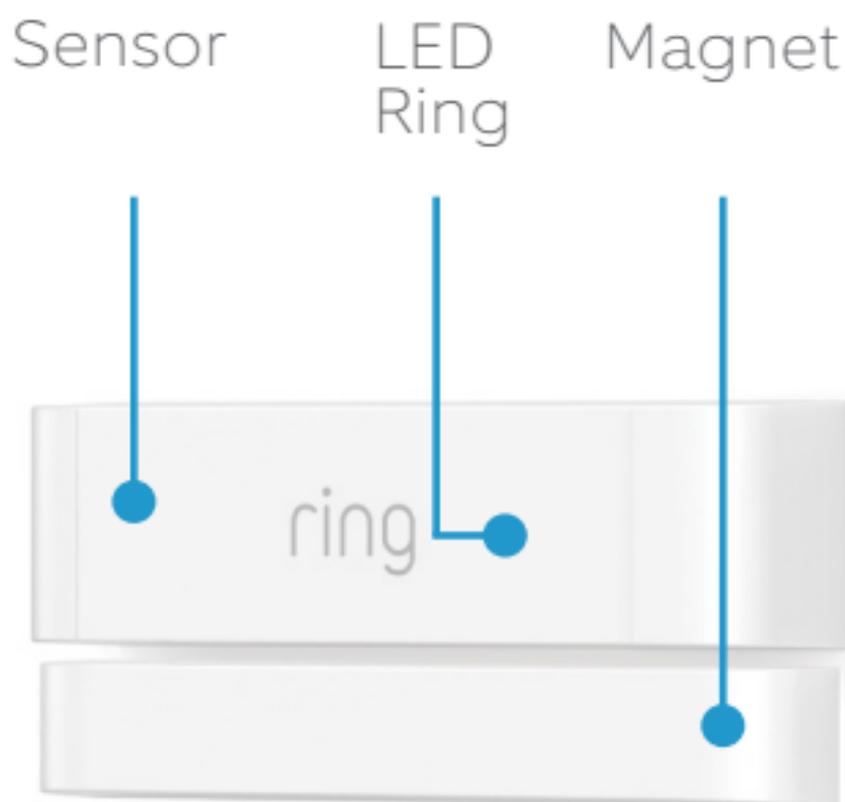


2.

Set up
your Ring
Contact
Sensor in
the Ring
app.

Set up your Ring Contact Sensor near your Base Station

In the Ring app, choose **Set Up a Device**.

Choose **Sensors**, then **Ring Contact Sensor**, then tap **Add Device**.

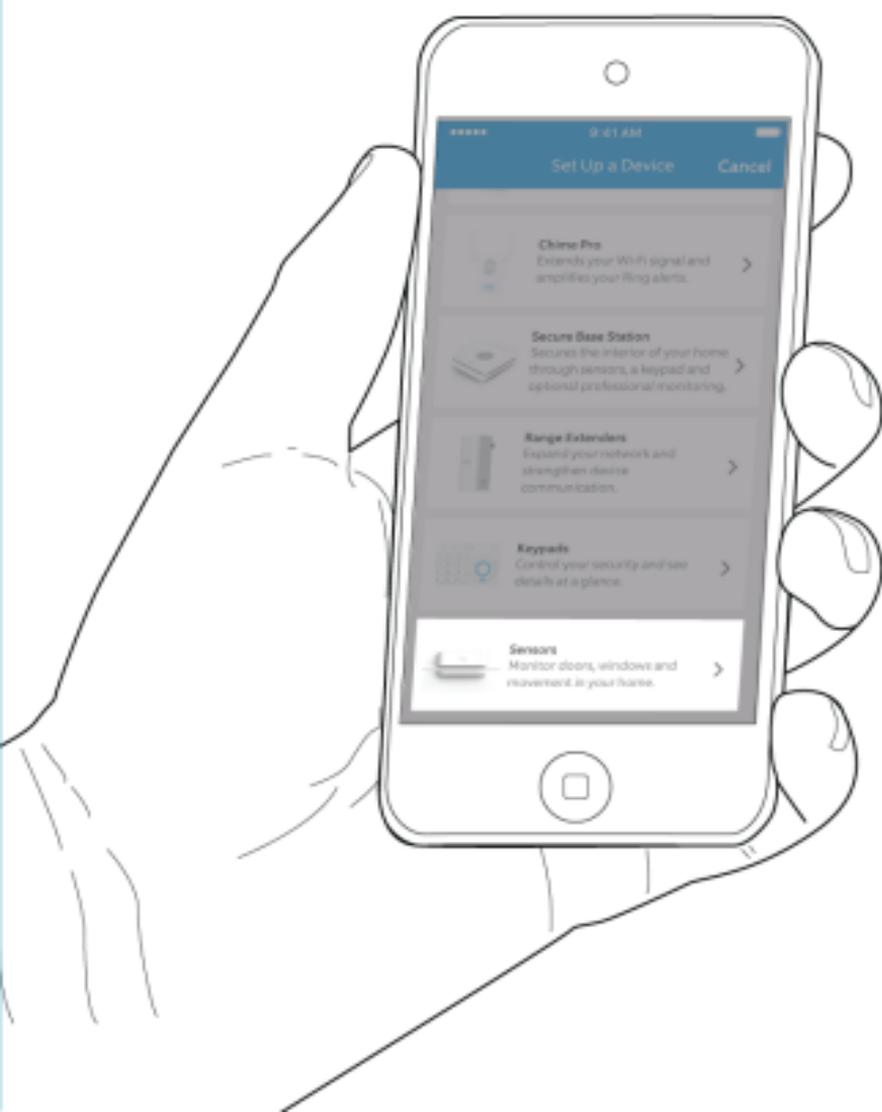


3.

Connect
your Ring
Contact
Sensor to
your base
station.


Pull the tab on the sensor

This connects the battery and turns on the device.
Your base station will find it.

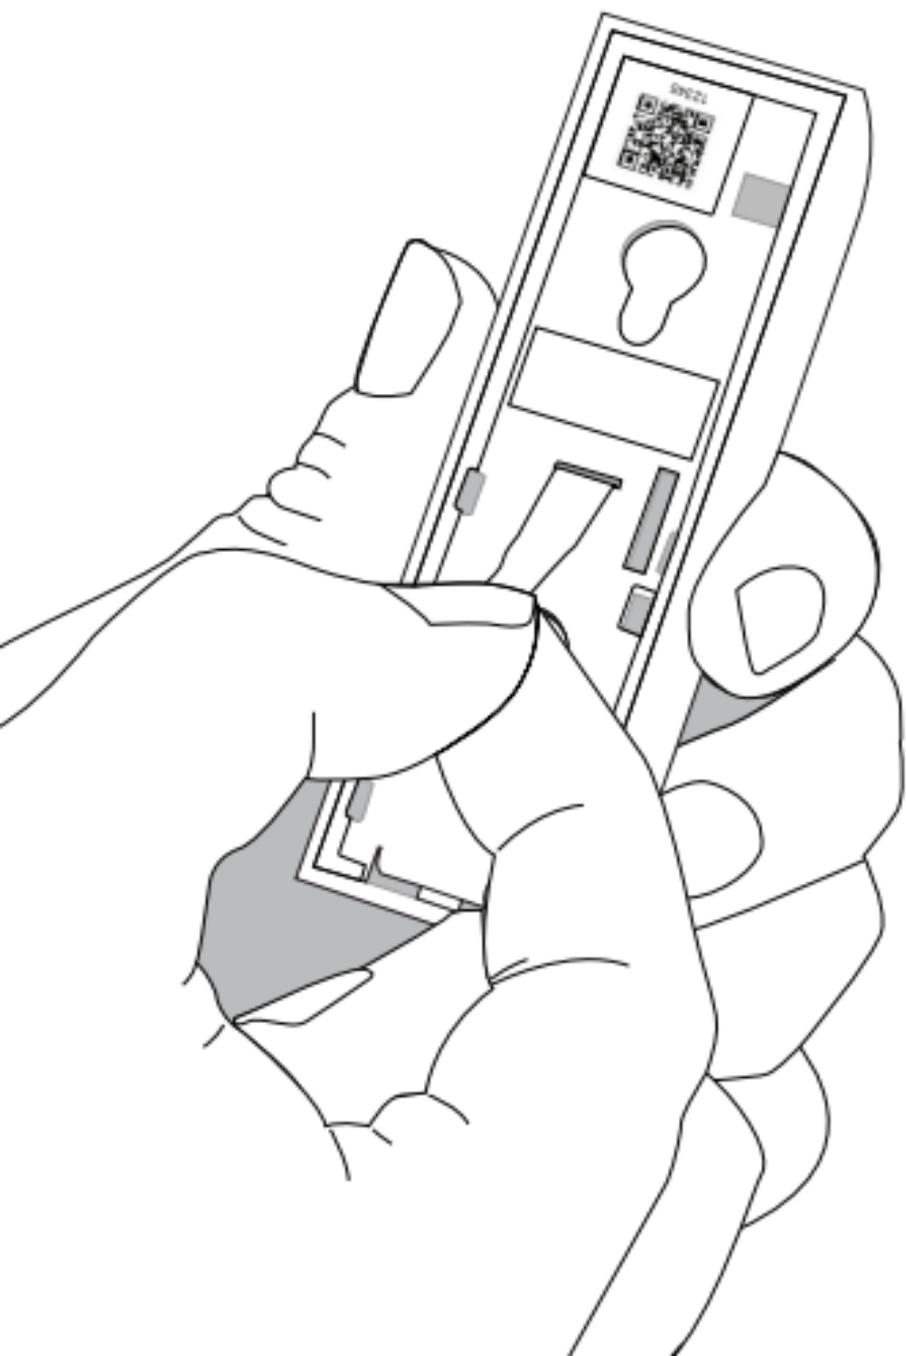

Scan the QR Code or enter the S2 PIN

The QR Code and PIN can be found on the back of your device, on the box, or on the card in this box.

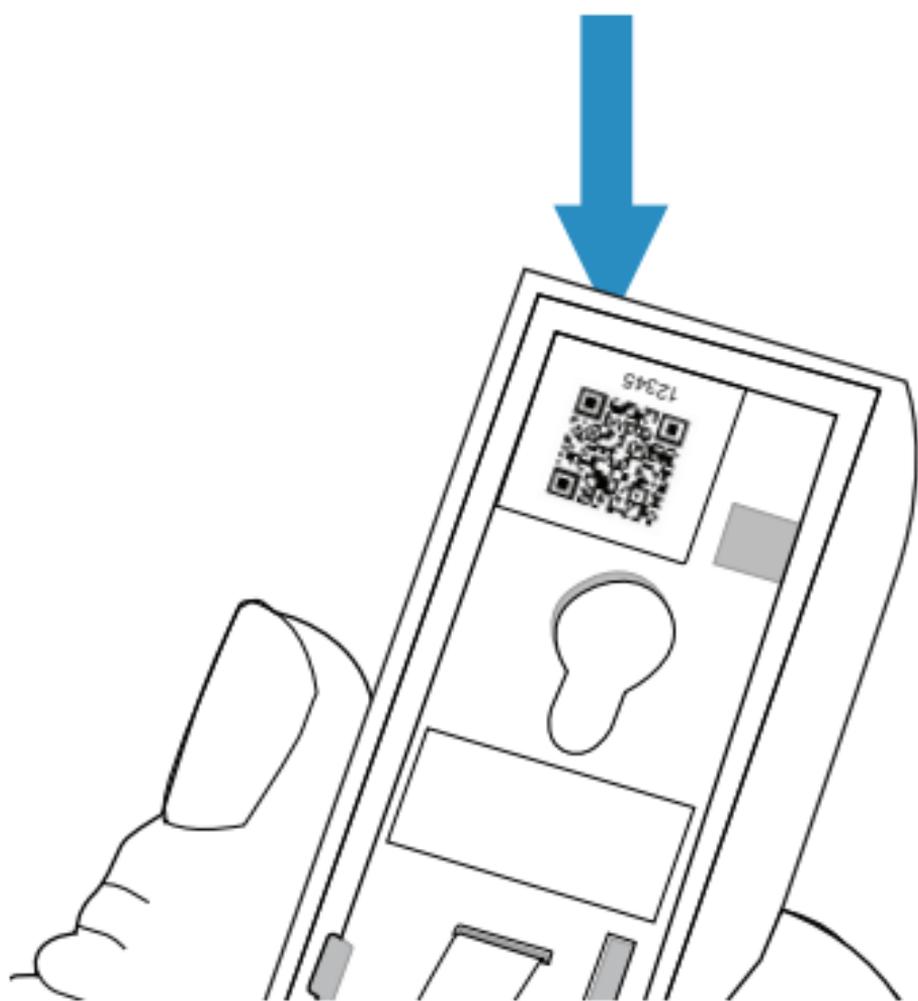

Track the connection progress of the sensor



Your sensor will try to connect to your base station. The sensor's LED ring will show the progress.

Here are some common LED patterns:

Waiting to connect		Blue Blinking (30 sec)
Connected		Blue Solid (5 sec)
Couldn't add to base station		Blue Blink (5x, quick)
Door or window open		Blue Blink (1x)
Sensor tampered		Blue Blinks (3x)

Open and close the sensor to test it

Make sure the app shows that the sensor is open when you pull it apart.

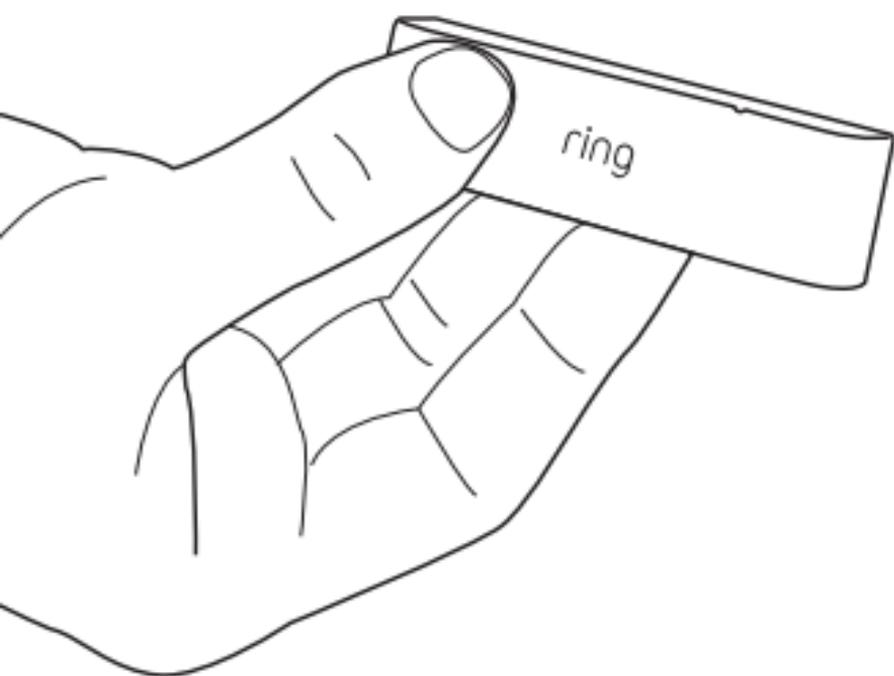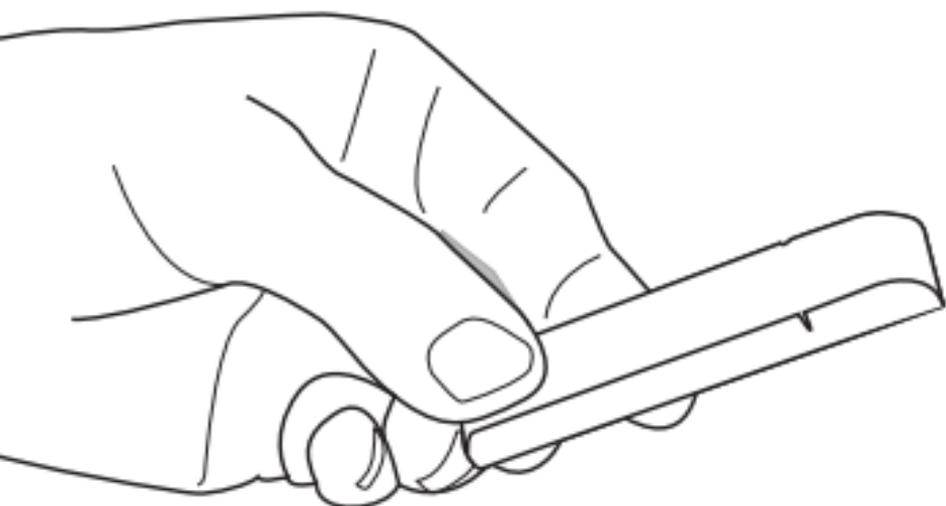


4.

Install
your Ring
Contact
Sensor on
the wall.

Place your sensor (but don't install it yet)

Hold the sensor where you want to install it. Place it near an edge of the door or window that will move.

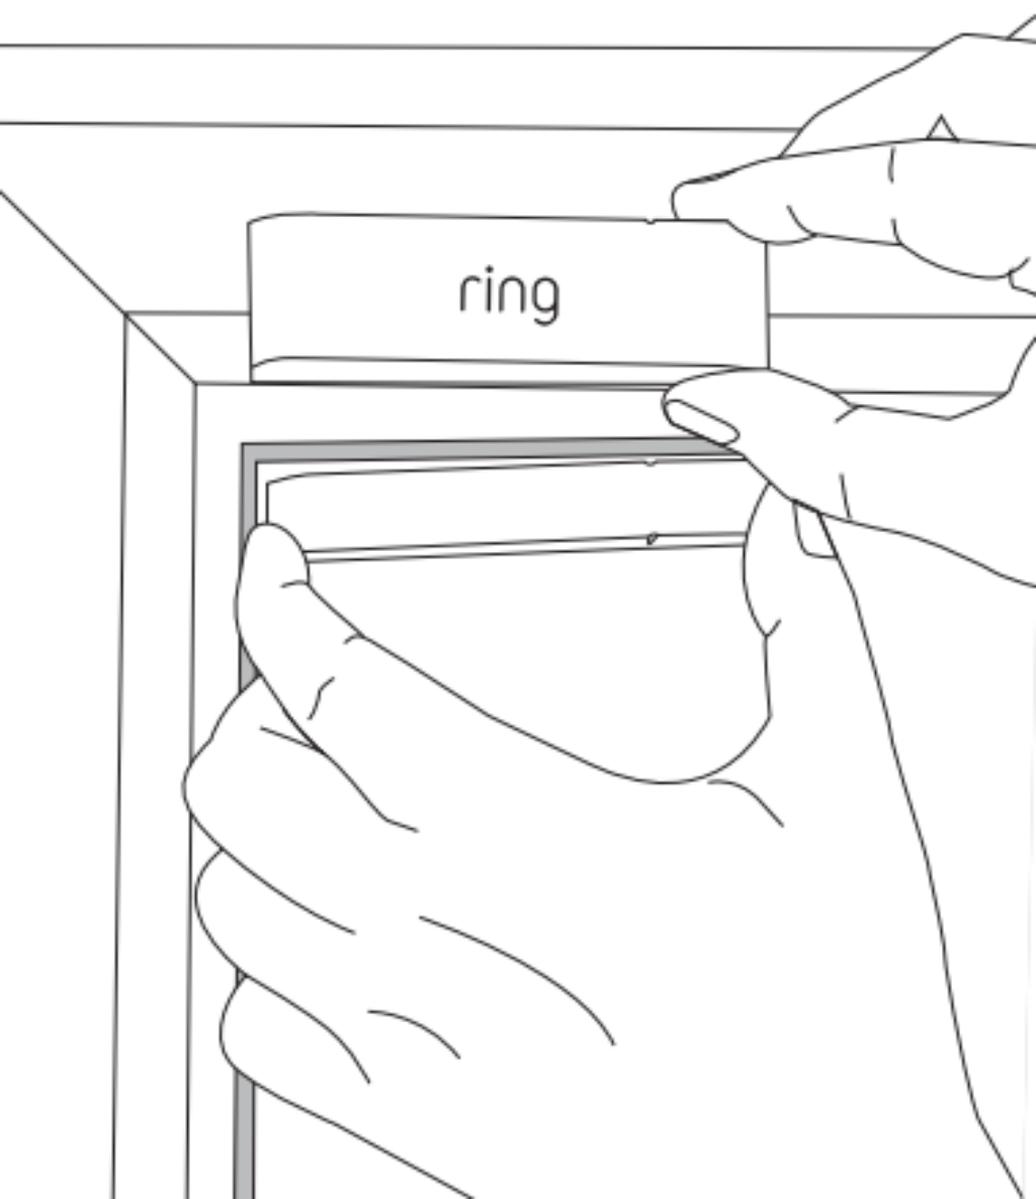

Align the magnet and the sensor

Place the magnet on the trim near the sensor so that the lines on the sensor and magnet are parallel. The magnet and sensor can be a maximum of 1/2" apart.

Alignment lines




Max Gap
1/2"

16

Install your sensor on a door or window.

Use the bracket and tape or screws included in your kit.

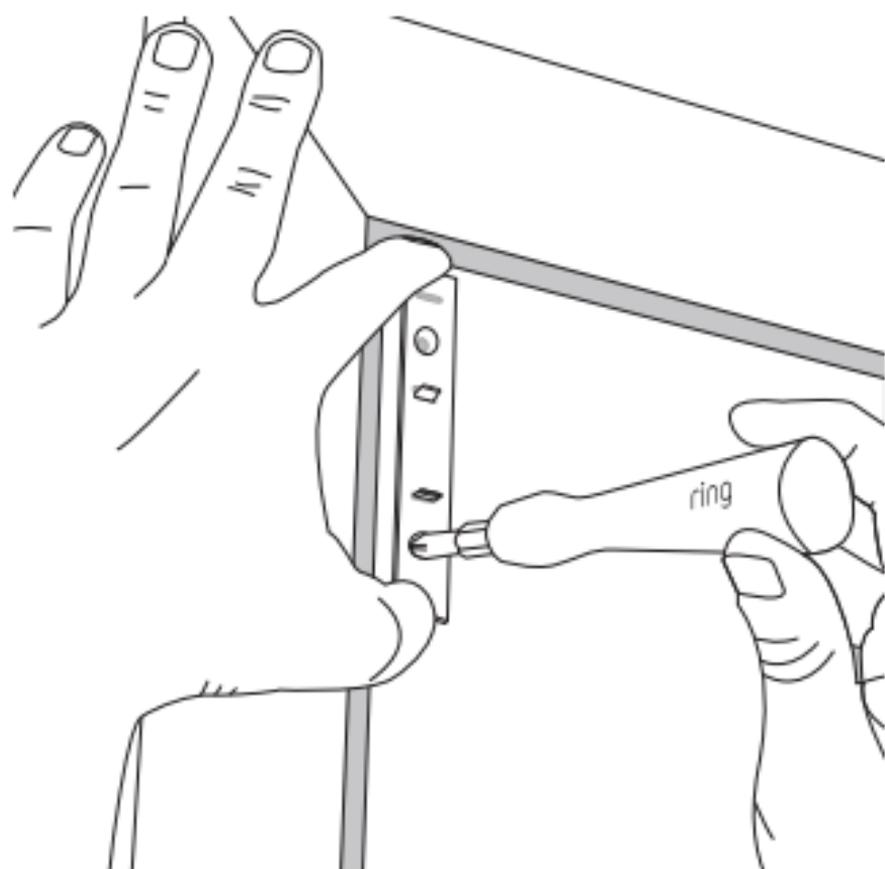

View sensor history in the Ring app

You should have a few history events from installing your sensor. Check your app to make sure it's working.



5.

Some
additional
details
about
your
sensor.

How to change the battery

Your battery should last quite a long time, but when you need to replace it, press the clip and remove the sensor cover.

