

DYNEX™

Mini Audio Shelf System w/ Bluetooth

DX-SH115

Before using your new product, please read these instructions to prevent any damage.

USER GUIDE

DX-SH115

Mini Audio Shelf System w/Bluetooth

Contents

Safety information	2
Features	4
Setting up your mini audio shelf system.....	9
Using your mini audio shelf system	10
Troubleshooting	20
Maintaining	21
Specifications	21
Legal notices	22
One-year limited warranty - Dynex.....	23

Safety information



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within your mini audio shelf system. This label is located on the back of your mini audio shelf system.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying your mini audio shelf system.



Your mini audio shelf system utilizes a Class 1 laser to read Compact Discs. Your mini audio shelf system is equipped with safety switches to avoid exposure when the CD tray is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD tray is open and the system's interlock has failed or been defeated. You should avoid direct exposure to the laser beam at all times. Do not attempt to defeat or bypass the safety switches. **Do not stare into the beam.**

Important safety instructions

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with a dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 13 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.


- 14 To reduce the risk of fire or electric shock, do not expose this device to rain, moisture, dripping, or splashing, and no objects filled with liquids, such as vases, shall be placed on it.
- 15 The wall plug is the disconnecting device. The plug must remain readily operable.
- 16 Batteries should not be exposed to excessive heat such as sunshine, fire, or the like.

Features

Package contents

- Bluetooth/CD mini audio shelf system, including:
 - Speakers (2)
 - Subwoofer
- Remote control and batteries (2)
- FM antenna
- Audio cable
- *Quick Setup Guide*
- *User Guide*


Front view

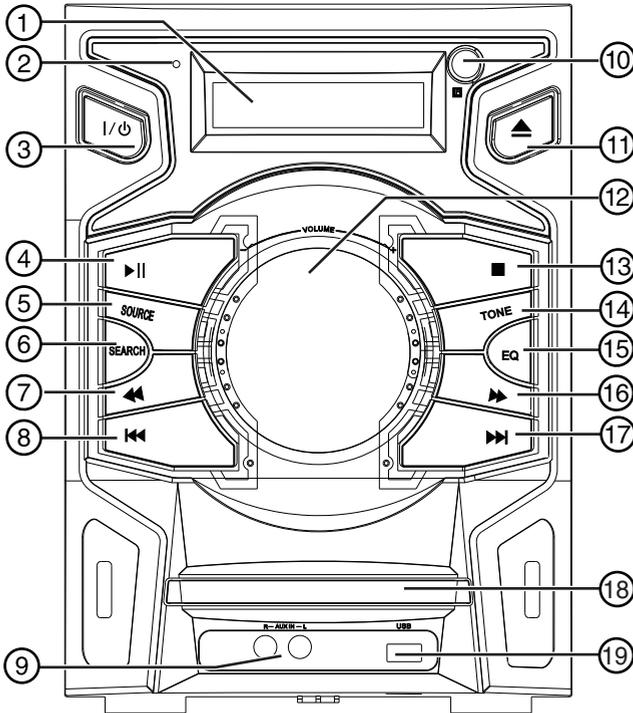

#	Component	Description
1	Display	Displays source, frequency, and playback information.
2	Standby indicator	Red indicates Standby mode
3	⏻ (standby) button	Press to turn on your mini audio shelf system. Press again to go to standby.
4	▶ (play/pause) button	Press to start playback. Press again to pause playback.
5	SOURCE button	Press repeatedly to select a source: CD, FM, USB, BT (Bluetooth), or AUX .
6	SEARCH button	Press to search FM stations. The searched stations are saved automatically as presets.
7	⏮ (fast reverse) button	Press to fast rewind a CD or USB track.
8	⏪ (previous) button	Press to go to the previous track or song.
9	L/R AUX IN jacks	Connect an external sound source, such as an MP3 player, to these jacks.
10	Remote control sensor	Point the remote control at this sensor.
11	⏴ (eject)	Press to open the CD tray or eject the currently playing CD.
12	VOLUME knob	Turn to adjust the volume.


#	Component	Description
13	■ (stop) button	Press to stop playback.
14	TONE button	Press to adjust the bass and treble.
15	EQ button	Press to select a specific sound field (equalization). Selections include Jazz, Rock, Classic, Pop, Live, Dance, and Off.
16	▶▶ (fast forward) button	Press to fast forward a CD or USB track.
17	▶▶ (next)	Press to go to the next track or song.
18	CD tray	Place the CD in this tray, label side up, to begin playback.
19	USB port	Connect a USB flash drive to this port to play files on the device.

Back

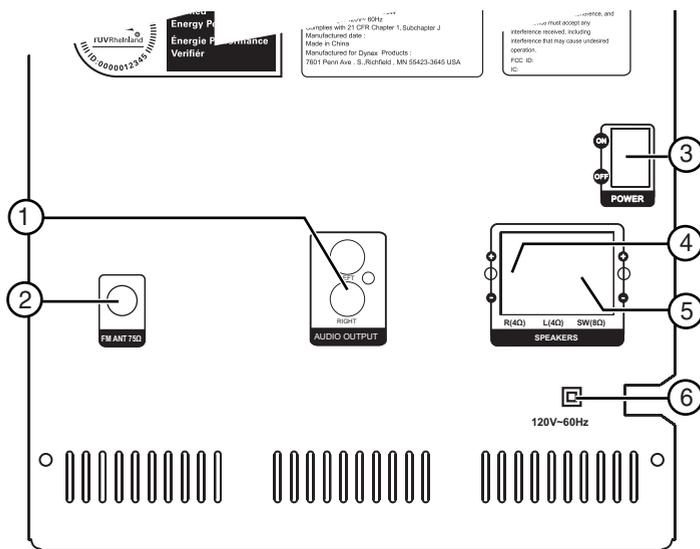

#	Component	Description
1	L/R Audio output	Connect to the audio input of an audio amplifier.
2	FM antenna jack	Connect the FM antenna to this jack.
3	Power switch	Turn power on and off.
4	L/R speaker connections	Connect the left and right speakers to these jacks.
5	Subwoofer connection	Connect the subwoofer to this jack.
6	Power cord	Plug into a standard 120V~60Hz wall outlet.

Remote control

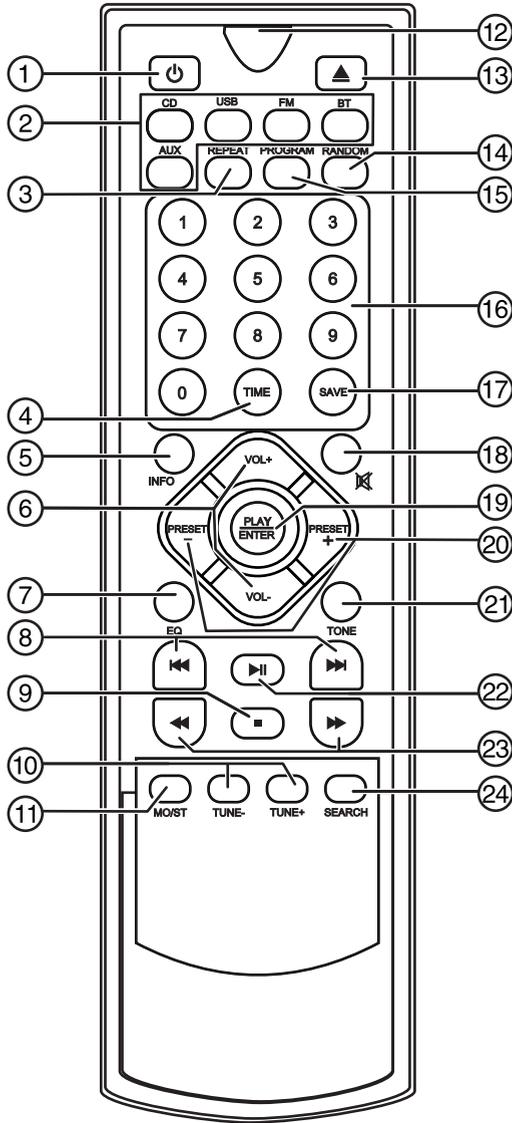

#	Button	Description
1	⏻ (standby)	Press to turn on your mini audio shelf system. Press again to go to standby.
2	Source buttons	Press to switch to CD mode, USB mode, FM mode, BT (Bluetooth) mode, or AUX mode.


#	Button	Description
3	REPEAT	In CD or USB mode, press once to repeat the current song, press twice to repeat all tracks, or press a third time to cancel Repeat mode.
4	TIME	Press to play a CD from a specific time point. In USB mode, press to set the playback time of the current track.
5	INFO	While playing MP3 tracks, press to display information about the current track.
6	VOL+/VOL-	Press to raise and lower the volume.
7	EQ	Press to select a specific sound field (equalization). Selections include Jazz, Rock, Classic, Pop, Live, Dance, and Off.
8	◀◀ (previous) ▶▶ (next)	Press to go to the previous or next track or song.
9	■ (stop)	Press to stop playback.
10	TUNE+/TUNE-	Press to tune the FM radio to a higher or lower frequency.
11	MO/ST	In Tuner mode, press to switch from Stereo mode to Mono mode. Press again to switch back to Stereo mode.
12	IR transmitter	Transmits the IR signal to the mini audio shelf system.
13	⏏ (eject)	Press to open the CD tray or eject the currently playing CD.
14	RANDOM	Press to switch playback to random mode. Press again to cancel.
15	PROGRAM	Press to program CD playback.
16	Number buttons	In CD mode, press to enter the track number you want to play. In FM mode, press to select a specific frequency. In Program mode, press to enter the numbers of the songs you want to play in the order you want them played. In Time mode, press to enter the time.
17	SAVE	In FM mode, press to save a preset station.
18	🔇 (mute)	Press to mute the sound. Press again to cancel. When you switch to other modes, the default is mute off.
19	PLAY/ENTER	Press to enable the item you have selected.
20	PRESET-/PRESET +	Press to tune the FM radio to the previous or next preset station. When setting presets, press to select a lower or higher preset number.
21	TONE	Press to adjust the bass and treble.
22	⏮ (play/pause)	Press to start and pause playback.
23	▶▶ (fast forward) ◀◀ (fast reverse)	Press to fast forward or fast reverse a CD or USB track.
24	SEARCH	Press to search FM stations. The searched stations are saved automatically as presets.

Setting up your mini audio shelf system

Making connections

Connecting the AC power

- 1 Make sure that your local AC power source matches the voltage shown on the plate on the back of your mini audio shelf system. If it does not, do not use that power source.
- 2 Plug the AC power cord into a wall power outlet.

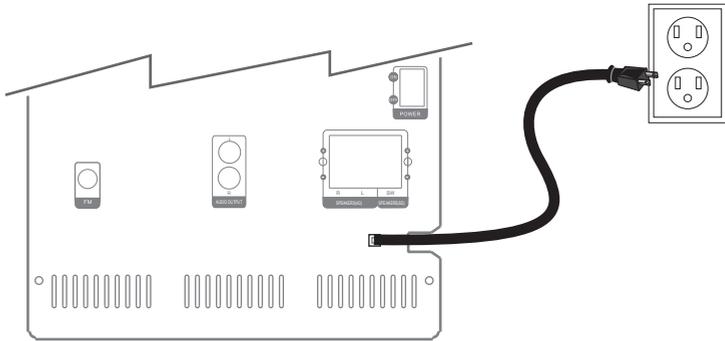


Caution

To protect your mini audio shelf system during thunderstorms, unplug the AC power cord from the AC power outlet.

Connecting the FM antenna


- 1 Connect the FM antenna (included) to the FM ANT jack on the back of your mini audio shelf system.

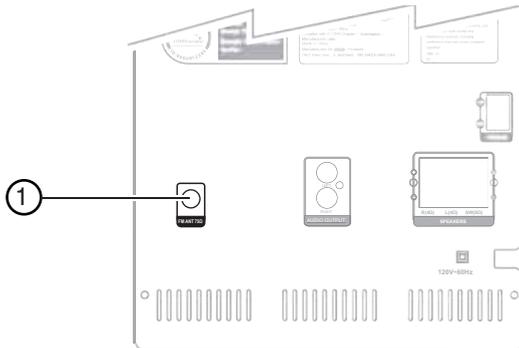

- 2 Adjust the antenna for best FM reception.

Connecting the speakers

- 1 Connect the black wires from the speakers or subwoofer to the black terminals on the shelf system.
- 2 Connect the red wires from the speaker or subwoofer to the other terminals on the shelf system: right speaker to red, left speaker to white, and subwoofer to purple.

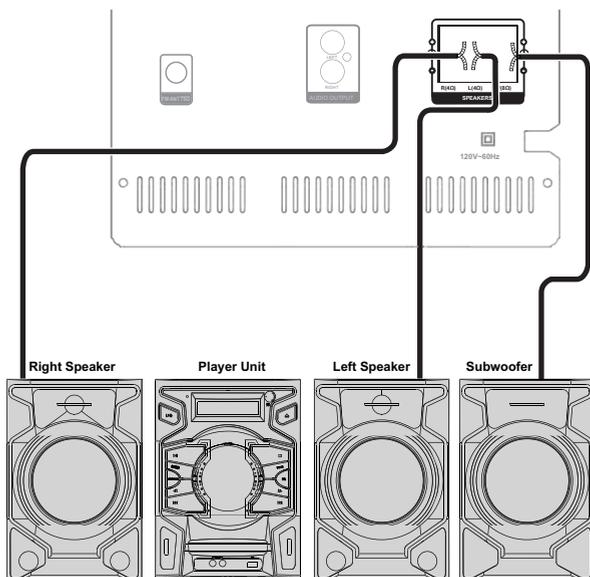

Using your mini audio shelf system

Turning on your mini audio shelf system


- 1 Turn on the power switch on the back of your mini audio shelf system.
- 2 Press  (standby) on the front of your system or on the remote control.

Notes

- The distance between the remote control and your mini audio shelf system should not exceed 23 ft. (7 m).
- If the remote control sensor or IR transmitter is blocked, the remote control will not operate correctly.

Using the remote control

- 1 Press the battery compartment cover latch, then remove the cover.

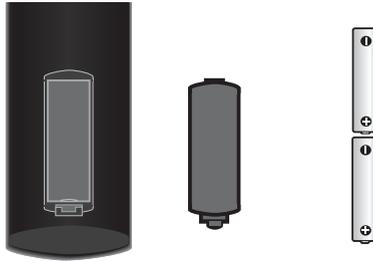

- 2 Insert two AAA batteries (included) into the battery compartment. Make sure that the + and – symbols on the batteries match the + and – symbols in the battery compartment.



- 3 Replace the cover.

Cautions

- Make sure that you insert the batteries correctly.
- Do not use rechargeable (Ni-Cd) batteries.
- Do not heat, open, or short-circuit batteries.
- Do not throw batteries into a fire.
- Do not mix different types of batteries or mix old and new batteries.
- If the remote control does not function correctly or if the operating range becomes reduced, replace the batteries.

Selecting the sound source

- Press **SOURCE** repeatedly on the front of your mini audio shelf system or one of the source buttons on the remote control to select **CD**, **BT**, **FM**, **AUX**, or **USB**. The source you select appears on the display.

Volume control and mute

- After you select the sound source you want, turn the **VOLUME** knob to set the volume to a comfortable level.
- Press **M** (mute) to mute the sound. Press **M** (mute) again, or **VOL+** or **VOL-** to turn the sound back on.

Adjusting the tone

- In any mode, press **TONE** on the remote control to select Bass or Treble. While **BASS** or **TREBLE** is on the display, press **Vol +/Vol-** to adjust the level.

Selecting the sound equalization

- Press **EQ** to select the sound equalization you want. Choose one of the following preset options: **JAZZ**, **ROCK**, **CLASSIC**, **POP**, **LIVE**, **DANCE**, or **OFF** (no equalization).

Using Radio mode

Tuning to a station

- 1 Press **SOURCE** repeatedly to select **FM** (Tuner) mode or press **FM** on the remote control. "**TUNER**" appears on the display.
- 2 Adjust the volume to a comfortable level.
- 3 Press **MO/ST** to switch between Mono and Stereo Tuner mode.
- 4 Tuning to a station:
 - Press the number buttons on the remote control to select a specific frequency. For example, to listen to 99.7 MHz, press 9, 9, and 7 to go to that frequency.
 - Briefly press **TUNE +** or **TUNE -** on the remote control to tune the radio up or down one frequency step (0.2 MHz). A three second press and release tunes automatically to the next strong station.
 - When a strong FM signal is received, "**📶**" appears on the display if the Tuner mode is set to Stereo.
 - Briefly press **PRESET +** or **PRESET -** to tune to the next or previous preset station. Up to 30 stations can be preset.
- 5 Scanning for stations:
 - To automatically scan for stations, press **SEARCH** on the remote control. The searched stations are automatically saved as presets.

Note

When the searched stations are saved as presets, your existing presets will be lost.

- To tune to the next highest or lowest radio station with a strong signal, press and hold **TUNE+** or **TUNE-** for three seconds.

Improving FM reception

- For improved FM reception, raise and extend the FM antenna on the back of your mini audio shelf system. You may have to reposition the antenna for best reception.

Saving presets

- 1 Press **SOURCE** repeatedly to select **FM** (Tuner) mode or press **FM** on the remote control. "**TUNER**" appears on the display.
- 2 Tune to the radio station you want to save as a preset.
- 3 Press **SAVE** on the remote control to enter Preset saving mode.
- 4 Press **PRESET +** or **PRESET -** to select a preset number.
- 5 Press **SAVE** again on the remote control. The currently tuned station is now saved to the selected preset number.
- 6 Repeat Steps 2 to 5 to store as many as 30 FM presets.
- 7 To select a preset station, briefly press **PRESET +** or **PRESET -** repeatedly until you reach the station you want.

Using the CD player

You can play audio CDs, CD-Rs, and CD-RWs.

Note

Do not attempt to play DVDs, VCDs, or data CDs.

- 1 Press **SOURCE** repeatedly to select **CD** mode or press **CD** on the remote control. "**CD**" appears on the display.
- 2 Press **▲** (eject) to open the CD tray.
- 3 Insert a CD, label side up.
- 4 Press **▲** (eject) to close the CD tray.
- 5 Playback begins automatically. The current track appears on the display. The CD stops when finished.

Note

If the CD tray is opened during playback, playback stops immediately and any repeat mode setting is reset.

- 6 Control CD playback as follows:
 - Press **▶||** (play/pause) to pause playback. Press again to resume playback.
 - When playing standard music CDs, press **■** (stop) once to stop playback, then press **▶/ENTER** to resume playback. Press **■** (stop) twice to stop playback, then press **▶/ENTER** to begin playback from the beginning of the disc.

- When playing MP3 discs or MP3 files on a USB flash drive, press **■** (stop) once to stop playback, then press **PLAY/ENTER** to resume playback.
- Press **▶▶** or **◀◀** to skip to the next or previous track.
- Press **▶▶** once to fast forward. Press again to fast forward at a higher speed. Press again to resume normal speed.
- Press **◀◀** once to fast reverse. Press again to fast reverse at a higher speed. Press again to resume normal speed.
- Press the number buttons to enter the number of the track you want to play.
- Press **REPEAT** once to repeat the current track. **↺** appears on the display.
- Press **REPEAT** twice to repeat the entire CD. **ALL ↺** appears on the display.
- Press **REPEAT** three times to cancel Repeat mode.
- Press **RANDOM** to play CD tracks randomly. Press again to cancel.

Note

Random play is only available on standard music CDs, not MP3 or WMA CDs.

Notes

- If a CD is inserted incorrectly, is dirty or damaged, is not present, or is a non-compatible format, "NO DISC" appears on the display.
- To prevent damage to the CD, never open the CD door while the CD is rotating and never touch the lens.
- The CD player should only be used on a steady surface.

Playing MP3 discs

- 1 Press **▲** (eject) to open the disc tray. Insert the MP3 disc and press **▲** (eject) again to close it. The system reads the disc automatically.
- 2 Basic playback is the same as a standard CD.
- 3 Press **INFO** to display information about the MP3 tracks, including artist or album name (MP3 discs only).

Programming and timing CD playback

Programming CD playback

- 1 Press **■** (stop) while playing a CD, then press **PROGRAM**. The display shows "PR 0100."
- 2 Using the number buttons, enter the number of the song you want to play first. For example, to select song 4 as the first song played in the program, enter "0" then "4" for track 4.

Note

You must enter two digits for the song numbers.

After each song is entered, your mini audio shelf system is automatically set up for you to enter the next song. Continue programming until you have entered all the songs you want to play.

- 3 When you finish programming, press **PLAY/ENTER** to confirm. Your mini audio shelf system plays the songs in the programmed order.
- 4 To cancel the program, press **■** (stop) twice.

Note

Program CD playback is available only for standard music CDs, not MP3 CDs.

Setting the playback from a specific time point

- Press **TIME** once. The display screen shows "D_ _ _ _" Enter the digits to set the desired listening time from the beginning of the disc. For example, if you want to start playback from time 35:05 (within the total disc time), press **TIME** once, then enter digits **3, 5, 0, 5** on the "D_ _ _ _" interface. The CD starts playing from 35:05.
- If you want to listen to the current track from a specific time point, press **TIME** twice, the display screen shows "T_ _ _ _" Enter the digits to set the desired listening time of this track. For example, if you want to start playback from time 03:05 (within the total current track time), press **TIME** twice, then enter digits **0, 3, 0, 5** on the "T_ _ _ _" interface, the CD starts playing the content at 03:05.

Notes

- While playing music from a USB device, you can only set the playback time of the current track.
- While playing music from an MP3 CD, you can only set the playback time of the current track.

Using Bluetooth

Before you can use your mini audio shelf system with a Bluetooth device, you need to pair your device to the mini audio shelf system.

Pairing your devices using Bluetooth

Your mini audio shelf system saves pairing information for up to eight devices, such as phones and tablets. However, it can only be connected and playing content from one device at a time.

- 1 Make sure that your device supports Bluetooth and is not paired with another device.
- 2 Turn on your mini audio shelf system.
- 3 Press **SOURCE** repeatedly to select **BT** mode or press **BT** on the remote control. “**BT**” appears on the display.
- 4 Make sure that your Bluetooth device is within 33 feet (10 m) of your mini audio shelf system.
- 5 Turn on your Bluetooth device, turn on Bluetooth, then set your device to pairing mode. For more information, see the documentation that came with your Bluetooth device.
- 6 On the Bluetooth device, select **DX-SH115** in the list of found devices.
- 7 On the Bluetooth device, enter **0000** as the PIN, if prompted.

If you are pairing with a computer, make sure that your mini audio shelf system is selected as the computer’s default playback device. See the computer’s documentation for instructions.

Notes

- Some devices, such as iPhones, connect immediately after pairing. Other devices, such as notebook computers, may ask you if you wish to connect.
- When you turn on your mini audio shelf system, it automatically connects to the last connected device if that device is in range. To connect to a different paired device, you have to turn off Bluetooth or unpair from the currently paired device and manually connect to the other paired device.

Playback operation

Playback is controlled by the Bluetooth device, by the buttons on the front of your mini audio shelf system, and by the remote control (such as **VOL+/-**, **▶▶**, **▶▶▶**, and **◀◀**).

Reconnecting to a paired device

When your mini audio shelf system is not paired to a device, “BT” blinks on the display.

Your mini audio shelf system loses the Bluetooth connection if you...	To reconnect...
Turn off your mini audio shelf system	Turn on your mini audio shelf system. Your mini audio shelf system searches for the last connected Bluetooth device and reconnects.
Move the Bluetooth device out of range	Make sure your Bluetooth device is within 33 feet of your mini audio shelf system.
Turn off your Bluetooth device	Turn on your Bluetooth device, then make sure Bluetooth is on.
Turn off Bluetooth on your Bluetooth device	Turn on Bluetooth on your Bluetooth device.
Connect your Bluetooth device to another Bluetooth device	Disconnect your Bluetooth device from the other Bluetooth device, then set your device to pairing mode. Select “DX-SH115” on your Bluetooth device.

Note

If a device does not automatically reconnect, you may need to reselect “DX-SH115” on your Bluetooth device.

Connecting to a different device


- 1 On the Bluetooth device you are currently connected to, turn off the Bluetooth function or unpair the mini audio shelf system in your Bluetooth device list.
The mini audio shelf system can now be connected to another Bluetooth device.
- 2 Follow the section “Pairing your devices using Bluetooth” to connect a new device.

Receiving a phone call while playing music

- When a call is received while playing music through a phone, the music stops automatically.
- When the call ends, depending on the setting of your phone, the current track may resume playback.

Using a USB device

- 1 Plug the USB flash drive into the USB port on the front of the system.

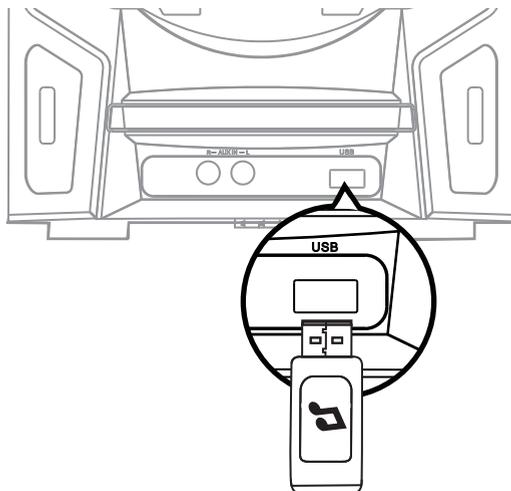

- 2 Press **SOURCE** one or more times or press **USB** on the remote control. "USB" appears on the display and the player automatically detects the device and starts playback.


Note

- Depending on the amount of data and the media speed, it may take longer for the system to read the contents of the USB device. In some cases, reading time may be as long as 60 seconds. This is not a malfunction.
- Even when the files are in a supported format, some may not play or display, depending on the content. The file formats that this system can play are MP3, WMA with .MP3 and .WMA extensions.

- 3 The playback method is the same as it is for a CD. See "Using the CD player" on page 13.
- 4 To exit USB mode, switch to another mode using the remote source buttons or the **SOURCE** button on the mini audio shelf system.

Using an AUX device

- 1 Make sure that your mini audio shelf system is turned off.
- 2 Plug one end of the RCA stereo audio cable (included) into the **R** and **L** **AUX IN** jacks on the front of your mini audio shelf system and the other end into the RCA audio out or line out jacks on the audio device.

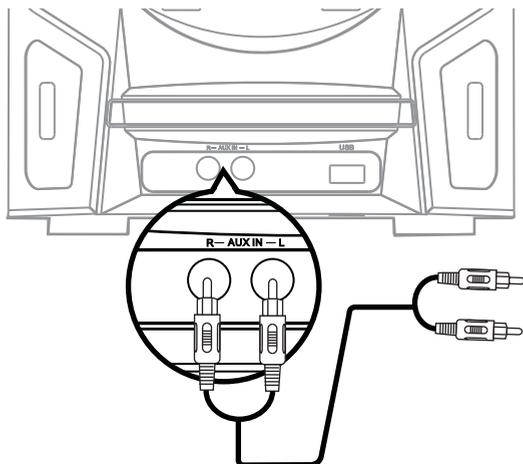

- 3 Press **SOURCE** one or more times until "AUX" appears on the display or press **AUX** on the remote control.
- 4 Use the controls on the audio device to control playback.

Note

You can also use the volume controls on the device to adjust the volume, but the volume knob on your mini audio shelf system provides the best control.

Connecting to a stereo receiver or amplifier

Note

Audio output is only available in CD and USB modes.

- 1 Make sure that your mini audio shelf system is turned off.
- 2 Plug one end of the RCA stereo audio cable (included) into the **L/R AUDIO OUTPUT** jacks on the back of your mini audio shelf system and the other end into the **AUDIO IN** or **LINE IN** jacks on a stereo receiver or amplifier.
- 3 Press **SOURCE** on your stereo receiver or amplifier to select **AUDIO IN** or **LINE IN** as the sound source.
- 4 Use the controls on the stereo receiver or amplifier to control the volume.

Troubleshooting

Problem	Solution
No power.	<ul style="list-style-type: none"> • Make sure that the power cord is fully inserted in the power outlet. • Make sure that the power switch on the back of the mini audio shelf system is turned on.
The remote control does not work.	<ul style="list-style-type: none"> • Make sure that the batteries are fresh. • Make sure that you are aiming the remote control at the front of the mini audio shelf system and that the remote control sensor is not blocked.
"No Disc" error	<ul style="list-style-type: none"> • Make sure that there is a CD in the disc tray. • Make sure that the CD disc is correctly inserted (label side up). • Make sure that you are using a compatible disc. (CDs, CD-Rs, and CD-RWs.) • Make sure that the disc is not dirty or scratched.
No sound.	<ul style="list-style-type: none"> • Make sure that power is connected and your mini audio shelf system is turned on. • Make sure that the power switch on the back of the mini audio shelf system is turned on. • Make sure that the speakers are correctly connected. • Make sure that your external device is turned on and is playing. • Make sure that the volume on your external device is turned up and is not set to mute. • Make sure that the volume is not extremely low. • Make sure that the correct source has been selected. • Verify all connections. • Make sure that no wires or cables are damaged or broken.
The CD skips while playing.	<ul style="list-style-type: none"> • Make sure that you are using a standard CD (normal size and shape). • Make sure that you are using a compatible disc (CDs, CD-Rs, and CD-RWs). • Make sure that you do not move your mini audio shelf system while it is playing and that it is positioned on a flat, steady surface. • Clean the CD by wiping outwards from the center (not in a circle) with a clean cloth. If a dry cloth does not clean the CD, wipe the CD with a slightly moistened, soft cloth, then dry it with a soft cloth. Do not use any solvents to clean CDs. • Your CD may be damaged. Try playing another CD.
What should I do if my CD will not play?	<ul style="list-style-type: none"> • Make sure that the CD is correctly inserted with the label facing up. • Make sure that the correct audio source is selected. • Clean the CD by wiping outwards from the center (not in a circle) with a clean cloth. If a dry cloth does not clean the CD, wipe the CD with a slightly moistened, soft cloth, then dry it with a soft cloth. Do not use any solvents to clean CDs. • Make sure that your CD is compatible. Your mini audio shelf system can play CDs, CD-Rs, and CD-RWs. • Your CD may be damaged. Try playing another CD.
"Invalid" appears on the display.	<ul style="list-style-type: none"> • Unplug and reconnect the power cord.
Severe hum or noise or can't receive FM stations.	<ul style="list-style-type: none"> • Make sure that FM reception is adequate. Move the antenna or move the mini audio shelf system away from possible sources of interference. • The FM signal may be weak. Select a different station.

Problem	Solution
No sound or low volume in Bluetooth mode.	<ul style="list-style-type: none"> • Make sure that your Bluetooth device is turned on, Bluetooth is turned on, and "DX-SH115" is selected. • Turn up the volume on your mini audio shelf system. • Turn up the volume on your Bluetooth device. • Make sure that your Bluetooth is not muted. • Make sure that your mini audio shelf system is in Bluetooth mode. • Make sure that there is no audio cable connected to your mini audio shelf system. • Make sure that your mini audio shelf system is not paired with another Bluetooth device. • Make sure that your Bluetooth device is not paired with another Bluetooth device.
Cannot establish a Bluetooth connection.	<ul style="list-style-type: none"> • Shorten the distance between your mini audio shelf system and your Bluetooth device. • Turn you devices off, then on. Re-pair your mini audio shelf system and your Bluetooth device. • Make sure that your mini audio shelf system is not paired with another device. • Make sure that your mini audio shelf system and Bluetooth device are both in pairing mode. • Make sure that your Bluetooth device is not connected to any other device. • Make sure that you have selected "DX-SH115" on your Bluetooth device.
My Bluetooth device keeps unpairing.	<ul style="list-style-type: none"> • Shorten the distance between your mini audio shelf system and the Bluetooth device. • If the battery on your Bluetooth device is low, recharge the battery.
"DX-SH115" does not appear on my Bluetooth device.	<ul style="list-style-type: none"> • Shorten the distance between your mini audio shelf system and the Bluetooth device. • Put your mini audio shelf system into pairing mode, then refresh your list of Bluetooth devices. For more information, see the documentation that came with your Bluetooth device.

Maintaining

Cleaning your mini audio shelf system

To prevent fire or shock hazard, disconnect your mini audio shelf system from the AC power source when cleaning.

The finish on your mini audio shelf system may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.

Specifications

Dimensions (WxHxD)	Mini Shelf System - 8.7 W x 11.8 H x 13.6 D in (22.0 x 30.0 x 34.5cm) L/R speaker - 7.9 W x 11.8 H x 12.6 D inches (20.0 x 30.0 x 32.1 cm) Subwoofer speaker - 8.9 W x 11.8 H x 12.8 D inches (22.5 x 30.0 x 32.5 cm)
Weight	33.8 lb. (15.3 kg)
Power source	120V~60Hz

Audio output power	120W total (Subwoofer, 60 Watts @ 10% THD+N; Left/Right, 30 Watts/Channel @ 10% THD+N)
CD compatibility	CDs, CD-Rs, CD-RWs in standard or 3" size
FM frequency	87.5 - 107.9 MHz
FM presets	30
USB section	Supported file formats: MP3 and WMA
Bluetooth section	Transmission frequency: 2.4 GHz Maximum range: 33 ft. (10 m)
Input jacks	USB and AUX IN

Legal notices

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Canada IC Statement

This device complies with Industry license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Ce dispositif est conforme à la norme de l'industrie RSS exempts de licence (s). Son fonctionnement est soumis aux deux conditions suivantes: (1) cet appareil ne peut pas provoquer d'interférences et (2) cet appareil doit accepter toute interférence, y compris les interférences qui peuvent causer un mauvais fonctionnement du dispositif.

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment.

Cet équipement est conforme à l'exposition aux rayonnements IC limites établies pour un environnement non contrôlé.

One-year limited warranty - Dynex

Definitions:

The Distributor* of Dynex branded products warrants to you, the original purchaser of this new Dynex-branded product ("Product"), that the Product shall be free of defects in the original manufacture of the material or workmanship for a period of one year (365 days) from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at www.bestbuy.com or www.bestbuy.ca which are packaged with this warranty statement.

How long does the coverage last?

The Warranty Period lasts for one year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Dynex repair center or store personnel, Dynex will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Dynex and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Dynex Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location, please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from a Best Buy online web site (www.bestbuy.com or www.bestbuy.ca), mail your original receipt and the Product to the address listed on the website. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States call 1-888-BESTBUY, Canada call 1-866-BESTBUY. Call agents may diagnose and correct the issue over the phone.

Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the country where the original purchase was made.

What does the warranty not cover?

This warranty does not cover:

- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to acts of God, such as power surges

- Accident(s)
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place other than a private home.
- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Dynex to service the Product
- Products sold “as is” or “with all faults”
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. DYNEX SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. DYNEX PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Dynex:

For customer service please call 1-800-305-2204

www.dynexproducts.com

DYNEX is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

©2015 Best Buy. All rights reserved.

Made in China

DYNEX™

www.dynexproducts.com

1-800-305-2204 (U.S. and Canada) or 01-800-926-3020 (Mexico)

DYNEX is a trademark of Best Buy and its affiliated companies.

Registered in some countries.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave. South, Rich_eld, MN 55423 U.S.A.

© 2015 Best Buy. All rights reserved.

Made in China.

V3 ENGLISH 15-0776