



QUICK SETUP GUIDE

1.7 Liter Temperature Control Electric Kettle

NS-EKB17SS0

IMPORTANT SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed, including the following:
- 1 Read all instructions.
 - 2 Do not touch hot surfaces. Use handles or the buttons.
 - 3 To protect against fire, electric shock, and injury to persons, do not immerse cord, plug, base, or your kettle in water or other liquid.
 - 4 Close supervision is necessary when using your kettle by or near children.
 - 5 Unplug your kettle from the power outlet when not in use and before cleaning. Let it cool before putting on or taking off parts and before cleaning your kettle.
 - 6 Do not operate your kettle with a damaged cord or plug or after your kettle malfunctions or has been damaged in any manner. Return your kettle to the nearest authorized service facility for examination, repair, or adjustment.
 - 7 The use of accessory attachments not recommended by your kettle's manufacturer may result in fire, electric shock, or injury to persons.
 - 8 Do not use outdoors.
 - 9 Do not let the cord hang over the edge of a table or counter or let it touch hot surfaces.

Before using your new product, please read these instructions to prevent any damage.

 
- 10 Do not place your kettle on or near a hot gas or electric burner or in a heated oven.
- 11 Do not use your kettle for other than its intended use.
- 12 Do not attempt to modify or extend the power cord.
- 13 Do not handle the plug with wet hands. This could result in an electric shock.
- 14 Unplug the power cord by holding the plug, never by pulling the cord.
- 15 Scalding may occur if the lid is removed during the brewing cycle.
- 16 The provided power cord is short to reduce the risk of becoming entangled in or tripping over the cord.
- 17 **WARNING:** You may use an extension cord if proper care is exercised.
- 18 If you use an extension cord, make sure that:
 - The marked electrical rating of the extension cord is at least as great as the electrical rating of your kettle.
 - The extension cord is not draped over a counter or table top where children can pull it or trip over it.
- 19 Should you accidentally allow the kettle to operate without water, the boil-dry protection will automatically switch it off. If this should occur, allow the kettle to cool before filling with cold water and re-boiling.
- 20 This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- 21 This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.
- 22 To disconnect, turn any control to "off," then remove plug from wall outlet.
- 23 Household Use Only
- 24 If the SUPPLY CORD is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 25 **WARNING:** Be careful to avoid any spillage on the connector during cleaning, filling or pouring. Always follow the cleaning instruction to clean your appliance;- Unplug the appliance.- Do not clean the appliance while hot
- 26 **WARNING:** Risks of injuries if you don t use this appliance correctly.
- 27 **WARNING:** The heating element surface is subjected to residual heat after use.
- 28 This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact an electrician to have a polarized outlet installed. Do not attempt to modify the plug.

- Additional safety concerns**
- 1 Before connecting your kettle to the power outlet, make sure that the voltage indicated on the bottom of your kettle and base corresponds with the voltage in your home. If this is not the case, contact your dealer and do not use your kettle.
 - 2 The attached base must not be used for any purpose other than its intended use.
 - 3 Even though boil-dry protection is built into your kettle, we recommend that you do not operate your kettle without water to avoid damaging the heat elements.
 - 4 If you try to operate your kettle without water, the boil-dry protection automatically switches it off. If this should occur, let your kettle cool before filling it with cold water.
 - 5 To prevent injury or damage from an overturned kettle, make sure that your kettle is used on a firm and flat surface where children cannot touch it.
 - 6 Always make sure that you pour boiling water slowly and carefully without tipping your kettle too fast.
 - 7 Be careful when opening the lid for refilling if your kettle is hot.
 - 8 Use the handle to avoid touching the hot surface of your kettle.
 - 9 Use extreme caution when moving your kettle if it contains hot water.
 - 10 Your kettle is not a toy. Do not let the children play with it.
 - 11 Avoid contacting steam from the spout when water is boiling or just after your kettle has switched off. Do not remove the lid too soon.
 - 12 Unplug your kettle from the power outlet when not in use and before cleaning. Let it cool before putting on or taking off parts and before cleaning your kettle.
 - 13 Always make sure that the lid is closed and that you do not lift it while the water is boiling. Scalding may occur if the lid is removed during use.
 - 14 Do not move your kettle while it is on.
 - 15 Only use your kettle with the provided base.
 - 16 If your kettle is overfilled, boiling water may be ejected.
 - 17 Your kettle is intended to be used in household and similar environments.

SAVE THESE INSTRUCTIONS

- PACKAGE CONTENTS**
- 1.7 L (1.8 qt) temperature control electric kettle
 - Base and power cord
 - Quick Setup Guide

- FEATURES**
- Six preset options let you select the best temperature for your drink
 - Stylish stainless steel finish offers durability
 - Keep warm setting keeps water warm until you're ready for it
 - Cordless kettle with 360° base lets you pour water easily
 - Boil dry protection and auto-shutoff prevents your kettle from boiling dry
 - 1.7 L capacity heats enough water for everyone
 - Concealed heating element eliminates buildup to last longer

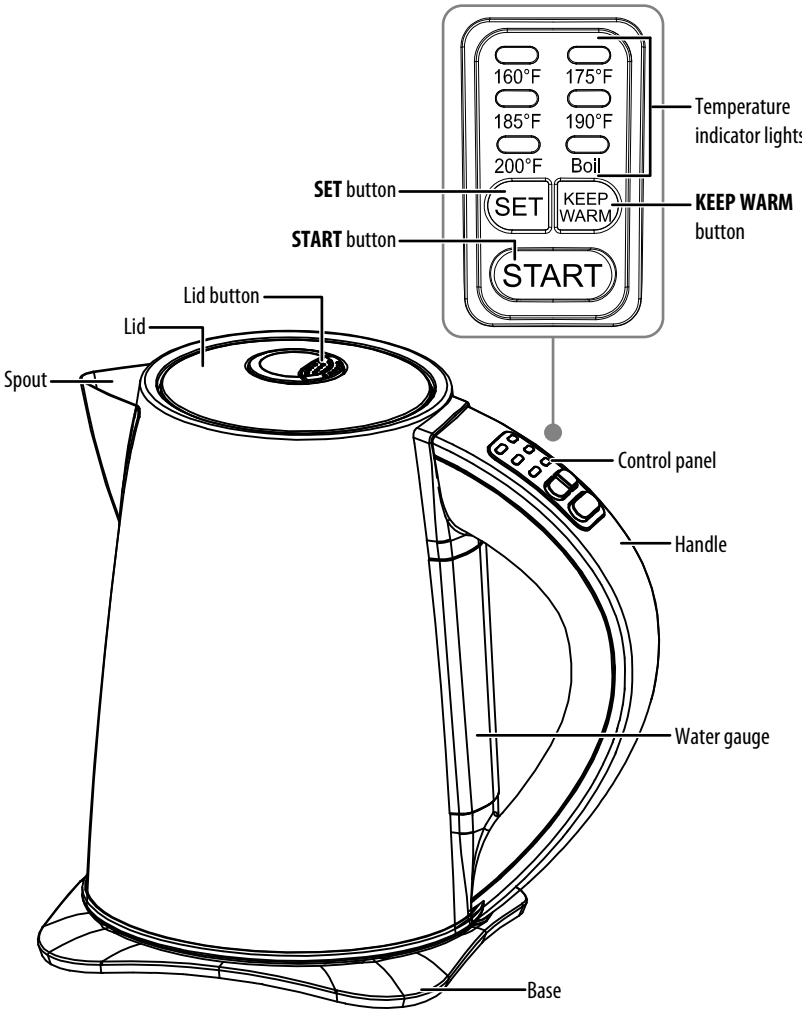


FILLING YOUR ELECTRIC KETTLE

Notes:

- Before using your electric kettle for the first time, clean your kettle by boiling two full kettles of water, then discarding the water.
- Never fill the kettle with any liquid other than water.

 - 1 Place the base on a flat, heat resistant surface, as close as possible to a power outlet.
- 2 Remove the kettle from the base, then open the lid by pushing the lid button on the recessed handle on the lid.
- 3 Fill with the desired amount of water.

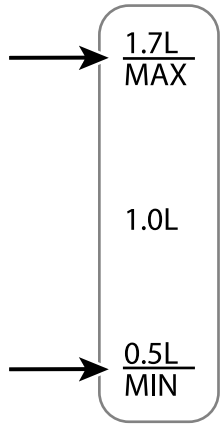

Notes:

- Always fill the kettle between the minimum (.5 qt (.5 L)) and maximum (1.7 L (1.8 qt)) marks. Too little water results in the kettle turning off before the water has boiled. Too much water results in boiling water ejecting.
- Make sure that the lid is firmly in place before connecting the power cord to the outlet.

- 4 Close the lid. Place the kettle on the base, making sure that the kettle contacts the base completely.

FUNCTION BUTTONS

This is an automatic electronic control kettle. It can boil water to the set temperature and keep it warm. The function buttons on the handle include:

 
- **START** button
- **SET** button
- **KEEP WARM** button

Indicator LEDs include:

- **START** indicator light
- **KEEP WARM** indicator light

USING YOUR ELECTRIC KETTLE

- 1 Plug in the kettle.
- 2 Fill to the level you want, then put the kettle on the base.
- 3 Press the **START** button. The START and **Boil** indicators light.

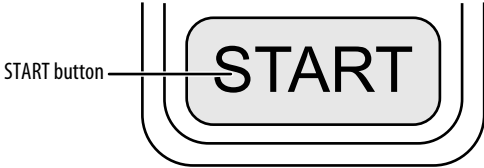

- 4 Press the **SET** button repeatedly to select your preferred temperature.
- 5 After the water is heated to the selected temperature, press the **KEEP WARM** button to keep the water at that temperature. The KEEP WARM indicator lights. Press **KEEP WARM** again to cancel.
Note: The keep warm function is automatically on when you select **Boil**.
- 6 To turn off the kettle, press **START**.

Boil-dry protection

If you try to operate the kettle without water, the boil-dry protection automatically turns it off. If this should occur, let your kettle cool before filling it with cold water.

CLEANING AND MAINTAINING YOUR ELECTRIC KETTLE

- Always unplug the power cord and let your kettle cool down completely before cleaning.
- Never immerse your kettle, cord, or base in water, or let moisture come in contact with these parts.
- Do not use chemicals, steel wool, or abrasive cleaners to clean the outside of your kettle. These substances can scratch the surface or fade the color.

Removing mineral deposits

- 1 Fill your kettle with three cups of white vinegar and the remainder with water and let it stand overnight. **Do not boil.**
- 2 Empty the solution from your kettle. Remove remaining stains with a damp cloth.
- 3 Boil two full kettles of water, then discard the water.

Cleaning the outside

Wipe the outside of your kettle with a damp cloth or sponge.

STORING YOUR ELECTRIC KETTLE

Unplug the power cord and place your kettle on the base when it is not in use.

TROUBLESHOOTING

Do not try to repair your kettle yourself. Doing so invalidates the warranty. If problems persist after you try the solutions below, contact Best Buy technical support.

The kettle and indicator light do not work when the power switch is turned on.

- Make sure that your kettle is seated properly on the base and that the base is connected to a functioning electrical outlet.

The water is boiling, but the power switch and indicator lights are still on.

- The auto-shut off function does not operate properly if the lid is not completely closed. Let the kettle cool, then make sure that the lid is properly locked into place.

The kettle will not turn on.

- Make sure that the kettle is seated properly on the base and that the base is connected to a functioning power outlet.
- Water or debris on the bottom of your kettle or on the base may interfere with the functioning of your kettle. Make sure that the bottom of your kettle and the base are dry and free of debris.

There are mineral deposits inside the kettle.

- Before using your electric kettle for the first time, clean your kettle by boiling two full kettles of water, then discarding the water.
- A certain amount of scale build-up is normal after long periods of use and is caused by minerals contained in hard water. The best way to prevent mineral deposits is to always use distilled water in the kettle.
- To remove deposits, try filling your kettle with water and a few slices of lemon, then boil. If this does not work, see “Removing mineral deposits.”

SPECIFICATIONS

- **Dimensions (H×W×D):** 9.6 × 6.5 × 9 in. (24.4 × 16.5 × 22.8 cm)
- **Weight:** 2.7 lbs. (1.21 kg)
- **Capacity:** 1.7 L (1.8 qt)
- **Power requirements:** 1500 W
- **Power cord length:** 2.3-2.5 ft. (0.7-0.75 m)

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA

For customer support, call 1-877-467-4289 (U.S. and Canada) www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2021 Best Buy. All rights reserved.