



Recommended Technique – Sonic Brushing

Insert brush tip into handle. Apply toothpaste.
Insert brush tip into mouth, press Sonic button
and brush your teeth as you normally do.

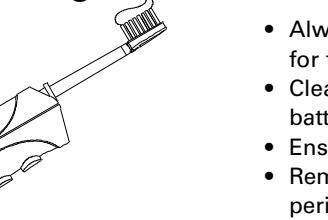

Rinsing Using Water Stream

Press and hold the Pause button and place brush in mouth, slightly closing lips to avoid splashing. Press the Power button, release the Pause button, and rinse along the gum line as shown. Slightly close lips as shown to avoid splashing.

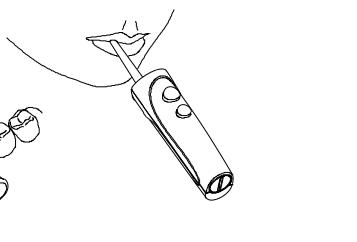


Release the Pause button and rinse as shown along the gum line.




When finished, turn off the unit by pressing the Power button on the base and empty the water tank. Be sure to also turn off the Sonic function by pressing the Sonic button on the handle.

Subgingival Tip

Designed for close-in comfort, the rubber tip delivers a concentrated jet stream of water or antibacterial solution that reaches deep into periodontal pockets.

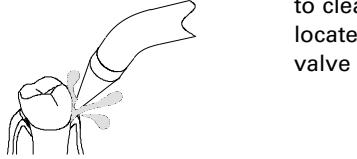

Note: This tip is NOT intended for general use, and MUST be used on low pressure setting only. Place the soft tip against a tooth and gently place the tip slightly under the gum line into the pocket. Clean by gently following the gum line, inserting the tip between teeth. Do all areas of the mouth.

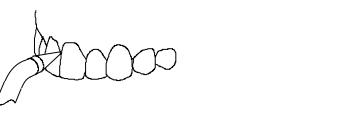


Orthodontic Cleaning

Using the water jet tip, follow the recommended technique described on page 7 to clean around orthodontic brackets one tooth at a time.



Using Mouthwash and Other Solutions

Your Interplak System can be used with mouthwash or other antibacterial solutions. Ask your dentist to recommend an appropriate product for you.

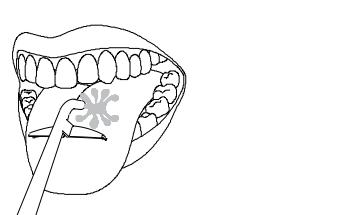

Important Note: Use of some solutions can shorten the life of your unit if it is not cleaned properly. You must thoroughly rinse out the unit after using any solution. Fill the tank with warm water to the lowest fill line, then aim the tip into the sink and run until the tank is empty.

Instructions for Using Battery





 




- Always purchase the correct size and grade of battery most suitable for the intended use.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the battery is installed correctly with regard to polarity (+ and -).
- Remove battery from equipment that is not to be used for an extended period of time.
- Remove used battery promptly.

Battery Disposal

When replacing the battery, make sure you dispose of the old battery in accordance with applicable regulations. It should be disposed of in a location specifically designated for that purpose so it can be recycled safely and without posing any risk to the environment. Do not burn or bury it.

Cleaning and Care of Your Interplak® All-in-One Sonic Water Jet System

If the valve on the water tank begins to leak after repeated use, it is simply time to clean the valve and valve seat. Using a jet tip, push out the valve body – located inside the bottom of the water tank. Use the tip to clean both valve and valve seat, then replace the valve.

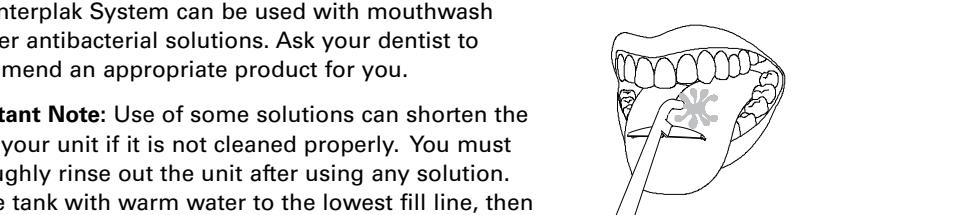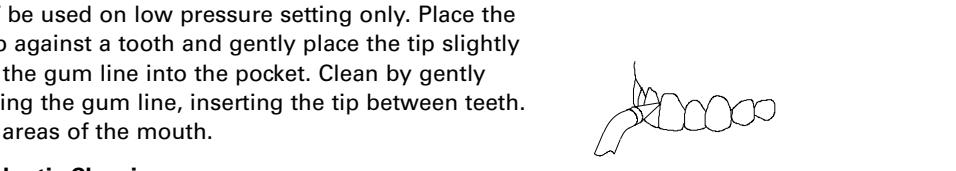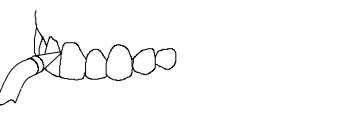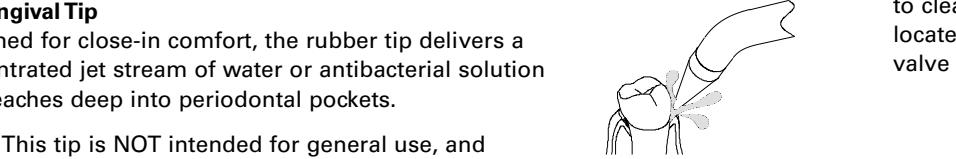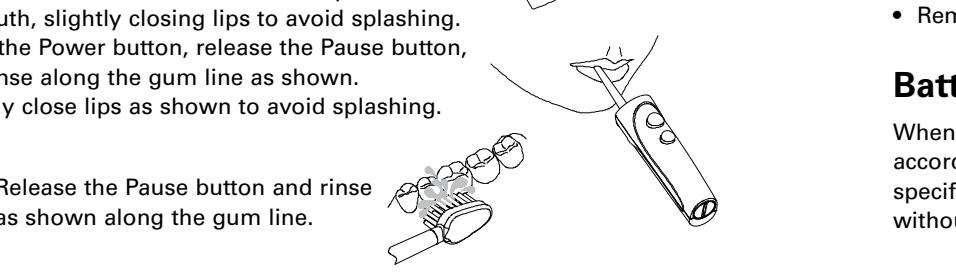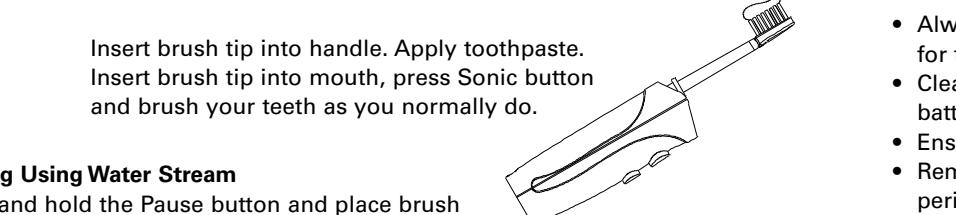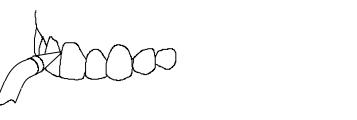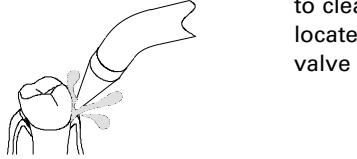

Troubleshooting Guide

Problem	Cause(s)	Solution(s)
Sonic vibration not working	1. Dead battery 2. Dirty contact 3. Battery cap is loose 4. Sonic ON/OFF button on handle is in OFF position	1. Replace battery 2. Clean contact with cotton swab 3. Turn the battery cap to Closed position 4. Press Sonic ON/OFF button to ON
Tank leaks	The valve and valve seat in water tank need to be cleaned	Follow cleaning and care instructions on page 9
Inadequate pressure	1. Tank is not positioned properly 2. Tip is clogged with debris 3. Pressure control is on low setting	1. Reposition the tank and push down firmly 2. Try a different tip; clean or replace tip that is clogged 3. Adjust pressure control to higher setting
Main unit doesn't start	No power to the unit	Check the outlet and make sure it is functioning; check electrical reset buttons and wall switches
Tip doesn't pull off	Release button located on top of handle	Press release button and pull tip off

Still have questions? Call 1-800-334-4031

To order replacements parts, call 1-800-334-4031

Replacement tips available for \$8.99, including shipping and handling.

Replacement tip pack includes:

- 2 full size brush tips
- 1 gum massage tip
- 1 subgingival tip
- 1 jet tip

Please register this product at: www.conair.com/registration

For more information regarding this and other Interplak® by Conair products, visit www.interplak.com or call 1-800-334-4031

Recommended Tip Replacement Intervals

Full Size Brush Tip	Gum Massage Tip	Subgingival Tip
> Replace every 3 months		

Jet Tip	Tongue Cleaner Tip
> Replace every 6 months	

Full Size Brush Tip	Gum Massage Tip	Subgingival Tip
> Replace every 3 months		

Jet Tip	Tongue Cleaner Tip
> Replace every 6 months	

Limited 2-Year Warranty

Conair will repair or replace (at our option) your unit free of charge for 2 months from the date of purchase if the appliance is defective in workmanship or materials. To obtain service under this warranty, return the defective product to the service center listed below, together with your purchase receipt and \$30.00 for postage and handling.

California residents need only provide proof of purchase and should call 1-800-334-4031 for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITY, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS WARRANTY. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Service Center:

Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307



Instruction Manual • Model SW/J2

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

Questions or comments? 1-800-334-4031

www.interplak.com

Welcome to Your All-in-One Sonic Water Jet System

This innovative new all-in-one system from Conair enhances oral hygiene while significantly contributing to healthy gums when used as part of a responsible oral health management program.

The Interplak Difference

The Interplak® All-in-One Sonic Water Jet System by Conair is designed to help you improve and maintain the highest level of oral hygiene quickly and easily, right at home. This integrated system gently and effectively cleans and flushes food debris from hard-to-reach places – around orthodontic appliances, fixed and removable bridgework, crowns, splints and implants – and provides valuable gum massage with every use.

Benefits of Sonic Technology

Your Interplak® All-in-One Sonic Water Jet System by Conair is the only water jet with sonic vibrating action. All-in-one sonic technology provides enhanced brushing, flossing and massage, all in one system. The simultaneous sonic vibration and water pulsation greatly expand the performance of the dental water jet, offering a unique and complete cleaning experience and providing the ultimate in oral care.

IMPORTANT SAFEGUARDS

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

DANGER

To reduce the risk of electrocution:

1. Always unplug after use. This sonic water jet system should never be left unattended when plugged in.
2. Do not place or store the unit where it can fall or be pulled into the tub, sink or toilet.
3. Do not immerse unit in water or any other liquid.
4. **Do not reach for a unit that has fallen into water. Unplug immediately.**
5. Do not reach into water under any circumstance. Have the unit checked by an Authorized Service Center after it has been immersed in water.

WARNING

To reduce the risk of burns, electrocution, fire, or injury:

1. Do not use while bathing.
2. Do not handle with wet hands.
3. The unit is designed for use with 120V AC.
4. **Never operate the unit if it has a damaged power cord, if it is not working properly, if it has been dropped or damaged or if it has been immersed in liquids.**
5. Do not excessively bend or pull the power cord. Unplug the unit by grasping the plug – not the power cord.
6. Keep the power cord away from heated surfaces.
7. Close supervision is necessary when this product is used on or by children or disabled persons.
8. Use this product only for its intended use as described in this manual or recommended by your dental professional.
9. Do not direct water under the tongue, into the ear, nose or other delicate areas. This product can produce pressures that can damage sensitive areas. See Recommended Technique for correct usage.
10. Never block the air openings of the sonic water jet or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
11. Never drop or insert any object into any opening or into the hose.
12. Fill reservoir with lukewarm water only unless otherwise specified by your dental professional. Do not overfill.
13. Only use attachments recommended by Interplak.
14. Never use while drowsy.
15. Never operate where oxygen or aerosol sprays are being used.
16. For household use only. Do not use outdoors.
17. This appliance has a polarized plug (one blade is larger than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
16. This appliance is not a toy. Keep away from children.

SAVE THESE INSTRUCTIONS

Interplak® All-in-One Sonic Water Jet System Diagram

Battery Installation

Follow these instructions to install battery.

Use a coin to turn bottom cap

counterclockwise to Open

position; remove cap.

Fill water tank

Remove the water tank from

the base and fill with lukewarm

water. Put the tank back on base and

press down firmly to seat it.

Flip water tank over

for compact storage

Removable Water Tank

Tip

Attachment

Release Button

Pause Button

Sonic

ON/OFF Button

Hose

Power Button

Pressure Control

Storage Drawer

Up

Close

Open

Press to turn

Install one AAA

battery (included)

with the +

facing up. Replace the

cap and turn clockwise

to Closed position.

Inserting and Removing Tips

Select the desired tip and push it firmly into place on the handle. To remove, press release button and pull off tip.

Priming the Water Jet

On first use, or if the unit has not been used for a while, the water jet needs to be primed with water.

Fill the water tank to the

max fill line (800ml)

and turn the pressure dial to the

maximum setting.

Point the water jet attachment

towards the sink and turn the

unit on. Within 1 minute,

water will begin to flow

through the attachment.

Reduce the pressure to the

lowest setting (or your desired

level) before use.

Getting Started

Interplak® All-in-One

Sonic Water Jet System Diagram

Getting Started

Battery Installation

Follow these instructions to install battery.

Use a coin to turn bottom cap

counterclockwise to Open

position; remove cap.

Fill water tank

Remove the water tank from

the base and fill with lukewarm

water. Put the tank back on base and

press down firmly to seat it.

Flip water tank over

for compact storage

Removable Water Tank

Tip

Attachment

Release Button

Pause Button

Sonic

ON/OFF Button

Hose

Power Button

Pressure Control

Storage Drawer

Up

Close

Open

Press to turn

Install one AAA

battery (included)

with the +

facing up. Replace the

cap and turn clockwise

to Closed position.

Inserting and Removing Tips

Select the desired tip and push it firmly into place on the handle. To remove, press release button and pull off tip.

Priming the Water Jet

On first use, or if the unit has not been used for a while, the water jet needs to be primed with water.

Fill the water tank to the

max fill line (800ml)

and turn the pressure dial to the

maximum setting.

Point the water jet attachment

towards the sink and turn the

unit on. Within 1 minute,

 
water will begin to flow

through the attachment.

Reduce the pressure to the

lowest setting (or your desired


level) before use.



Flip water tank over

for compact storage

 Removable Water Tank



Tip

Attachment

Release Button

Pause Button

Sonic

ON/OFF Button

Hose

Power Button

Pressure Control

Storage Drawer

Up

Close

Open

Press to turn

Install one AAA

battery (included)

with the +

facing up. Replace the

cap and turn clockwise

to Closed position.

Inserting and Removing Tips

Select the desired tip and push it firmly into place on the handle. To remove, press release button and pull off tip.

Priming the Water Jet

On first use, or if the unit has not been used for a while, the water jet needs to be primed with water.

Fill the water tank to the

max fill line (800ml)

and turn the pressure dial to the

maximum setting.

Point the water jet attachment

towards the sink and turn the

unit on. Within 1 minute,

 
water will begin to flow

through the attachment.

Reduce the pressure to the

lowest setting (or your desired

level) before use.



Flip water tank over

for compact storage

Removable Water Tank



Tip

Attachment

Release Button

Pause Button

Sonic

ON/OFF Button

Hose

Power Button

Pressure Control

Storage Drawer

Up

Close

Open

Press to turn

Install one AAA

battery (included)

with the +

facing up. Replace the