

SIMPLI™
HOME


Wyndent Hall™
HOME DECOR

brooklyn + max™

ASHBURY / LEYTON / GRANVILLE

WINGBACK CLUB CHAIR & OTTOMAN

MODEL # AXCCHR-001-GL

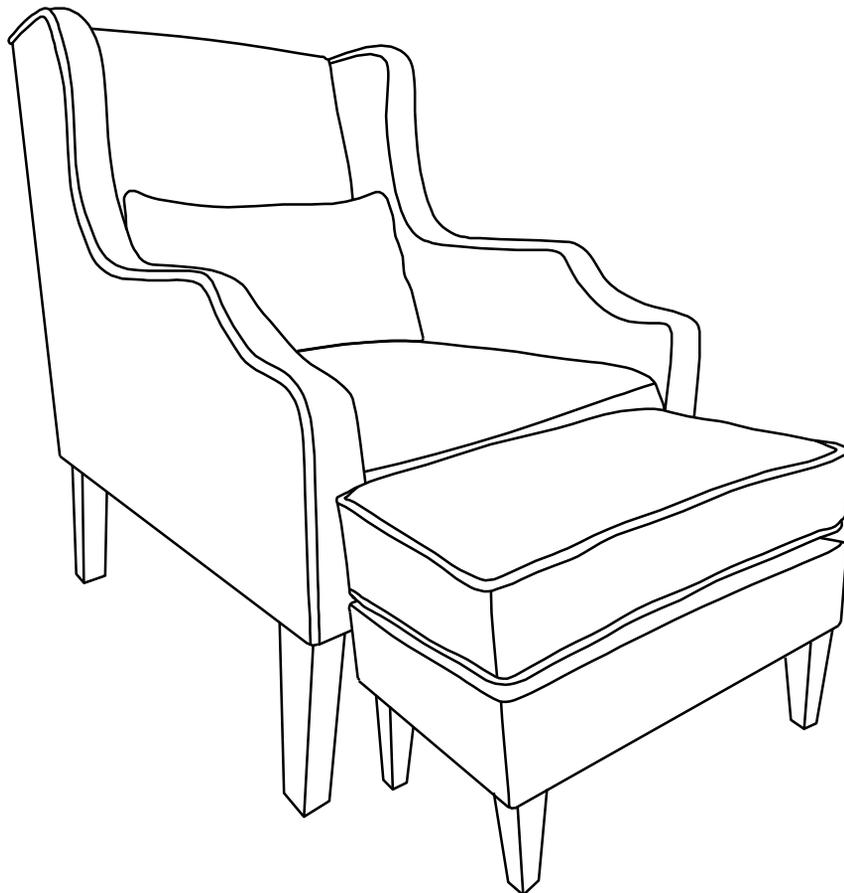



**FOR REPLACEMENT PARTS OR HELP WITH
ASSEMBLY PLEASE CONTACT US AT:**

simpli-home.com/customer-support

**PLEASE ENSURE TO HAVE THE MODEL #
FROM THE PACKAGING OR INSTRUCTION BOOKLET**

**TO RETURN THE PRODUCT:
PLEASE CONTACT THE RETAILER
WHERE THE ITEM WAS PURCHASED FROM**



**ENTER
TO WIN**

**Upload an image of our furniture
in your home with a short review
to our facebook page for a chance to**

**Win up to \$3000 of
Simpli Home furniture!!!**

www.facebook.com/simplihomefurnishings



IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

SAFETY INFORMATION

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets.

We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

May require 2 people for ease of assembly.

CARE and MAINTENANCE

Wipe regularly with clean water and a damp, clean, soft white cloth.

General cleaning can be done as needed with a mild detergent and water solution. Always rinse with clean water and dry.

For heavy soiling, dampen a soft white cloth or soft bristle brush. Use care as scrubbing can damage the surface.

More difficult stains can be treated, but this should be occasional, not daily, cleaning. ANY cleaning solution used must be removed with clean water and a clean white cloth. Cleaning residue left on the vinyl can cause it to dry out and crack, or affect the color.

DO NOT use any cleaners with corrosive ingredients (lye, acids or ammonia).

PRE-ASSEMBLY INFORMATION



PARTS DESCRIPTION

<p>1</p>  <p>CHAIR QTY 1</p>	<p>2</p>  <p>OTTOMAN QTY 1</p>	<p>3</p>  <p>FRONT CHAIR LEG QTY 2</p>
<p>4</p>  <p>BACK CHAIR LEG QTY 1</p>	<p>5</p>  <p>BACK CHAIR LEG QTY 1</p>	<p>6</p>  <p>OTTOMAN LEG QTY 4</p>

NEED HELP? For help with assembly or if you are missing a part,
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

PRE-ASSEMBLY INFORMATION

  
HARDWARE DESCRIPTION

<p>A</p>  <p>SHORT BOLT QTY 8</p>	<p>B</p>  <p>LONG BOLT QTY 8</p>	<p>C</p>  <p>FLAT WASHER QTY 16</p>
<p>D</p>  <p>LOCK WASHER QTY 16</p>	<p>E</p>  <p>ALLEN KEY QTY 1</p>	

NEED HELP? For help with assembly or if you are missing a part,
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

ASSEMBLY


STEP 1

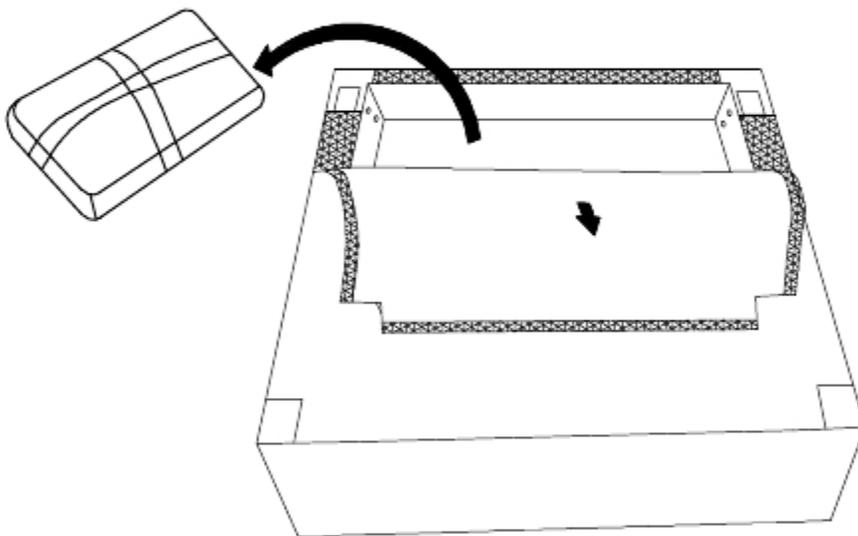

Place the Chair (1) on its back on a flat smooth surface. Remove the legs and hardware package from inside the non-woven fabric of the bottom of the Chair (1).

ASSEMBLY

STEP 2

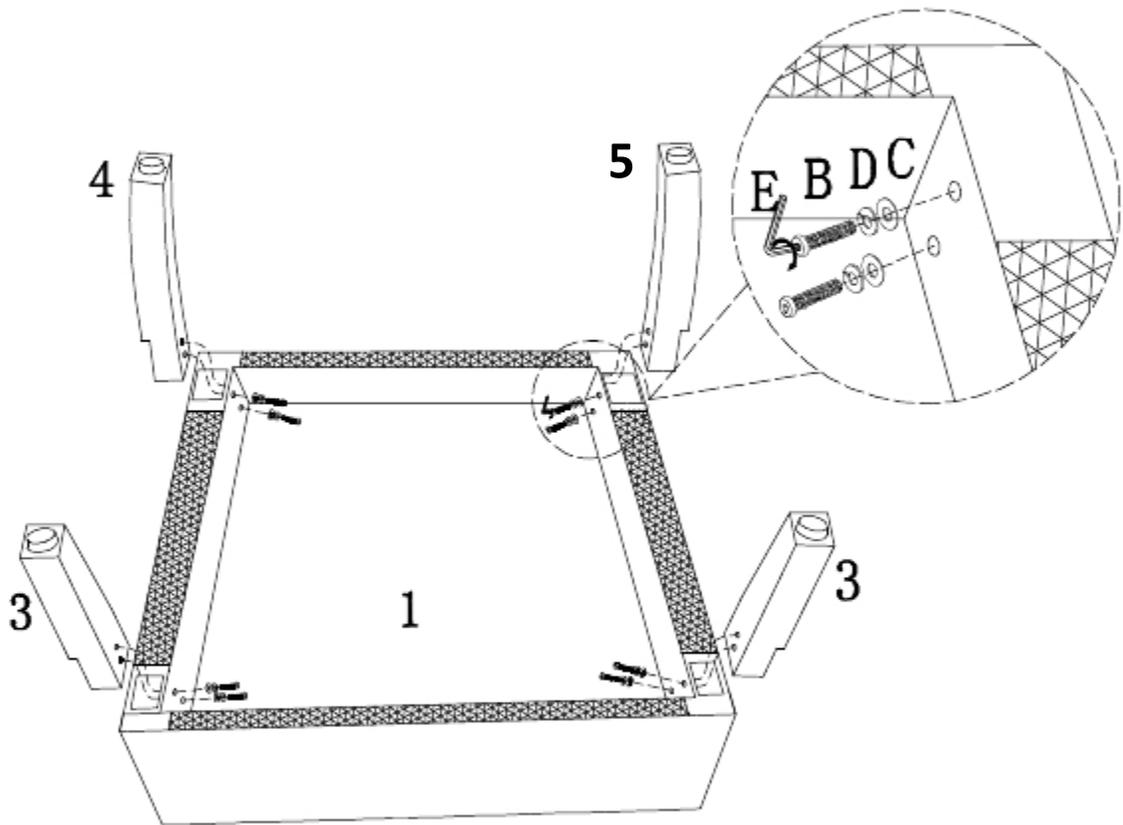


Attach Front Chair Legs (3) and Back Chair Legs (4 and 5) to Chair (1) with Long Bolts (B), Lock Washers (D) and Flat Washers (C).

Use Allen Key (E) to tighten.

ASSEMBLY


STEP 3

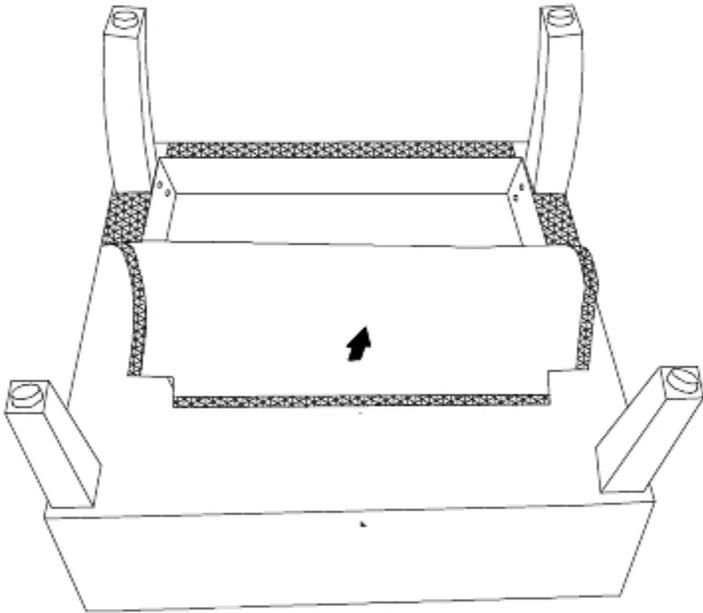

Place the non-woven fabric back on the bottom of the Chair (1).

ASSEMBLY


STEP 4

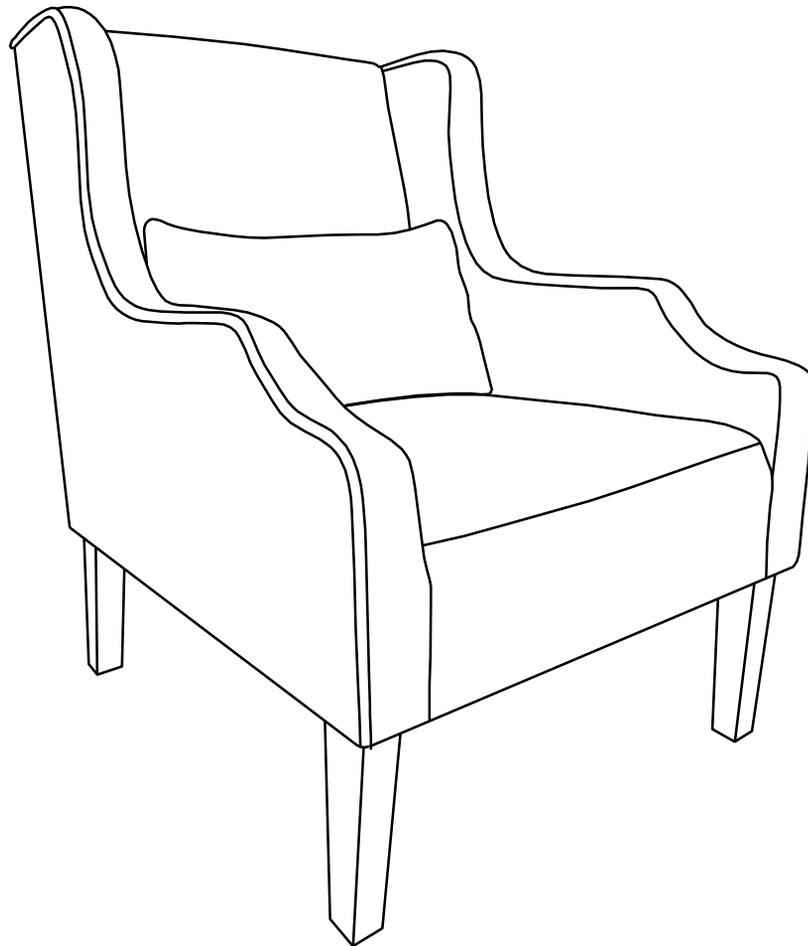

Turn Chair right side up.

ASSEMBLY


STEP 5

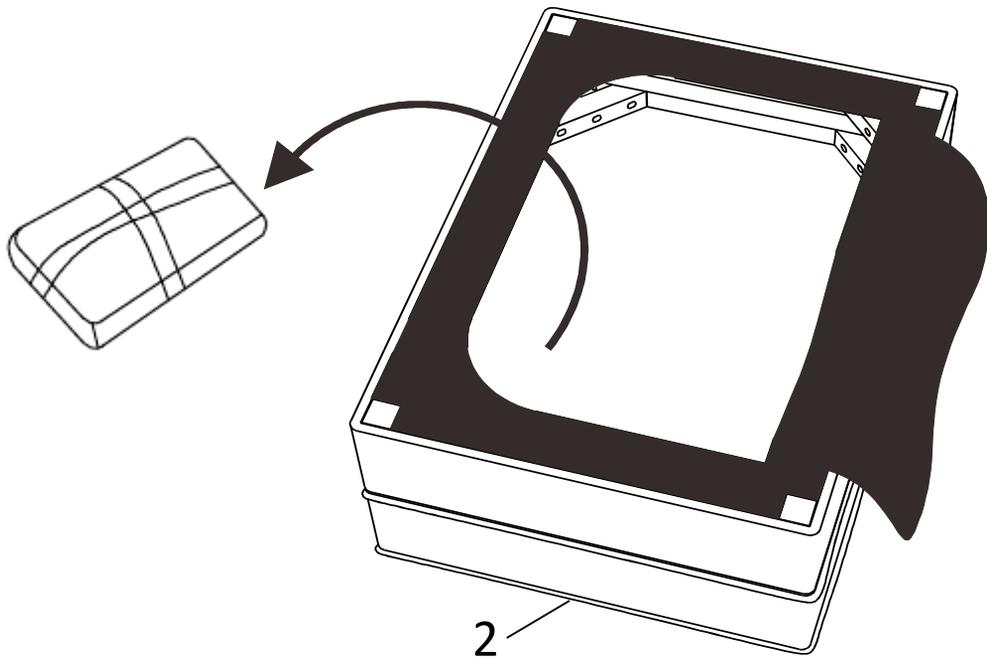

Place Ottoman (2) on its back on a flat smooth surface.
Remove the legs and hardware package from inside the non-woven fabric of the bottom of the Ottoman (2).

ASSEMBLY

STEP 6

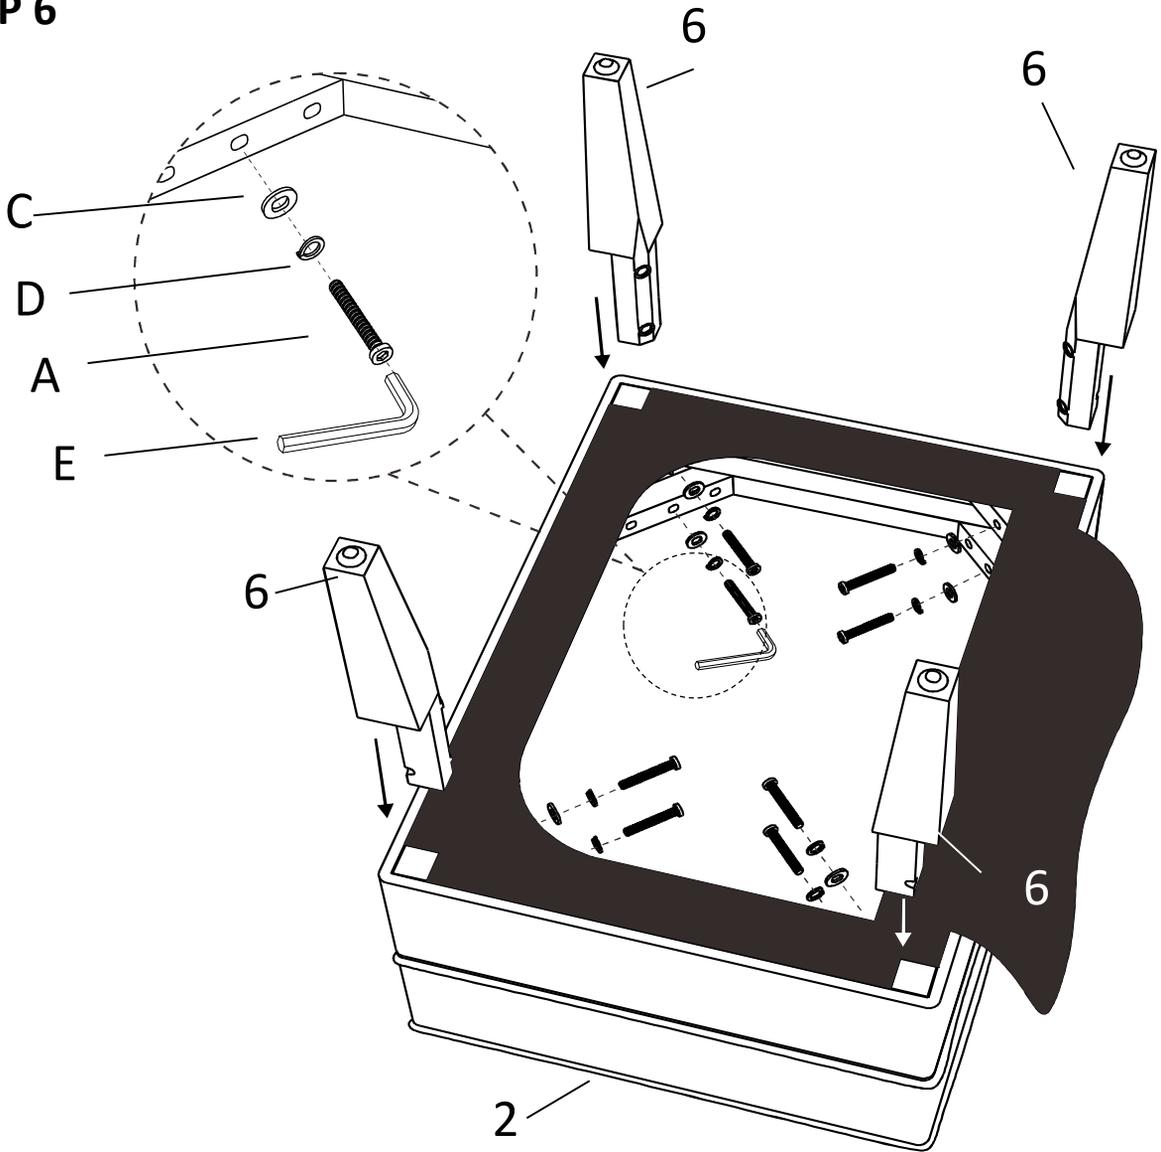


Attach the Ottoman Legs (6) with Short Bolts (A), Lock Washers (D) and Flat Washers (C).

Use Allen Key (E) to tighten.

ASSEMBLY

STEP 7

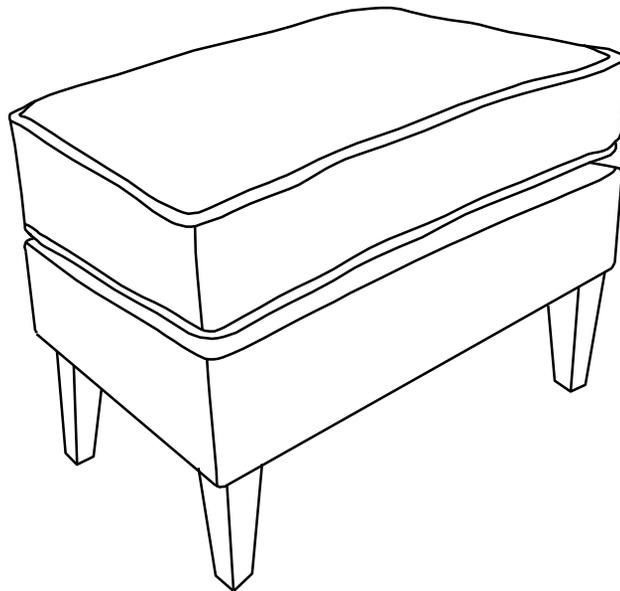

Turn Ottoman right side up.



WARRANTY

Thank you for purchasing a **Simpli Home – Wyndenhall – Brooklyn + Max** product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

In case of any malfunction of your product (failure, missing parts, etc.) please contact us at our toll free service line at 1-866-518-0120 ext. 262 from 9 am to 4 pm, Monday to Friday, Eastern Standard Time or by email at simpli-home.com/customer-support.

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.



Question, problems, missing parts?

Before returning your product

please email Customer Support at

simpli-home.com/customer-support

or call

Customer Service at 1-866-518-0120 ext. 262

Monday to Friday between 9 am – 4 pm EST

For more information visit us on our website

www.simpli-home.com

Like us on facebook

www.facebook.com/simplihomefurnishings