



# QUICK SETUP GUIDE

## RF-BTR315, Bluetooth Music Receiver

Wirelessly stream music from your iPhone, iPad, or other Bluetooth-enabled device to your home stereo or other audio device.


### PACKAGE CONTENTS

- Bluetooth Music Receiver
- AC/DC adapter
- Quick Setup Guide
- 6 ft. 3.5 mm stereo audio cable
- 3.5 mm jack to RCA stereo audio plug adapter

### FEATURES

- aptX® audio decoding: The highest Bluetooth stereo audio quality possible
- Supports Near Field Communication (NFC) for easy connection with compatible Bluetooth devices
- Optical digital audio output: The highest quality audio connection to your home stereo
- Analog stereo audio output: Easily connect to amplified speakers or any device with an audio input jack
- Wireless range up to 33 feet (10 m)
- Wall mount feature
- Remembers up to eight Bluetooth devices


**Note:** Music can be played from only one device at a time.

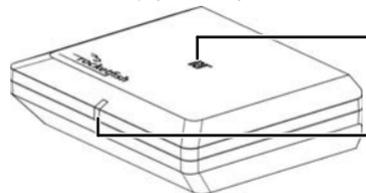

- NFC logo
- LED indicator
- Lights blue when paired and connected to your Bluetooth device.
  - Blinks blue when not connected to your Bluetooth device or in pairing mode.
  - Turns off when the receiver is turned off.

### SETTING UP YOUR BLUETOOTH MUSIC RECEIVER

#### Connecting to an output device

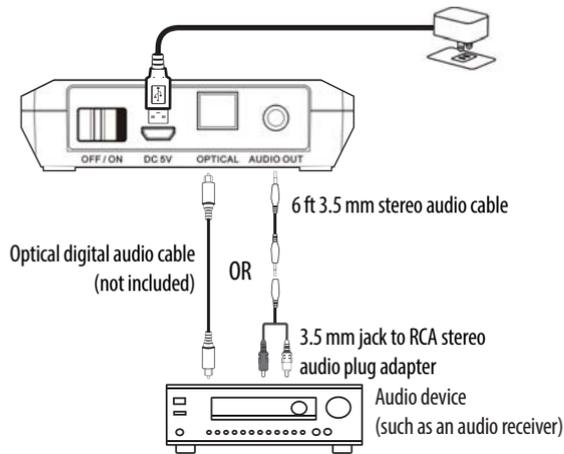

**You can choose either analog (good) or digital (best) cables to connect your Bluetooth Music Receiver, depending on the connections available on your home stereo system.**

#### Digital connection

Using an optical digital audio cable (not included), connect your home stereo system to the OPTICAL jack on your Bluetooth Music Receiver.

**OR**

#### Analog connection

Using the included 3.5 mm stereo audio cable, connect your home stereo system or other component to the **AUDIO OUT** jack on your Bluetooth Music Receiver.

**Note:** If your home stereo system does not have a 3.5 mm Audio In connector, use the included 3.5 mm jack to RCA stereo audio plug adapter.

#### Connecting power:

- 1 Plug the AC/DC adapter into the **DC 5V** jack on your Bluetooth Music Receiver.
- 2 Plug the AC/DC adapter into a wall power outlet and slide the power switch to ON. The LED indicator begins to blink blue to indicate that the unit is on and ready to be paired to your Bluetooth devices.

### PAIRING YOUR DEVICES

Before you can use your Bluetooth Music Receiver with a Bluetooth device, you need to pair the two. Your Bluetooth Music Receiver can connect to a Bluetooth-enabled device using the Bluetooth settings on your device or by touching your Bluetooth device to the Bluetooth Music Receiver using NFC.

#### To pair your devices using Bluetooth settings:

- 1 Make sure that a compatible Bluetooth device (like a music player or phone) is turned on and within 33 feet (10 meters) of your Bluetooth Music Receiver.
- 2 Turn on your Bluetooth Music Receiver by plugging in the AC/DC adapter and sliding the power switch to ON. The LED indicator blinks on and off slowly. Your Bluetooth Music Receiver is in pairing mode.
- 3 Turn on Bluetooth on your Bluetooth device, then set it to pairing mode. For more information, see the documentation that came with your Bluetooth device.
- 4 On the Bluetooth device, select **RF-BTR315** in the list of found devices.
- 5 On the Bluetooth device, enter 0000 as the PIN, if prompted. The LED indicator lights blue on the Bluetooth Music Receiver.
- 6 If you are pairing with a computer, make sure that your Bluetooth Music Receiver is selected as the computer's default playback device. See the computer's documentation for instructions.

#### To pair your devices using NFC Fast connection:

**Note:** Check your Bluetooth device to see if it is compatible with NFC. If it is not, use the steps for pairing your device using Bluetooth settings.

- 1 Turn on your Bluetooth Music Receiver by plugging in the AC/DC adapter and sliding the power switch to ON. The LED indicator blinks on and off slowly. Your Bluetooth Music Receiver is in pairing mode.
- 2 Turn on Bluetooth on your Bluetooth device.
- 3 Turn on the NFC function (see documentation that came with your NFC-enabled device).
- 4 Touch your Smartphone or tablet to the NFC logo (  ) on the top of your Bluetooth Music Receiver, to pair with your Bluetooth Music Receiver. The LED indicator on the Bluetooth Music Receiver lights blue.
- 5 When your Smartphone or tablet tells you that the Bluetooth Music Receiver is connected, you can begin playback.
- 6 To disconnect, touch your Smartphone or tablet to your Bluetooth Music Receiver again (see documentation that came with your NFC-enabled device).

#### General Pairing Notes:

- Some devices, such as an iPhone, connect immediately after pairing so the LED on the Bluetooth Music Receiver remains on. Other devices, such as notebook computers, may ask you if you wish to connect. In this instance, the LED continues to blink until a connection is established.
- Your Bluetooth Music Receiver saves pairing information for up to eight devices. However, it can only be connected to and play content from one device at a time.
- When you turn on your Bluetooth Music Receiver, it automatically connects to the last connected device if that device is in range. To connect to a different paired device, you have to turn off Bluetooth or unpair from the currently paired device and manually connect to the other paired one.
- The auto connect feature may not work with some Bluetooth devices. If this occurs, use your Bluetooth device settings menu to manually select the **RF-BTR315** from the list of found Bluetooth devices.

## Reconnecting your device:

When your Bluetooth Music Receiver is not paired to a device, the LED indicator will slowly blink on and off.

Your receiver loses the Bluetooth connection if you...	To reconnect...
Turn off your receiver	Turn on your Bluetooth Music Receiver. Your Bluetooth Music Receiver searches for the last connected Bluetooth device and reconnects.
Move the Bluetooth device out of range	Make sure that your Bluetooth device is within 33 feet (10 meters) of your Bluetooth Music Receiver.
Turn off your Bluetooth device	Turn on your Bluetooth device, then make sure Bluetooth is on.
Turn off Bluetooth on your Bluetooth device	Turn on Bluetooth on your Bluetooth device.
Connect your Bluetooth device to another Bluetooth device	Disconnect your Bluetooth device from the other Bluetooth device, then set your device to pairing mode. Select <b>RF-BTR315</b> on your Bluetooth device.

## LED status

INDICATION	DESCRIPTION
Solid blue	Paired and connected to your Bluetooth device.
Blinks blue	Not connected to your Bluetooth device or in pairing mode.
Off	Turns off when the receiver is turned off.

## TROUBLESHOOTING

PROBLEM:	SOLUTION:
No power	<ul style="list-style-type: none"><li>Make sure that your Bluetooth Music Receiver power cord is connected to your Bluetooth Music Receiver and a power outlet.</li><li>Make sure your Bluetooth Music Receiver is turned on.</li></ul>
No sound or low volume	<ul style="list-style-type: none"><li>Make sure that your Bluetooth device turned on, Bluetooth is turned on, and <b>RF-BTR315</b> is selected.</li><li>Turn up the volume on your audio device connected to your Bluetooth Music Receiver.</li><li>Turn up the volume on your Bluetooth device.</li><li>Make sure that your Bluetooth device is not muted.</li><li>Make sure that the cable connections are secure.</li><li>Make sure that your Bluetooth Music Receiver is not paired to another Bluetooth device.</li><li>Make sure that your Bluetooth device is not paired to another Bluetooth device.</li></ul>
Cannot establish Bluetooth connection	<ul style="list-style-type: none"><li>Shorten the distance between your Bluetooth Music Receiver and your Bluetooth device.</li><li>Turn your devices off, then on. Re-pair your Bluetooth Music Receiver and your Bluetooth device.</li><li>Make sure that your Bluetooth Music Receiver is not paired to another Bluetooth device.</li><li>Make sure that your Bluetooth Music Receiver and Bluetooth device are both in pairing mode.</li><li>Make sure that your Bluetooth device is not connected to any other device.</li><li>Make sure that you have selected <b>RF-BTR315</b> on your Bluetooth device.</li></ul>

PROBLEM:	SOLUTION:
My Bluetooth device keeps unpairing	<ul style="list-style-type: none"><li>Shorten the distance between your Bluetooth Music Receiver and your Bluetooth device.</li><li>If battery on your Bluetooth device is low, recharge the battery.</li></ul>
My Bluetooth Music Receiver does not appear on my Bluetooth device	<ul style="list-style-type: none"><li>Shorten the distance between your Bluetooth Music and your Bluetooth device.</li><li>Put your Bluetooth Music Receiver into pairing mode, then refresh your list of Bluetooth devices. For more information, see the documentation that came with your Bluetooth device.</li></ul>
NFC pairing does not work	<ul style="list-style-type: none"><li>Make sure your device has the NFC feature. See the device's documentation for instructions.</li><li>Make sure your Bluetooth device is turned on and Bluetooth is turned on.</li><li>Make sure your NFC device supports Bluetooth pairing with NFC. Some devices have NFC but may not support Bluetooth pairing with NFC.</li><li>Make sure that your Bluetooth device is turned on and the NFC function is turned on.</li><li>When connecting, touch your Bluetooth device to the NFC logo (N) on the top of your Bluetooth Music Receiver. When connected, your Bluetooth device may sound to indication that it is paired.</li></ul>

## LEGAL NOTICES

### FCC caution:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### FCC statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful

interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### RSS-Gen & RSS-210 statement:

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

### RSS-102 statement:

This equipment complies with Industry Canada radiation exposure limits set forth for an uncontrolled environment.

Cet équipement est conforme à l'exposition aux rayonnements Industrie Canada limites établies pour un environnement non contrôlé

## ONE-YEAR LIMITED WARRANTY

Visit [www.rocketfishproducts.com](http://www.rocketfishproducts.com) for details.

## CONTACT ROCKETFISH:

For customer service call 1-800-620-2790

[www.rocketfishproducts.com](http://www.rocketfishproducts.com)

ROCKETFISH is a trademark of Best Buy and its affiliated companies

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2016 Best Buy. All rights reserved.

Made in China