

10-Watt Wireless Charging Pad

Quick Setup Guide

BE-MQP10W22K /
BE-MQP10W22K-C

BEST BUY.
essentials™

Before using your new product, please read these instructions to prevent any damage.

Package contents

- 10 W Qi Certified Wireless Charging Pad
- 4 ft. (1.2 m) charging cable
- *Quick Setup Guide*

 
Compatibility

Any Qi-enabled devices up to 10 W, including smartphones, headphones, and smart watches. This includes the latest iPhone, Samsung Galaxy, and Note devices.

Features

- Compatible with Apple, Samsung, and other Qi-compatible devices
- Charges devices wirelessly with a 10 W max output
- Shows your device is positioned correctly with an LED indicator
- Keeps your charger and device in place with non-slip rubber pads
- Includes a micro USB cable to plug into your existing power adapter or computer
- Built and backed by Best Buy

Product overview

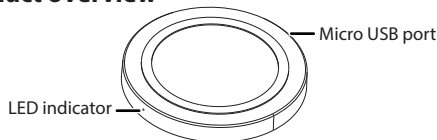


LED indicator status

LED	STATUS
Pulsing blue	Standby
Solid blue	Charging
Solid purple	Quick charging
Solid red	Insufficient input power
Blinking red	Charging error

Using your charging pad

 
- 1 Connect the charging cable to your charging pad.

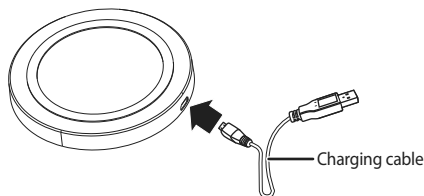

- 2 Plug the other end of the cable into a USB port on a computer or into a power adapter. See "Choosing the right USB power adapter" for power requirements.


Choosing the right USB power adapter

 - A Quick Charge (QC) 2.0 or QC 3.0 charger is required to obtain the full 10 W of wireless charging performance.
- A minimum of a 5 V/2 A (10 watts) USB charger or powered USB port is required to obtain 5 W of wireless charging performance.
- Using low-power USB ports (with less than 5 V/2 A of power output) could cause poor performance or cause the wireless charger to not work.

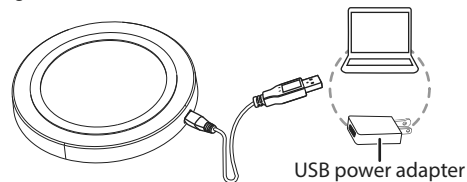

- 3 Place your Qi-enabled device on the center of your charging pad with the screen facing up. The LED is blue/purple when your device is charging.

 Note: If the LED is red, your device is not charging. See "TROUBLESHOOTING" for more information.

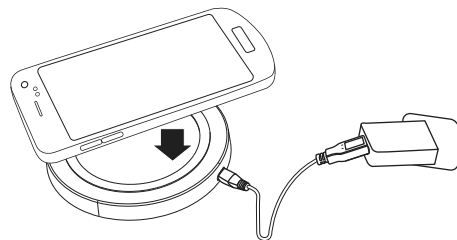

Troubleshooting

Device not charging/LED is red

- Make sure that your device is Qi-enabled.
- Make sure that your charging pad is connected to a working USB port.
- Make sure that your powered USB port meets the minimum power requirements.
- Make sure that your device is positioned correctly on your charging pad.
- Make sure that there are no other objects on the charging pad.
- Remove your device's case. It may be blocking the wireless signal.

Device charges slowly

- Your device may charge more slowly with the charging pad than a charging cable. This is normal behavior.
- Make sure that your device is positioned in the center of your charging pad.

Specifications

Qi Wireless Charging Pads:

Input: Micro USB 5 V/2 A, 9 V/2 A

Wireless output: 10 W Max

Dimensions: 3.5 × 3.5 × 0.4 in. (9 × 9 × 1 cm)

Power requirements:

5 W wireless charging: 5 V/2 A USB port

10 W wireless charging: QC 2.0 or QC 3.0 USB port

Charging cable: 4 ft. (1.2 m)

Safety information

- Avoid dropping.
- Do not disassemble.
- Do not place metal objects between devices and wireless charging pad.
- Thick protective case (≥ .2 in. [5 mm]) or a case that includes a magnet or metallic material, may not allow proper charging function.
- Keep wireless charging pad away from any liquid or moisture.
- The maximum ambient temperature during use of this product must not exceed 113° F (45° C).
- Do not place this device in fire or other excessively hot environments.

Legal notices

FCC Information

FCC Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Statement: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RSS-Gen Statement

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

RF exposure statement

This equipment complies with radio frequency exposure limits set forth by the FCC for an uncontrolled environment.

This equipment should be installed and operated with a minimum distance of 20 cm between the device and the user or bystanders. This device must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment complies with radio frequency exposure limits set forth by the Innovation, Science and Economic Development Canada for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the device and the user or bystanders. This device must not be co-located or operating in conjunction with any other antenna or transmitter.

One-year limited warranty

Visit www.bestbuy.com/bestbuyessentials for details.

Contact Best Buy essentials

For customer service, call 866-597-8427 (U.S. and Canada)

www.bestbuy.com/bestbuyessentials

Best Buy essentials is a trademark of Best Buy and its affiliated companies.
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2021 Best Buy. All rights reserved.