

INSIGNIA™

## USER GUIDE

# CD Boombox with Cassette Player and AM/FM Radio

NS-BCDCAS1



Before using your new product, please read these instructions to prevent any damage.

## Contents

 
Welcome .....	2
Safety information .....	2
Features .....	4
Setting up your boombox .....	9
Using your boombox .....	11
Troubleshooting .....	15
Maintaining .....	16
Legal notices .....	18
ONE-YEAR LIMITED WARRANTY .....	20

## Welcome

Congratulations on your purchase of a high-quality Insignia product. Your NS-BCDCAS1 represents the state of the art in boomboxes and is designed for reliable and trouble-free performance.

## Safety information

To prevent fire or shock hazard, do not plug the power cord into an extension cord, receptacle, or other outlet unless the blades can be fully inserted to prevent blade exposure. To prevent fire or shock hazard, do not expose this boombox to rain or moisture.

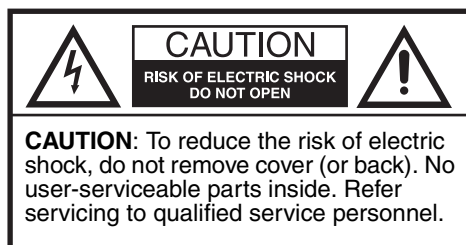

### Surge protectors:

 
We recommend that you use a surge protector when you use the AC power cord with this boombox. Lightning and power surges ARE NOT covered under the warranty for this product.



The lightning flash with arrowhead symbol within a triangle is intended to alert you to the presence of uninsulated dangerous voltage within your boombox's enclosure that may be of sufficient magnitude to constitute risk of electric shock to persons.



The exclamation point within a triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying your boombox.

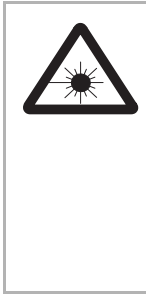

Your boombox utilizes a Class 1 laser to read Compact Discs. Your boombox is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD door is open and the system's interlock has failed or been defeated. You should avoid direct exposure to the laser beam at all times. Do not attempt to defeat or bypass the safety switches.

**Warning**

To reduce the risk of fire or electric shock, do not expose your boombox to rain or moisture.

**Warning**

Any use of the controls or an adjustment to the procedures other than those specified herein may result in hazardous radiation.

**Caution**

Any change or modification to your boombox not expressly approved by Insignia or its authorized parties could void your authority to operate your boombox.

**Caution**

Your boombox should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on it.

## ***Read instructions***

Read all the safety and operating instructions before you use your boombox.

## ***Retain instructions***

Retain safety and operating instructions for future reference.

***Follow warnings and instructions***

Follow all warnings on your boombox and in the operating instructions. Follow all operating and use instructions.

***Placement***

When placing your boombox on a lacquered or natural finish, protect your furniture with a cloth or other protective material.

Avoid exposure to direct sunlight, temperature extremes, and moisture.

***Ventilation***

Slots and openings in the cabinet and the back or bottom are provided for ventilation, reliable operation, and protection from overheating. These openings must not be blocked or covered. Do not block the openings by placing your boombox on a bed, sofa, rug, or other similar surface.

***Water and moisture***

Do not use your boombox near water. For example, do not use it near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.

Do not let water splash or drip onto your boombox. Do not place objects containing liquids, such as a vase, on top of your boombox.

The AC power cord is used as the disconnect device. It should remain readily accessible and should not be obstructed during use. To completely disconnect power, the AC power cord should be unplugged from the AC power outlet completely.

 
The rating label of the boombox is located on the bottom.

**Features**

Package contents:

- Boombox
- *User Guide*
- *Quick Setup Guide*


Front panel

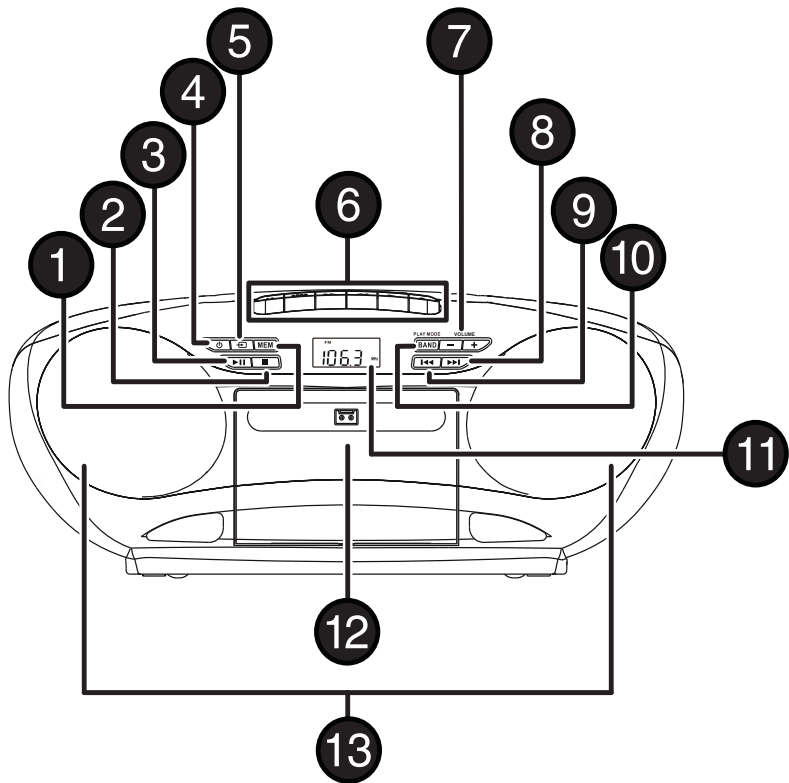

#	Item	Description
1	MEM button	In radio mode, press to create/select preset stations.
2	■ (stop) button	Press to stop playback.
3	▶   (play/pause) button	Press to begin CD playback. Press again to pause playback.
4	⏻ Standby/ON button	Press to turn on your boombox. Press again to return your boombox to standby mode.
5	⏮ (source) button	Press to select the sound source ( <b>RADIO</b> , <b>CD</b> , <b>TAPE</b> , or <b>AUX</b> ).
6	Cassette tape control buttons	These buttons control tape playback. See Top panel below for additional information.
7	VOLUME -/+ button	Press to lower or raise the volume.
8	▶▶ (next) button	In radio mode, press to tune to the next higher station. In CD mode, press to search/skip to the next track.


#	Item	Description
9	◀◀ (previous) button	In radio mode, press to tune to the next lower station. In CD mode, press to search/skip to the previous track.
10	<b>BAND/PLAY MODE</b> button	In radio mode, press to select the radio band ( <b>AM</b> or <b>FM</b> ). In CD mode, press to cycle through the playback modes ( <b>repeat 1</b> , <b>repeat all</b> , or <b>random</b> ).
11	Display	Shows radio band, playback mode, program mode, source, volume level, and radio frequency. For additional information, see “Display.”
12	Cassette door	Open to insert a cassette tape into the boombox for playback.
13	Left and right speakers	Produce sound so you can listen to your boombox.

 Top panel

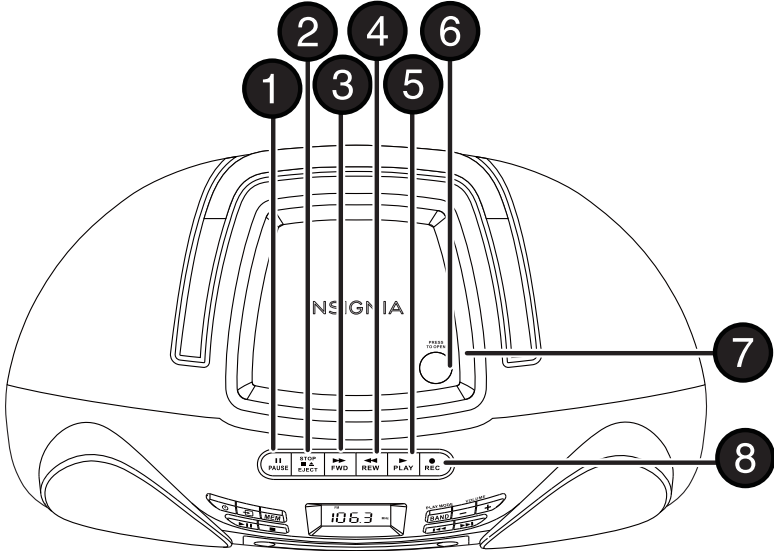

#	Item	Description
1	⏸ PAUSE button	Press to pause the tape playback. Press again to resume playback.
2	■ STOP/ ▲ EJECT button	Press to stop cassette tape playback. Press again to open the cassette door.
3	▶▶ FWD button	Press to fast forward the cassette tape.
4	◀◀ REW button	Press to rewind the cassette tape.
5	▶ PLAY button	Press to begin cassette tape playback.
6	PRESS TO OPEN	Press to open the CD door.
7	CD door	Open to place a CD on the spindle for playback.
8	● REC button	Press to begin cassette tape recording.

 Back panel

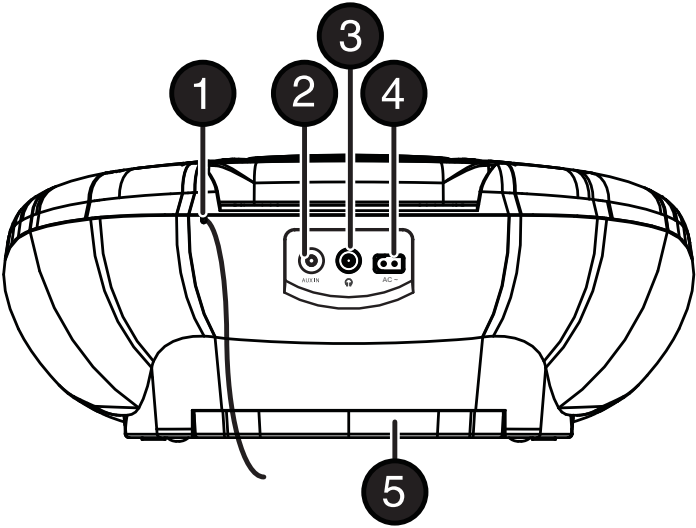

#	Item	Description
1	FM antenna wire	Provides an improved FM signal. Do not connect to an outside antenna.
2	<b>AUX IN</b> jack	Connect an external audio device to this jack.
3	Headphone jack	Connect headphones to this jack to listen to radio/ playback through your headphones.
4	<b>AC IN</b> jack	Connect the AC power cord (included) to this jack to operate your boombox on AC power.
5	Battery compartment	Insert six (6) "D" sized alkaline batteries (not included) into this compartment to operate your boombox on battery power.

 
## Display

**In CD mode**—the display shows the current track time elapsed (during playback), the total number of tracks (in stop mode).

**In Radio mode**—the display shows the preset selected and the frequency.

**In Tape mode**—the display shows “**CAS.**”

**In AUX mode**—the display shows “**Aud.**”

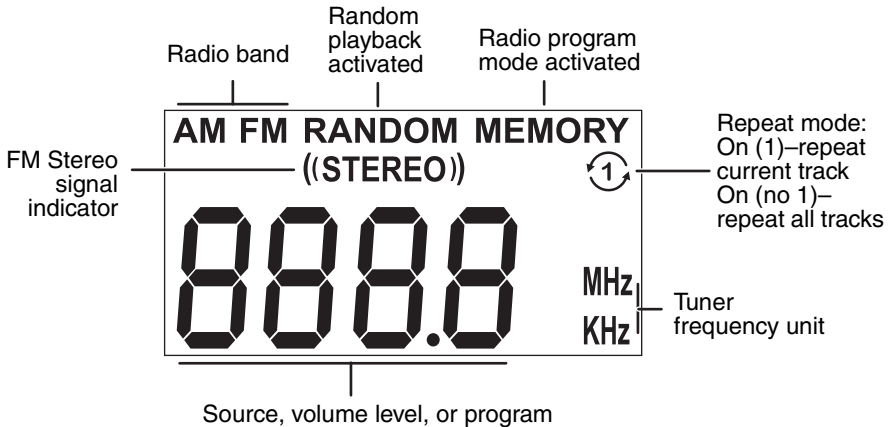

## Setting up your boombox

### Connecting the AC power cord

#### To connect the AC power cord:

- 1 Make sure that your local AC power source matches the voltage shown on the plate located on the bottom of the boombox. If it does not, consult your dealer or service center.
- 2 Insert the small connector at the end of the AC power cord into the **AC IN** jack on the back of your boombox.
- 3 Plug the AC power cord into a wall power outlet.

#### Caution

To protect your boombox during thunderstorms, unplug the AC power cord from the AC power outlet.

**Note**

Unplug the AC power cord when not in use.  
The batteries are automatically bypassed when the AC power cord is used.

- Power Electrical Specs: 120V ~ 60 Hz
- Device Electrical Specs: 10 VAC, 1.0 A

## Installing the batteries

**To install the batteries:**

- 1 Turn your boombox over, then open and remove the door to the battery compartment.
- 2 Insert six (6) “D” size batteries into the battery compartment. Make sure that you match the + and – symbols on the batteries with the + and – symbols in the battery compartment.
- 3 Reinstall and close the battery compartment door and return your boombox to the upright position.

**Note**

The AC power cord must be disconnected from both the AC IN jack on the back of your boombox and the AC power outlet in order for your boombox to operate on battery power.

**Caution**

Follow these precautions when using batteries in this device:

- Use only the size and type of batteries specified.
- Make sure that you follow the correct polarity as indicated in the battery compartment when installing batteries. Reversed batteries may cause damage to your boombox.
- Do not mix different types of batteries together (for example, alkaline, rechargeable, and carbon zinc), or semi-used batteries with fresh ones.
- If your boombox is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
- Do not try to recharge batteries not intended to be recharged, because they can overheat and rupture. (Follow battery manufacturer's directions.)
- Do not throw batteries into a fire. Dispose of used batteries as hazardous waste.

## Connecting headphones

### To connect headphones:

- Plug the headphones (not included) into the headphone jack on the back of the unit.





 
 
 
#### Caution

Listening to music with the volume too loud can damage your hearing. Before you connect headphones, turn the volume down. After you put on the headphones, gradually increase the volume to a comfortable level.

## Using your boombox

### Playing the radio

 



 

#### To play the radio:

- 1 Press  (Standby/ON) to turn on the boombox.
- 2 Press  (source) repeatedly to select **RADIO** mode, then press **BAND** to select **AM** or **FM**.
- 3 Press  (next) or  (previous) to tune the radio to a higher or lower frequency.  
Press and hold  (next) or  (previous) for two seconds to automatically tune to the next or previous station.
- 4 Adjust the volume to a comfortable level by pressing either the **VOLUME +** or **VOLUME –** button.
- 5 Press  (Standby/ON) to turn off the boombox.

#### To improve reception:

- For FM reception, unwind and extend the FM antenna. You may have to reposition the antenna for best reception. Do not connect the FM antenna wire to an outside antenna.
- For AM reception, turn your boombox slightly until reception improves.

#### To use presets:

- 1 Press  (Standby/ON) to turn on the boombox.
- 2 Press  (source) repeatedly to select **RADIO** mode, then press **BAND** to select **AM** or **FM**.
- 3 Press  (next) or  (previous) to tune the radio to a higher or lower frequency.  
Press and hold  (next) or  (previous) for two seconds to automatically tune to the next or previous station.

- 4 To save the station as a preset, press and hold the **MEM** button. “**MEMORY**” blinks on the display.
- 5 Press ►► (next) or ◄◄ (previous) to select the preset number you want.
- 6 Press the **MEM** button again to confirm and store the preset.
- 7 Repeat Steps 3 to 6 to store as many as 10 AM presets and 10 FM presets.
- 8 To select a preset station, press **MEM** repeatedly until you reach the station you want.


## Playing CDs

You can play standard and 3” audio CDs, CD-Rs, and CD-RWs.


 
### Caution

Do not try to play DVDs, VCDs, or data CDs. You may damage your unit.

### To play CDs:

- 1 Press ⏻ (Standby/ON) to turn on the boombox.
- 2 Press  (source) repeatedly to select **CD** mode.
- 3 Press the **PRESS TO OPEN** area on the CD door to open the lid.
- 4 Insert a CD, label side up.
- 5 Press the **PRESS TO OPEN** area on the CD door to close it. Playback begins automatically and stops when finished.
- 6 Press ■ (stop) to stop the CD before it is finished. The total number of tracks appears on the display.

### Notes

If a CD is inserted incorrectly, is dirty or damaged,  appears on the display. If a CD is not present at all,  appears on the display.

To prevent damage to the CD, never open the CD door while the CD is rotating and never touch the lens.

Do not use the carrying handle when playing a CD. The CD player should only be used on a steady surface.



### To pause CD playback:

- 1 Press ►► (play/pause). Playback stops but the CD continues to spin and the elapsed time of the current track blinks on the display.
- 2 Press ►► (play/pause) again to resume normal CD playback.

**To Skip/Search a CD track:**

- 1 During playback, press **▶▶I** (next) or **I◀◀** (previous) to skip to the next or previous track, respectively.
- 2 Press and hold **▶▶I** (next) or **I◀◀** (previous) to quickly search the current track forward or backward, respectively.

**Using repeat mode****To repeat one track, all tracks, or randomly play all tracks:**

- 1 Press **BAND/PLAY MODE** while in playback mode to cycle through the repeat modes (**Repeat current track**, **Repeat all**, **Random**). The following appears on the display:
  -  turns on—Repeat current track
  -  turns on—Repeat all tracks
  - **"RANDOM"** turns on—Random playback
- 2 To cancel repeat mode, press **BAND/PLAY MODE** until the **Random/Repeat** icon disappears from the display.

**Playing cassette tapes****To play cassette tapes:**

- 1 Press **⏻** (Standby/ON) to turn on the boombox.
- 2 Press **⏮** (source) repeatedly to select **TAPE** mode. **"CAS"** appears on the display.
- 3 Press **■ STOP/ ▲ EJECT** to open the cassette door.
- 4 Insert a cassette tape into the door, then gently push the door closed.

**Note**

Make sure to slide the cassette tape into the slot in the cassette door. Do not place the cassette tape directly onto the tape drive mechanism.



 
 





- 5 Press **◀◀ REW** or **▶▶ FWD** to wind the cassette tape to the starting point you want, then press **■ STOP/ ▲ EJECT** to stop the cassette tape.
- 6 Press **▶ PLAY** to begin playback.
- 7 Press **|| PAUSE** to pause playback. Press **|| PAUSE** again to resume playback.
- 8 Press **■ STOP/ ▲ EJECT** to stop playback. Press again to open the cassette door.

## Recording to cassette tape








**Note**

For the best possible recording quality, only use normal bias cassette tapes (Type I).








**To record to cassette tape from the radio:**

- 1 Press  (Standby/ON) to turn on the boombox.
- 2 Press  (source) repeatedly to select **RADIO** mode, then press **BAND** to select **AM** or **FM**.
- 3 Insert a cassette tape into the door, then gently push the door closed.
- 4 Press  (next) or  (previous) to tune the radio to the station you want.
- 5 Press  REC and  PLAY together to begin recording.
- 6 Press  PAUSE or  STOP/  EJECT to pause or stop recording, respectively.

**To record to cassette tape from a CD:**



- 1 Press  (Standby/ON) to turn on the boombox.
- 2 Insert a cassette tape into the door, then gently push the door closed.
- 3 Insert a CD and close the CD door.
- 4 Press  (source) repeatedly to select **CD** mode.
- 5 Select the track to be recorded.
- 6 Press  REC and  PLAY together to begin recording.
- 7 Press  PAUSE or  STOP/  EJECT to pause or stop recording, respectively.

**To record to cassette tape from AUX IN input:**

- 1 Press  (Standby/ON) to turn on the boombox.
- 2 Press  (source) repeatedly to select **AUX** mode. “**Aud**” appears on the display.
- 3 Insert a cassette tape into the door, then gently push the door closed.
- 4 Start playback from the external audio device.
- 5 Press  REC and  PLAY together to begin recording.
- 6 Press  PAUSE or  STOP/  EJECT to pause or stop recording, respectively.

## Listening to an external audio device

### To listen to another audio device:


- 1 Make sure that the boombox is turned off.
- 2 Plug one end of the 3.5 mm AUX cable (not included) into the **AUX IN** jack on the back of your boombox.
- 3 Plug the other end of the cable into the **Line-out** jack on the audio device, such as an iPod or other MP3 player.
- 4 Press  (Standby/ON) to turn on the boombox.
- 5 Press  (source) one or more times until “**Aud**” appears on the display.
- 6 Use the controls on the audio device to control playback.

## Troubleshooting

### Caution

Do not try to repair the boombox yourself. Doing so will invalidate your warranty.

Problem	Solution
Your boombox will not turn on	<ul style="list-style-type: none"> <li>• Unplug your boombox for a few moments, then plug it back in.</li> <li>• Make sure that the AC outlet is working by plugging another device into it.</li> </ul>
CD player will not play	<ul style="list-style-type: none"> <li>• Make sure that you have put a CD in the CD tray.</li> <li>• Make sure that the CD is inserted label side up.</li> <li>• Try a different CD.</li> <li>• Make sure that the CD player is not paused.</li> <li>• Make sure that the CD mode is selected.</li> <li>• Make sure that you are using a compatible CD. Your boombox can play standard and 3" audio CDs, CD-R, and CD-RW.</li> </ul>
A CD skips while playing	<ul style="list-style-type: none"> <li>• Wipe the CD with a cloth to clean it</li> <li>• Try a different CD.</li> <li>• Make sure that the CD is not warped, scratched, or damaged.</li> <li>• Make sure that your boombox is not being affected by vibration or shock. Move the boombox if necessary.</li> <li>• Make sure that you are using a compatible CD. Your boombox can play standard and 3" audio CDs, CD-R, and CD-RW.</li> </ul>

 
Problem	Solution
Noise or sound distorted on AM or FM radio broadcasts	<ul style="list-style-type: none"><li>• Extend the FM antenna.</li><li>• Rotate your boombox until the best reception is obtained.</li><li>• Try turning off electrical appliances near your boombox, such as hair dryers, vacuum cleaners, or fluorescent lights.</li></ul>
No sound	<ul style="list-style-type: none"><li>• Increase the volume.</li><li>• Plug in the AC power cord and press  (Standby/ON) to turn on your boombox.</li><li>• Make sure that you have installed fresh batteries and that they are installed correctly.</li><li>• Make sure that you have selected the correct source.</li><li>• If you are in AUX mode, make sure the volume has not been muted on your playback device.</li></ul>
Low volume	<ul style="list-style-type: none"><li>• If you are using AUX mode, make sure that the volume is turned up on both your audio source and your boombox.</li></ul>
A cassette tape will not play/record	<ul style="list-style-type: none"><li>• Open the cassette door and make sure that the tape has not been tangled in the tape drive mechanism.</li><li>• Rewind your tape or turn it over to the other side.</li></ul>

## Maintaining

### Care and handling of discs

#### *Handling discs*

Do not touch the playback side of the disc. Hold the disc by the edges so that fingerprints do not get on the surface. Never stick paper or tape on the disc.

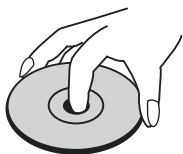

#### *Storing discs*

After playing, store the disc in its case. Do not expose the disc to direct sunlight or sources of heat and never leave it in a parked car exposed to direct sunlight.

### ***Cleaning discs***

Fingerprints and dust on the disc can cause poor sound quality and distortion. Before playing, clean the disc with a clean cloth. Wipe the disc from the center out.



Do not use strong solvents such as alcohol, benzine, thinner, commercially available cleaners, or anti-static spray intended for older vinyl records.

### ***Cleaning the CD lens***

If your CD lens gets dirty it can cause poor sound quality. To clean the lens you will need to purchase a CD lens cleaner which can maintain the output sound quality of your system. For instructions on cleaning the CD lens, refer to the literature accompanying the lens cleaner.

### ***Cleaning your boombox***

 
To prevent fire or shock hazard, disconnect your boombox from the AC power source when cleaning.

The finish on your boombox may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.

Mild soap and a damp cloth may be used on the front panel.

**Maintaining cassette tapes**

To protect your recordings from accidental erasure on one or both sides of your cassette, snap out the tab at the top of the cassette. If you decide later to record on the tape, seal the hole with a piece of adhesive tape.

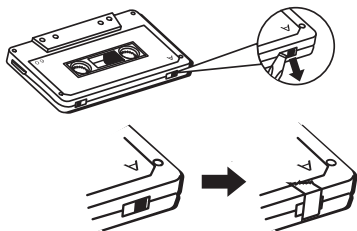

A little bit of slack in your tapes can cause scratches on the tape, or worse yet, the tape could break. If you notice some slack in the tape, use a pencil to tighten it up before you insert it.

**Specifications**

AC input	120V~ 60 Hz
Power requirement	10VAC, 1.0A
Radio frequency	FM: 87.5-107.9 MHz AM: 520-1710 KHz
Dimensions (HxWxD)	6.1 x 14.6 x 8.5 in. (15.4 x 37.1 x 21.7 cm)

**Legal notices**

**FCC Statement**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**FCC Caution**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, maybe cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **CAN ICES-3 (B)/NMB-3 (B)**

This product complies with DHHS Rules 21 CFR Sub-chapter J.  
Applicable at the date of manufacture.

# ONE-YEAR LIMITED WARRANTY

## Definitions:

The Distributor\* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at [www.bestbuy.com](http://www.bestbuy.com) or [www.bestbuy.ca](http://www.bestbuy.ca), and is packaged with this warranty statement.

## How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

## What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

## How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location, please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from a Best Buy online web site ([www.bestbuy.com](http://www.bestbuy.com) or [www.bestbuy.ca](http://www.bestbuy.ca)), mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States call 1-888-BESTBUY, Canada call 1-866-BESTBUY. Call agents may diagnose and correct the issue over the phone.

## Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the county where the original purchase was made.

## What does the warranty not cover?

This warranty does not cover:

- Food loss/spoilage due to failure of refrigerator or freezer
- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse

- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

For customer service please call 1-877-467-4289

[www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

©2016 Best Buy. All rights reserved.

Made in China

# INSIGNIA™

[www.insigniaproducts.com](http://www.insigniaproducts.com)

1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

©2016 Best Buy. All rights reserved.

Made in China.

V3 ENGLISH  
16-0152