



JLAB AUDIO  
BLOCK PARTY  
SPEAKER

**We love that you are rocking JLab Audio!**  
**We take pride in our products and fully stand behind them.**



### YOUR SATISFACTION IS GUARANTEED

You may exchange or return merchandise purchased within 30 days of the purchase date. Please return the item to the location you purchased it. If your item has been opened or used, restrictions may apply.



### YOUR WARRANTY

You may register your product at [jlabaudio.com/register](http://jlabaudio.com/register). All warranty claims are subject to JLab Audio authorization and at our sole discretion. Retain your proof of purchase to ensure warranty coverage.



### CONTACT US

Reach out to us at [support@jlabaudio.com](mailto:support@jlabaudio.com) or visit [jlabaudio.com/contact](http://jlabaudio.com/contact).

## ACCESSORIES





DC POWER ADAPTOR




REMOVABLE HANDLE

## SPEAKER PORTS / BUTTONS

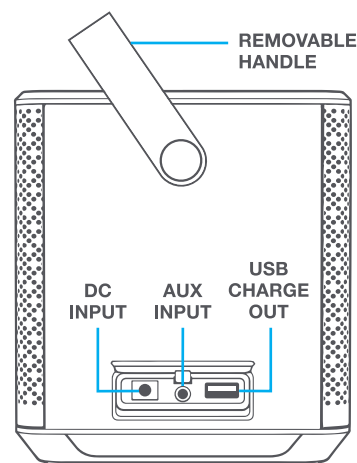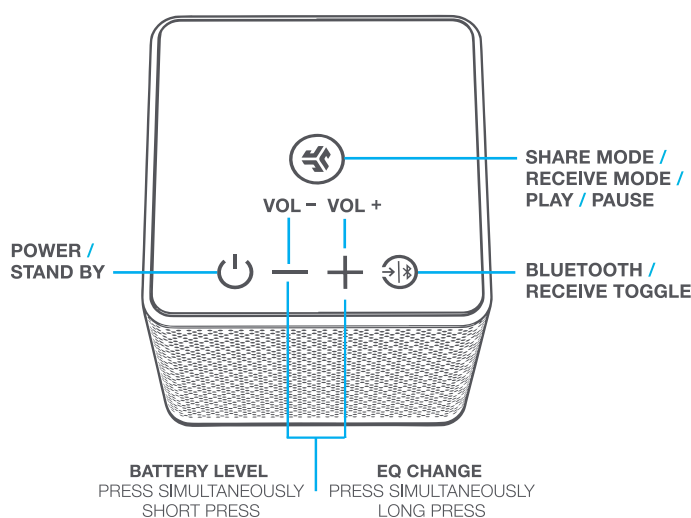

## CHARGING **Note: For optimum performance, charge overnight with DC Power Adaptor prior to using.**

- 1 Before charging, it is recommended you turn off the speaker.
- 2 Open the silicone cover on the back of the speaker and connect the speaker to your computer or wall outlet using the provided DC Power Adaptor.
- 3 The indicator light on the front of the speaker will **blink purple one time** to indicate charging is in progress. Allow about 6 hours to fully charge over.

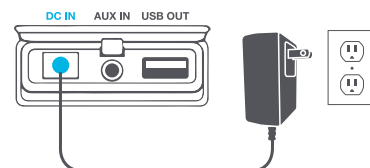

## POWER ON / OFF



**Power ON:** Press and hold for 2 seconds.

**Power OFF:** Press and hold for 4 seconds.

**Stand By:** When power is ON, press and hold for 2 seconds (See **Stand By** instructions for details)

## PLAY / PAUSE



◀ Quick Press to Play / Pause

## VOLUME CONTROL



**Green lights** on ring will indicate volume level on speaker.

**Note: Volume on the speaker works independently from your Bluetooth device. Adjust the volume on both the speaker and your device accordingly.**

Volume Down

Volume Up

 
## CHECK BATTERY LEVEL

Press both volume buttons simultaneously. (Short Press)



## CHANGE EQ SETTINGS

The House Party Speaker is pre-loaded with 2 EQ settings, for outside or inside.



## CONNECT YOUR BLUETOOTH DEVICE

1 Power the speaker ON

2 Once Power is ON:



If you see the **blue pulsing logo** the speaker is already in **Bluetooth Mode**. Follow Step 3.



If you see the **white rotating ring**





Quick Press the Bluetooth / Receive Toggle Button



**Blue pulsing logo** will indicate **Bluetooth Mode**. Follow Step 3.

3  Press and hold for 3 seconds the Bluetooth / Receive Toggle Button to enter pairing mode.

4 Search for “JLab Block Party” in your Bluetooth device settings and connect.

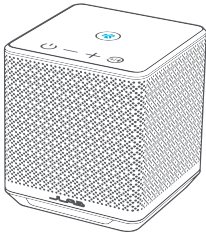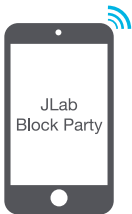

Once connected, a voice prompt of “Bluetooth connected” and **solid blue logo** will be indicated. You are ready to play music.

## RE-PAIR BLUETOOTH (OR PAIR NEW DEVICES)

1 When Power is ON:



If you see the **blue pulsing logo** the speaker is already in **Bluetooth Mode**. Follow Step 2.



If you see the **white rotating ring**



Quick Press the Bluetooth / Receive Toggle Button



**Blue pulsing logo** will indicate **Bluetooth Re-Pairing**. Follow Step 2.

2  Press and hold for 3 seconds the Bluetooth / Receive Toggle Button to enter pairing mode.




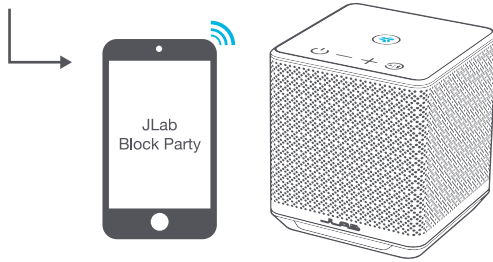
**Blue pulsing logo** will indicate **Bluetooth Re-Pairing**. Search for “JLab Block Party” in your Bluetooth device settings and connect.

**Note: If you have multiple Bluetooth devices connecting and want to connect a specific device, make sure you turn the Bluetooth OFF on your other devices so the speaker can connect to your desired device.**

- Bluetooth is a wireless radio technology, which means it is sensitive to objects between the speaker and the connected device. The speaker is designed to be used within 33 feet (10 meters) of a connected device, with no major objects in between (walls, etc.).
- Once successfully connected, the speaker will memorize your device and automatically pair when turned on in the future. Only one device may be connected at a time. To pair a different device, first unpair the current one through its Bluetooth settings.
- If for any reason Bluetooth connection is lost, manually reconnect your Bluetooth device.

## SHARE MODE (LINK SPEAKERS)

- 1  ◀ Power ON chosen **Main/Sharing speaker**.



Connect the speaker to your Bluetooth device.  
Once connected, **set this speaker aside until step 4.**

(Follow the **Connect Your Bluetooth Device** instructions if speaker is not connected to your device)

- 2  ◀ Power ON the other House Party or Block Party speaker(s) to enter them in **Receive Mode** as follows:



If you see the **white rotating ring** then you are already in **Receive Mode**.  
Follow Step 3.




If you see the **blue pulsing light**



◀ Quick press the Bluetooth / Receive Toggle Button



**White rotating ring** will indicate **Receive Mode**.  
Follow Step 3.

- 3  ◀ Press and hold 3 seconds the Share Mode / Receive Mode button



**White blinking ring** will indicate that it is set to receive. All receiving speakers must be blinking white to link to Main/Sharing Speaker.


- 4 Return to **Main/Sharing speaker** that is connected to your Bluetooth device.



◀ Press and hold for 3 seconds the Share Mode Button



**Share Mode** will **flash blue** indicating it is searching for **Receiving speakers**

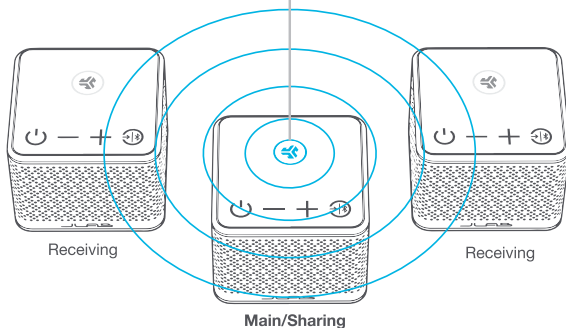


5 Once the speakers are linked:



**Main/Sharing speaker**  
will turn **solid blue**



**Receiving speaker(s)**  
will turn **solid white**

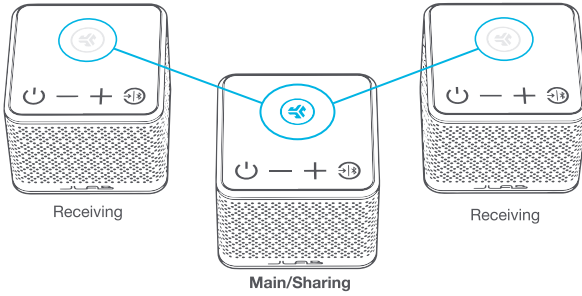


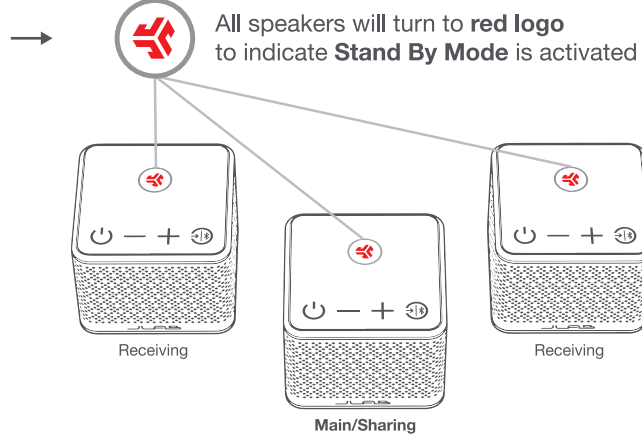
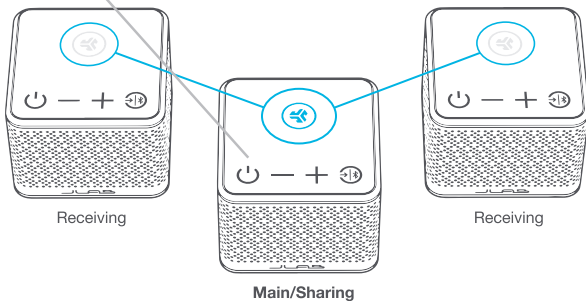
**Note:** To change the Main/Sharing speaker to a different speaker, disconnect your device and follow the same 5 step process.


## ABOUT STAND BY MODE



**Stand By Mode** has the capability to turn On, Off, and reconnect ALL Receiving speakers that are connected to the Main/Sharing speaker. This capability works when all speakers are plugged into an AC outlet and when Share Mode has already been set up.

## USE STAND BY MODE WHEN SPEAKERS ARE LINKED

- 1  When speakers are linked/shared, press and hold 2 seconds on the Power button of the **Main/Sharing speaker**




- 2  Press and hold 2 seconds on the Power button of the **Main/Sharing speaker**. This will turn the speaker back on and wake the Receiving speakers.

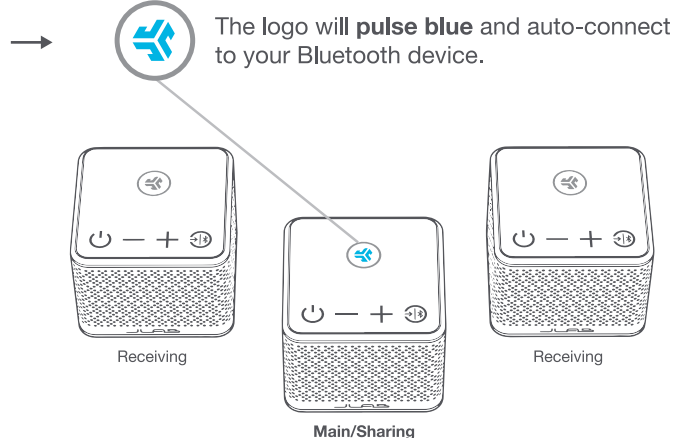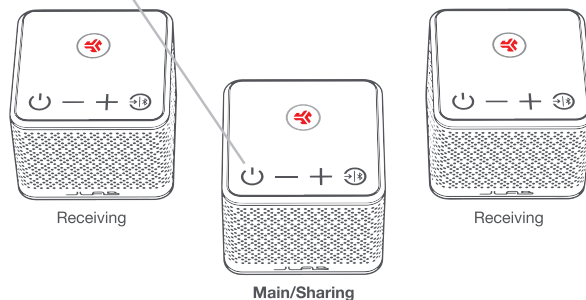


3



Press and hold the Share Mode button for 3 seconds.

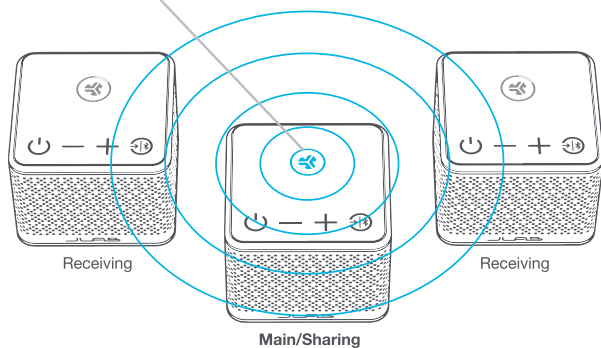

**Blue pulsing ring** will initiate the speakers to reconnect.  
All **Receiving speakers** will wake and reestablish connection.

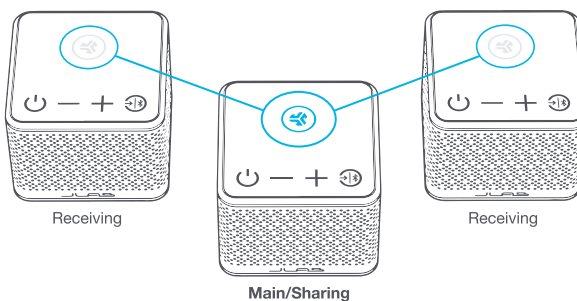

## CAUTIONS

- Listen to music at a suitable volume for enjoyment in order to not cause damage to your hearing and/or speaker system.
- Store in a well ventilated area.
- To reduce the risk of fire or electric shock, do not expose this speaker or the accessories to rain, water drops or moisture.
- Keep the unit away from an open flame such as fire, candle, etc.
- Avoid extreme heat, cold and humidity.
- Only use attachments/accessories specified by the manufacturer.
- Do not drop any objects into the unit through the openings.
- Do not place anything heavy on the unit.
- To ensure proper ventilation and proper operation, never cover or block the slots and opening with a cloth or other materials.
- The maximum working temperature is 95°F/35°C.
- Lithium batteries (like all rechargeable batteries) are recyclable and should NOT be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area.