

**COSTWAY®**

**COSTWAY**  
www.costway.com

**USER'S MANUAL**  
**Air Cooler**  
**EP2399S**

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

**Please give us a chance to make it right and go better!**  
Contact our friendly customer service department for help first.  
Replacements for missing or damaged parts will be shipped ASAP!

**Follow Costway**  
Visit us: [www.costway.com](http://www.costway.com)

**COSTWAY**  
www.costway.com

**COSTWAY**  
www.costway.com

# Contact Us!

**Do NOT return this item.**

Contact our friendly customer service department for help first.

## Before You Start

- ① Please read all instructions carefully.
- ② Retain instructions for future reference.
- ③ Separate and count all parts and hardware.
- ④ Read through each step carefully and follow the proper order.
- ⑤ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⑥ Always place the product on a flat, steady and stable surface.
- ⑦ Caution: Read the warnings carefully. Avoid kids get touch of small parts or plastic bag.

### READ AND SAVE THESE SAFETY INSTRUCTIONS BEFORE USING THIS

#### APPLIANCE

#### IMPORTANT SAFETY INSTRUCTIONS

1. **WARNING** When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electrical shock and personal injury.
  - 1. Use this cooker only as described in this manual. Other use not recommended may cause fire, electric shock or injury to persons. This will also void your warranty.
  - 2. Always operate the product from a power source of the same voltage, frequency and rating as indicated on the rating label.
  - 3. This product is intended for indoor, household use ONLY. Do not use outdoors or for commercial or industrial purposes.
  - 4. To protect against electric shock, do not immerse unit, plug or cord in water or spray with liquids; do not place unit on windshields or other places where it may be exposed to dripping or splashing of water; do not place vases or similar objects filled with liquids near the unit.
  - 5. Do not use this product in the immediate vicinity of water, such as bathtubs, washbowl, swimming pools etc., where the likelihood of immersion or splashing could occur.
  - 6. To reduce the risk of fire or electric shock, do not use this product with any solid-state speed control device.
  - 7. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
  - 8. This product is not a toy! Children should be supervised to ensure that they do not play with the appliance.
  - 9. Turn the unit OFF and unplug it from the outlet when not in use, when moving the unit from one location to another and before disassembling or cleaning. Fully assemble the unit before switching on again.
  - 10. To disconnect the unit, first turn it OFF, grip the plug and pull it from the wall outlet. Never pull the plug by the cord.

2

3

**WESTING**  
www.westing.com

**WESTING**  
www.westing.com

## OVERVIEW

The diagram shows a front view of the Westing AC unit on the left and a side view on the right. Numbered callouts identify the following components:

- 1. Control Panel (front view)
- 2. Oscillating Louvers (front view)
- 3. Horizontal Louvers (side view)
- 4. Ac-Castor Wheels (bottom of front view)
- 5. 2-Inch Blocks (top of front view)
- 6. Filter Riser (top of front view)
- 7. Air Inlet Cover (side view)
- 8. Water Tank Lock (side view)
- 9. Water Tank Lock (side view)

1. Control Panel
2. Oscillating Louvers
3. Horizontal Louvers
4. Ac-Castor Wheels

5. 2-Inch Blocks
6. Filter Riser
7. Air Inlet Cover
8. Water Tank Lock

9. Water Tank Lock

NOTE: The Ice Blocks are supplied empty; add water and freeze for a few hours before use.

11. Do not operate the cooler in the presence of explosive and/or flammable fumes.
12. Do not place the product or any parts near an open flame, cooking or other heating appliances.
13. Do not operate product with a damaged cord or plug, or if the product malfunctions, or is dropped or damaged in any manner.
14. Avoid contact with moving parts. Do not insert any body parts (e.g. finger) or objects through the grill when the unit is operating.
15. The use of attachments not recommended by the manufacturer may be hazardous.
16. Place the unit on a dry level surface to avoid overturning.
17. Do not operate if the product housing is damaged.
18. Do not cover the grill, or operate in close proximity to curtains, etc. Ensure adequate ventilation around the unit.
19. A loose fit between the AC unit (reciprocate) and plug may cause overheating and a distortion of the plug. Contact a qualified technician to replace loose or worn outlet.
20. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
21. If the product is not working properly, contact a qualified technician for examination and repair. Never attempt to dismantle the unit yourself.
22. Never install or store the unit where it could be subject to:
  - a. Hot sources such as radiators, heat registers, stoves or other products that produce heat
  - b. Direct sunlight
  - c. Mechanical vibration or shock
  - d. Excessive dust
  - e. Lack of ventilation, such as a cabinet or bookcase
  - f. Unseen surfaces
23. Do not leave the product running unattended.
24. The castor wheels must be attached before use.
25. Do not remove the water tank while the unit is plugged in.

4

5

COSTWAY  
www.costway.com

COSTWAY  
www.costway.com

### ASSEMBLY

**Note:** The 4 x Castor Wheels must be installed before using this Cooler.

1. Spread a soft cloth or mat on a level floor. Carefully place the unit upside down on the soft cloth or mat.
2. Insert each Castor Wheel into the hole on the bottom of the machine and thread it in clockwise. Tighten with the provided wrench to secure it in position. Repeat for all four Castor Wheels.

### FILLING THE WATER TANK

Before use, follow the procedures explained below to fill the water tank with clean, cold water up to the "MAX" level indicated.

**WARNING:** Unplug the unit from the mains supply before removing the water tank.

#### Important:

- Do not use water with any chemical additives added. The water must be cold or lukewarm, do not use hot water above 60°C.
- Do not fill water above the "MAX" line on the front of the Water Tank.

1. Turn the Water Tank Lock anti-clockwise to the horizontal position to unlock, and take out the Water Tank.

Water Tank Lock-turn anti-clockwise to unlock

2. To remove the Water Tank completely, first remove the pump by pressing the two end tabs.

Pump-press the tabs to remove

6

7

**COSTWAY**  
www.costway.com

**COSTWAY**  
www.costway.com

---

- Fill clean, cold water into the Water Tank, taking care not to overflow above the "MAX" line.
- To replace the Water Tank, first insert the pump into its slot by pressing the two ends of it. Carefully push the Water Tank into its position, and turn the Water Tank Lock clockwise to the vertical position to lock.

**USING THE ICE BLOCKS (OPTIONAL)**

There are twelve ice blocks included that can be used for extra cooling effect, if desired.

**Important:**

- Use only clean water for filling the ice blocks. Do not fill water above the maximum marking.
- The ice blocks are not food safe, do not use for storing food or beverages.
- Keep away from children.
- Empty the water and dry out the ice blocks before storage.

 
- Open the cap, add clean water up to the maximum level marking, close and place in your freezer for a few hours.
- Once frozen, the ice blocks can be added to the water tank.
- Note: Make sure that the water level in the tank does not go above the "MAX" level indicated.

**OPERATION**

**Warning:**

- Make sure that the surge extra are attached before switching on.
- Once water is filled, take wheels as ensure that you don't tilt the unit.
- Pull the unit gently if you wish to move it to a new position.
- Do not remove the water tank while the unit is plugged in.
- Keep the unit on a flat, stable ground without any obstacles near it.
- Connect the power plug to a suitable electrical outlet with the same specification as mentioned in the user's rating label (see Technical Specifications for details).
- When the supply is turned on at the outlet, the unit receives power and is in standby mode. The Power indicator light turns on.
- You may now use the control panel buttons or the remote control to operate the cooler.

**CONTROL PANEL**



**ON/OFF**

- Press the ON/OFF button to turn on the unit. The unit starts working in medium speed and switches to low speed after 7 seconds.
- When the unit is working, press the ON/OFF button again to switch it back to standby mode.

**SPEED:**

- Press the SPEED button to adjust the speed. There are three positions – Low, Medium or High. The corresponding indicator turns on.

**SWING:**

- Press this button to start or stop reverse oscillation from left to right. The corresponding indicator turns on.

**TIMER:**

- Press this button to set the set-off time for the unit.
- The turn-off time can be set in half-hour increments from 0.5 to 7.5 hours. There are a indication -0.5H, 1H, 2H and 4H. For example, if the timer is set for 3 hours, the 3H and 2H indicators will light.

8
9

**COSTWAY**  
www.costway.com

**COSTWAY**  
www.costway.com

## MODE:

There are three selectable modes, the corresponding indicator turns on.

- **Normal mode:** The fan operates in the constant speed set using the **SPEED** button.
- **Natural mode:** The unit simulates a natural breeze.
- **Sleep mode:** The unit simulates a gentle breeze suitable for night time use.

## COOL:

- Press this button for a cool breeze when water is added to the water tank. The corresponding indicator turns on.
- Press again to turn off the cool breeze.

## REMOTE CONTROL

**WARNING!** Keep batteries out of reach of children. Swallowing may lead to serious injury or death in as little as 2 hours due to internal burns. If swallowed, go straight to a hospital emergency room. Dispose of used batteries immediately.

- The remote control uses 1 x CR2025 button cell battery (included). Please remove the plastic tab before first use. Please see the following section on opening the battery compartment to replace the battery.
- The remote control buttons have the same functions as that of the control panel.

## Opening the Battery Compartment

Note: Images in this section are for illustration only.

1. Lay the remote control face-down on a table and hold it down with your left hand.
2. Insert the thumbnail of your right hand into the Release Tab, and your index finger into the Pull-Groove.

10

11

**COSTWAY**  
www.costway.com

**COSTWAY**  
www.costway.com

3. With your thumb, squeeze the Release Tab inwards whilst at the same time sliding the battery holder out with your index finger.

## CLEANING AND MAINTENANCE

### Cautions:

- Always switch off and unplug the unit before removing the filters or performing any cleaning.
- Do not use harsh detergents, chemical cleaners or solvents as they may damage the surface finish of the plastic components.

### MAIN BODY

1. Use a soft cloth or a rag to dust off all the surfaces.
2. Clean the Air Inlet and Air Outlet using a vacuum cleaner regularly.
3. Wipe all the parts with a soft damp (not wet) cloth dipped in mild soapy water.
4. Caution: Ensure that water doesn't get inside the unit.
5. Use a dry cloth to thoroughly dry the unit before turning on.

### AIR INLET COVER AND INNER FILTER

1. Use a screwdriver to unscrew the two cover screws.
2. Remove the Air Inlet Cover and wipe clean, or clean using a vacuum cleaner.
3. Use a duster to gently dust off the inner filter.
4. Replace the inner filter and Air Inlet Cover and tighten the screws to fix it in position.

## WATER TANK

Warning: Unplug the unit from the mains supply before removing the water tank (see pages 3 and 6 for instructions).

- When the unit or the Cool function will not be used for some time, empty the water from the water tank.
- Use mild soap and water to clean the Water Tank.
- Allow it to air dry or wipe dry using a soft cloth. Make sure the Water Tank is completely dry before replacing. This helps prevent any mould or mildew inside the Water Tank.
- Empty the water and dry out the ice blocks before storage.

Make sure the Air Inlet Cover and Water Tank are replaced in position before switching on again...

## TECHNICAL SPECIFICATIONS

Rated Voltage: 110V~ 50Hz  
Rated Power: 65W

Note: As a result of continual improvements, the design and specifications of the product within may differ slightly from the unit illustrated on the packaging.

## STORAGE AND DISPOSAL


If you do not plan to use the product for extended periods of time, it is recommended that it is cleaned and stored (preferably in the original packaging) in a cool, dry place.

Do not dispose of electrical products with household waste. Please check with your local council for advice on disposal or recycling. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well being.


Do not put your used batteries with your household rubbish. Take them to an appropriate disposal/ collection site.

12

13



**COSTWAY**  
www.costway.com



**COSTWAY**  
www.costway.com

**Welcome to visit our website and purchase our quality products!**


Your suggestions and comments for COSTWAY are really important to us!  
We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be quite encouraging if you could finish it as the below:

★★★★★ Great products so far

February 24, 2018  
Great products so far. Fast delivery, easy setup, and working without any issues.

With your inspiring rating, COSTWAY will be more consistent to offer you  
EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana, California  
UK office: Ipswich

 


- Reward Points
- Exclusive Customer Service
- Personalized Recommendations
- Permanent Shopping Cart
- Order History

*5 Star Rating*

★★★★★★

We would like to extend our heartfelt thanks to  
all of our customers for taking time to assemble  
this product and giving us valuable feedbacks.



14

15