

QUICK SETUP GUIDE

24" FHD LED Backlit Gaming Monitor

NS-PMG248

PACKAGE CONTENTS


- 24" FHD LED Backlit Gaming Monitor
- Stand base
- Screw M6 10
- Quick Setup Guide

FIND YOUR USER GUIDE ONLINE!


- 1 Go to www.insigniaproducts.com.
- 2 Use the search bar to find **NS-PMG248**.
- 3 Select **Support & Downloads**.
- 4 Next to *User Guide*, select the language you want.

FEATURES

Front

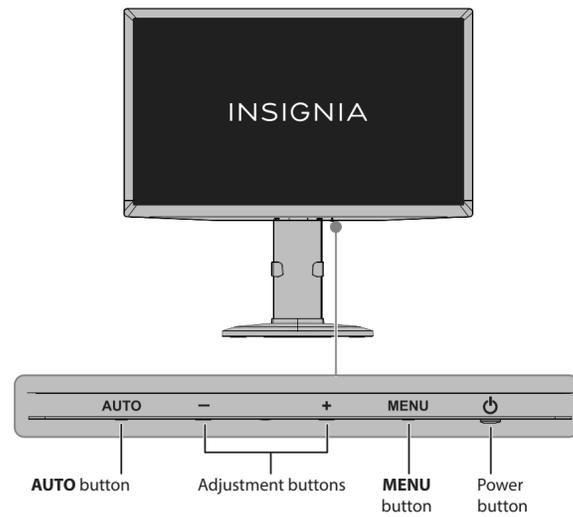

Back

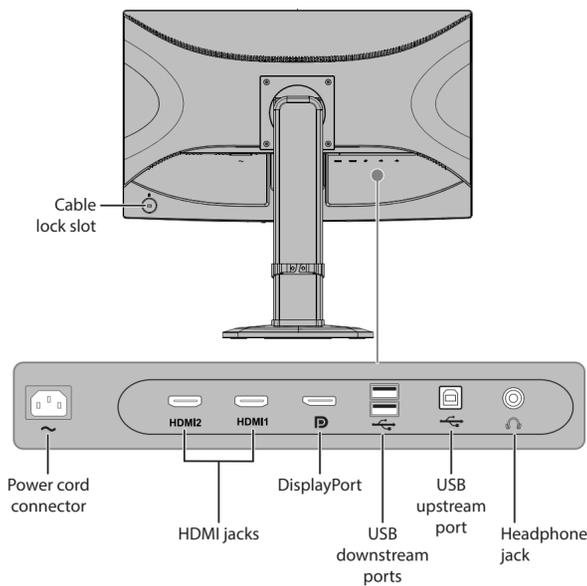


DESCRIPTION	FUNCTION
AUTO button	Selects the video input source or closes the menu when it is open.
Adjustment buttons	Navigate up or down in the menu or increase or decrease a setting.
MENU button	Opens the menu and confirms selections.
Power button	Turns your monitor on or off.
Cable lock slot	Slide a lock cable through this slot to secure your monitor to another object.
Power cord connector	Plug the AC power cord into this connector.
HDMI jacks	Connect a computer with an HDMI jack to one of these ports.
DisplayPort	Connect a computer with a DisplayPort to this port.
USB downstream ports	Connect USB device such as mouse or keyboard on these two downstream ports.
USB upstream port	Connect one end of the USB upstream cable to the USB upstream port on the monitor, and then connect the other end to a USB port on your computer.
Headphone jack	Connect a headset to this jack.

USING THE STAND

You'll need: Soft surface and Phillips screwdriver

- 1 Place the monitor screen face down on a cushioned, clean surface with the bottom edge hanging over the edge of the surface.
- 2 Rotate the monitor stand down.
- 3 Push the stand base onto the stand.
- 4 Tighten the screw to secure your monitor to the base.

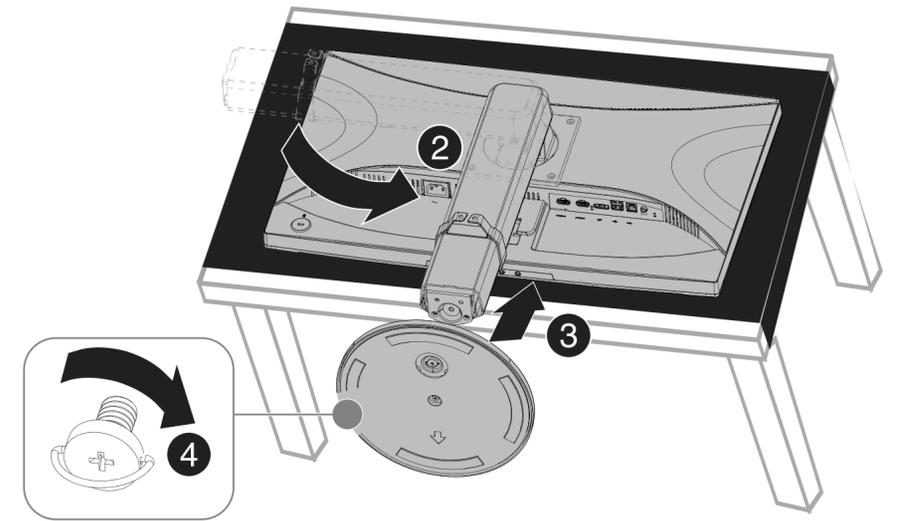

OR


USING A WALL MOUNT




How do I prepare my monitor for wall mounting? (not for use with a monitor stand)

You'll need: Soft surface and Phillips screwdriver

- 1 Place the monitor screen face down on a cushioned, clean surface.

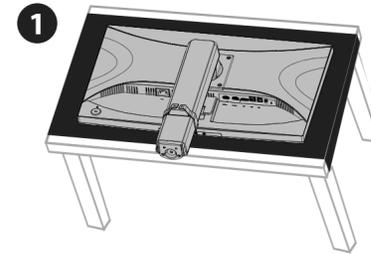

- 2 Remove the four screws that secure the stand to the back of your monitor.

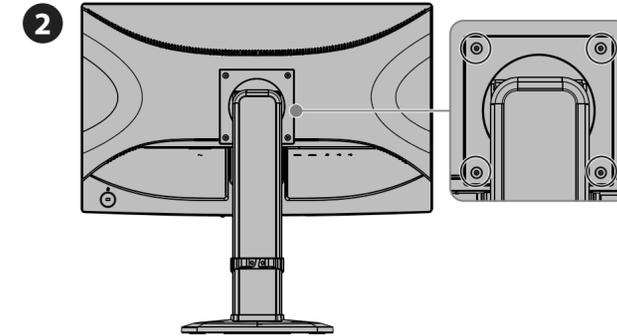

- 3 Attach the wall-mount bracket to your monitor. See the instructions that came with your wall mount for more information about how to correctly mount your monitor. Your monitor takes type M6 wall-mount screws.



Your monitor has four VESA mounting holes on the back. If you attach a wall-mount bracket to the back of your monitor, make sure that you attach it to **all four holes**. If you do not use all four mounting holes, your monitor may fall and cause property damage or personal injury.


TURNING ON MY MONITOR

Press the power button on the front of your monitor.



Q41G78S197601A

CONNECTING DEVICES

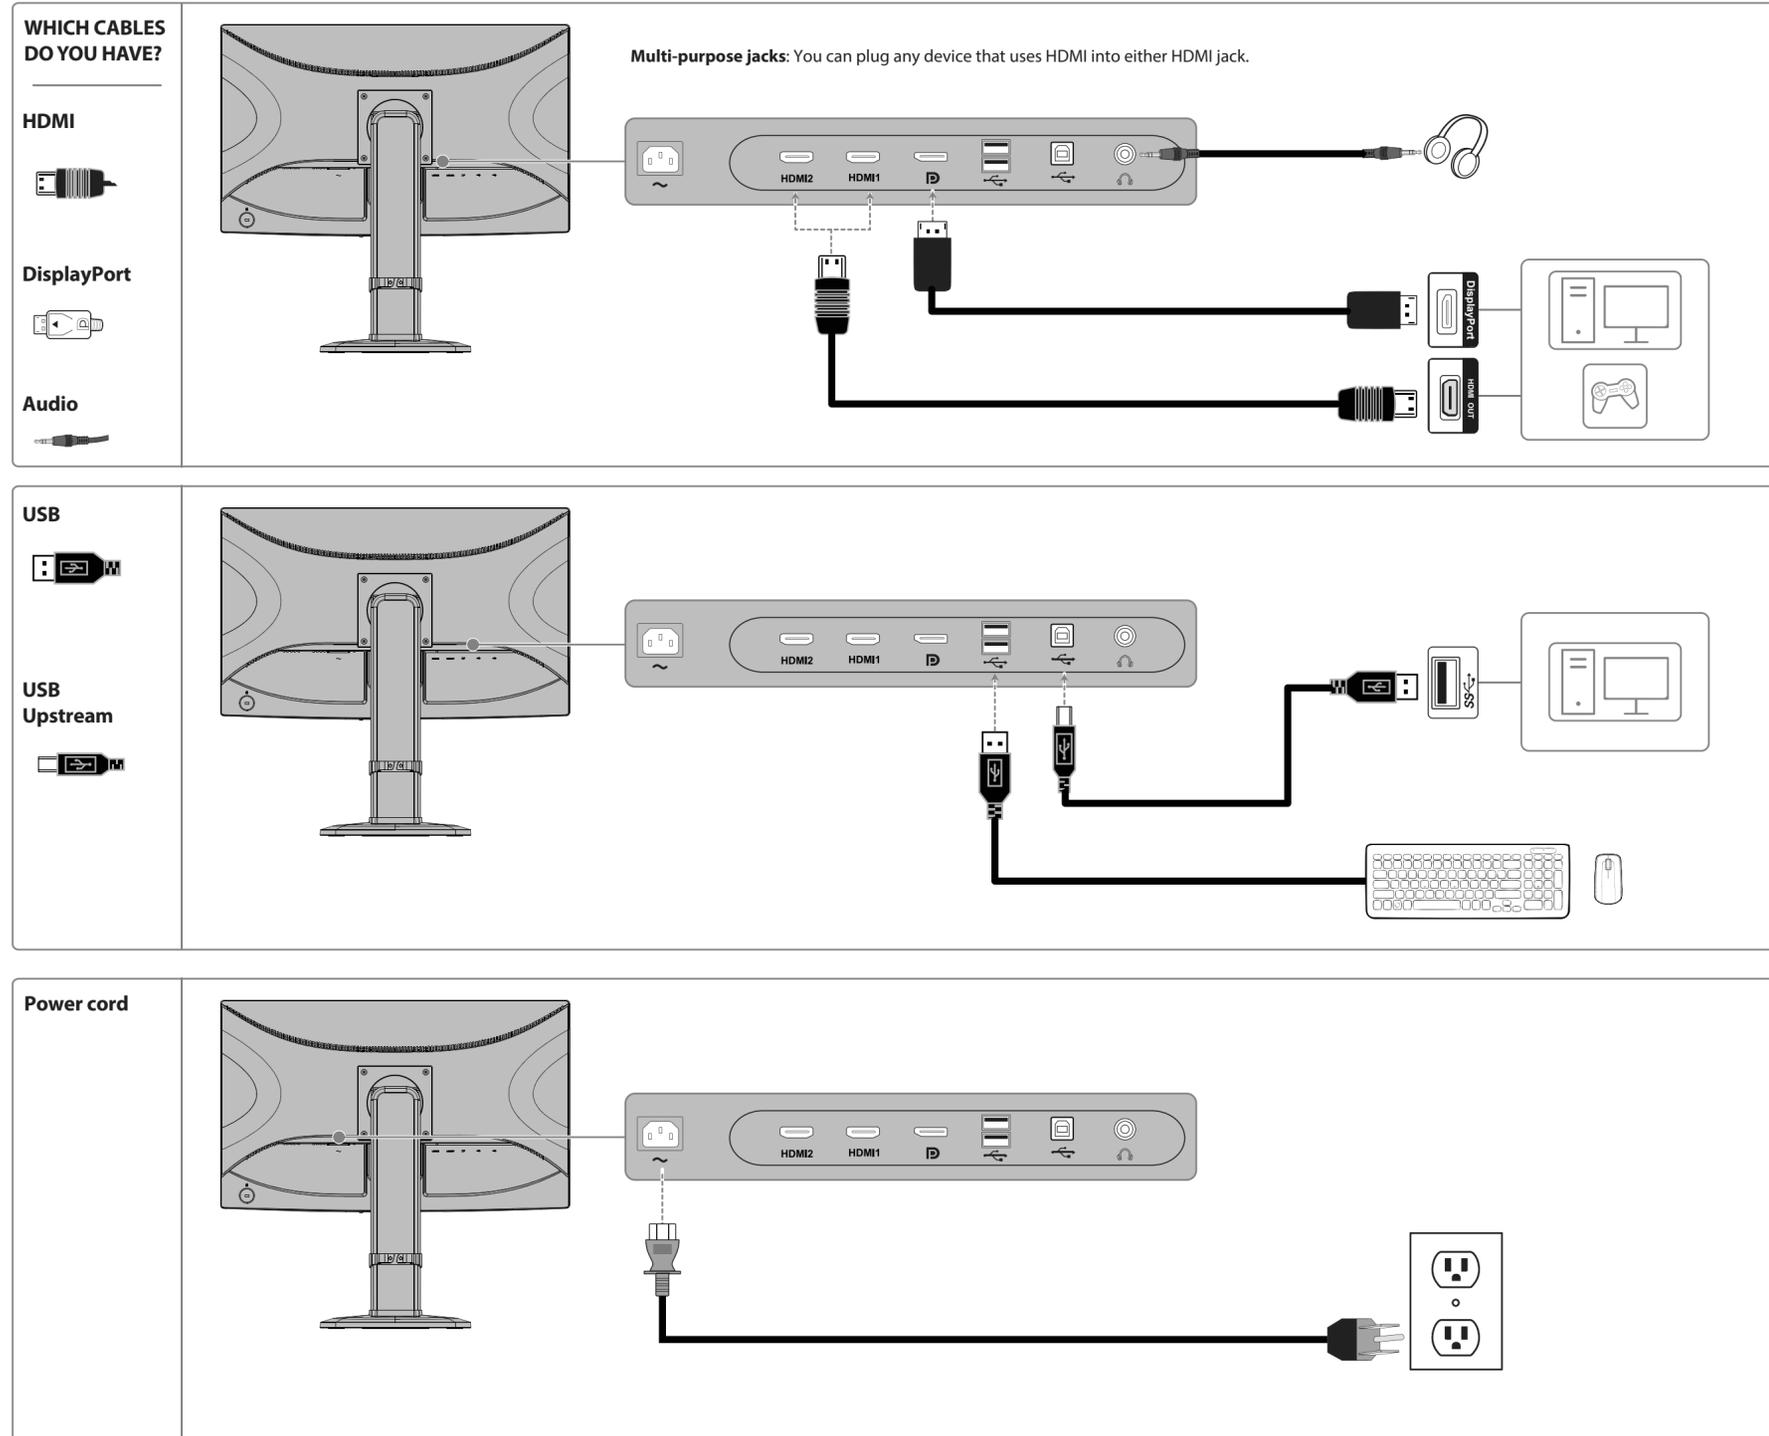

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

NEED ADDITIONAL HELP?

See your online *User Guide*! This comprehensive guide includes everything from basic how-to steps to more advanced features. A copy of your *User Guide* is not provided in the box but is available online.

- 1 Go to www.insigniaproducts.com.
- 2 Use the search bar to find **NS-PMG248**.
- 3 Select **Support & Downloads**.
- 4 Next to *User Guide*, select the language you want.

Check out our **Support Community** <http://community.insigniaproducts.com/> for helpful information from other Insignia Gaming Monitor owners.

WE'RE HERE FOR YOU

www.insigniaproducts.com

For customer service, call:

877-467-4289 (U.S./Canada)

INSIGNIA is a trademark of Best Buy and its affiliated companies
 Distributed by Best Buy Purchasing, LLC
 7601 Penn Ave South, Richfield, MN 55423 U.S.A.
 ©2017 Best Buy. All rights reserved.
Made in China

ADJUSTING YOUR MONITOR

