


70 in. TV Stand with Gaming Nook

NS-STVGN805

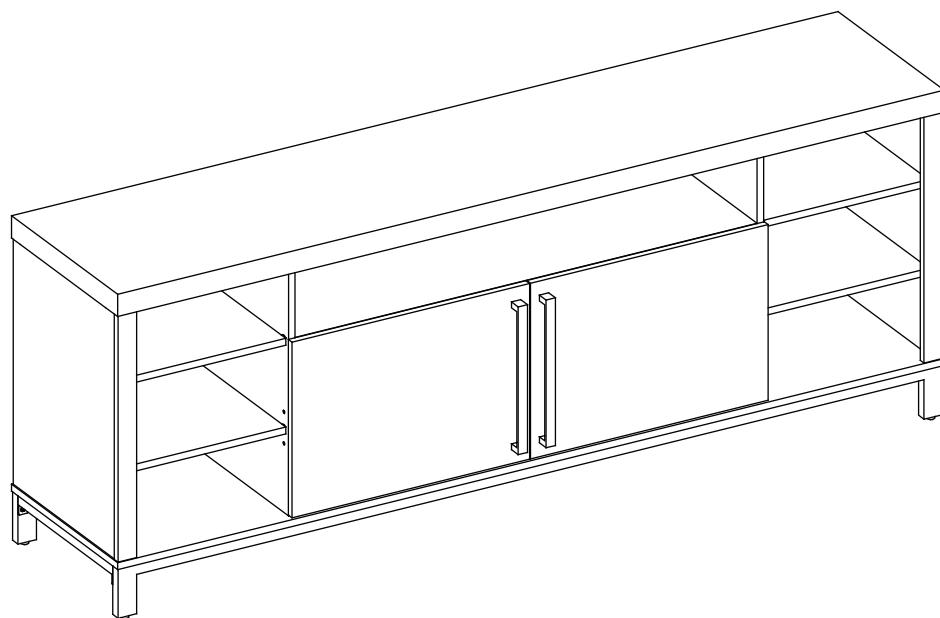

Contents

IMPORTANT SAFEGUARDS	3
Features	4
Dimensions	4
Package contents	5
Parts	5
Hardware	6
Tools needed (not provided)	7
Installation tips	7
Assembling your TV stand	8
Maintaining your TV stand	30
Specifications	30
ONE-YEAR LIMITED WARRANTY	31

IMPORTANT SAFEGUARDS

WARNING



Some steps are more easily handled with two adults.

CAUTION

⚠ The top surface of this TV stand is designed for use with a product weighing no more than 135 lbs. (61.24 kg) and having a width that permits it to sit evenly on the TV stand with no more than a one-inch overhang on each side of the panel. Use with products that weigh more than the maximum weight allowed, or with dimensions that extend beyond the maximum width may result in instability, which may result in injury.

CAUTION

⚠ This product contains small items that could be a choking hazard if swallowed. Keep these items away from young children!

WARNING

⚠ Please use your TV stand correctly and safely. Improper use can cause safety hazards or damage to your furniture or household items. Carefully read the following chart.


LOOK OUT FOR:	WHAT CAN HAPPEN:	HOW TO AVOID THE PROBLEM:
<ul style="list-style-type: none"> Children climbing on the TV stand. A child may try to reach a toy or other object by climbing on the TV stand. Children will play and be active near the TV. 	<ul style="list-style-type: none"> Risk of injury or death. A child climbing on the TV stand can make it top-heavy and cause it to tip over. A child playing with a TV can cause it to tip over. 	<ul style="list-style-type: none"> Never allow children to climb on or play with the TV stand. Do not place toys or food on the top shelves. Children may try to climb to reach them out of curiosity.
<ul style="list-style-type: none"> Improper use of the TV stand to support TVs. A stand designed for use with TVs will specify the maximum weight rating and recommended size of the TVs it will safely support. 	<ul style="list-style-type: none"> Risk of injury or death. TVs can be very heavy. <p>Note: older CRT TVs tend to be unbalanced and prone to tipping forward.</p>	<ul style="list-style-type: none"> A TV must only be set on furniture specifically designed to support a television. Never use a TV that exceeds the weight ratings or size guidelines specified for the TV stand.
<ul style="list-style-type: none"> Improperly moving the TV stand. 	<ul style="list-style-type: none"> The TV stand can tip over or break if improperly moved. Risk of injury. 	<ul style="list-style-type: none"> Unload shelves from the top to the bottom before moving the TV stand. Do not push the TV stand, especially on a carpeted floor. Have a friend help you lift the item and set it in place. Do not lift the TV stand using the top panel. Lift from the frame. Remove the TV before moving the TV stand.
<ul style="list-style-type: none"> The TV/stand assembly tipping forward. 	<ul style="list-style-type: none"> Risk of injury. Top-heavy furniture can tip over. The TV and stand could be damaged. 	<ul style="list-style-type: none"> Use the tipping restraint hardware provided and install it properly.

SAVE THESE INSTRUCTIONS

Features




- 70 in. (177.8 cm) tabletop holds most TVs up to 80 in. (203.2 cm) and 135 lbs. (61.24 kg)
- Multiple storage spaces accommodate your DVD player, gaming console, cable box, and more
- Large cabinet with doors keeps spare accessories out of sight
- Cutouts make it easy to route and hide cords

Dimensions

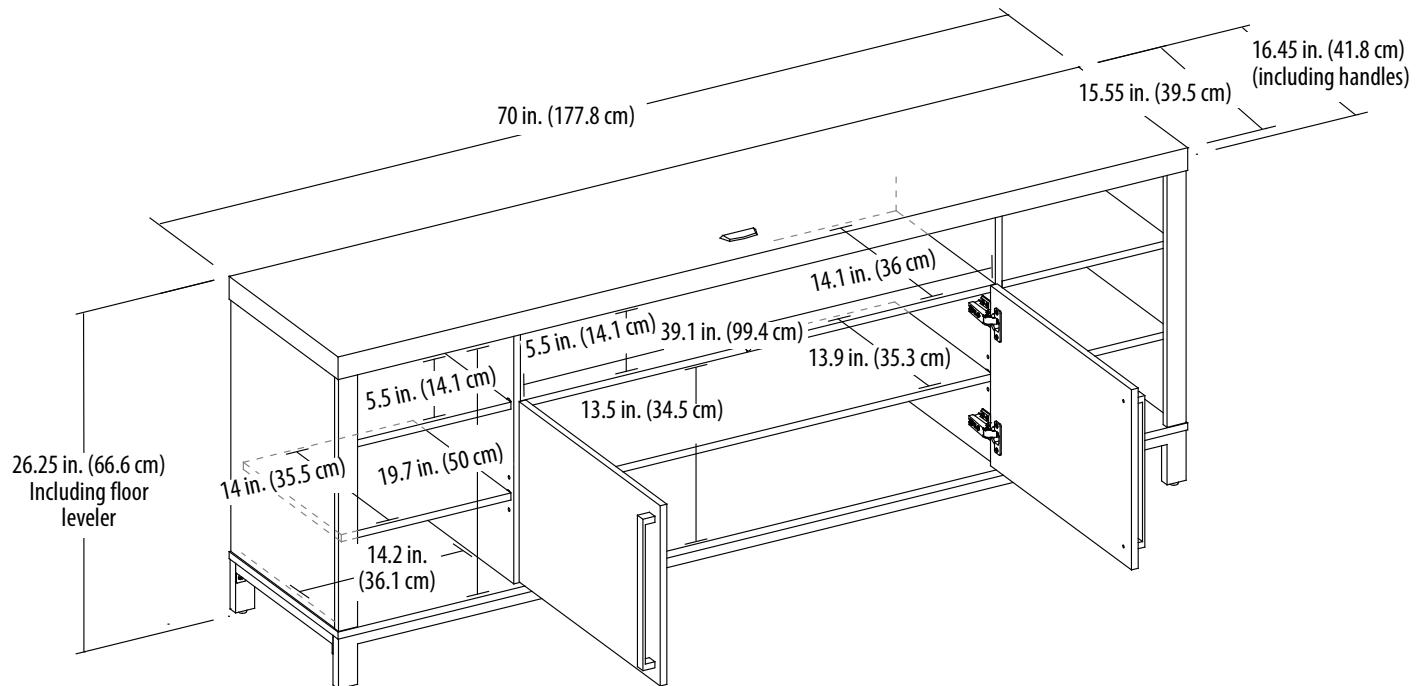


Package contents

 Parts

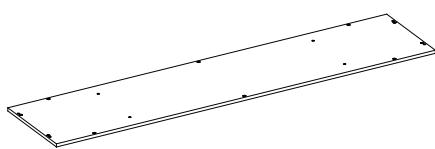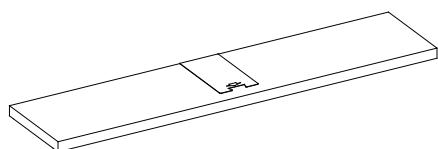



 
A Top panel (1)
Note: Keep the stopper template attached.



D Left side panel (1)

E Left partition (1)

  
 
F Right side panel (1)



G Right partition (1)

H Front molding (2)

 
I Large adjustable shelf (1)

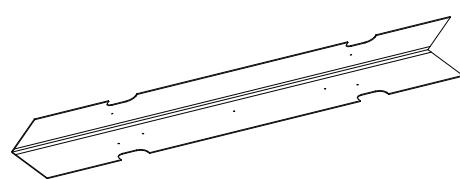

J Small adjustable shelf (4)

K Door (2)


L Back panel (1)

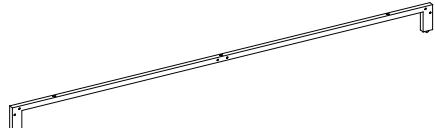

M Reinforcement tube (2)

N Base front/back frame (2)

 P Base side stretcher (2)



Q Base middle support (1)

R Handle (2)


S Door hinge (4)

Hardware

LABEL	TV STAND PART	QTY.
T	Wood dowel M8 x 30 mm	24
U	Cam pin	18
V	Cam lock	18
W	Washer head screw M3.5 x 15 mm	7
X	Pan head screw M3.5 x 27 mm	8
Y	Pan head screw M4 x 50 mm	8
Z	Cam lock cover	18
AA	Plastic holder	10
BB	Flat head screw M3 x 17 mm	10
CC	Shelf support	20
DD	Bolt 1/4" x 15 mm	12


LABEL	TV STAND PART	QTY.
EE	Bolt 1/4" x 32 mm	10
FF	Lock washer	22
GG	Flat washer	22
HH	5/32" x 22 mm handle bolt	4
II	Flat head screw M3.5 x 15 mm	24
JJ	Rubber bumper	2
KK	Acrylic stopper	2
LL	Glue	1
MM	Hex wrench	1
NN	Touch-up pen	1
PP	Tipping restraint hardware kit	2

Extra hardware

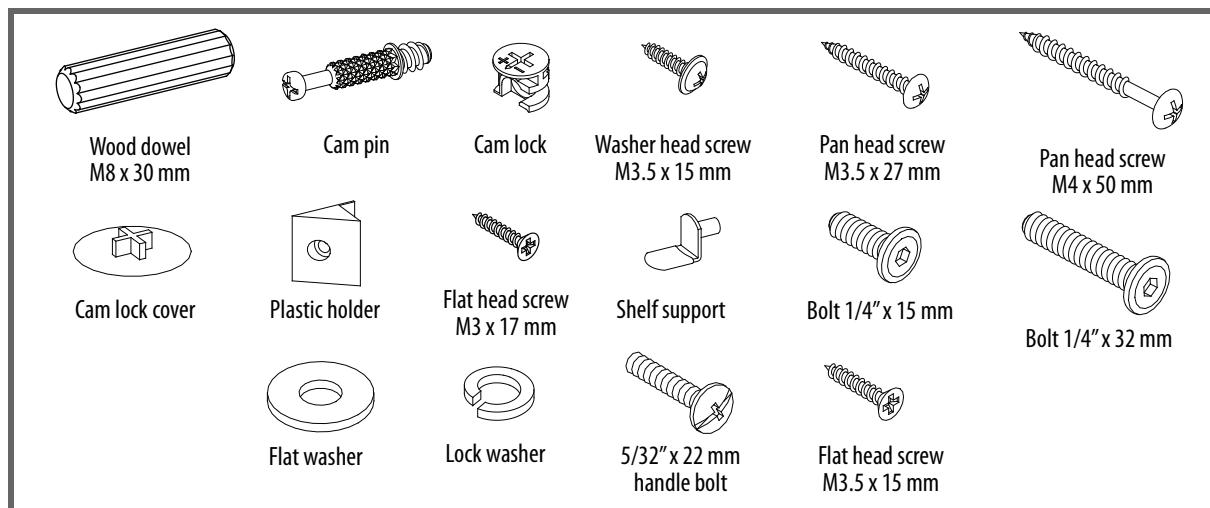

Tools needed (not provided)

 For assembling the TV stand



Phillips screwdriver




Rubber mallet




Pliers

For installing the tipping restraint

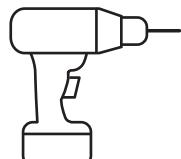

Power drill

 

Phillips screwdriver



1/8" drill bit




Edge-to-edge stud finder

Note: DO NOT USE power tools unless it is explicitly identified in this manual as required for use during assembly. Power tools can damage the fasteners, hardware, and/or components.

Installation tips

Gluing wood dowels (T)


When using a wood dowel (T), put one drop of glue (LL) in the hole before you insert the wood dowel (T). Insert the wood dowel (T), then gently tap it with a rubber mallet to secure it in place.

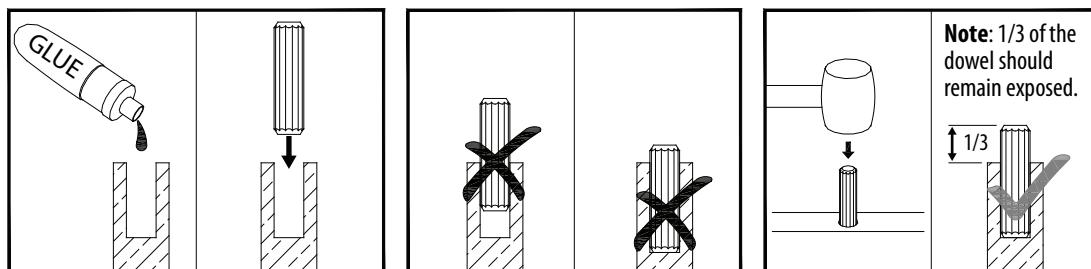

Locking cam pins (U) and cam locks (V)

- 1 One end of a cam pin (U) is threaded so that it screws into place. The other end is not threaded. Before you insert the non-threaded end into a hole, insert a cam lock (V) into the hole and make sure that the hole in the cam lock (V) faces the outside edge of the part being used.
- 2 Insert the non-threaded end of the cam pin (U) through the hole in the part being used and into the cam lock hole, then rotate the cam lock (V) clockwise with a screwdriver to lock the cam pin (U) into place.
- 3 Insert a cam lock cover (Z) into the cross slot of the cam lock (V) to conceal.

Cam pin

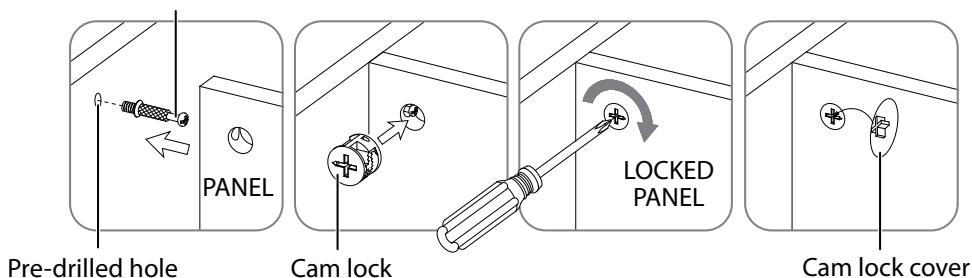


Assembling your TV stand

Tip: Assemble your TV stand on a carpeted floor or the empty TV stand carton to avoid scratching it.


Note: Do not fully tighten all bolts until you finish assembling all of the parts. After assembly, go back and fully tighten all bolts. This will make the assembly easier.






STEP 1: Preparing the top panel and partitions

You need:

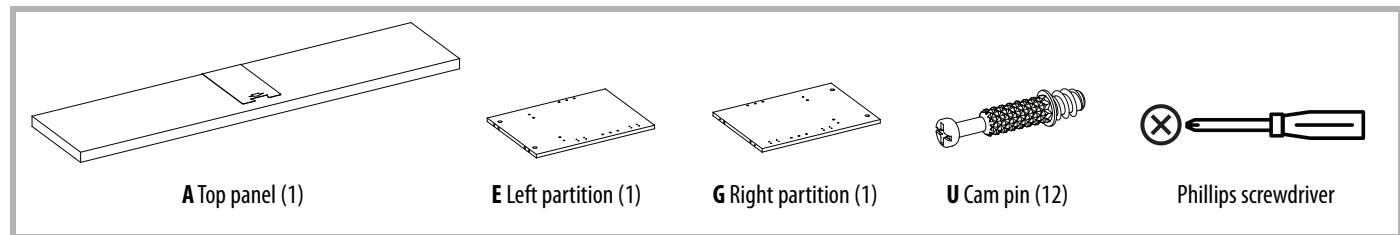


   
 
 
- Securely screw the cam pins (U) into the indicated holes in the top panel (A) and partitions (E and G), using a Phillips screwdriver.

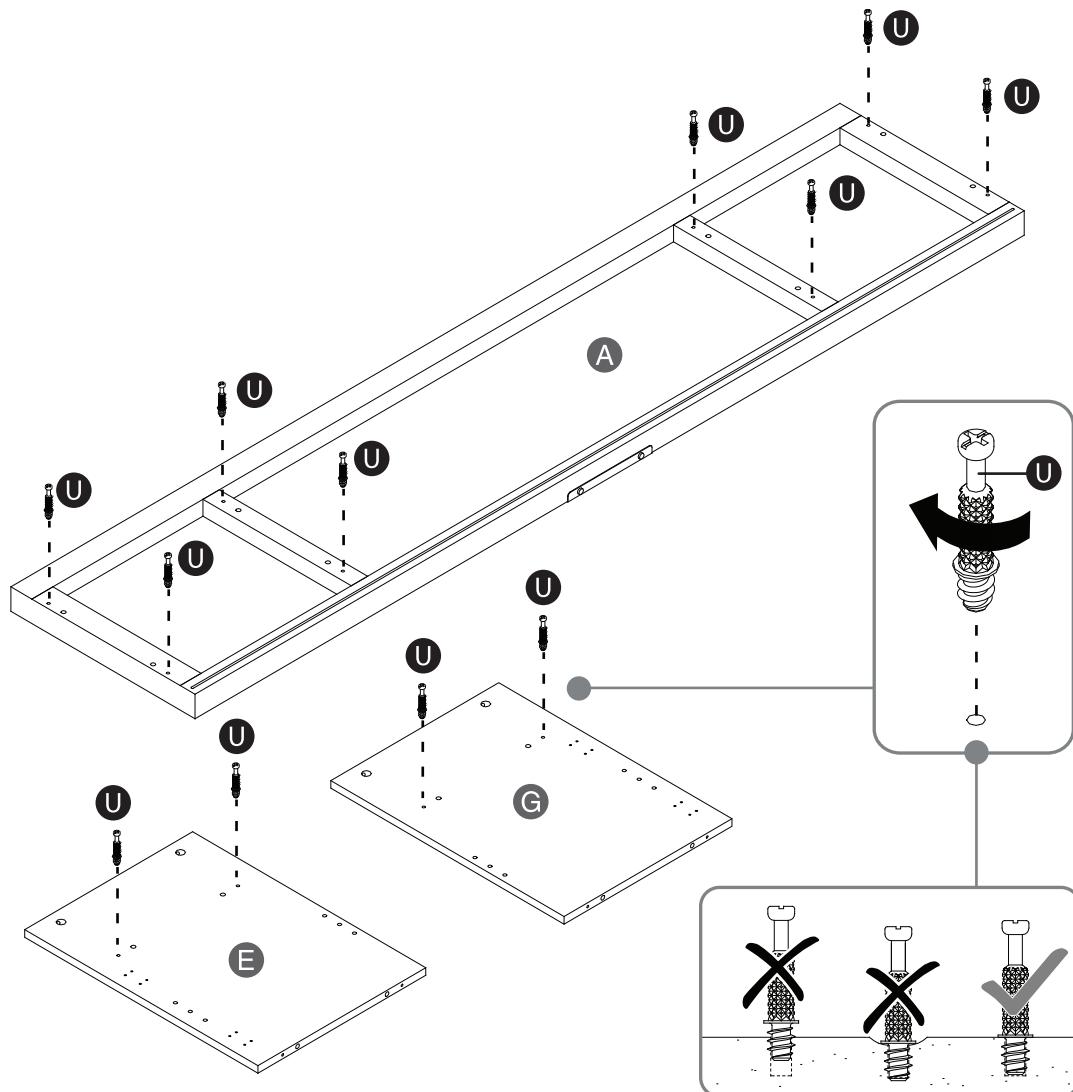

STEP 2: Preparing the media shelf and partitions**You need:****C** Media shelf (1)**E** Left partition (1)**G** Right partition (1)**T** Wood dowel (12)**LL** Glue (1)

   
- Glue wood dowels (**T**) into the pre-drilled inner holes on the shelf (**C**) and partitions (**E** and **G**).



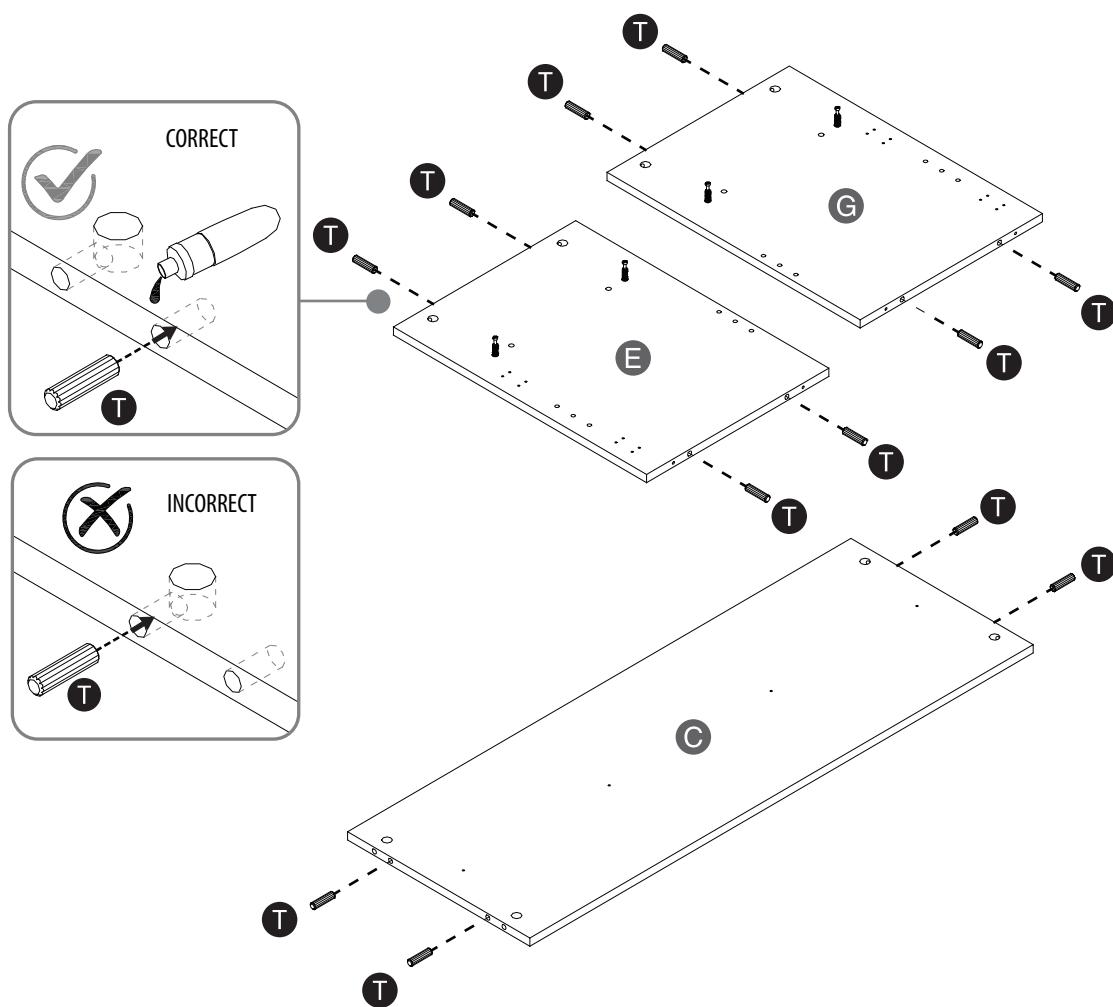


STEP 3: Installing the reinforcement tubes onto the shelves**You need:****C** Media shelf (1)**I** Large adjustable shelf (1)**M** Reinforcement tube (2)**X** Pan head screw
M3.5 x 27 mm (8)

Phillips screwdriver

   
- Using the pilot holes as a guide, fasten one reinforcement tube (**M**) to the bottom of each shelf (**C** and **I**) with four M3.5 x 27 mm pan head screws (**X**). Tighten with a Phillips screwdriver.

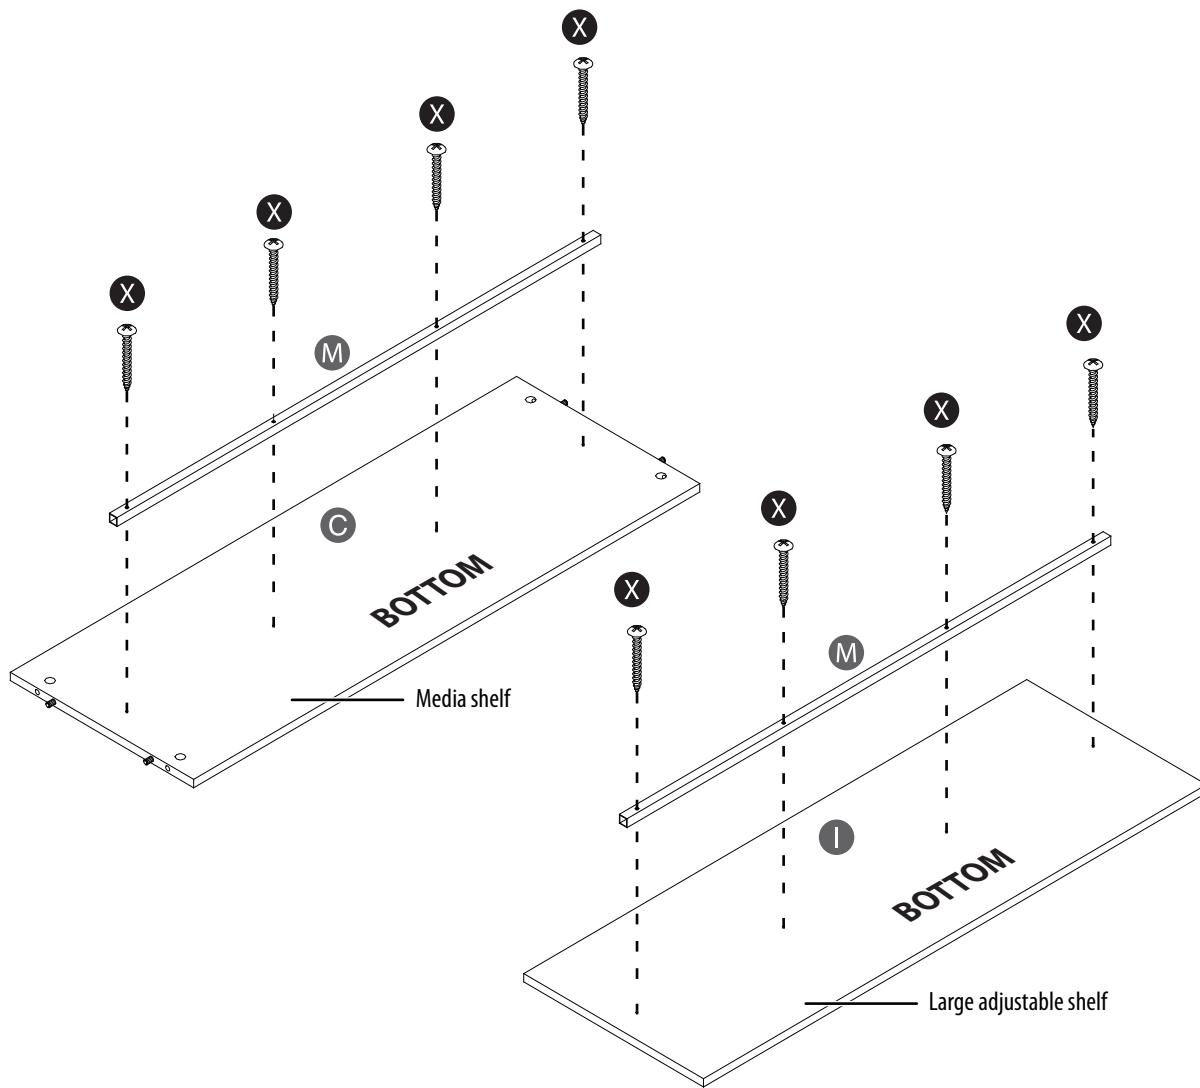


STEP 4: Installing the media shelf between the partitions**You need:****E** Left partition (1)**G** Right partition (1)**V** Cam lock (4)

Phillips screwdriver

- Align and attach the media shelf (**C**) between both partitions (**E** and **G**) by engaging and tightening four cam locks (**V**).

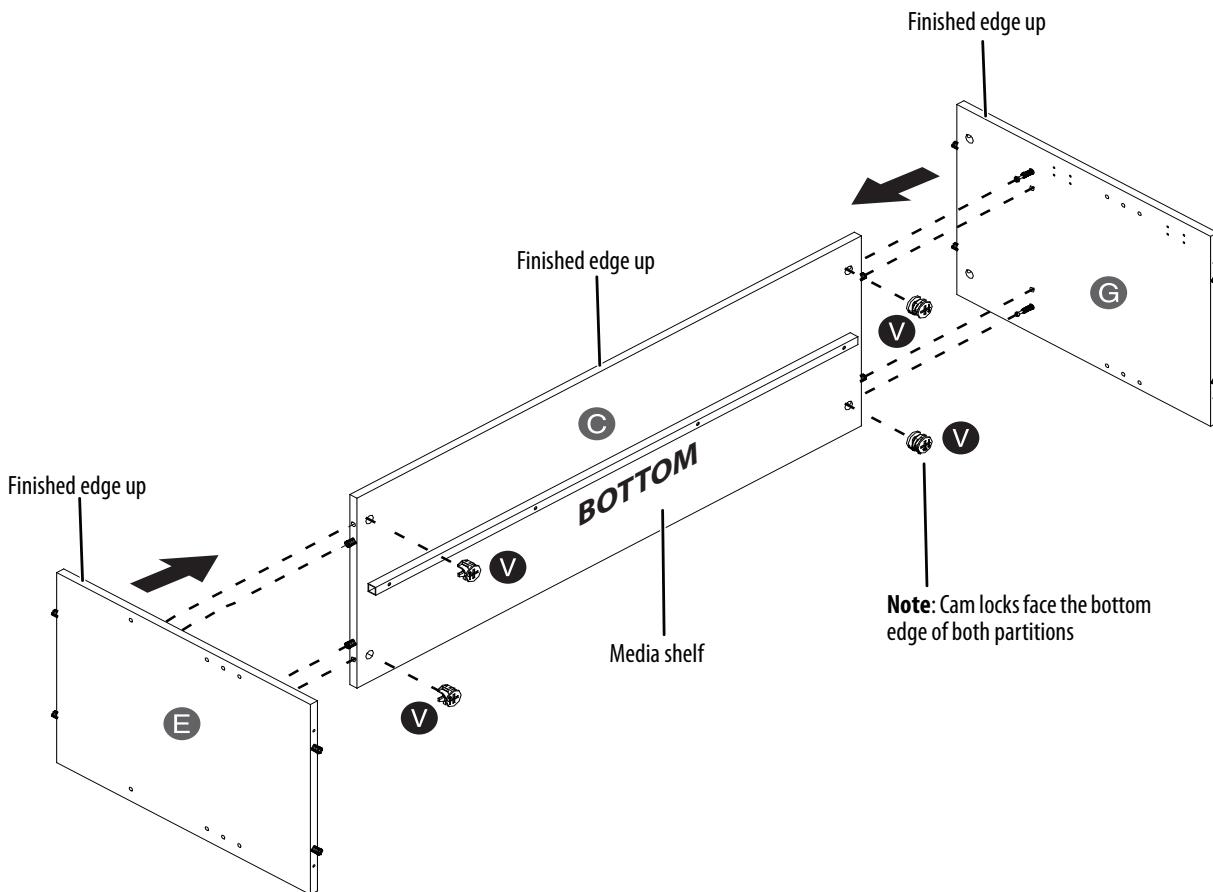


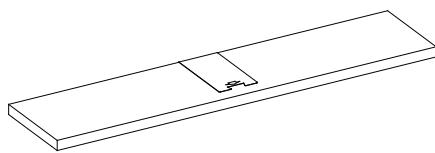STEP 5: Attaching the assembled partitions to the top panel**You need:**

A Top panel (1)





 
V Cam lock (4)



Phillips screwdriver

  
- Align and attach the assembled partitions (**E** and **G**) to the top panel (**A**) by engaging and tightening four cam locks (**V**) with a Phillips screwdriver.




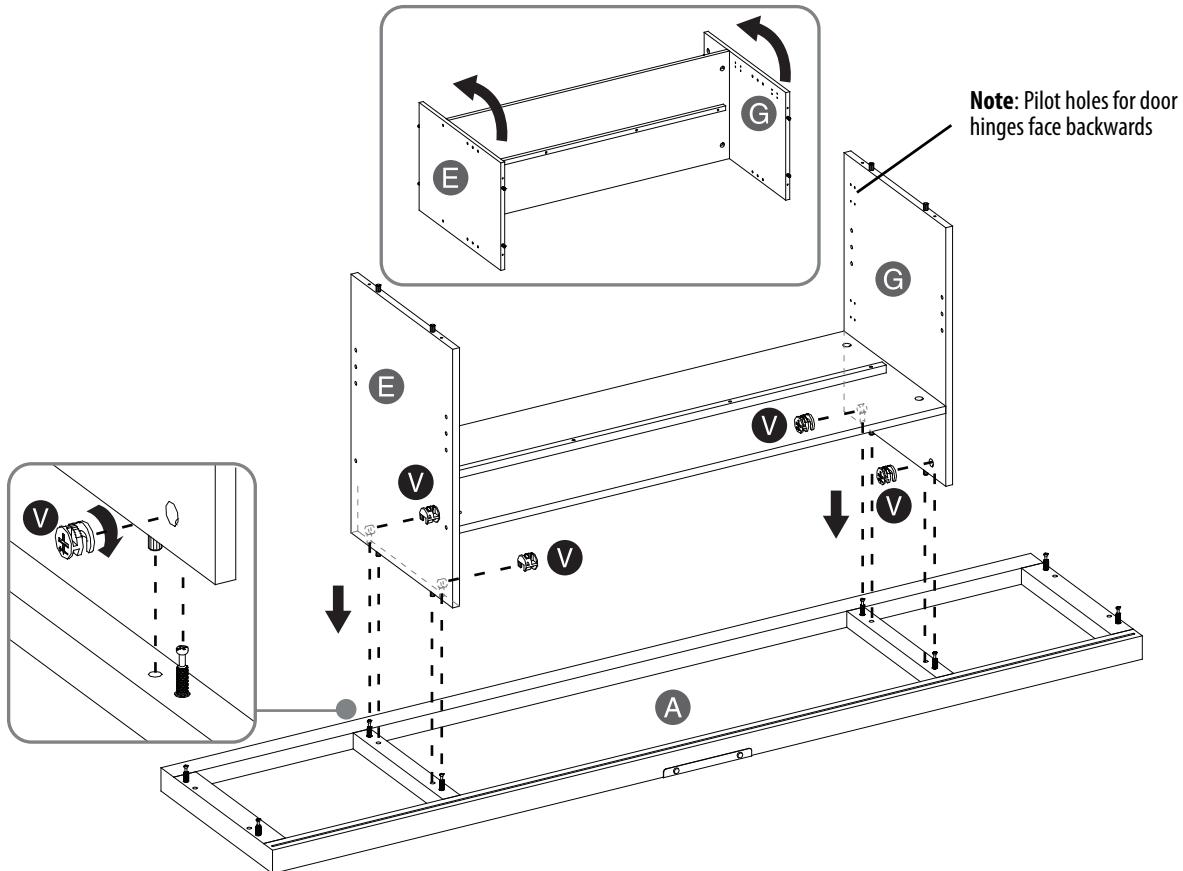


STEP 6: Preparing the front moldings**You need:****H** Front molding (2)**U** Cam pin (6)


Phillips screwdriver

   
 
- Securely screw the cam pins (**U**) into the indicated holes in the front moldings (**H**), using a Phillips screwdriver.

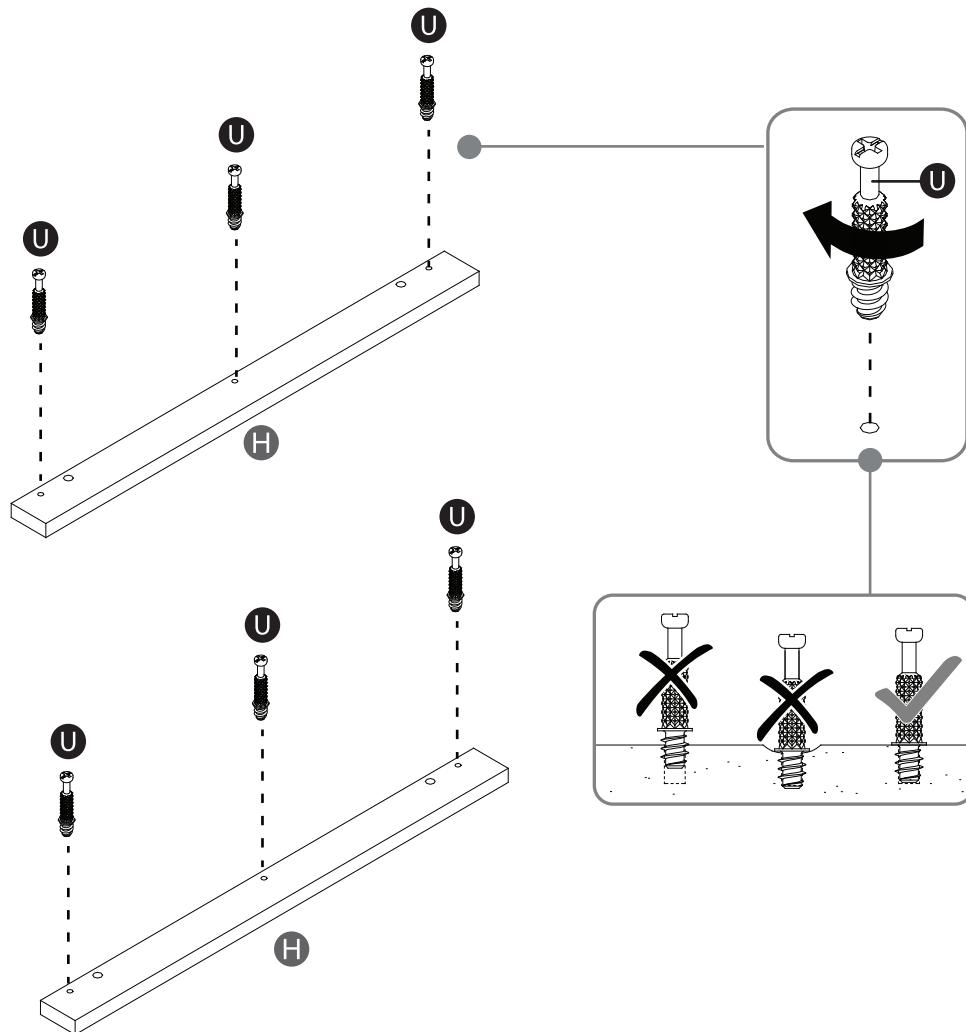

STEP 7: Preparing the side panels**You need:****D** Left side panel (1)**F** Right side panel (1)**T** Wood dowel (12)**LL** Glue (1)

 
 
- Glue wood dowels (**T**) into the inner holes pre-drilled in the ends of both side panels (**D** and **F**).



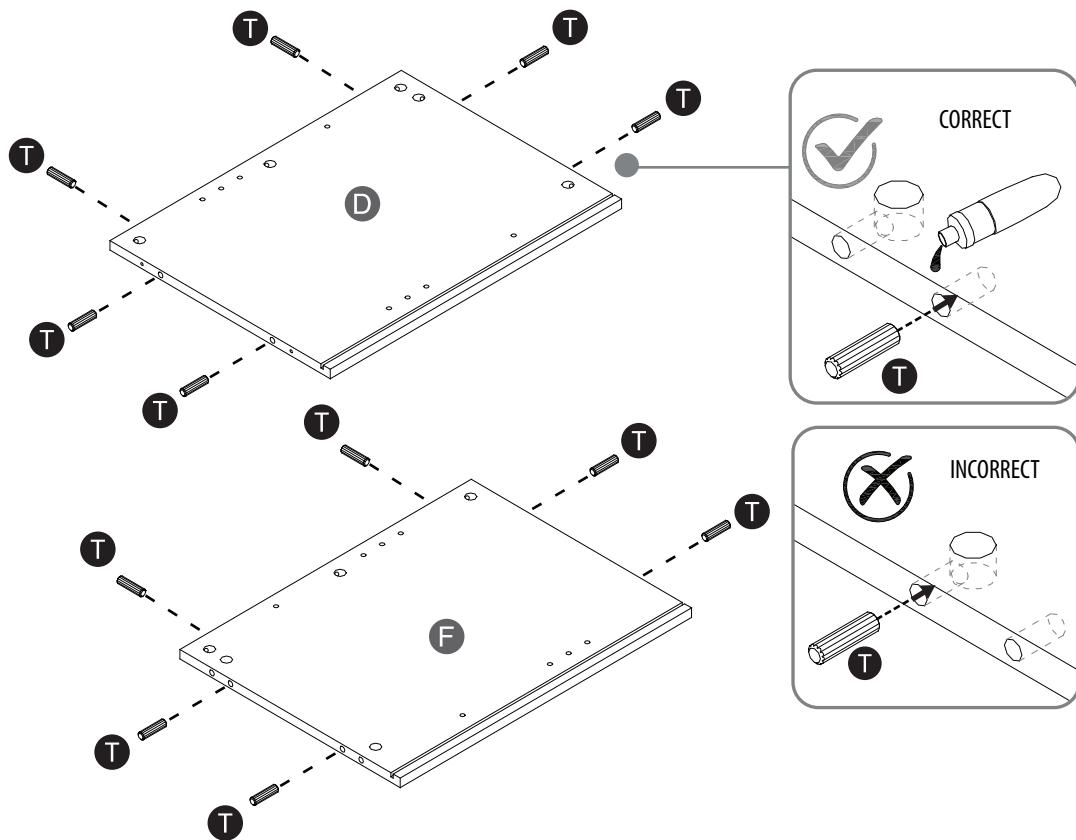


STEP 8: Assembling the front moldings and the side panels**You need:****H** Front molding (2)**V** Cam lock (6)

Phillips screwdriver

   
- Align and attach one front molding (**H**) to each of the side panels (**D** and **F**) by engaging three cam locks (**V**).

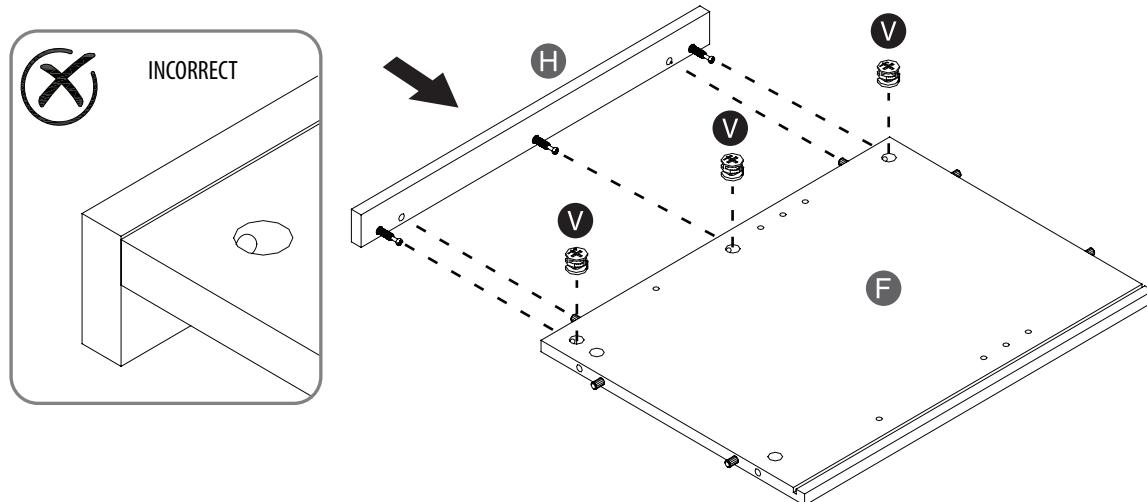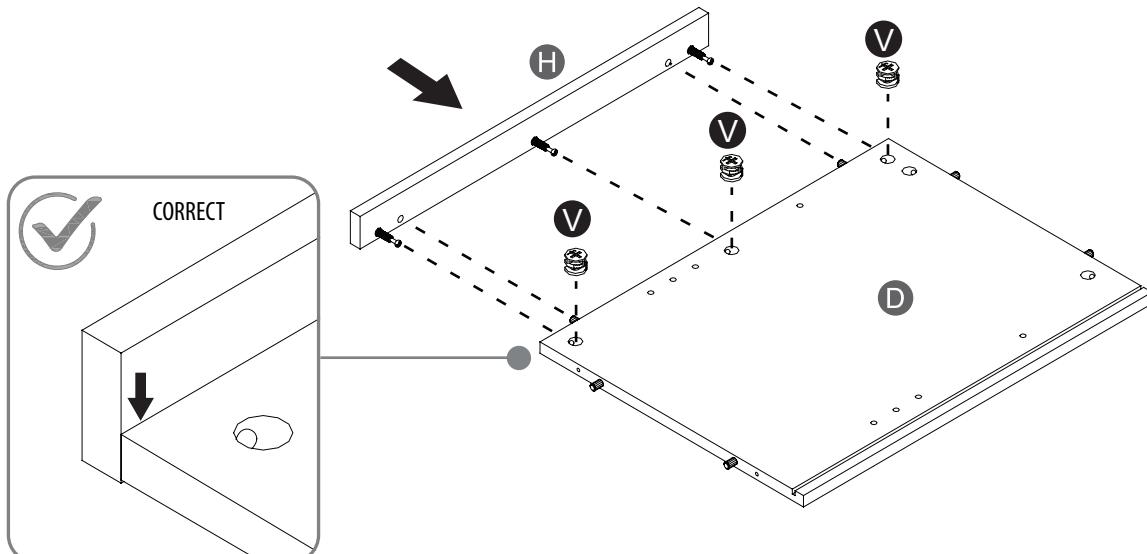


STEP 9: Assembling the side panels and the top panel**You need:****D** Left side panel (1)**F** Right side panel (1)**V** Cam lock (4)


Phillips screwdriver




- Align and attach the assembled side panels (**D** and **F**) to the top panel (**A**) by engaging and tightening four cam locks (**V**).

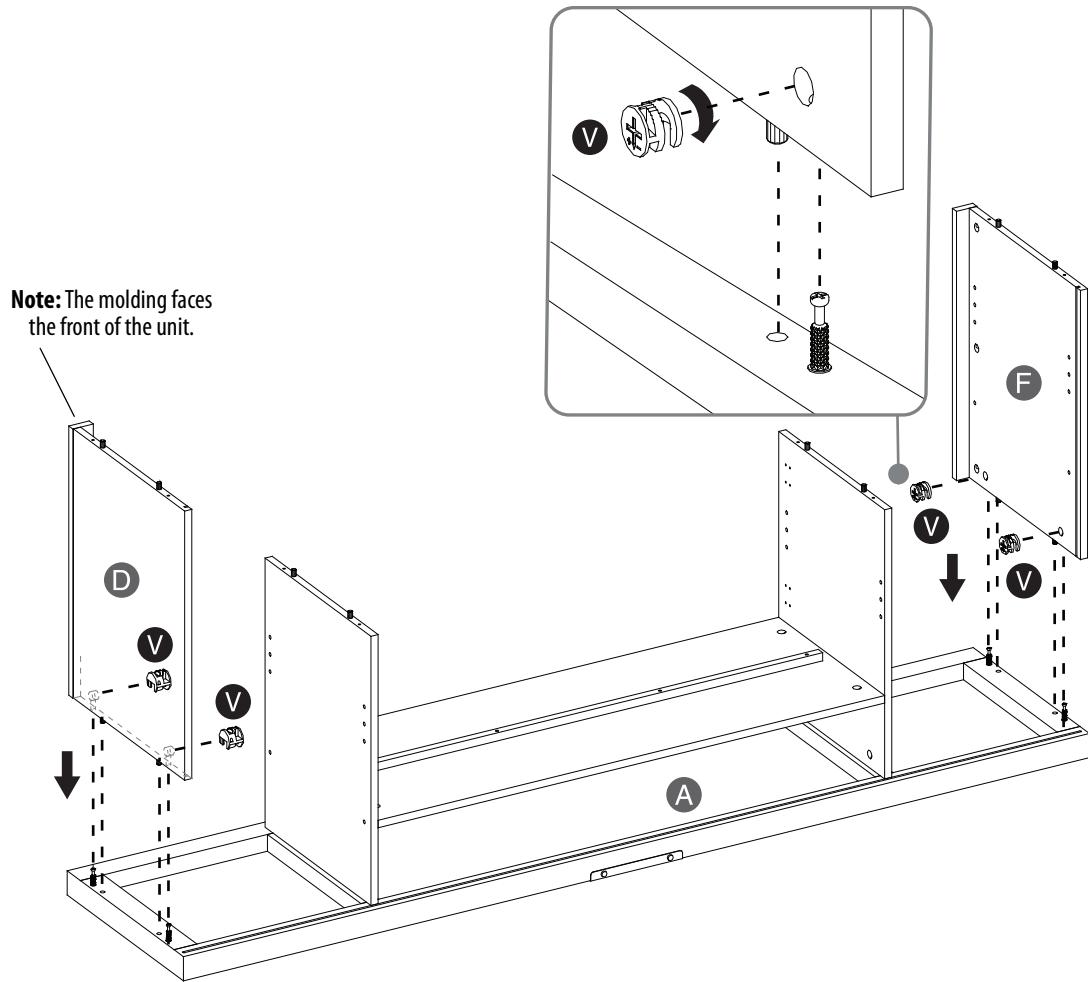

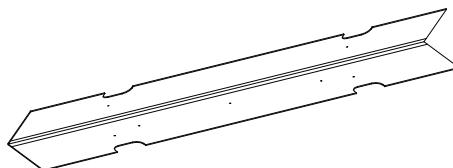STEP 10: Installing the back panel**You need:****L** Back panel (1)

  
- Unfold the back panel (**L**) and slide it into the grooves on both side panels (**D** and **F**) until it's fully inserted into the top panel (**A**). Make sure that the three pilot holes on the back panel (**L**) line up with the media shelf (**C**).

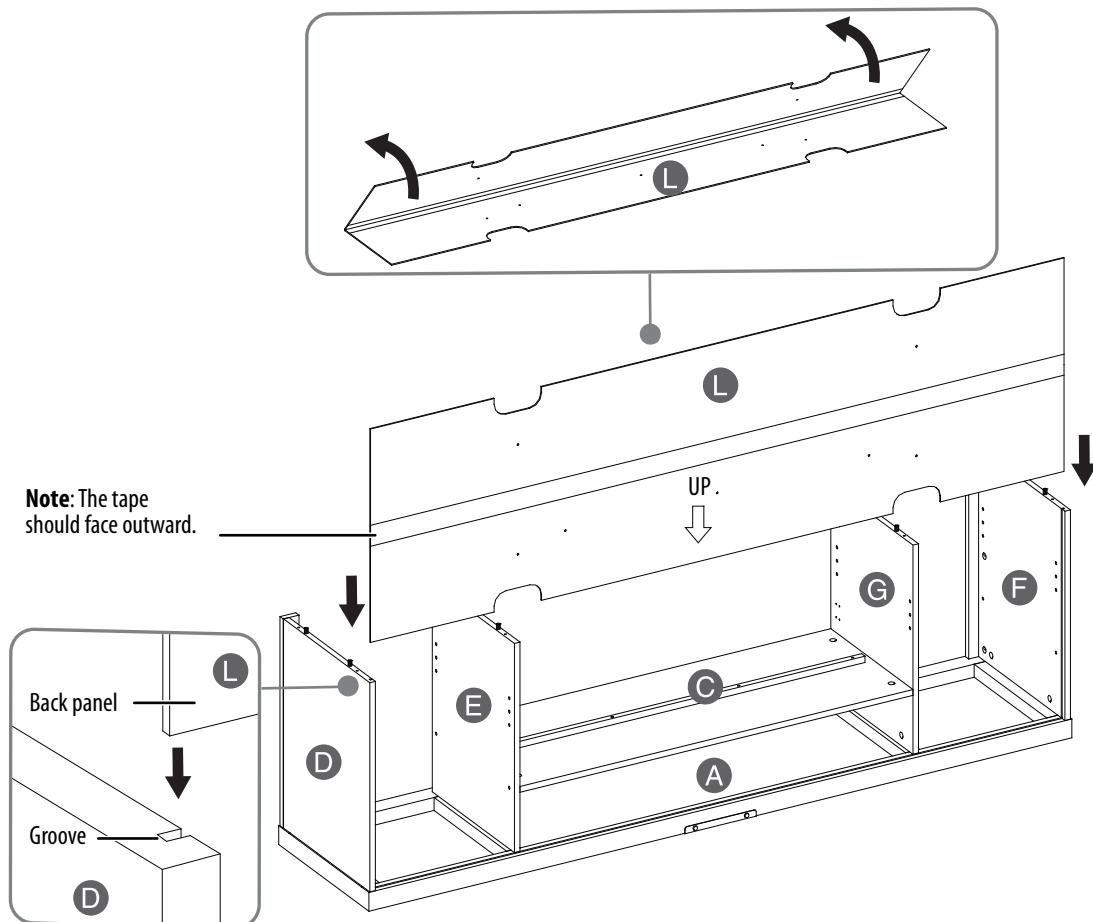

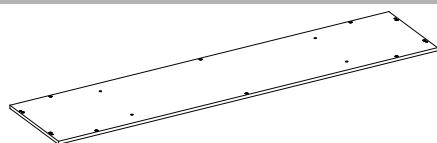STEP 11: Installing the bottom panel on the unit**You need:****B** bottom panel (1)**Y** M4 x 50 mm pan head screw (8)


Phillips screwdriver

- Align and attach the bottom panel (**B**) to the assembled vertical partitions and panels (**D**, **E**, **F**, and **G**) with eight M4 x 50 mm pan head screws (**Y**). Make sure that back panel (**L**) fits securely into the groove in the bottom panel (**B**).

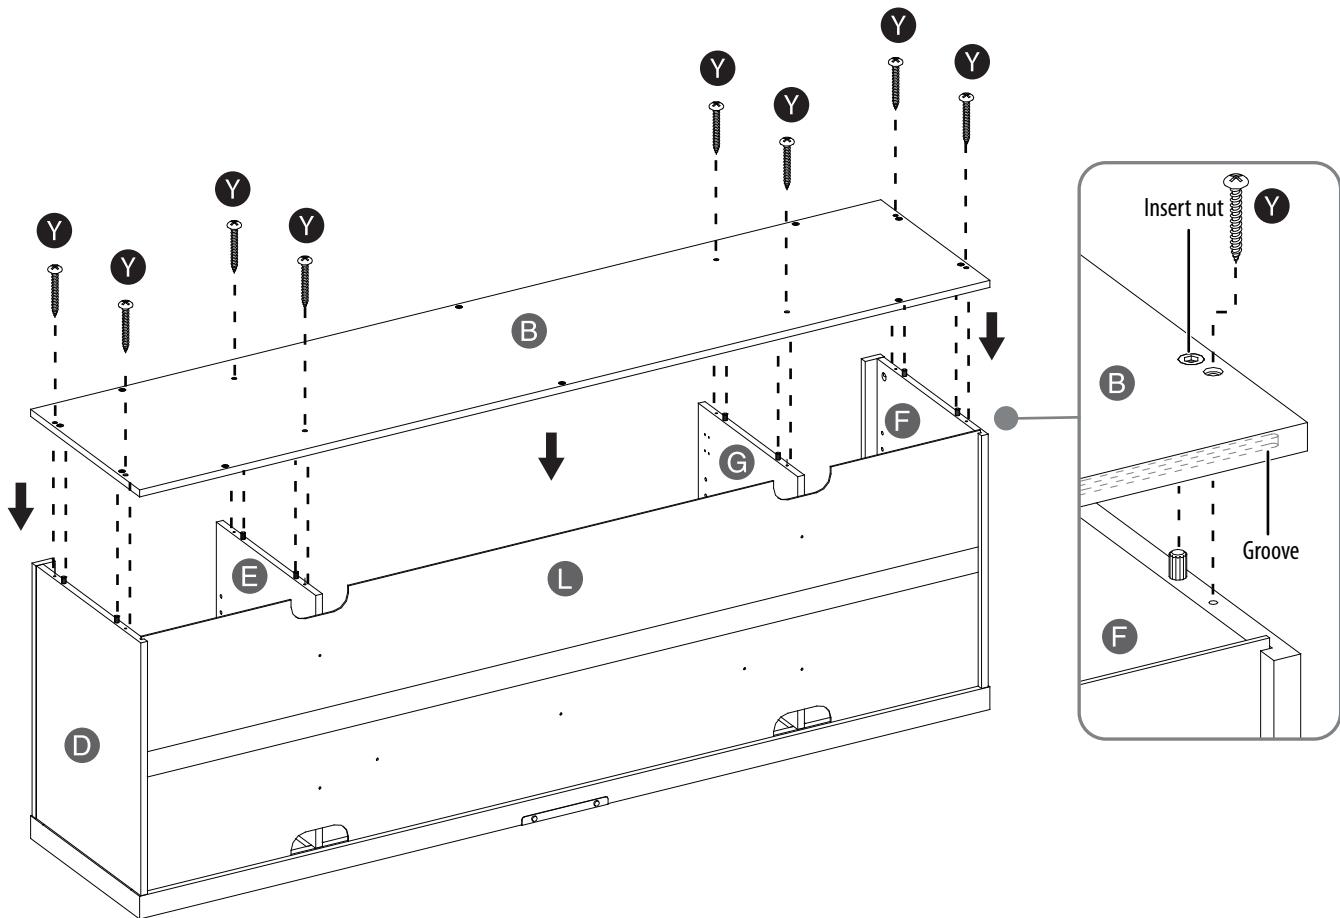




STEP 12: Assembling the metal base

You need:

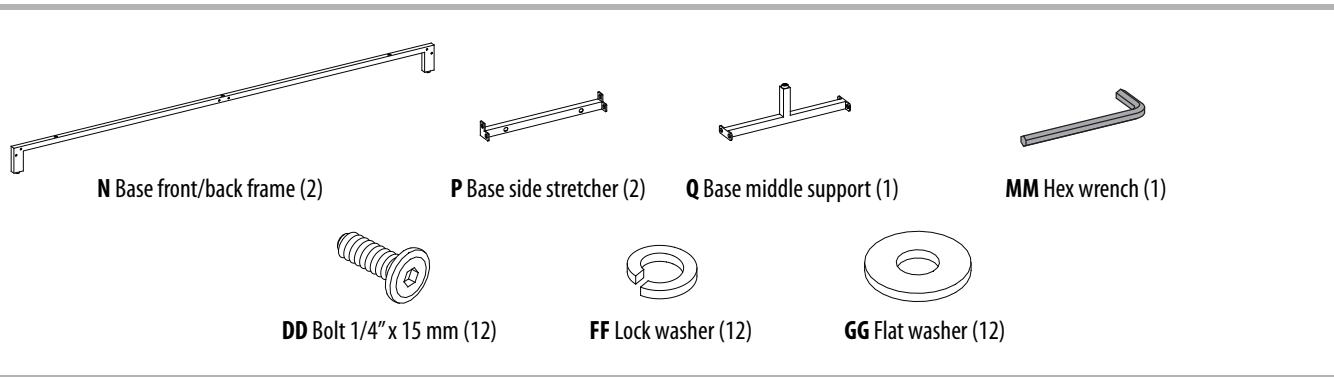


- 1 Align and attach two base side stretchers (**P**) to one base front/back frame (**N**) by inserting four 1/4" x 15 mm bolts (**DD**) with lock washers (**FF**) and flat washers (**GG**) through the metal brackets and loosely screw into place.
- 2 Align and attach the base middle support (**Q**) to the base front/back frame (**N**) with two 1/4" x 15 mm bolts (**DD**) with lock washers (**FF**) and flat washers (**GG**). DO NOT fully tighten the bolts.
- 3 Repeat the same process to attach the other base front/back frame (**N**) at the opposite end.

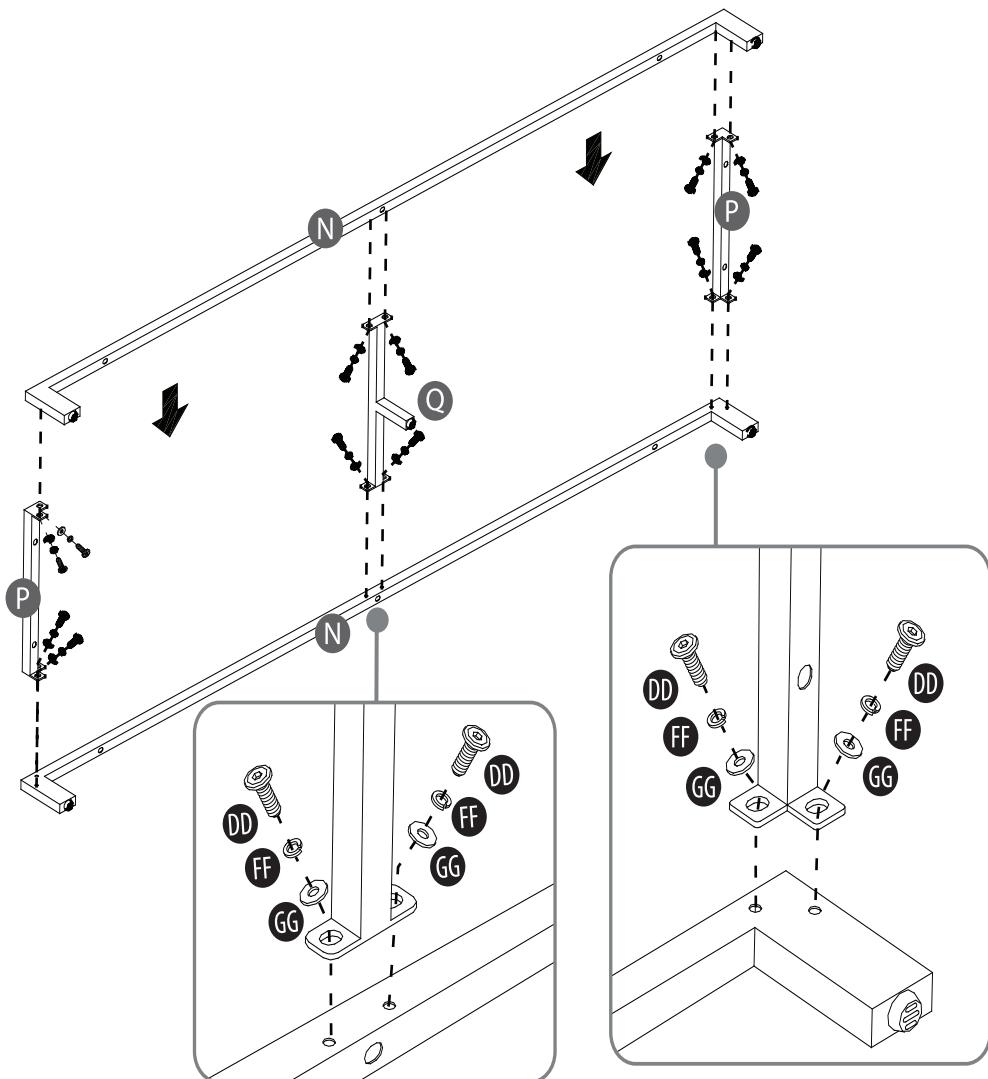

  STEP 13: Attaching the metal base to the bottom panel**You need:****EE** Bolt 1/4" x 32 mm (10)**FF** Lock washer (10)**GG** Flat washer (10)**MM** Hex wrench (1)


- Align and attach the assembled base to the bottom panel (**B**) of the unit with ten 1/4" x 32 mm bolts (**EE**), ten lock washers (**FF**), and ten flat washers (**GG**). After tightening the bolts holding the base to the bottom panel (**B**), fully tighten the bolts installed during the previous assembly step (on page 19).

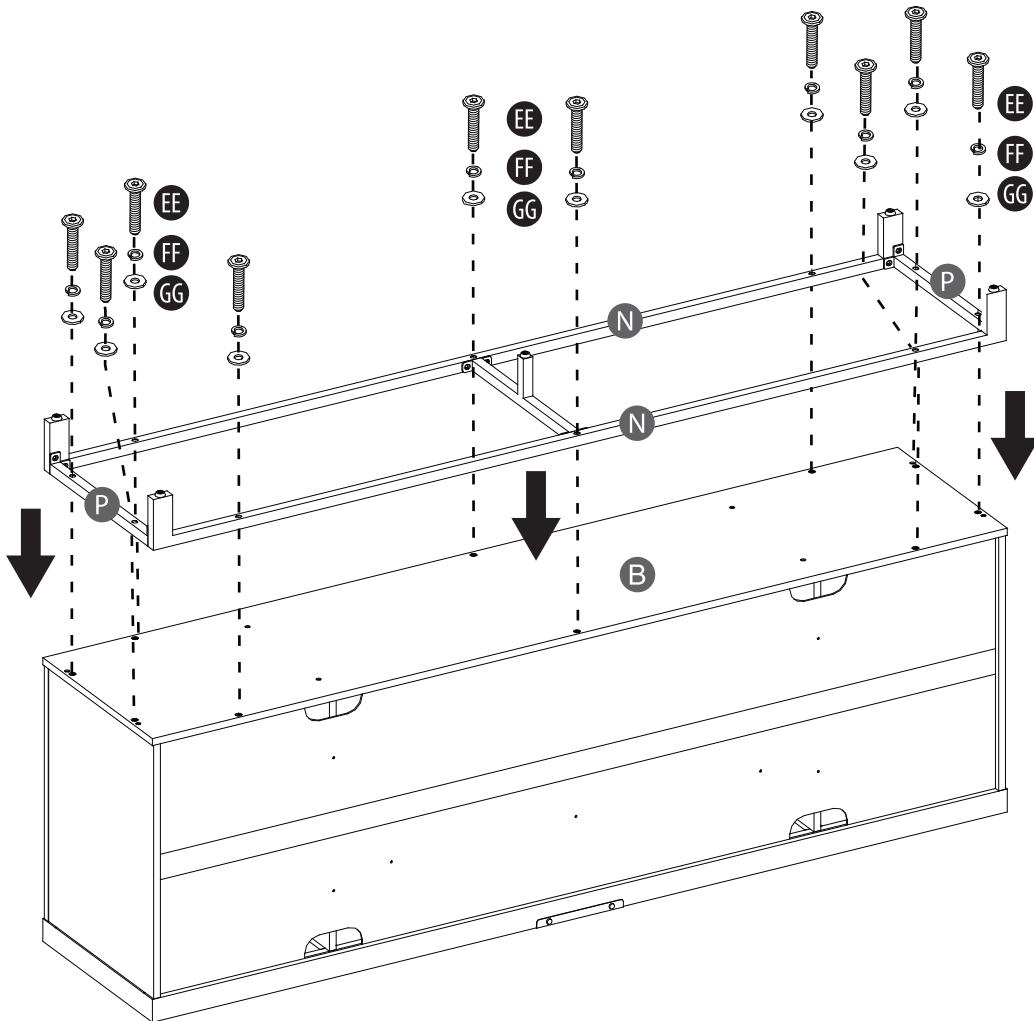


STEP 14: Fastening the back panel to the media shelf and partitions**You need:****W** M3.5 x 15 mm washer head screw (7)

Phillips screwdriver


- Insert seven M3.5 x 15 mm washer head screws (**W**) through the mounting holes in the back panel (**L**) and into the media shelf (**C**) and partition panels (**E** and **G**), using a Phillips screwdriver.

 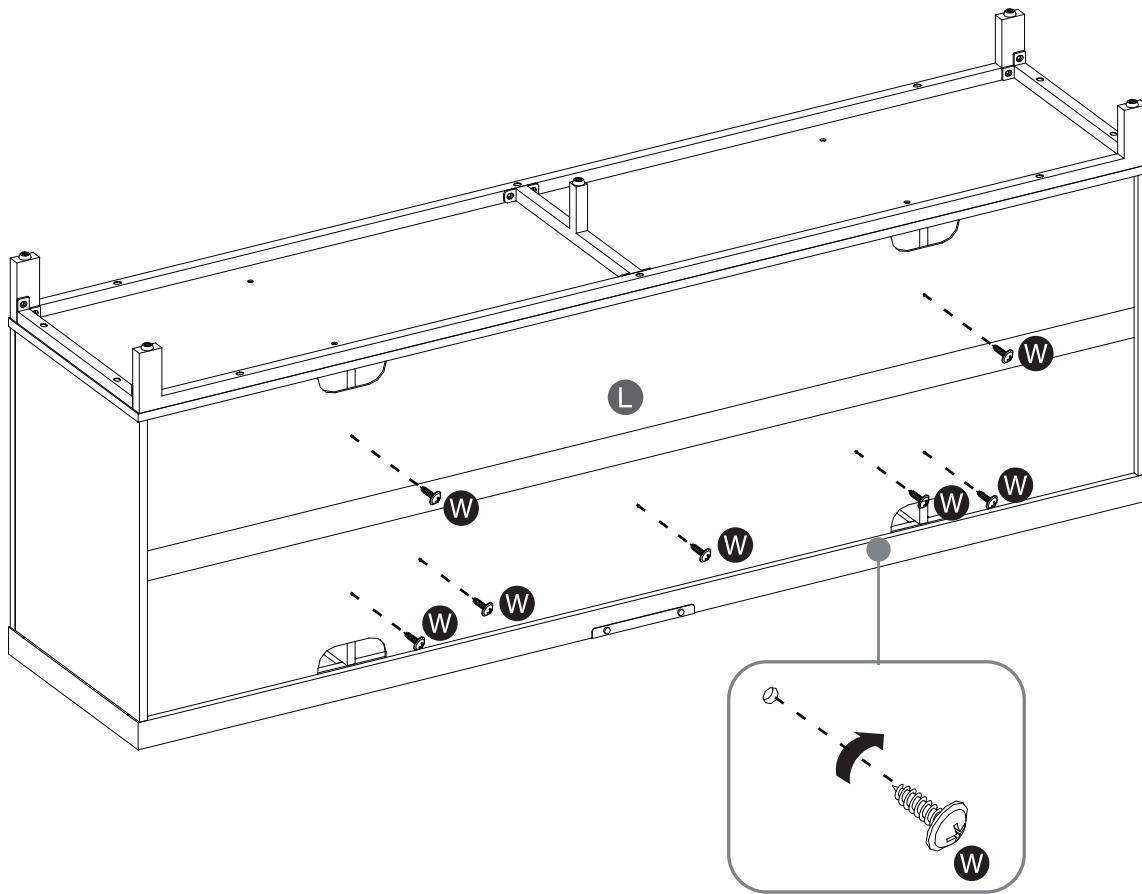CAUTION: Always exercise caution to ensure that you do not damage the edges of the partitions or the media shelf.

STEP 15: Fastening the back panel to the assembled unit**You need:****AA** Plastic holders (10)**BB** M3 x 17 mm screw (10)

Phillips screwdriver


- 1 Insert ten plastic holders (**AA**) evenly into the gaps between the back panel (**L**) and the other panels (**A**, **B**, **D**, and **F**) as shown.
- 2 Secure the plastic holders into place with ten M3 x 17 mm screws (**BB**), using a Phillips screwdriver. Do not damage the edges.

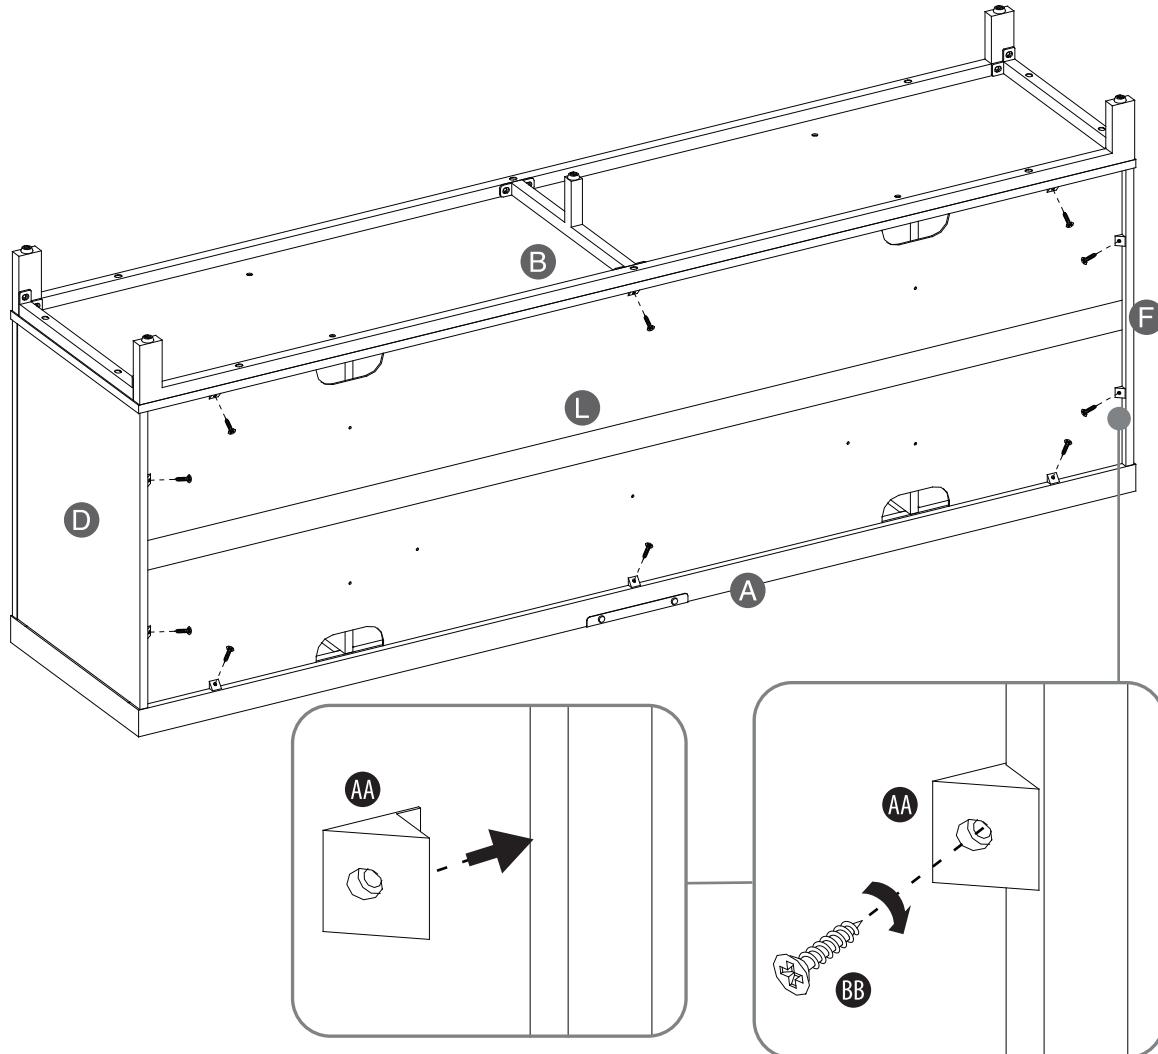


STEP 16: Installing the adjustable shelves (optional)

Note: The included four small adjustable shelves (J) are optional. To accommodate a vertical gaming console, you can choose not to install one or more of the shelves.

 You need:



I Large adjustable shelf (1)

 

J Small adjustable shelf (4)




CC Shelf support (20)

- 1 Lift the unit upright and position it near the desired location. The unit is heavy so you may need to ask for assistance.
- 2 Insert the shelf supports (CC) into the holes at the desired height. Make sure that you place the four shelf supports at the same level to assure a level shelf.
- 3 Insert and rest the adjustable shelves (I and J) onto the shelf supports (CC).



CAUTION: The unit is heavy so you may need assistance.

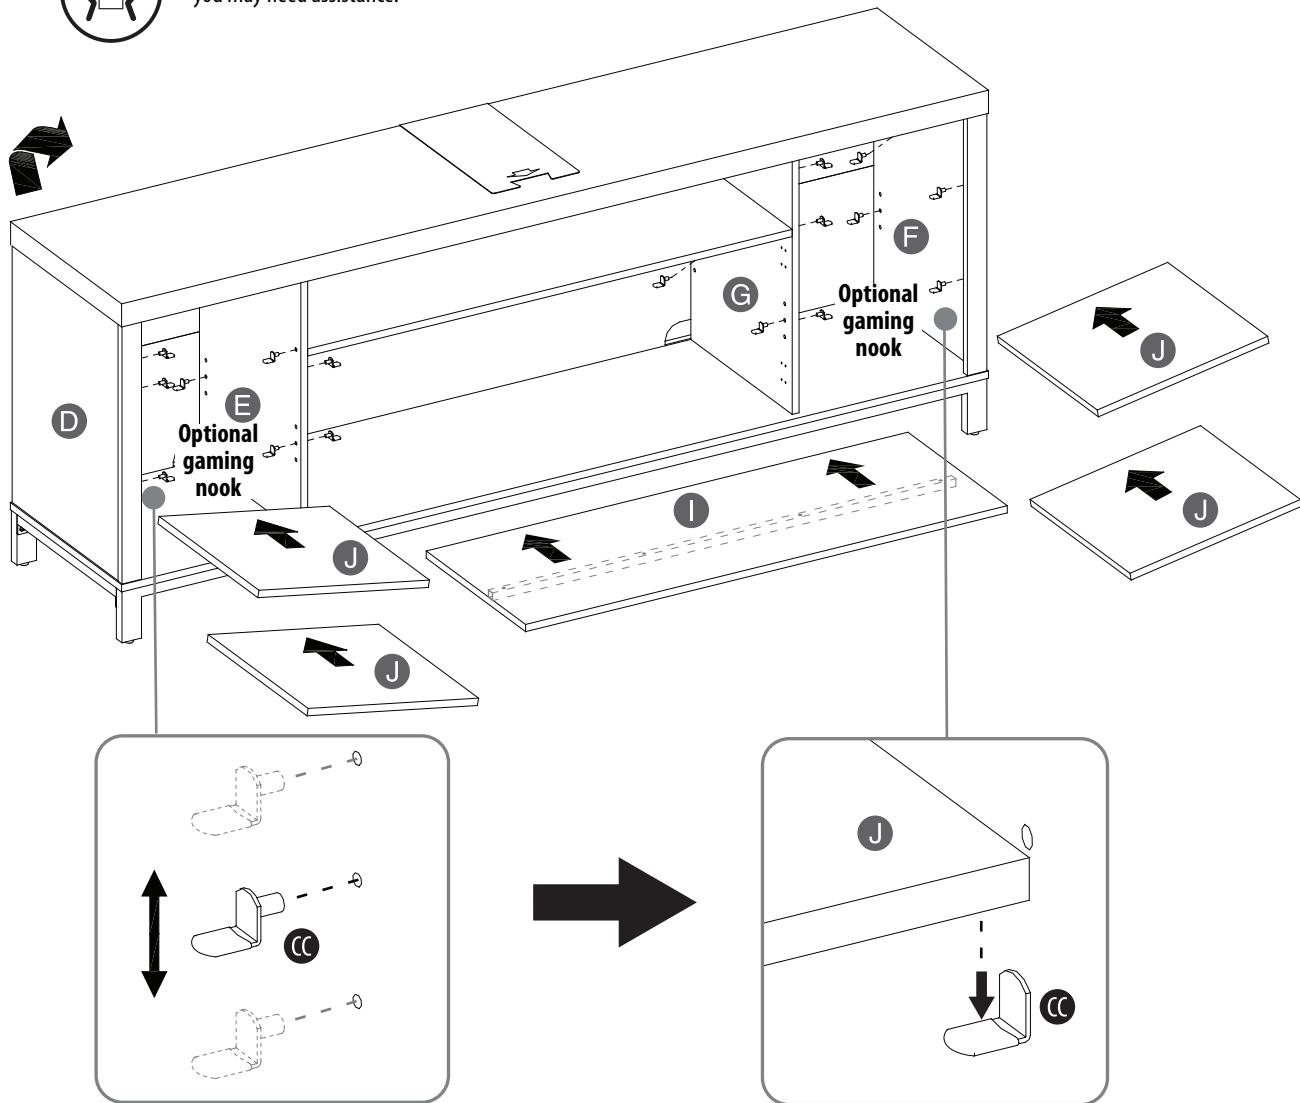

STEP 17: Installing the door hinges

 
You need:



S Door hinges (4)





II M3.5 x 15 mm flat head screw (16)



Phillips screwdriver

 
- 1 Using the pilot holes as a guide, align and attach one hinge base (S) onto the left partition (E). Insert two M3.5 x 15 mm flat head screws (II) through the center of the oval holes and move the hinge arm to the position you want, then fasten the hinge (S) into place with the Phillips screwdriver. DO NOT fully tighten the screws.
- 2 Insert two M3.5 x 15 mm flat head screws (II) through the round holes on the hinge base (S) and fasten into place with the Phillips screwdriver.
- 3 Repeat the same process to install the other three hinges.

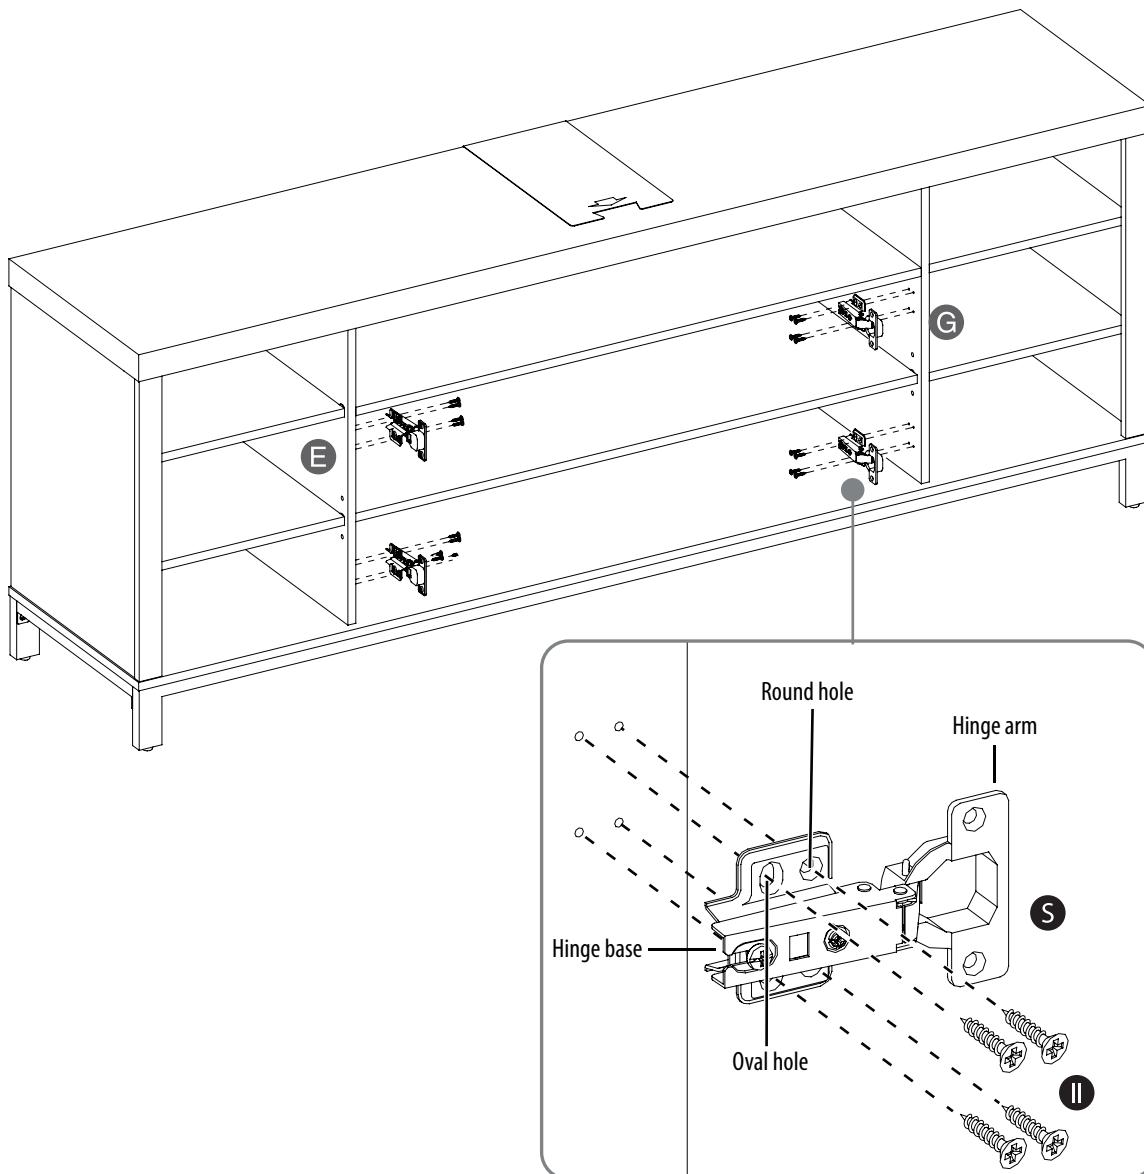

STEP 18: Installing the door handles**You need:****K** Door (2)**R** Handle (2)**HH** 22 mm Handle bolt (4)

Phillips screwdriver

- Attach one handle (**R**) to the front side of each door (**K**) with two 22 mm handle bolts (**HH**). Tighten with a Phillips screwdriver.

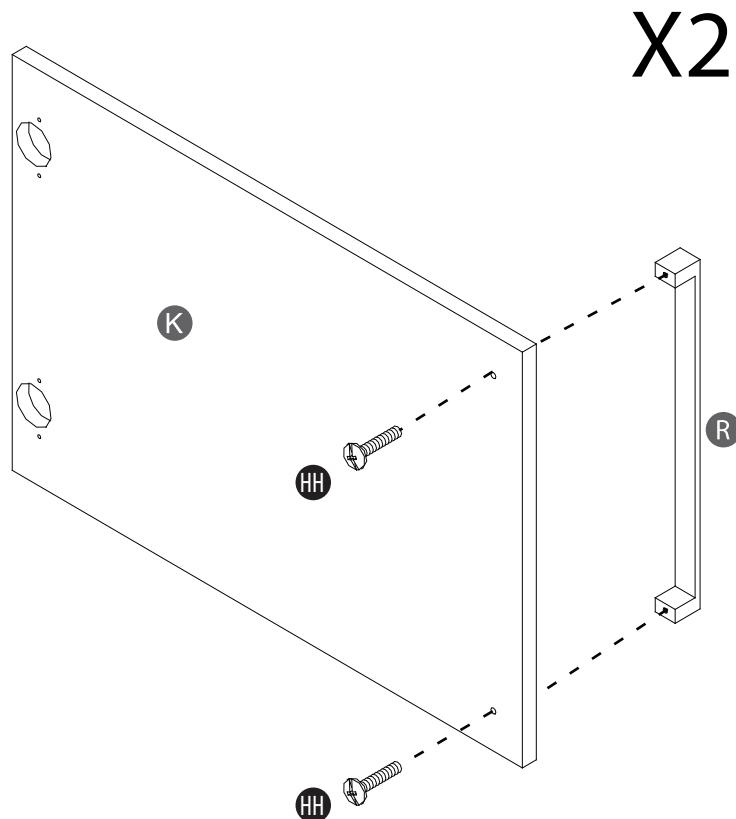

STEP 19: Installing the doors


You need:

 


II M3.5 x 15 mm flat head screw (8)




Phillips screwdriver

- 1 Pick up one door (K) and fit it to the cups on the hinge arm (S) installed on the left partition (E). Use a Phillips screwdriver to fasten the two hinge cups to the door (K) with four M3.5 x 15 mm flat head screws (II).
- 2 Repeat the same process to attach the other door (K) to the right partition (G).
- 3 Open and close the doors to make sure they are aligned and shut correctly. If necessary, adjust the screws for a good fit. Fully tighten all the M3.5 x 15 mm flat head screws (II) when they are aligned properly.

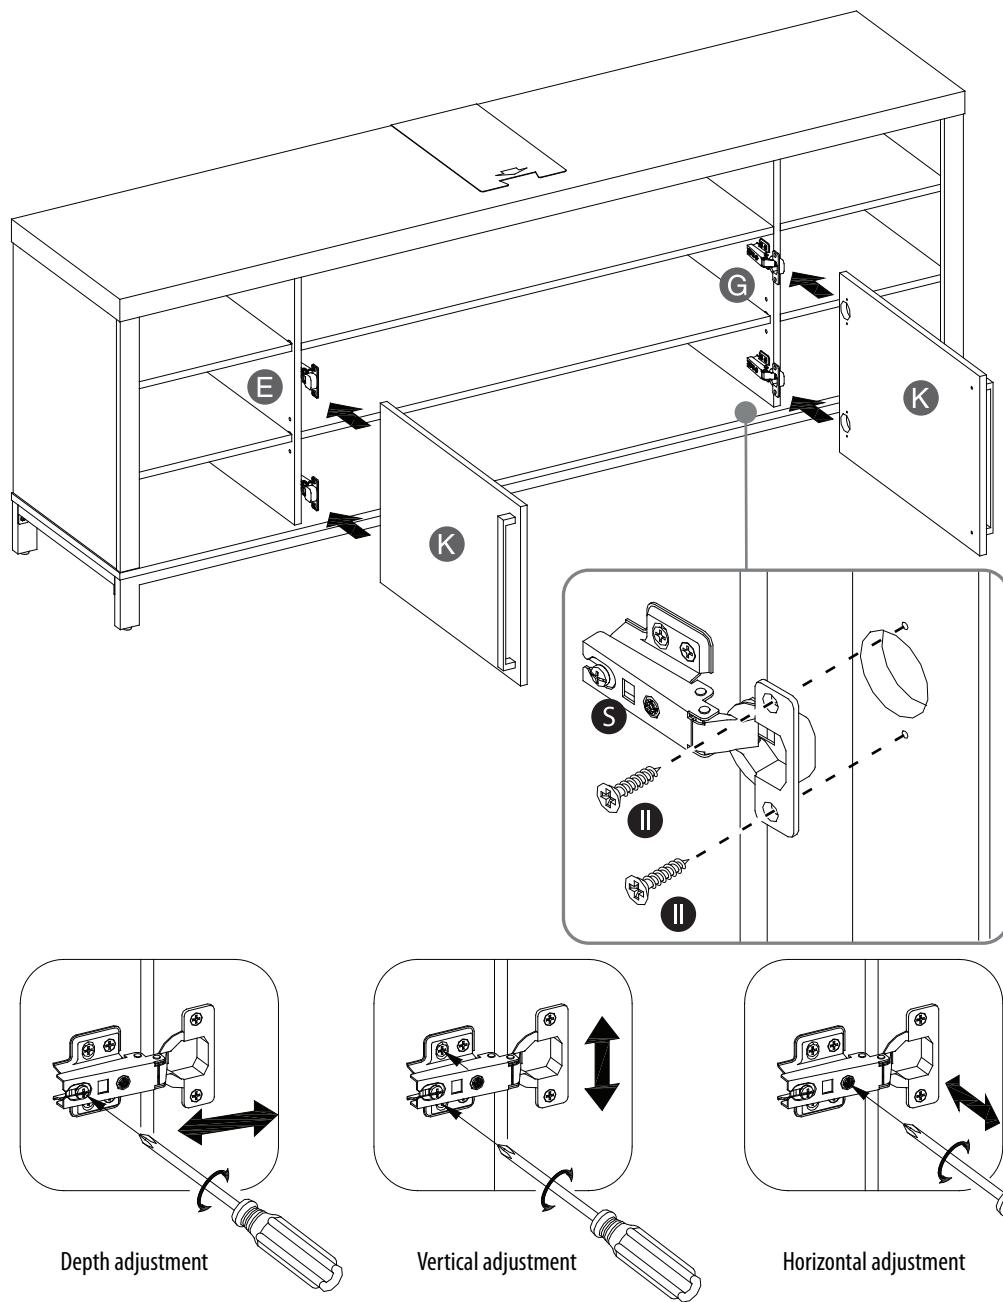

STEP 20: Installing the cam lock covers and rubber door bumpers**You need:****Z** Cam lock covers (18)**JJ** Rubber door bumper (2)

- 1 Plug the cam lock covers (**Z**) onto the visible cam locks, to conceal the cams.
- 2 Affix two rubber bumpers (**JJ**) on the front edge of the media shelf (**C**) where the doors (**K**) make contact.

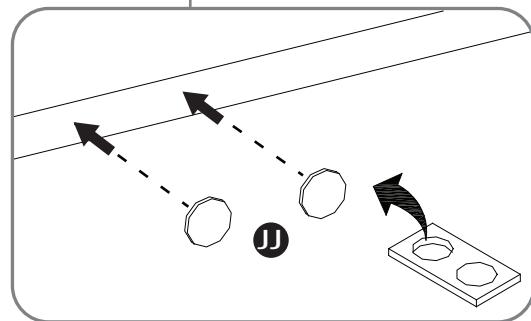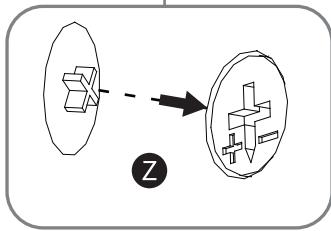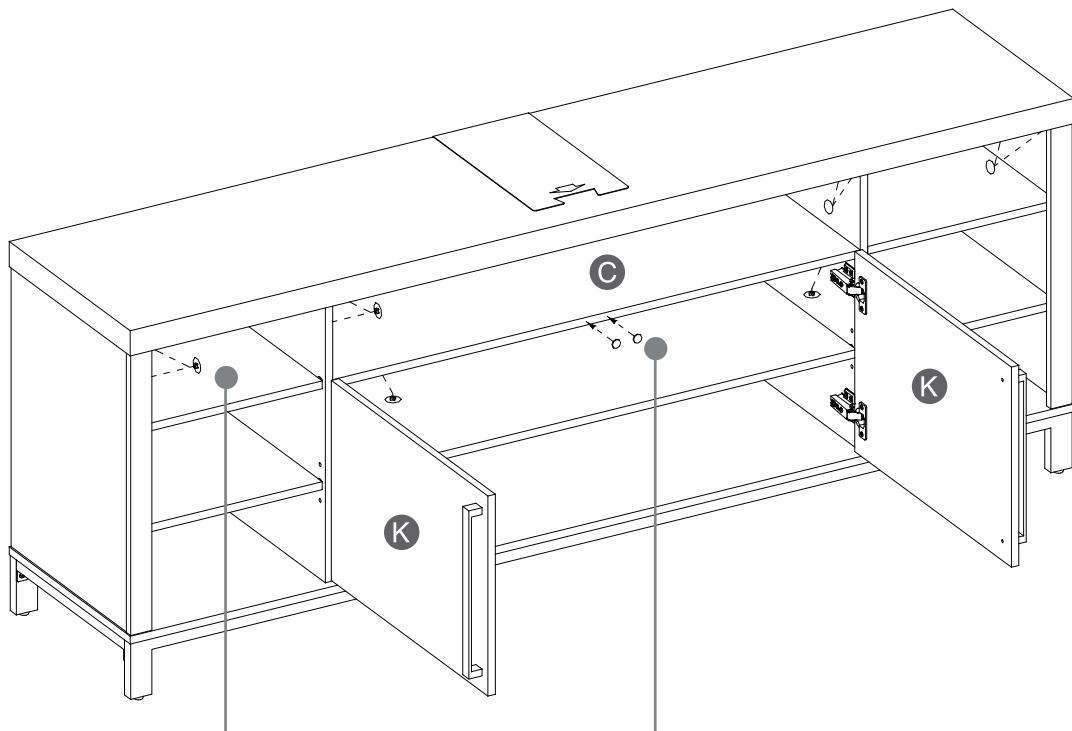

STEP 21: Attaching the stopper to the top panel**You need:**

KK Acrylic stopper (2)



Pliers


If you place your TV on top of your TV stand, you must follow these instructions to prevent your TV from tipping. Otherwise, skip to [STEP 22: Positioning the TV stand and installing the tipping restraints on page 29](#).

If your TV has one leg

- 1 Remove the paper backing from the bottom of the stopper (KK), then place it in the stopper cut-out of the template on the top panel (A). Press down on the stopper (KK) to adhere it to the panel.
- 2 On the back of the top panel (A), carefully pull out the thumb tacks to remove the stopper template.


If your TV has two legs:

- 1 On the back of the top panel (A), carefully pull out the thumb tacks to remove the stopper template.
- 2 Align the template at the position where one of your TV's legs or one of the feet will be located.
- 3 Remove the paper backing from the stopper (KK), then place it in the stopper cut-out of the template on the top panel (A). Press down on the stopper (KK) to adhere it to the panel.
- 4 Repeat this process to attach the second stopper where the other one of the TV's legs or feet will be located.

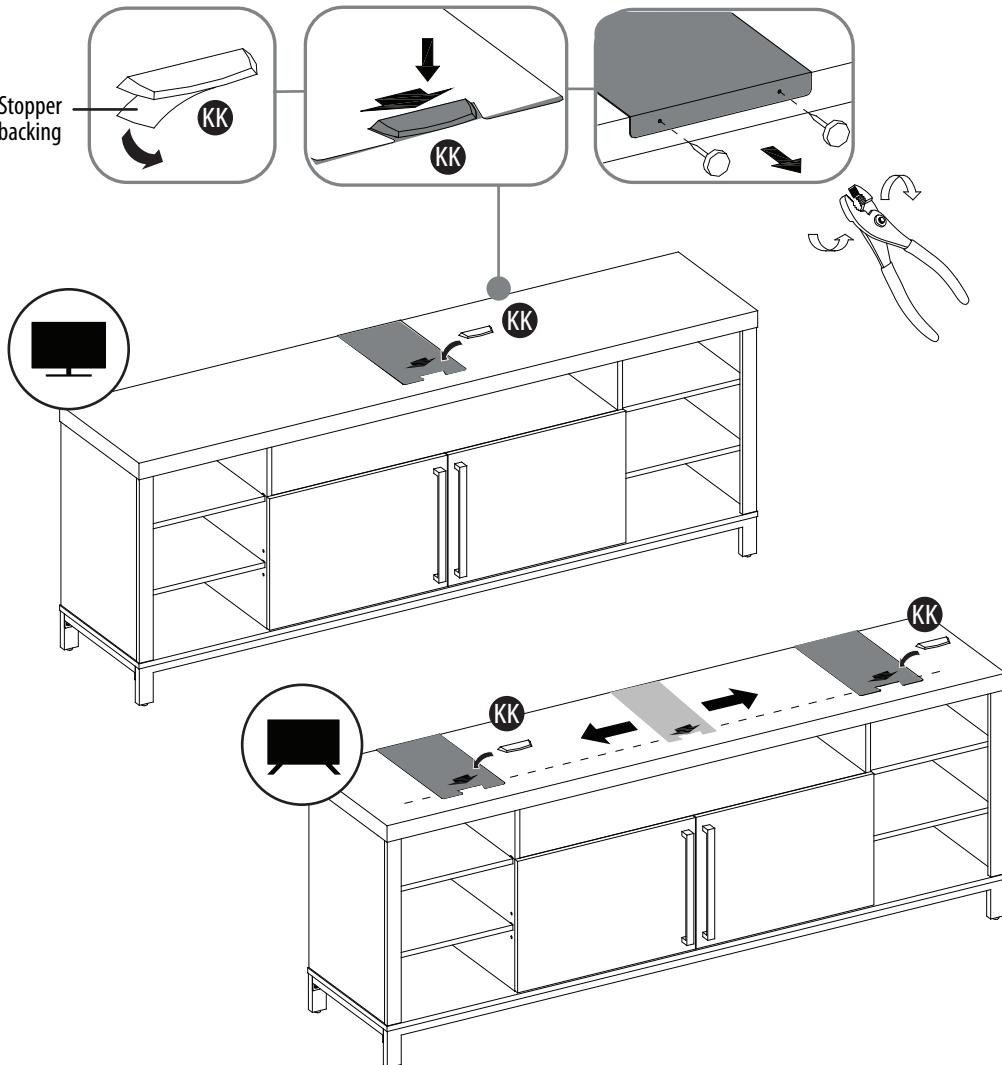


STEP 22: Positioning the TV stand and installing the tipping restraints

 You need:



PP Tipping restraint (2)

 


Phillips screwdriver



1/8" drill bit




Edge-to-edge stud finder

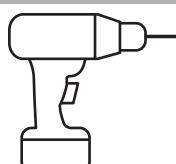

Power drill

- 1 Position the assembled TV stand against the wall where you plan to use it.
- 2 Adjust the leveling feet to level the TV stand.
- 3 Follow the instructions printed on the bag containing the tipping restraint hardware kit (PP) to attach the restraint hardware to the wall and to the TV stand.

WARNING: It is very important that the tipping restraint be installed correctly. Failure to do this could result in your TV stand falling forward, resulting in damage to equipment or personal injury.

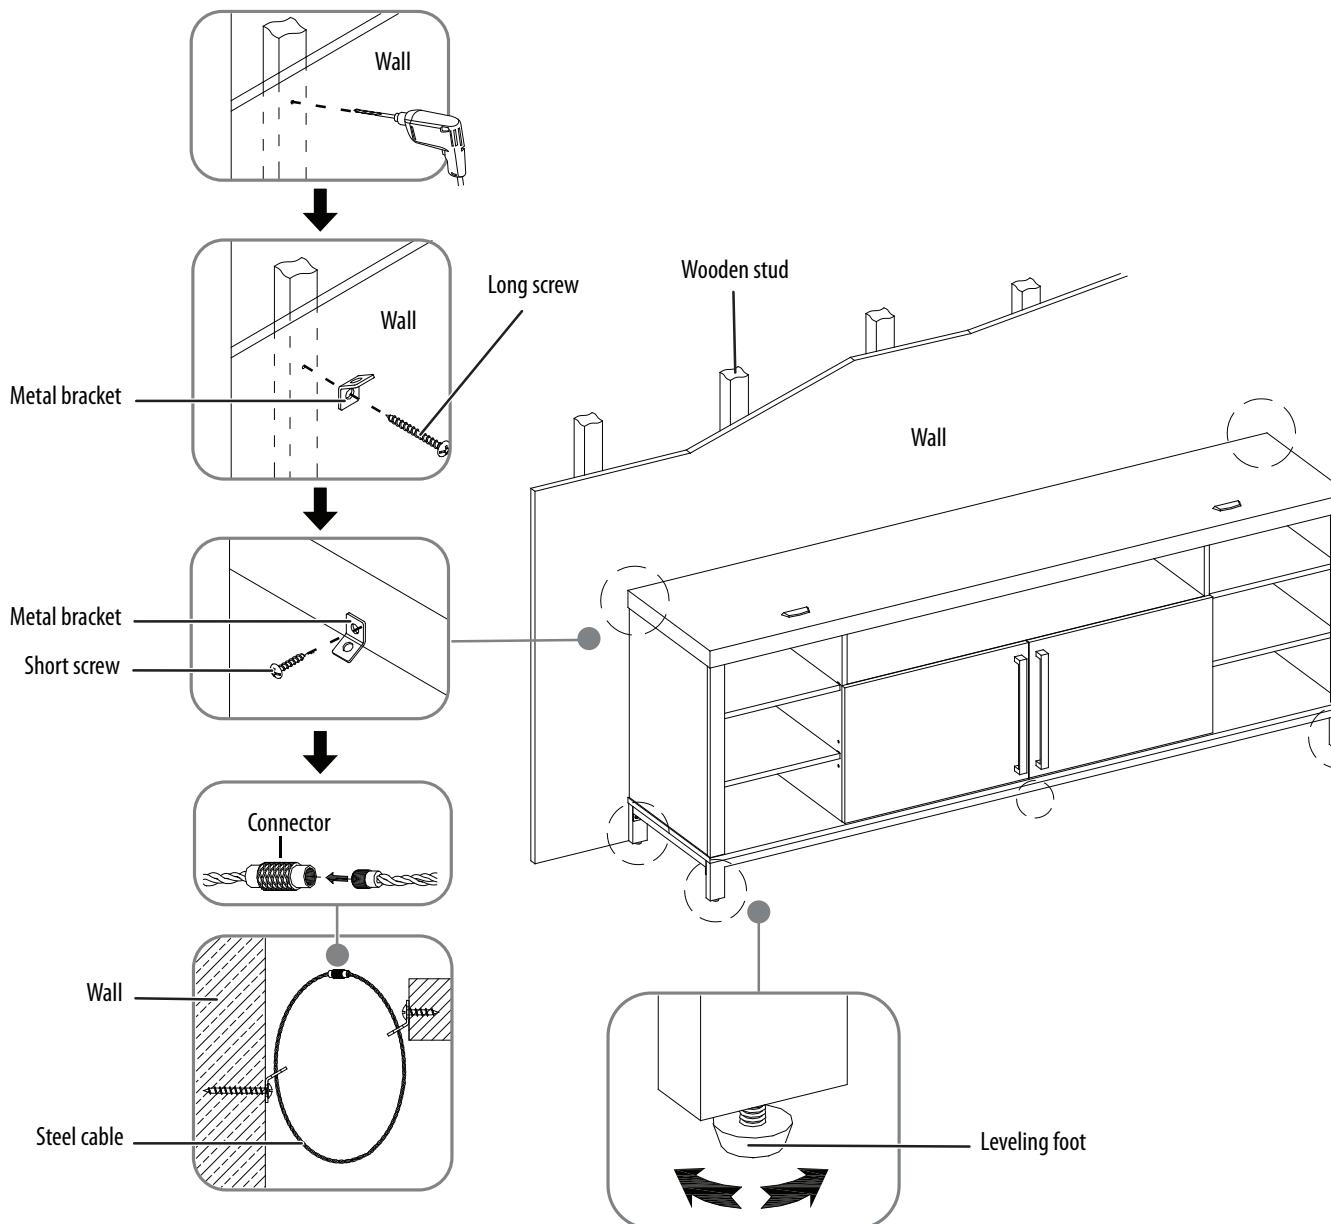

Maintaining your TV stand

Wood/Laminate

- Use your favorite type of furniture polish.
- Do not spray polish directly onto the TV stand. Spray onto a soft cloth, then wipe the TV stand.
- Always test any polish in a discrete location first, such as the back of the TV stand, to make sure that there is no adverse reaction.
- Dust frequently with a soft cloth.
- Never slide objects across surfaces. Lift objects from the top surface rather than dragging them across the finish when moving them.
- Do not expose your TV stand to direct sunlight, drying heat sources, or dampness.
- Clean spills immediately with a soft, damp cloth.
- Use a protective pad when using your TV stand as a writing surface (especially when using a ballpoint pen).

Metal

- For everyday cleaning of chrome, brass, aluminum, and painted metal surfaces, wipe with a slightly damp, soft cotton cloth, or vacuum to keep them looking their best.
- If soiled, wipe with clean sponge or cloth wrung out of water. Wipe dry with a cloth or paper towel to avoid water spots.
- Don't use any harsh abrasives or chemicals to clean any metal surfaces because they may damage the protective coating.
- Metal may rust if the finish is scratched or if your furniture is exposed to excessive humidity, particularly in salt water locations.
- Most metal furniture has a protective coating to prevent rust, however rust may occur if the finish is marred or wears away over time.

Specifications

Maximum overall weight	585 lbs. (265.35 kg)
Maximum top panel weight	135 lbs. (61.24 kg)
Maximum shelf weight	50 lbs. (22.68 kg)
Maximum bottom panel weight	50 lbs. (22.68 kg)
Maximum TV weight	135 lbs. (61.24 kg)
Maximum screen size	80 in.
Overall dimensions (H × W × D)	26.25 × 70 × 16.45 in. (66.6 × 177.8 × 41.8 cm)
Fixed shelf dimensions (W × D)	39.1 × 14.1 in. (99.4 × 36 cm)
Middle adjustable shelf dimensions (W × D)	39.1 × 13.9 in. (99.4 × 35.3 cm)
Side adjustable shelf dimensions (W × D)	14.2 × 14 in. (36.1 × 35.5 cm)
TV stand weight	Net: 96.56 lbs. (43.8 kg) Gross: 109.57 lbs. (49.7 kg)

ONE-YEAR LIMITED WARRANTY

Definitions:

The Distributor* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at www.bestbuy.com or www.bestbuy.ca and is packaged with this warranty statement.

How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location or from a Best Buy online website (www.bestbuy.com or www.bestbuy.ca), please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States and Canada call 1-877-467-4289. Call agents may diagnose and correct the issue over the phone.

Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the country where the original purchase was made.

What does the warranty not cover?

This warranty does not cover:

- Food, beverage, and/or medicine loss/spoilage.
- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT. ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

1-877-467-4289

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

*Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2024 Best Buy. All rights reserved.

INSIGNIA™

www.insigniaproducts.com
1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

INSIGNIA is a trademark of Best Buy and its affiliated companies.
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2024 Best Buy. All rights reserved.

V2 ENGLISH
24-0554