



DSLR Shutter Remote RF-UNISR1

Package contents


- DSLR shutter remote
- Intermediate cables (4)
- *Quick Setup Guide*

Features

- Works with most DSLR cameras with remote terminals.
- Use the shutter release button just like the one on your camera.
- Shutter lock lets you keep the shutter open for time exposures, or to shoot continuously.

Cautions:

- Please insert or remove the plug carefully. Take care to not to force it.
- Don't forget to disable the shutter lock function by unlocking the shutter release button lock after shooting.
- Do not leave the device in high-temperature or high-humidity environments.

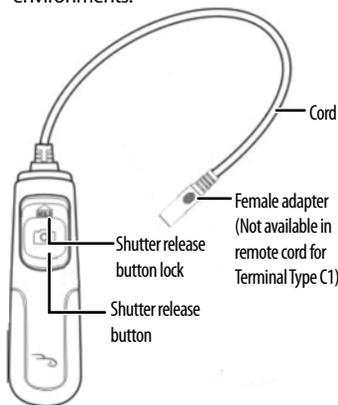


Intermediate cables



Connecting your shutter remote

- 1 Open the camera's remote terminal cover.
- 2 Select an intermediate cable to match your camera's remote terminal, then connect the intermediate cable to the female adapter on the DSLR shutter remote cord.
- 3 Insert the plug on the intermediate cable into the remote terminal on your camera.

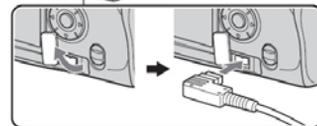

- 4 Adjust settings on the camera. For details, see the camera's user manual.

Using your shutter remote

- 1 Press the shutter release button halfway for the camera to focus.
- 2 After the focus indication appears in the viewfinder, fully press the shutter release button to shoot the picture.
Note: When the subject is in a dim environment where it's difficult to use auto-focus, set the camera on MF (manual focus) mode and rotate the focus ring to focus the shot.

Shutter lock function

In B (Bulb) mode or continuous shooting mode, shutter lock is available. To enable it, fully press the shutter release button and slide it in the direction of the arrow.

- When locked in B (Bulb) mode, the camera shutter remains opened for time exposure.
- When locked in continuous shooting mode, the camera shutter continually operates for continuous shooting.

Specifications

Terminal type	C1/C3/N1/S1 (one out of four)
Dimensions	Approx. .35 × 3.82 × .83 in. (29 × 97 × 21 mm) (Cord not included)
Cord length	Approx. 39.4 in (1 m) (Terminal included)
Net weight	Approx. 1.76 oz. (50g)

*Product design and specifications are subject to change without notice.

RF-UNISR1 COMPATIBILITY LIST			
C1	C3	N1	S1
Canon models		Nikon models	Sony models
EOS 60D	EOS 10D	D3	DSLR-A100
EOS 60Da	EOS 20D	D2 series	DSLR-A200
EOS Digital Rebel	EOS 20Da	D1 series	DSLR-A300
EOS Digital Rebel XT	EOS 30D	D700	DSLR-A350
EOS Digital Rebel XTi	EOS 40D	D300	DSLR-A450
EOS ELAN 7/7E	EOS 50D	D200	DSLR-A500
EOS ELAN 7NE	EOS 5D	D100 (MB-100 battery unit required)	DSLR-A550
EOS Elan 7N	EOS 5D Mark II	F6	DSLR-A560L
EOS Elan II/IIE	EOS 5D Mark III	F5	DSLR-A580
EOS IX Lite	EOS 7D	F100	DSLR-A700
EOS Rebel 2000	EOS D30	F90X	DSLR-A900
EOS Rebel GII	EOS D60	F90	SLT-A33L
EOS Rebel T1i	EOS-1D		SLT-A55
EOS Rebel T2	EOS-1D Mark II		SLT-A77
EOS Rebel T2i	EOS-1D Mark II N		
EOS Rebel T3	EOS-1D Mark III		
EOS Rebel T3i	EOS-1D Mark IV		
EOS Rebel T4i	EOS-1D X		
EOS Rebel Ti	EOS-1Ds		
EOS Rebel XS	EOS-1Ds Mark II		
EOS -Rebel XSi	EOS-1Ds Mark III		
RFD-T11	EOS-1v		
	EOS-1v HS		
	EOS-3		

One-year limited warranty

Visit www.rocketfishproducts.com for details.

Contact Rocketfish:

For customer service, call 1-800-620-2790
www.rocketfishproducts.com

© 2012 BBY Solutions, Inc. All Rights Reserved.

Distributed by Best Buy Purchasing, LLC

7601 Penn Avenue South, Richfield, MN USA 55423-3645

ROCKETFISH is a trademark of BBY Solutions, Inc. All other products and brand names are trademarks of their respective owners.