

National[®]

Vacuum Cleaner
NA-800V
Instruction Manual



CAUTION

CHECK EACH ACCESSORY CAREFULLY BEFORE USE.


- This appliance is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Before using this unit, check the mains power voltage corresponds to the voltage shown on the marking plate.
- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling.
- Do not allow children to use the appliance without supervision.
- Do not switch the appliance on if it appears to be faulty in any way.
- For repairs, accessories, or power cord replacement, contact your dealer or an authorized Service Center.
- Never immerse the appliance into water for cleaning and never start the unit or press the control button with wet hands.
- Do not run the motor for long periods of time. This will cause damage to the parts inside.
- When the motor is running, do not insert your finger or other objects into the machine or container.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person in order to avoid a hazard.
- Only use this appliance with the accessories provided. Use the appliance for its intended purposes only. Do not use the appliance or the accessories for purposes other than what is described in this instruction manual.
- This product is a dry vacuum cleaner. Please do not use the vacuum cleaner to suck detergent, kerosene, glass, needle, water-wet dust, sewage, matches and other articles,
- Please do not let the vacuum cleaner close to the fire source and other high humidity places.
- Do not use a vacuum cleaner to suck water and other liquids, and do not flush the vacuum cleaner with water.
- When using the vacuum cleaner, be careful not to block the suction port, otherwise it will cause motor overload and damage the motor.
- When using the vacuum cleaner, please pay attention to install the dust grid rack, so as not to dust into the motor.
- Please do not use vacuum cleaner to suck cement, gypsum powder, wall powder and other tiny particles, otherwise it will cause vacuum cleaner filter or filter blockage, resulting in motor burning and other faults.
- When cleaning the vacuum cleaner, please use a wet cloth containing water or neutral detergent, do not use gasoline, banana water, etc., otherwise it will lead to shell cracking or fading.
- Please read the instructions for use and diagram carefully before using this product.
- Do not use high-power appliances on the same line to prevent circuit overload and danger.
- Please properly keep this manual.

The specifications and components of this product are subject to change without notice

What's in the box?

- 1x Hand-held Vacuum with Power Cord
- 1x Connector
- 1x Stick Handle
- 1x Floor Brush
- 1x Long Flat Crevice Tool
- 1x Extension Hose
- 1x Short Crevice Tool with Brush
- 1x Manual

PARTS DESCRIPTION:

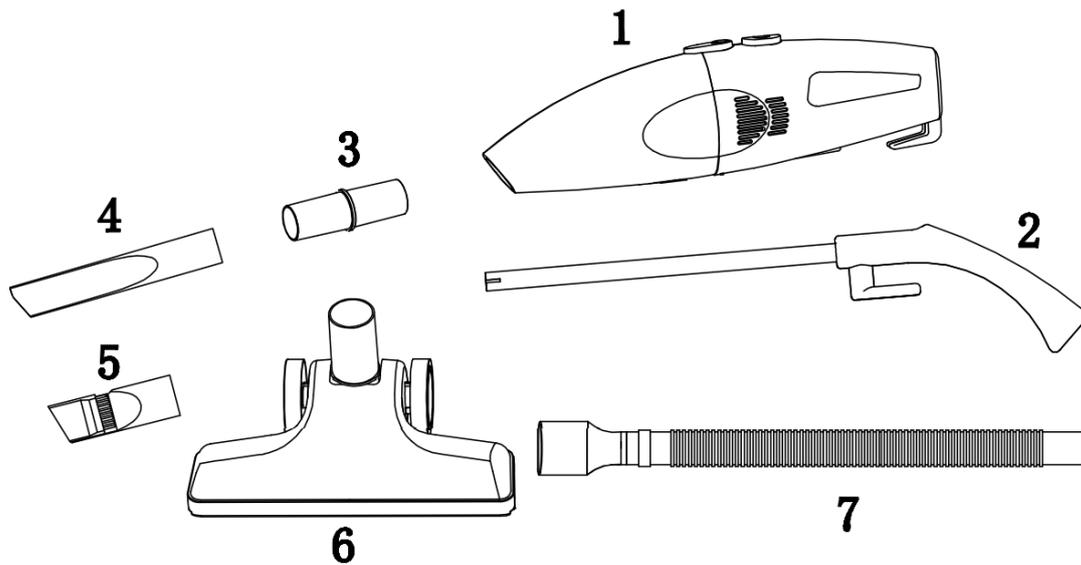

1. Main engine
2. Handle
3. Connector
4. Long flat brush
5. Short Crevice Tool with Brush
6. Floor brush
7. Extension Hose

Installation Instructions

* Caution: Do not plug in during installation
Upright (with extension tube)

1. First insert the connector (3) into the air suction port of the main engine, then insert the floor brush tip (6) into the connector (3), and then insert the handle (2) into the main engine (1), after completed, it is shown as Figure 1.

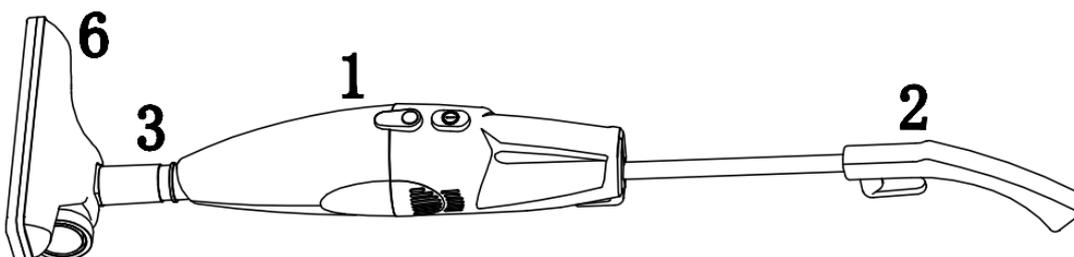


Figure 1

Hand-held (does not require handle)

1. Grasp the handle position of the vacuum cleaner by hand, first insert the connector (3) into the vacuum port of the main engine, then insert the flat suction (4 or 5 or 7) into the connector (3)

As shown in Figure 2.

2. Plug the power socket, press the switch to carry out handheld cleaning and dust removal;

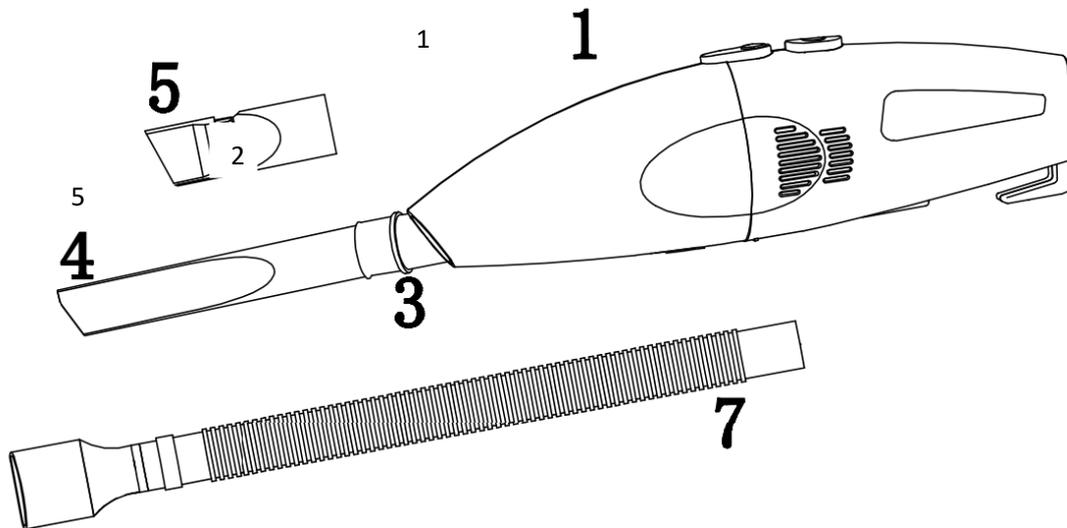


Figure 2

1. Turn off the power switch after use and pull the plug from the socket, then wrap and collect the power cord.

2. Plug the power socket, press the switch to carry out handheld cleaning and dust removal.

3. Note: The floor brush is suitable for the underground of the table, the lower range of the cabinet, and the 2-in-1 flat suction/round brush is suitable for the small range of fine seams such as sofa, table and chair, and curtain.

Cleaning and Maintenance


* Note: Please unplug the power plug before cleaning and maintenance

When the suction force is weakened, the reason may be that the dust collector and filter assembly are full of dust, and the filter screen should be cleaned immediately.


1. Remove the dust cup: Separated the dust cup according to the steps in Figure.

2. Clean the dust cup: Take the filter cartridge out of the dust cup and separate it. Generally, it is only necessary to gently remove the dust accumulated on it. It can be reused after the dust return cup is cleaned and reinstalled. (Figure 4) Because the filter screen will be naturally lost, please replace the new filter screen regularly. If you need to purchase it, please negotiate the after-sales service office. It can be reused after placing it back.

3. After each use, clean the dust/garbage in the dust cup to avoid accumulation of dust or breeding bacteria. As shown in Figure 5.

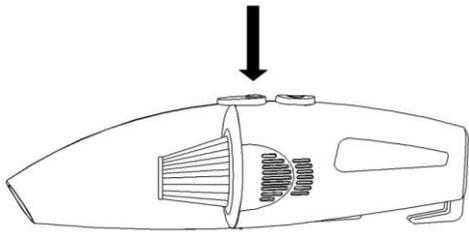


Step 1: Press the dust cup button

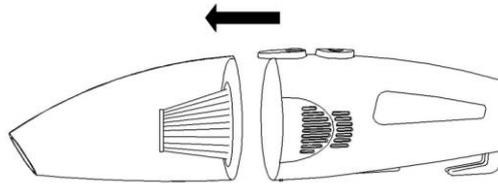


Step 2: Remove the cup by hand

Figure 3

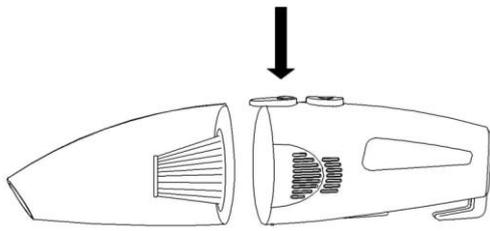

Step 1: Press the dust cup button

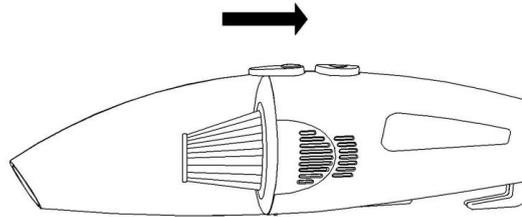

Step 2: Place the dust cup on the main engine

Figure 4

4. After the dust cup is removed, thoroughly clean the dust cup and filter cylinder, (it can be washed with water but it must be dried before use). As shown in Figure 5



Figure 5

Use and Maintenance

- * Caution! Confirm that the vacuum cleaner is not plugged in before handling all maintenance and handling accessories.
- * Caution! To optimize the vacuum cleaner capacity, the vacuum cleaner must be cleaned frequently.
- * Caution! If the machine core is too dilapidated or damaged, please contact the distributor to purchase a new machine core replacement.

- * Caution! If you do not know or know anything about the item, contact the distributor on the package.
- * Caution! Dust collector cleaning pipes: often clean the dust collector can add dust collector efficiency and prevent dust collector overheating, loss.
- * Caution! When the vacuum cleaner is used, clean the dust collector immediately to maintain optimal suction during the next use.
- * Caution! When the dust collector is not dried and wet after cleaning, do not put it into the dust collector for power use, because the wet dust collector easily causes damage to the dust collector.

Troubleshooting

Breakdown	Cause	Remedy
Weak suction	Dust bin is full	Clean dust bin and filter
	Obstacles blocked	Check and remove obstacles
Motor not working	The plug is not connected	Check the plug
	Over heat after using long time	Set aside until its cooling

Dimensions of product (9.85 inches x 5.91 inches x 43.32 inches)

Input: AC 120V ~ 60HZ

Power: 600W

Suction: 14Kpa

Cable: 5meters

Dustbin Capacity: 0.5L

WARRANTY

Supersonic Inc. ("Supersonic") warrants this product to the original purchaser ONLY, to be free from defects in materials and workmanship under normal use, for ninety (90) DAYS from the date of original purchase. Proof of purchase (receipt) required.

Please visit <https://www.supersonicinc.com/pages/warranty> for additional information.

The Environment

The symbol on this appliance indicates that this appliance may not be treated as household waste. Instead it must be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this appliance, please contact your local city office, your household and waste disposal service or the shop where you purchased the appliance.

