



QUICK SETUP GUIDE

Bluetooth Shelf Speakers

NS-HBTSS116

PACKAGE CONTENTS

- Speakers (2)
- 4.9 ft. (1.5 m) 3.5 mm audio cable
- 4.9 ft. (1.5 m) RCA cable
- 6.6 ft. (2 m) speaker wire
- Remote control with batteries
- Quick Setup Guide

 
FEATURES

- Wirelessly stream from any Bluetooth device
- Volume, treble, and bass controls on the side panel
- NFC for easy Bluetooth pairing
- Highly efficient, energy saving design for low power consumption




FIND YOUR USER GUIDE ONLINE!
Go to www.insigniaproducts.com, then click **Support & Service**. Enter **NS-HBTSS116** in the box under *Manual, Firmware, Drivers & Product Information*, then click ►.

OVERVIEW

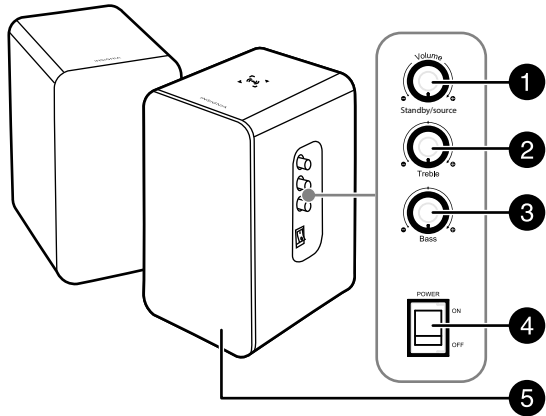

#	ITEM	DESCRIPTION
1	Volume Standby/source knob	Press repeatedly to cycle through the available modes (AUX [default], RCA, and Bluetooth). Hold down knob to put your speakers in standby mode or to resume the last mode that was played. Turn clockwise to increase the volume and turn counterclockwise to decrease the volume.
2	Treble knob	Adjusts the treble level.
3	Bass knob	Adjusts the bass level.
4	On/Off switch	Turns the power on or off.
5	LED Indicator	Indicates the mode of the speakers. ☀ Blinks green = AUX ● Solid green = RCA ☀ Blinks blue = Bluetooth pairing ● Solid blue = Bluetooth paired ● Solid red = Standby mode

 Remote control

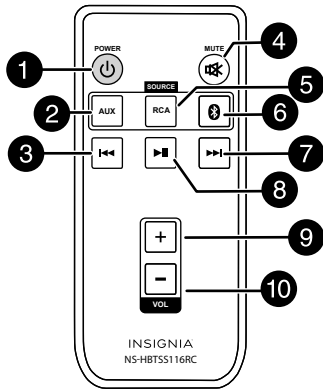


#	ITEM	DESCRIPTION
1	POWER	Press to turn on/off standby mode.
2	AUX	Press to enter AUX mode. The green LED indicator light blinks slowly.
3	Previous	Press to select the previous song while in Bluetooth mode.
4	MUTE	Press to mute or unmute the sound.
5	RCA	Press to enter RCA mode. The green LED indicator lights solid.
6	Bluetooth button	Press to enter Bluetooth mode. The LED indicator blinks blue.
7	Next	Press to select the next song while in Bluetooth mode.
8	Play/Pause	Press to play/pause while in Bluetooth mode.
9	VOL +	Press to turn the volume up.
10	VOL -	Press to turn the volume down.

CONNECT THE SPEAKERS

Connect the power cable
Plug the power cable into a power outlet or surge protector.

 Connect the speakers
Speakers are connected using the speaker wire that is provided. Connect the red wire to the red (+) terminals and the white wire to the black (-) terminals. Use enough wire to position the speakers where you want them.

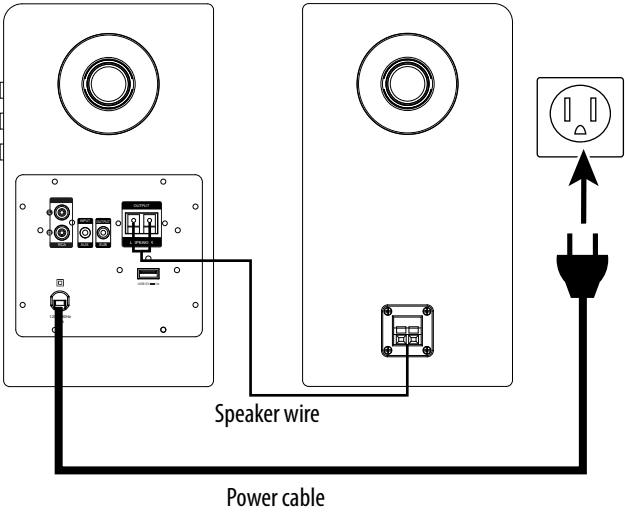

TURNING YOUR SPEAKER ON AND OFF

Toggle the **ON/OFF** switch on the side of your speaker to the **ON** position. The LED indicator blinks. Press the **Volume Standby/source** knob repeatedly to cycle through the available modes (AUX, RCA, and Bluetooth), or press the button on the remote control to select the mode you want.

CONNECTING WITH BLUETOOTH

- 1 Make sure that your Bluetooth device is turned on and within 33 feet (10 meters) of your speaker.
- 2 Press the **Volume Standby/source** knob on the side of your speaker to cycle to Bluetooth mode or press the Bluetooth button on the remote control to enter Bluetooth mode. Your speaker enters pairing mode and the LED indicator blinks blue.
- 3 Turn on your Bluetooth device and turn on Bluetooth. Set your device to pairing mode, then select **NS-HBTSS116**. See the instructions that came with your Bluetooth device for information about pairing.
- 4 If you are asked for a password, enter **0000**. When pairing is complete, the LED indicator lights solid blue.
- 5 To disconnect from the paired Bluetooth device, press and hold (Bluetooth button) on your remote control for three seconds. Your speaker disconnects from the Bluetooth device and enters pairing mode again.

RECONNECTING TO A PAIRED DEVICE

When your speaker is not paired to a device, the LED blinks blue slowly.

Your speaker loses the Bluetooth connection if you...	To reconnect...
Turn off your speaker or put in standby/AUX/RCA mode	Turn on your speaker and cycle to Bluetooth mode. Your speaker searches for the last connected Bluetooth device and reconnects.
Move the Bluetooth device out of range.	Make sure that your Bluetooth device is within 33 feet (10 meters) of your speaker.
Turn off your Bluetooth device.	Turn on your Bluetooth device, then make sure that Bluetooth is turned on.
Turn off Bluetooth on your Bluetooth device.	Turn on Bluetooth on your Bluetooth device.
Connect your Bluetooth device to another Bluetooth device.	Disconnect your Bluetooth device from the other Bluetooth device, then set your device to pairing mode. Select NS-HBTSS116 on your Bluetooth device.

PAIRING A BLUETOOTH DEVICE SUPPORTING NFC

If your Bluetooth device supports Near Field Communication (NFC), make sure that the NFC feature is active. Touch the NFC area of your Bluetooth device to the top of your NS-HBTSS116 speaker to automatically pair.

 
Note: If your phone has NFC support but it is running an OS below Android 4.1, you need to download an NFC Bluetooth app from Google Play or a similar online store.

LISTENING TO MUSIC

- 1 Make sure that the speaker is paired with your Bluetooth device (the LED indicator is solid blue).
 - 2 Begin playback on your Bluetooth device.
 - 3 Adjust the volume on your speaker by rotating the **Volume Standby/source** knob, or pressing the + or - buttons on your remote control or your Bluetooth device.
- Note:** Use the controls on your Bluetooth device or on the remote control to control playback.

USING AN RCA OR AUX CABLE

- 1 Insert one end of an audio cable (RCA or AUX cable) into the input port(s) on the back of your speaker and the other end into the output port(s) of your sound source device (such as a PC, DVD, TV, or MP3 player).

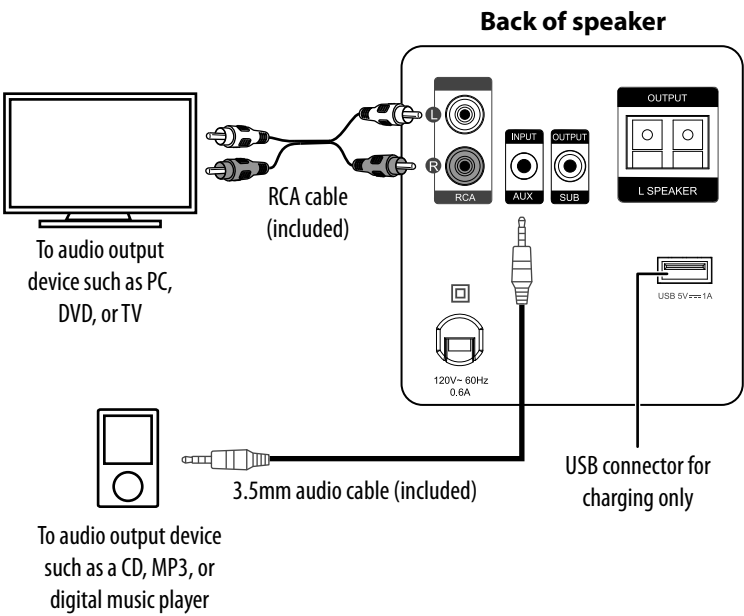

- 2 Press the **Volume Standby/source** knob or press the **AUX** button on the remote control to enter AUX mode. The LED indicator blinks green.
- OR**
- Press the **Volume Standby/source** knob or press the **RCA** button on the remote control to enter RCA mode. The LED indicator lights solid green.
- 3 Start playback on the sound source device.
- 4 Turn the **Volume Standby/source** knob or press + and – on your remote control to adjust the volume.
- 5 Control playback using the controls on the sound source device.
- Note:** The USB connector is for charging only, not for audio input.

TROUBLESHOOTING

- No power**
- Make sure that your speaker is plugged in.
 - Make sure that your speaker is turned on.
- No sound or low volume**
- If your sound source is a Bluetooth device, make sure that your Bluetooth device is turned on, Bluetooth is turned on, and **NS-HBTSS116** is selected.
 - Turn up the volume on your speaker.
 - Turn up the volume on your sound source device.
 - Make sure that your sound source device volume is not turned to 0 or speaker is not muted.
 - Make sure that your speaker is not paired to another Bluetooth device.
 - Make sure that your Bluetooth device is not paired to another Bluetooth device.
- Cannot establish Bluetooth connection**
- Shorten the distance between your speaker and your Bluetooth device.
 - Turn your devices off, then on. Re-pair your speaker and your Bluetooth device.

- Make sure that your speaker is not paired to another Bluetooth device.
- Make sure that your speaker and Bluetooth device are both in pairing mode.
- Make sure that your Bluetooth device is not connected to any other device.
- Make sure that you have selected **NS-HBTSS116** on your Bluetooth device.

 
My Bluetooth device keeps unpairing

- Shorten the distance between your speaker and your Bluetooth device.
 - If the battery on your Bluetooth device is low, recharge the battery.
- “NS-HBTSS116” does not appear on my Bluetooth device**
- Shorten the distance between your speaker and your Bluetooth device.
 - Put your speaker into pairing mode, then refresh your list of Bluetooth devices. For more information, see the documentation that came with your Bluetooth device.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacture’s instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12.  Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug the apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
 - Never expose the product to fire as this could result in personal injury.
 - Do not store the product in an extremely cold or warm environment.
 - Never dismantle the product.
 - Never let children play with the product.
 - Do not expose the product to dampness or moisture.
 - The product should not be exposed to dripping or splashing.
15. Do not install this equipment in a confined or built-in space such as a book case or similar unit, and remain a well ventilation conditions. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
16. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus

- to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
17. **WARNING:** The electrical plug is used as disconnect device, the disconnect device shall remain readily operable.
18.  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.



19. This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
- Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
 - The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.
20. The equipment shall be used at maximum 95° F (35° C) ambient temperature.
21. The battery (battery or batteries of battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.

⚠ WARNING	
• INGESTION HAZARD: This product contains a button cell or coin battery. • DEATH or serious injury can occur if ingested. • A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours. • KEEP new and used batteries OUT OF REACH of CHILDREN • Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.	 



- Warning:** contains coin battery
- a) Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
 - b) Even used batteries may cause severe injury or death.
 - c) Call a local poison control center for treatment information.
 - d) The compatible battery type is CR2025.
 - e) The nominal battery voltage is 3V.
 - f) Non-rechargeable batteries are not to be recharged.
 - g) Do not force discharge, recharge, disassemble, heat above (manufacturer’s specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
 - h) Ensure the batteries are installed correctly according to polarity (+ and -).
 - i) Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
 - j) Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

LEGAL NOTICES

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution:

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RSS-102 Statement:

This equipment complies with IC RSS-102 RF exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

Cet équipement est conforme aux limites d’exposition IC CNR-102 prévues pour des environnements non contrôlés. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps."

Industry Canada Compliance

IC Statement

This device complies with Industry Canada’s licence-exempt RSSs. Operation is subject to the following two conditions:

(1) This device may not cause interference; and

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

L’émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d’Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L’exploitation est autorisée aux deux conditions suivantes :

(1) L’appareil ne doit pas produire de brouillage;

(2) L’appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d’en compromettre le fonctionnement.

RF Exposure Statement

To maintain compliance with the FCC’s RF Exposure guidelines. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body. Use only the supplied antenna.

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 1-877-467-4289 (U.S. and Canada)

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2023 Best Buy. All rights reserved.