


SIMPLI™
HOME

Wyndent Hall™
HOME DECOR
brooklyn + max™

ACADIAN / NORMANDY / BRUNSWICK

60 INCH TV MEDIA STAND

MODEL # AXWELL3-005-60

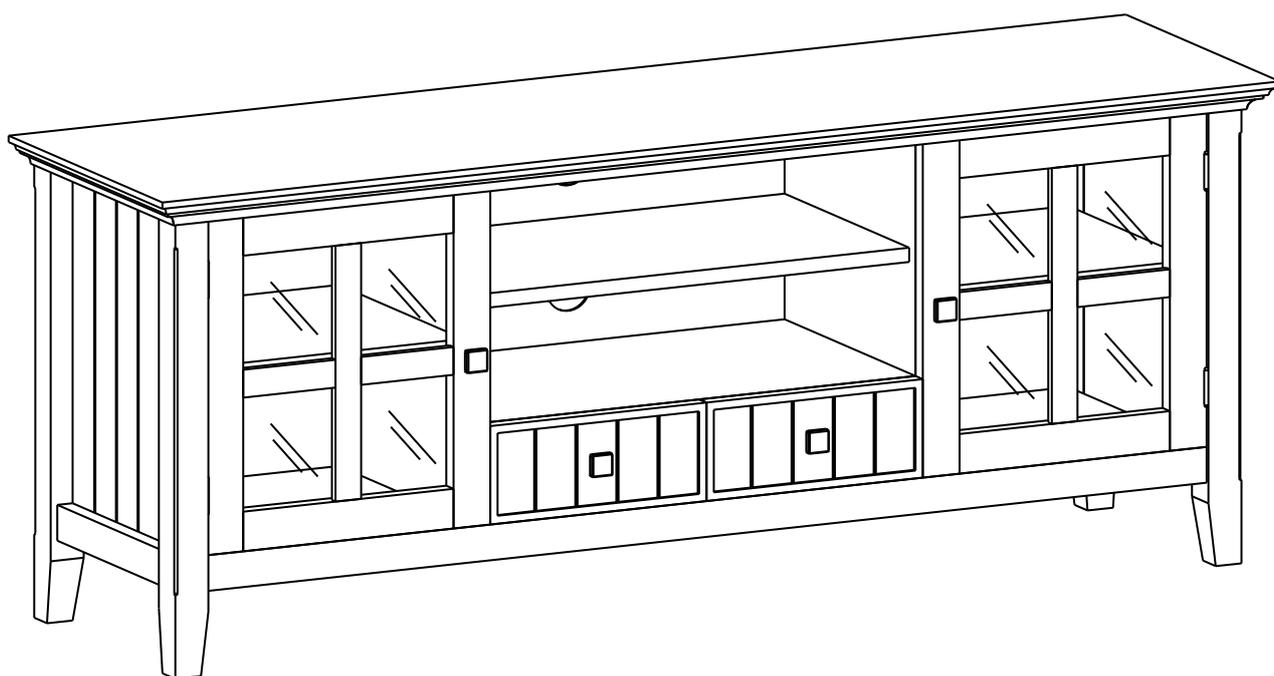



DO NOT RETURN

**FOR REPLACEMENT PARTS OR OTHER INQUIRIES
PLEASE CONTACT US AT:**

simpli-home.com/customer-support

**PLEASE ENSURE TO HAVE THE MODEL #
FROM THE PACKAGING OR
INSTRUCTION BOOKLET**

IMPORTANT : Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

SAFETY INFORMATION

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets.

We recommend that you assemble this unit on a carpeted floor to avoid scratches. We do not recommend the use of power tools for assembly as this could damage the unit. Only use manual tools.

May require 2 people for ease of assembly.

CARE and MAINTENANCE

To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth. Dust with soft dry cloth.












Do not use ammonia-based cleaning products, as they will damage the finish.

Do not leave liquids or damp cloths on this furniture.

To avoid dulling of the finish, do not place furniture in direct sunlight.

Please inspect and tighten all screws or bolts on a regular basis to ensure proper performance and safety of your item.


PARTS DESCRIPTION

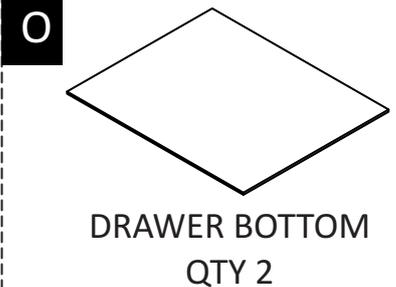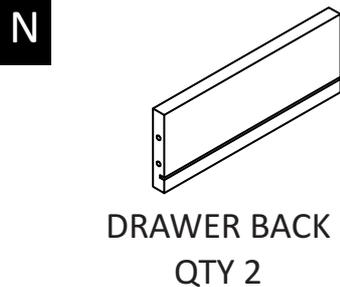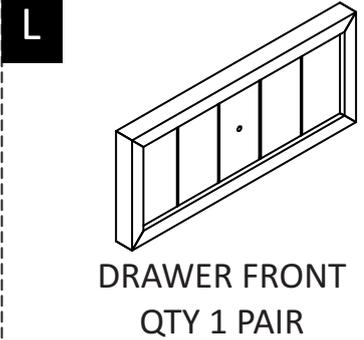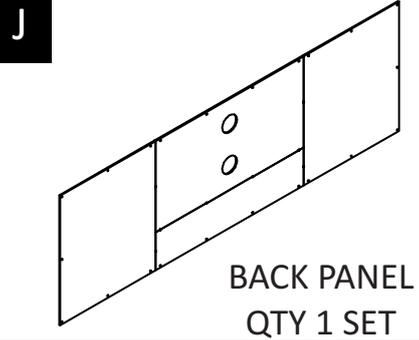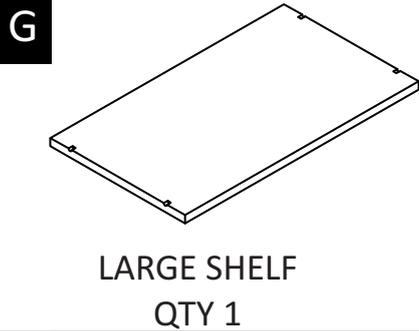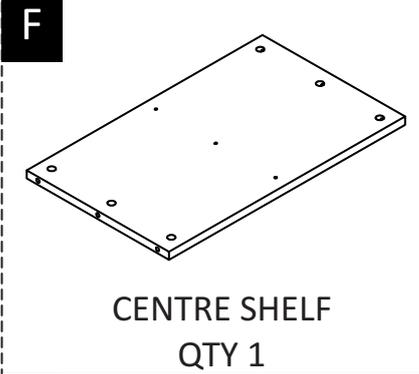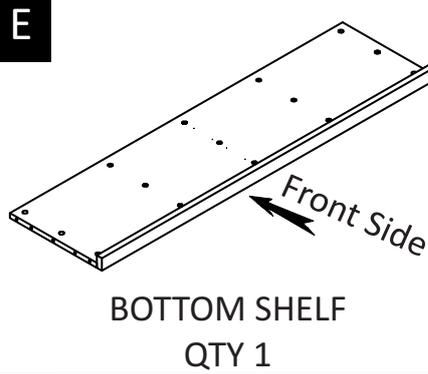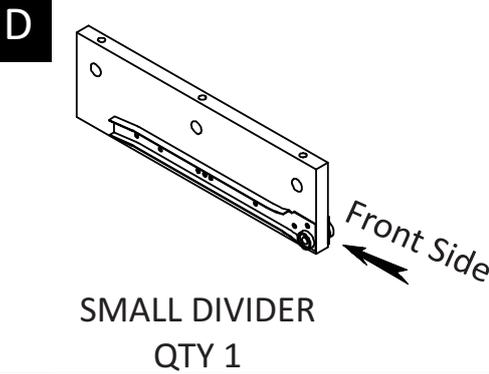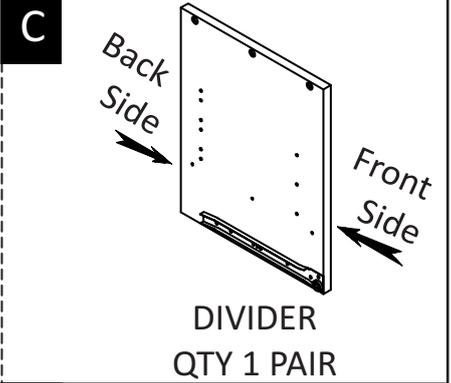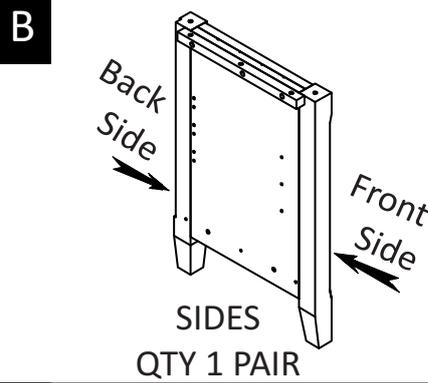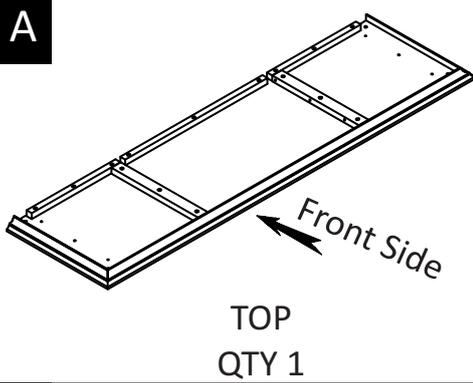

NEED HELP? For help with assembly or if you are missing a part,
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 5 pm EST)


HARDWARE DESCRIPTION

 1



ALLEN KEY SCREW
M6 X 30 mm
QTY 29

 2




CAM LOCK PIN
CAM LOCK
QTY 23

3




WOOD DOWEL
Ø8 X 30 mm
QTY 14

 4




ALLEN KEY
QTY 1

 5



PHILLIPS SCREW
ROUND HEAD
M4 X 15 mm
QTY 30

6

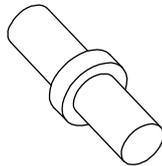


SHELF SUPPORT
QTY 18

7



PHILLIPS SHORT
SCREW
M3 X 12 mm
QTY 12

 8




PHILLIPS MEDIUM
SCREW
M3 X 15 mm
QTY 8

9




PHILLIPS LONG SCREW
M4 X 30 mm
QTY 4

10

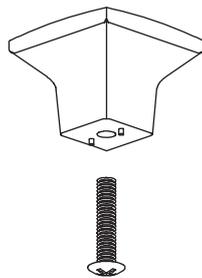

HANDLE
QTY 4 SETS

11

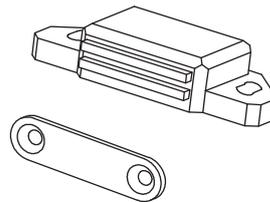

MAGNET and PLATE
QTY 2 SETS

12




a. M4 x 25mm

b. M4 x 15mm


c. M4 x 25mm

TIPPING RESTRAINT
1 SET

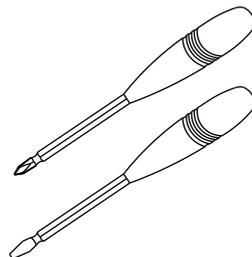


Required -
Flathead screwdriver
Phillips screwdriver
Not Included

NEED HELP? For help with assembly or if you are missing a part,
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 5 pm EST)

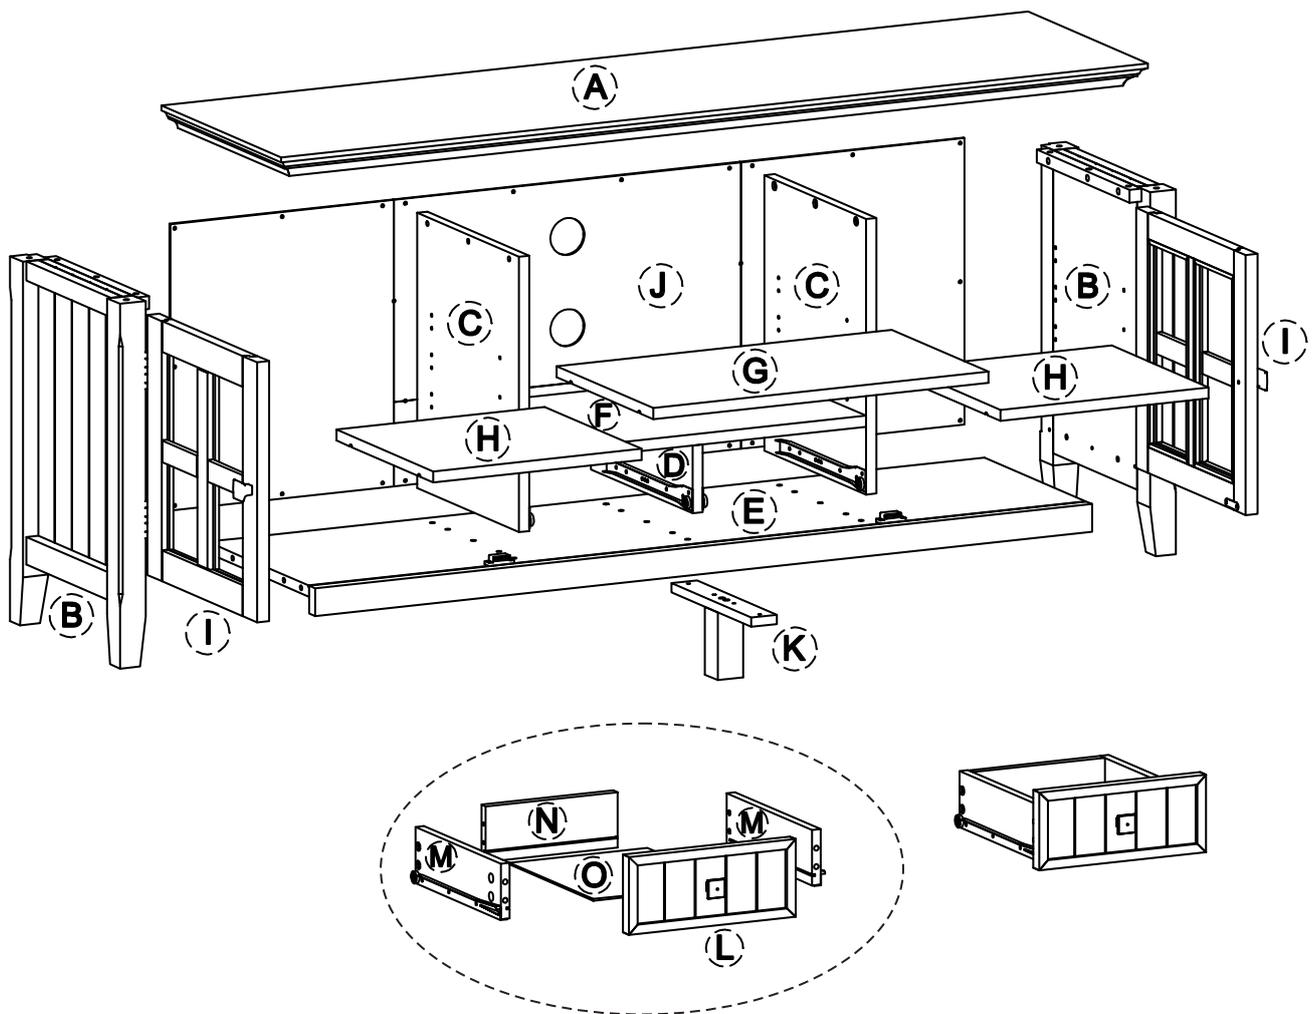


STEP 1

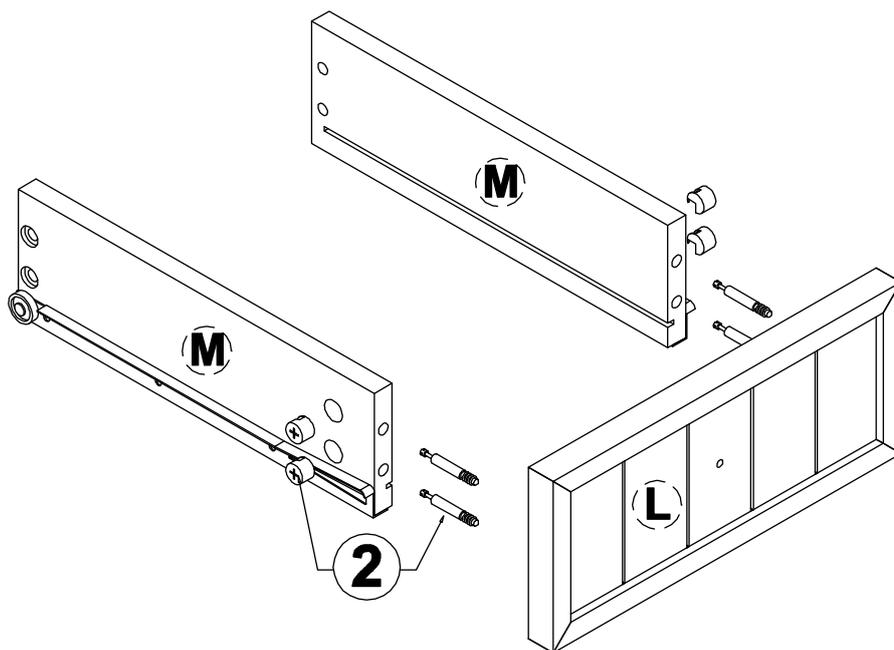


1. Attach 4 Cam Lock Pins (2) to back of Drawer Front (L).
2. Align Cam Lock Pins with pre-drilled holes and attach Drawer Sides (M).
3. Insert 2 Cam Locks (2) into pre-drilled holes on each Drawer Side (M).
4. Use flathead screwdriver secure Cam Locks.

STEP 2

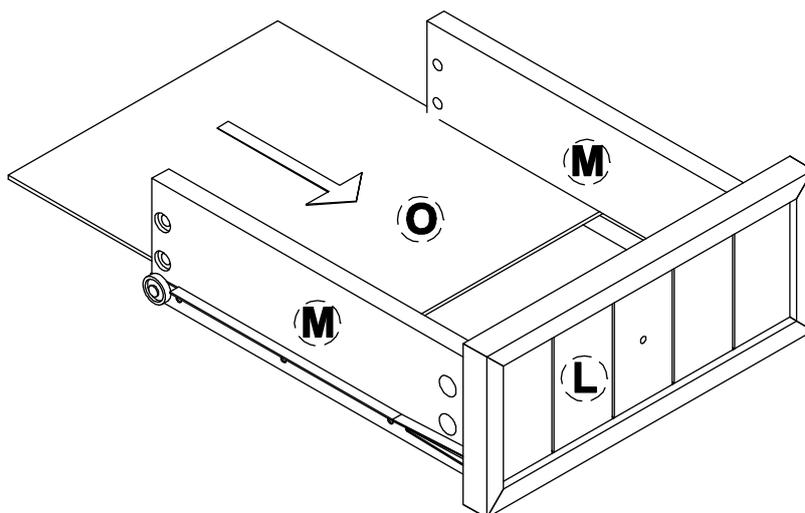


1. Slide Drawer Bottom (O) firmly into slots on Drawer Sides (M) and Drawer Front (L).

STEP 3

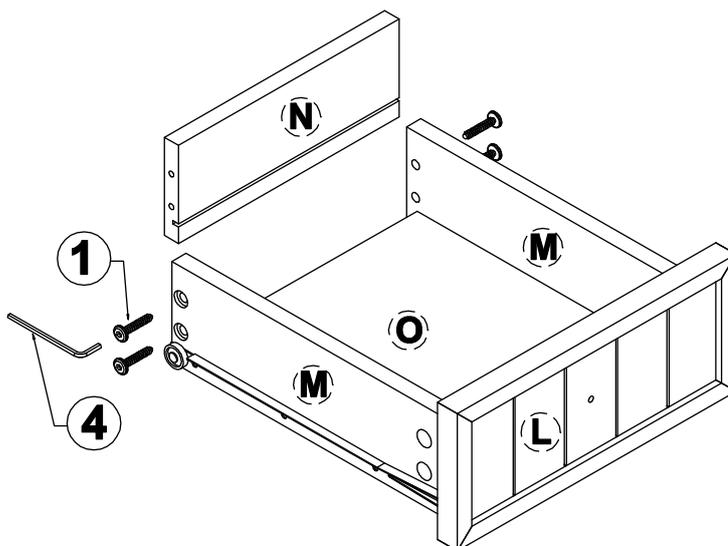

1. Align Drawer Back (N) with Drawer Bottom (O) and press firmly into slot .
2. Attach back using 2 Allen Key Screws (1) through pre-drilled holes on each Side (M).
3. Use Allen Key (4) to tighten screws. Do not over-tighten.


STEP 4

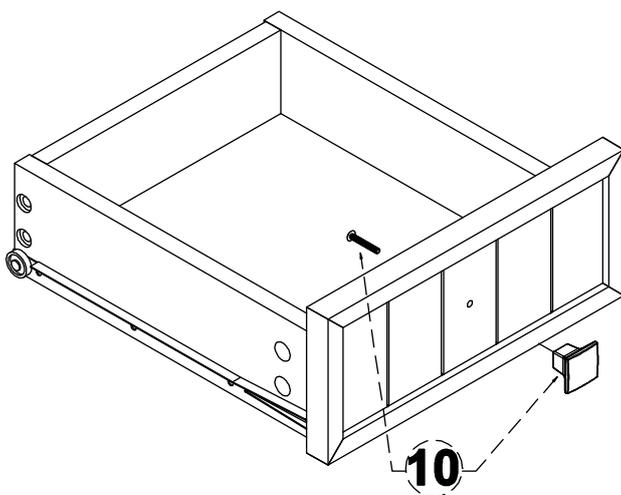


NOTE: The screwdriver is not included in the hardware pack.

1. Use Phillips Screwdriver to attach Handle (10) to Drawer Front (L).

Repeat Step 1-4 for the second drawer.

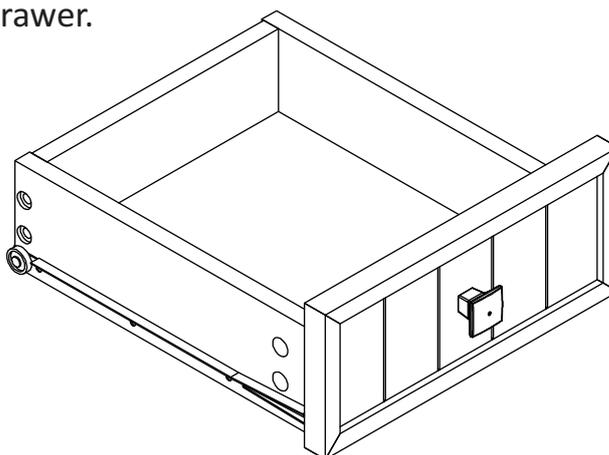


STEP 5

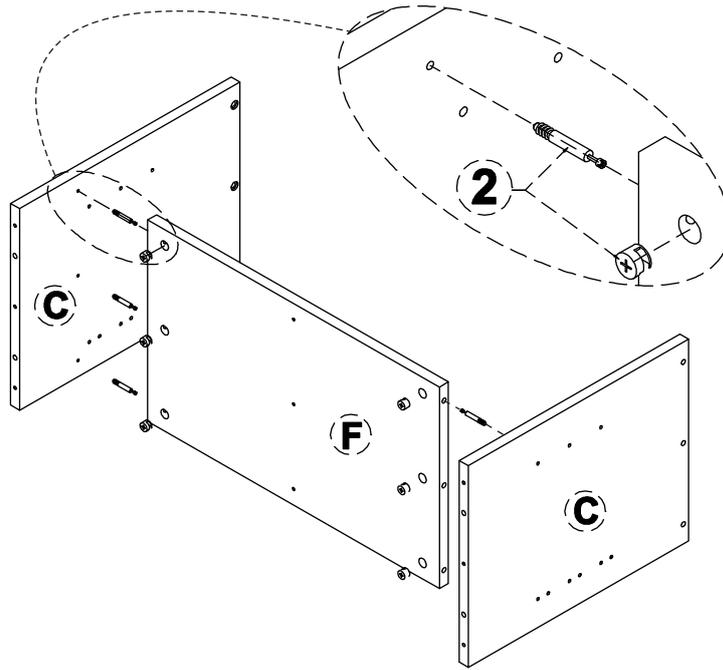


1. Attach 3 Cam Lock Pins (2) to each Divider (C) into guide holes.
2. Align and insert Cam Lock Pins on Dividers (C) into pre-drilled holes on Centre Shelf (F).
3. Place 6 Cam Locks (2) into pre-drilled holes on Centre Shelf (F).
4. Use a flathead screwdriver to tighten Cam Locks into Pins.

STEP 6

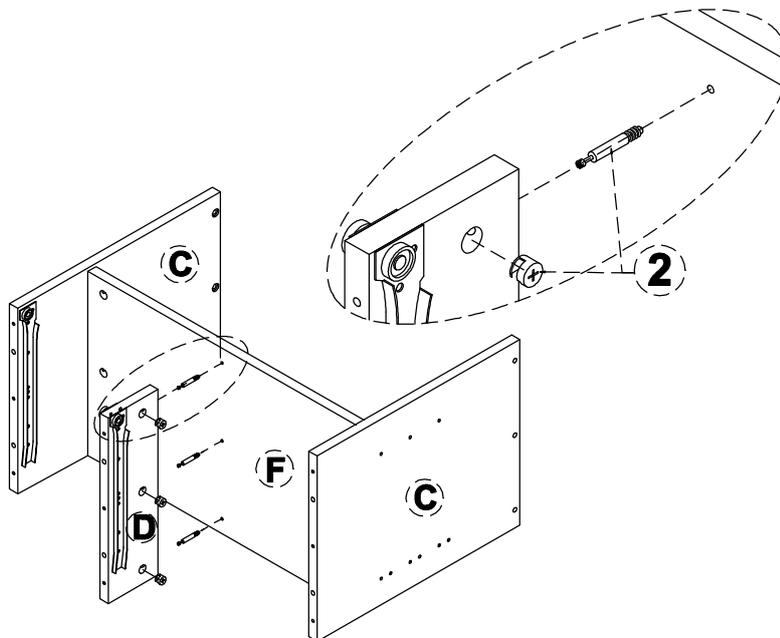


1. Attach 3 Cam Lock Pins (2) to Centre Shelf (F) into guide holes.
2. Align and insert Cam Lock Pins on Centre Shelf (F) into pre-drilled holes on Small Divider (D).
3. Place 3 Cam Locks (2) into pre-drilled holes on Small Divider (D).
4. Use a flathead screwdriver to tighten Cam Locks into Pins.

STEP 7

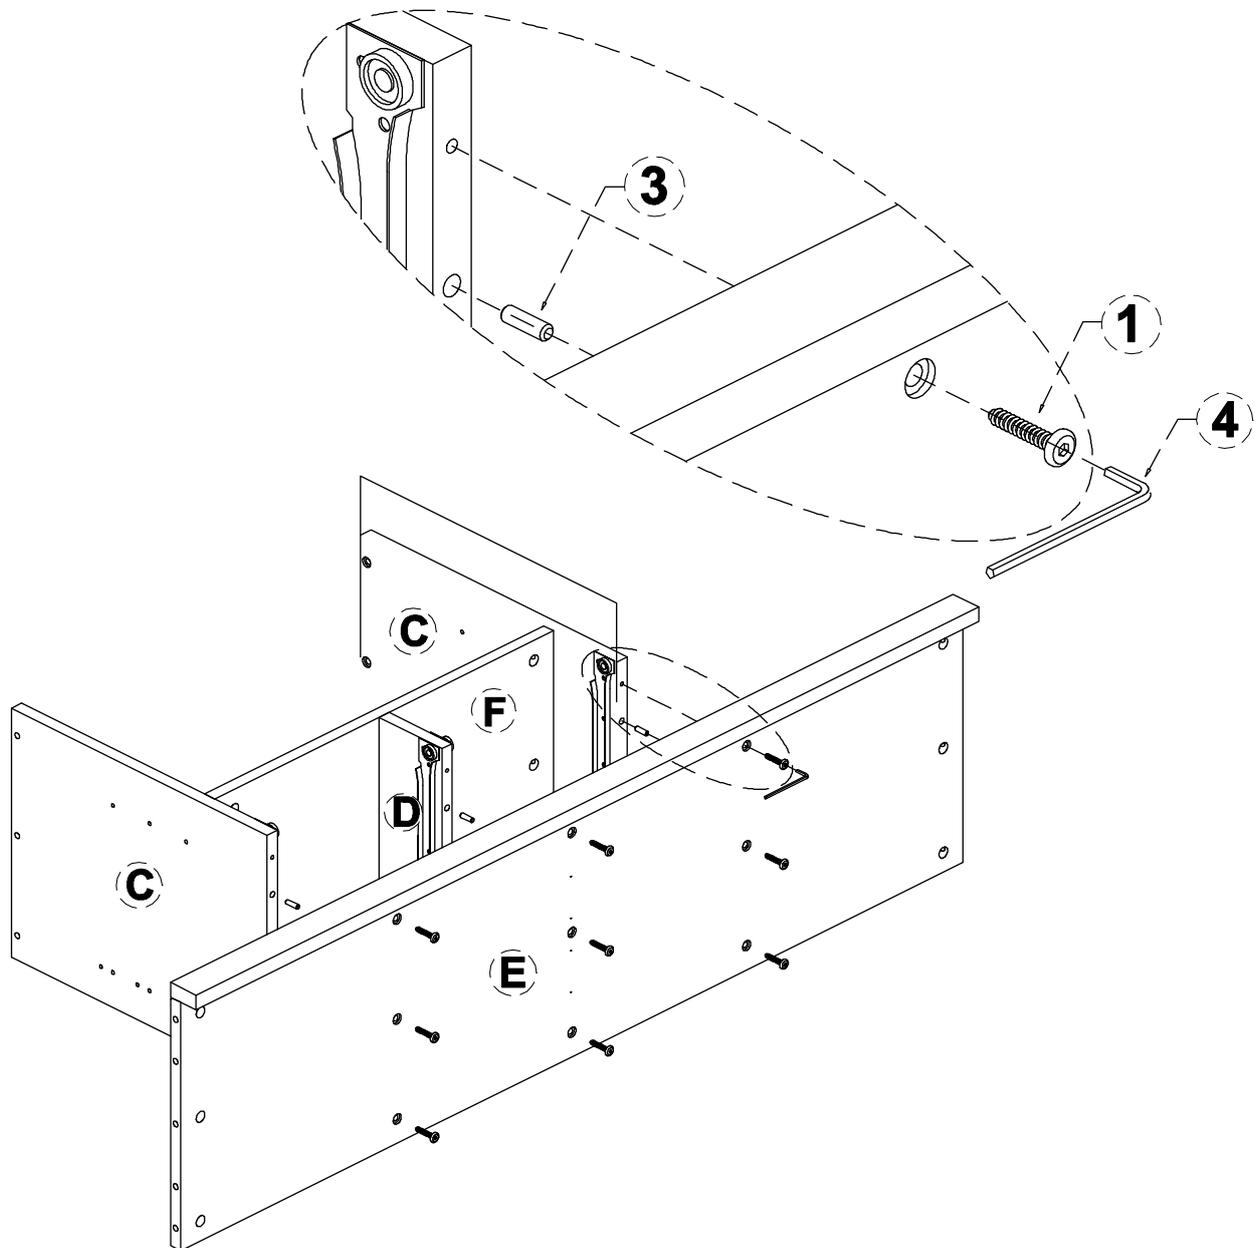


1. Insert 2 Dowels (3) into pre-drilled holes on each Divider (C) and Small Divider (D).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. $\frac{1}{2}$ length of Dowels should be exposed.
3. Attach Divider (C) and Small Divider (D) to Bottom Shelf (E) using 9 Allen Key Screws (1) through pre- drilled holes.
4. Use Allen Key (4) to tighten screws. Do not over-tighten.

STEP 8

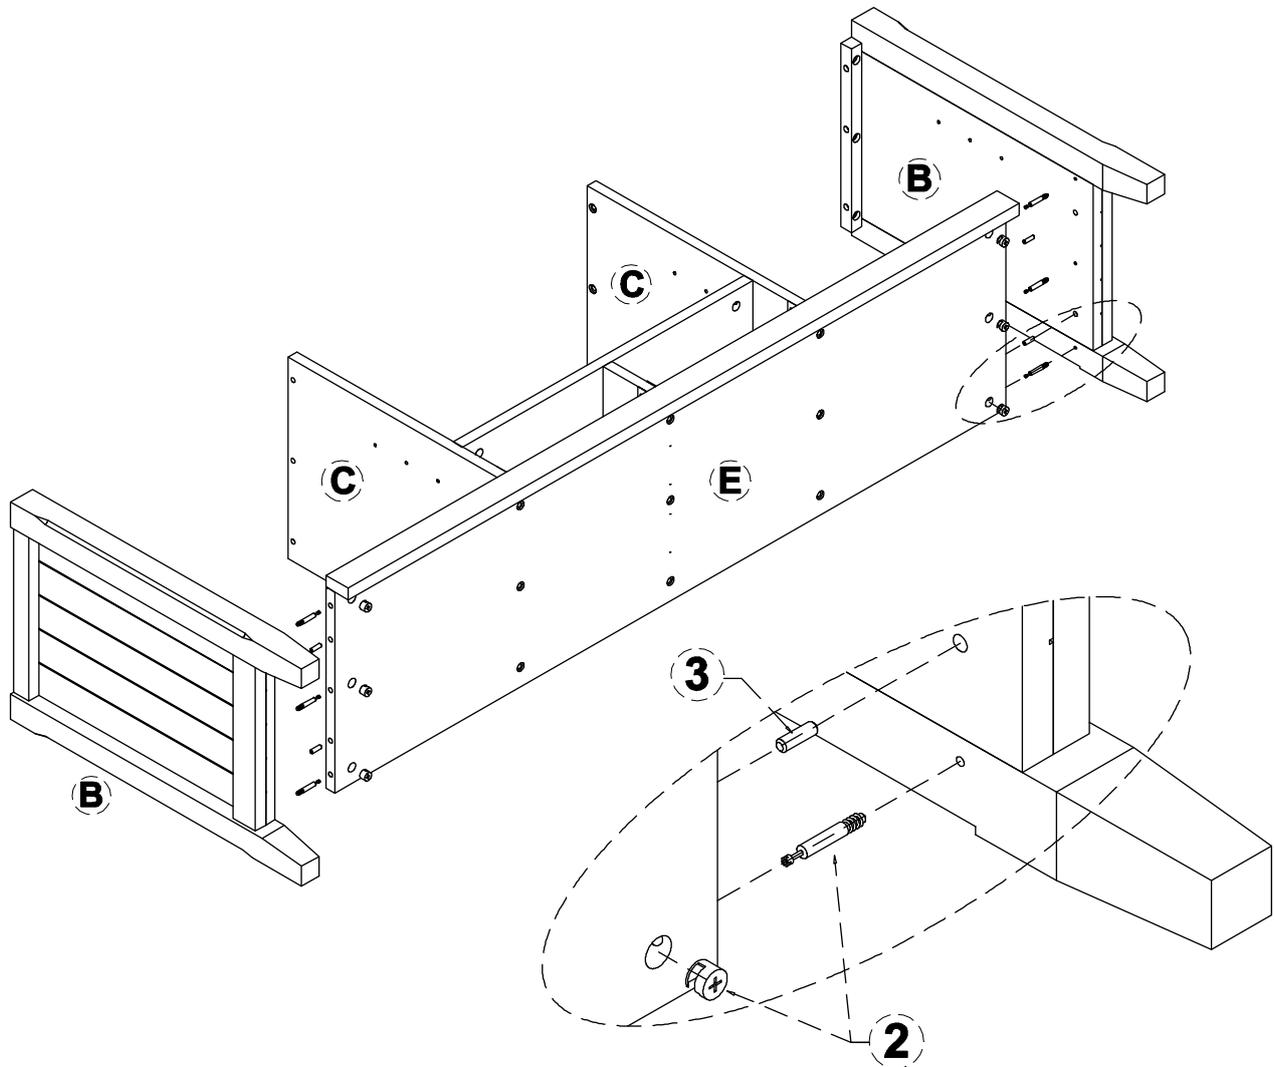


1. Insert 2 Dowels (3) into pre-drilled holes on each Side (B).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. $\frac{1}{2}$ length of Dowels should be exposed.
3. Attach 3 Cam Lock Pins (2) to each Side (B) into guide holes.
4. Align and insert Cam Lock Pins on Sides (B) into pre-drilled holes on Bottom Shelf (E).
5. Place 6 Cam Locks (2) into pre-drilled holes on Bottom Shelf (E).
6. Use a flathead screwdriver to tighten Cam Locks into Pins.

STEP 9

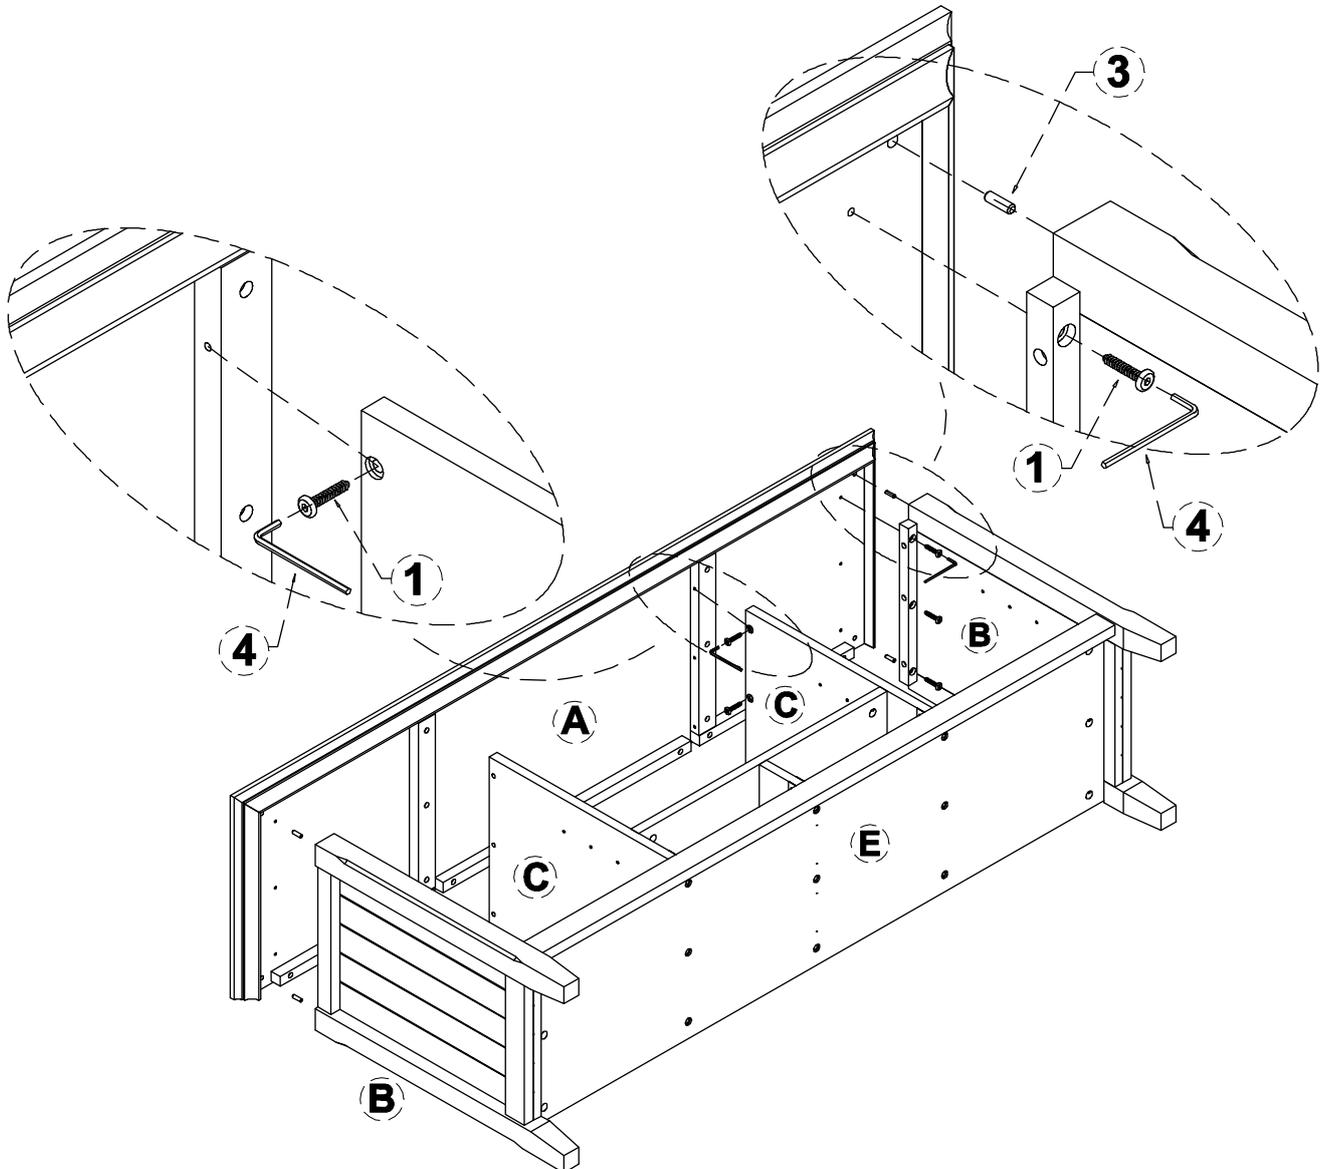


1. Insert 2 Dowels (3) into top corners of each Side (B).
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. $\frac{1}{2}$ length of Dowels should be exposed.
3. Align pre-drilled holes bottom corners of Top (A) with Dowels (3) on Side (B).
4. Attach Top (A) to Sides (B) and Dividers (C) using 12 Allen Key Screws (1).
5. Use Allen Key (4) to tighten screws. Do not over-tighten.

STEP 10

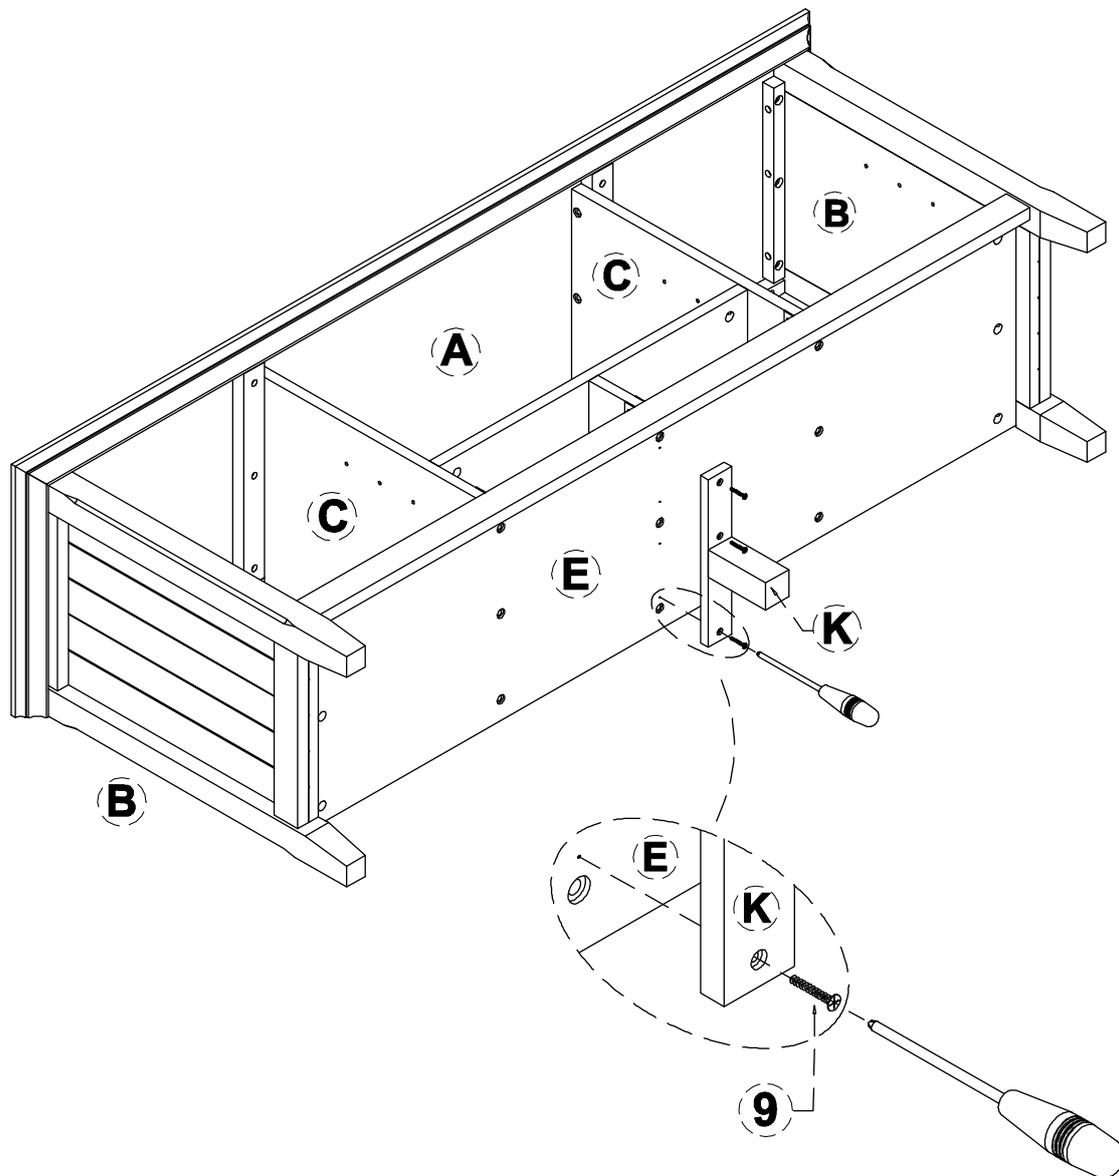


1. Attach Bottom Support Leg (K) to Bottom Shelf (E) using 4 Phillips Screws (9).
2. Use Phillips screwdriver to tighten screws. Do not over-tighten.

STEP 11

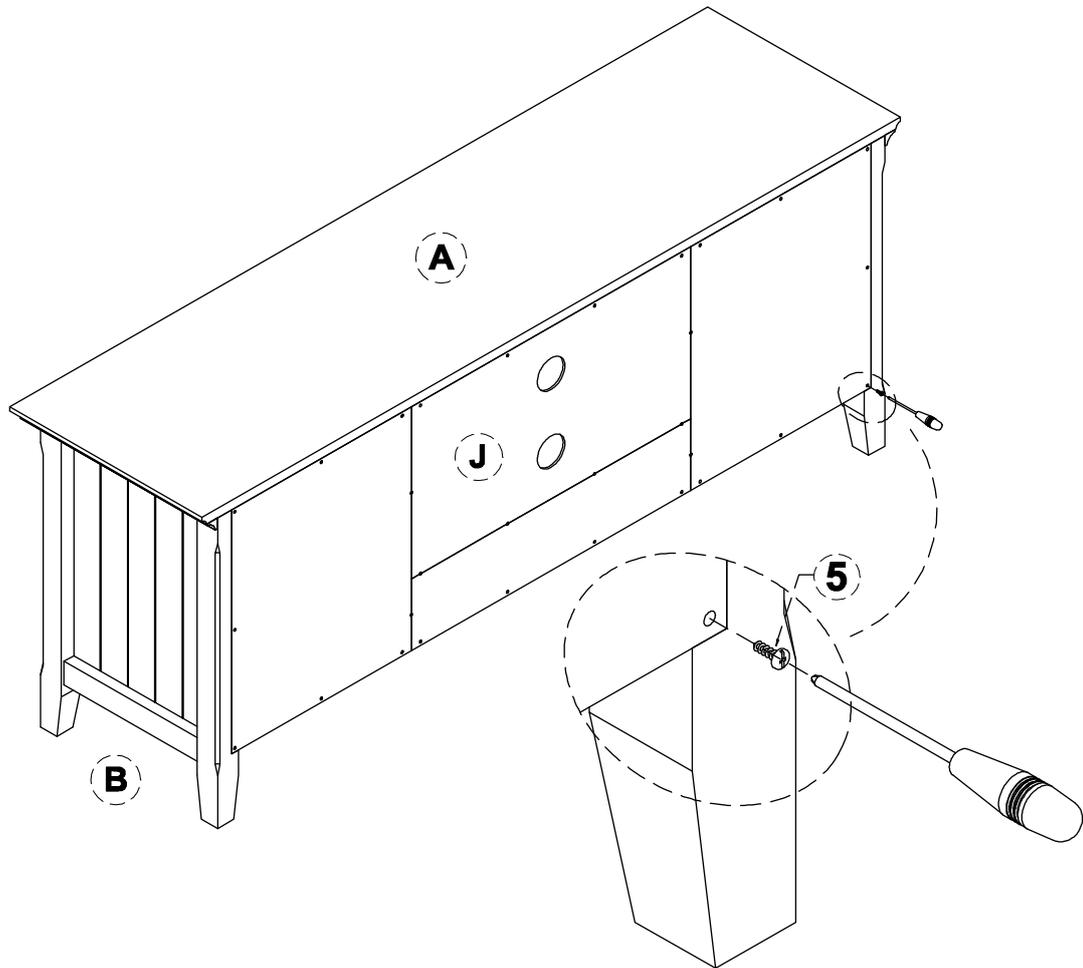


1. Attach Back Panels (J) to Back of cabinet using Phillips Screws Round Head (5) into pre-drilled guide holes.
2. Use Phillips screwdriver to tighten screws. Do not over-tighten.

STEP 12

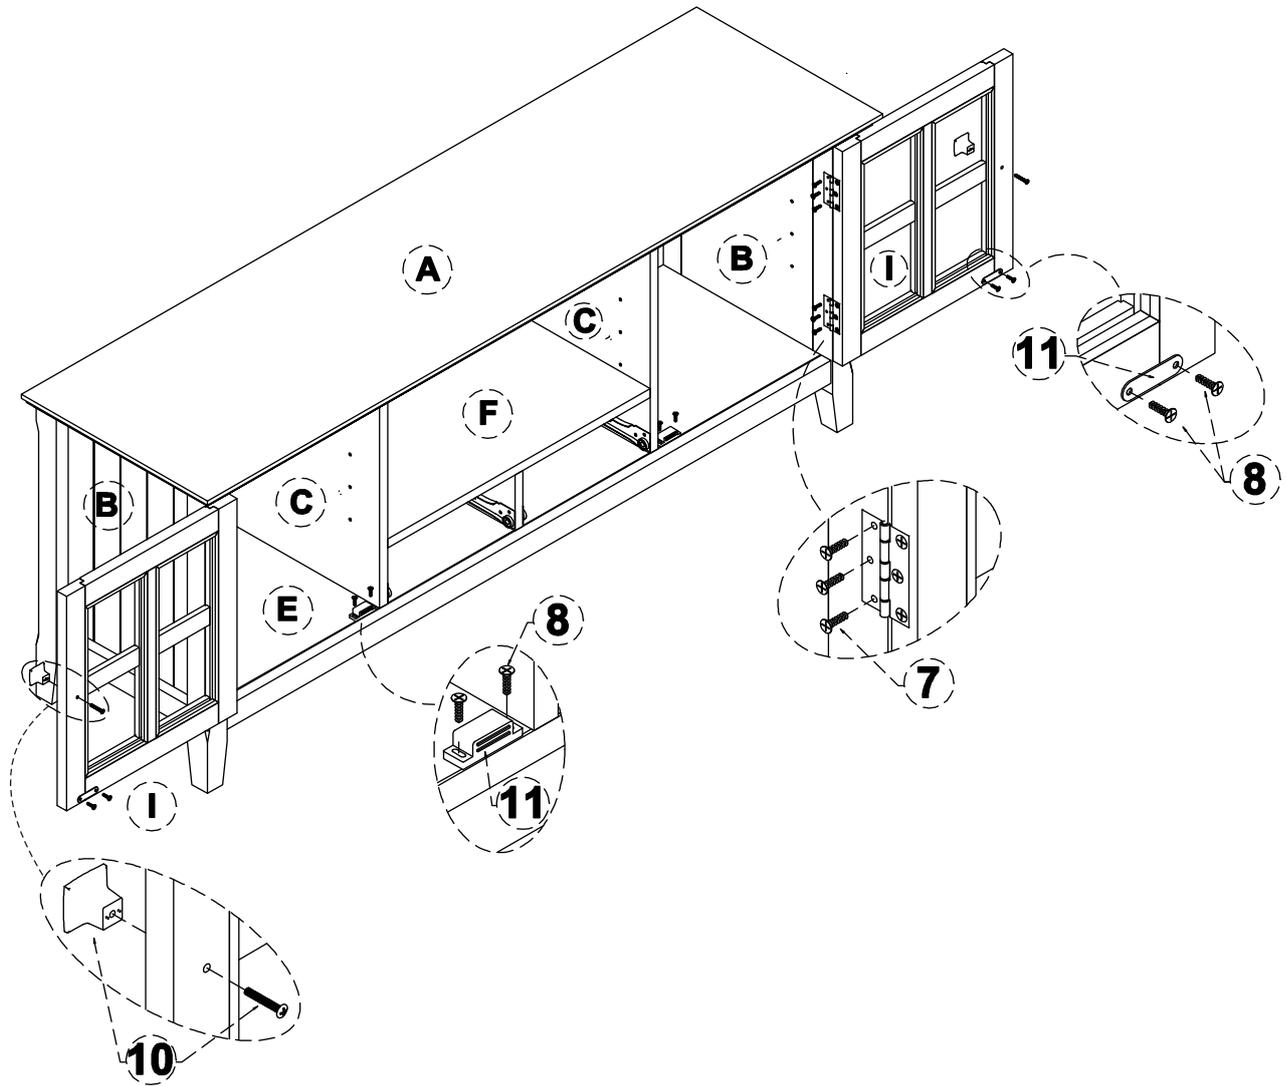


1. Attach Hinges on Doors (I) to Sides (B) using Phillips Screws (7) into pre-drilled guide holes.
2. Attach Magnet Plates (11) to bottom corner of Doors (I) using Phillips Screws (8) into guide holes on Doors (I).
3. Attach Magnet (11) to Bottom Shelf (E) using Phillips Screws (8) into guide holes on Bottom Shelf (E).
4. Use Phillips screwdriver to attach Handles (10) to Doors (I).

STEP 13

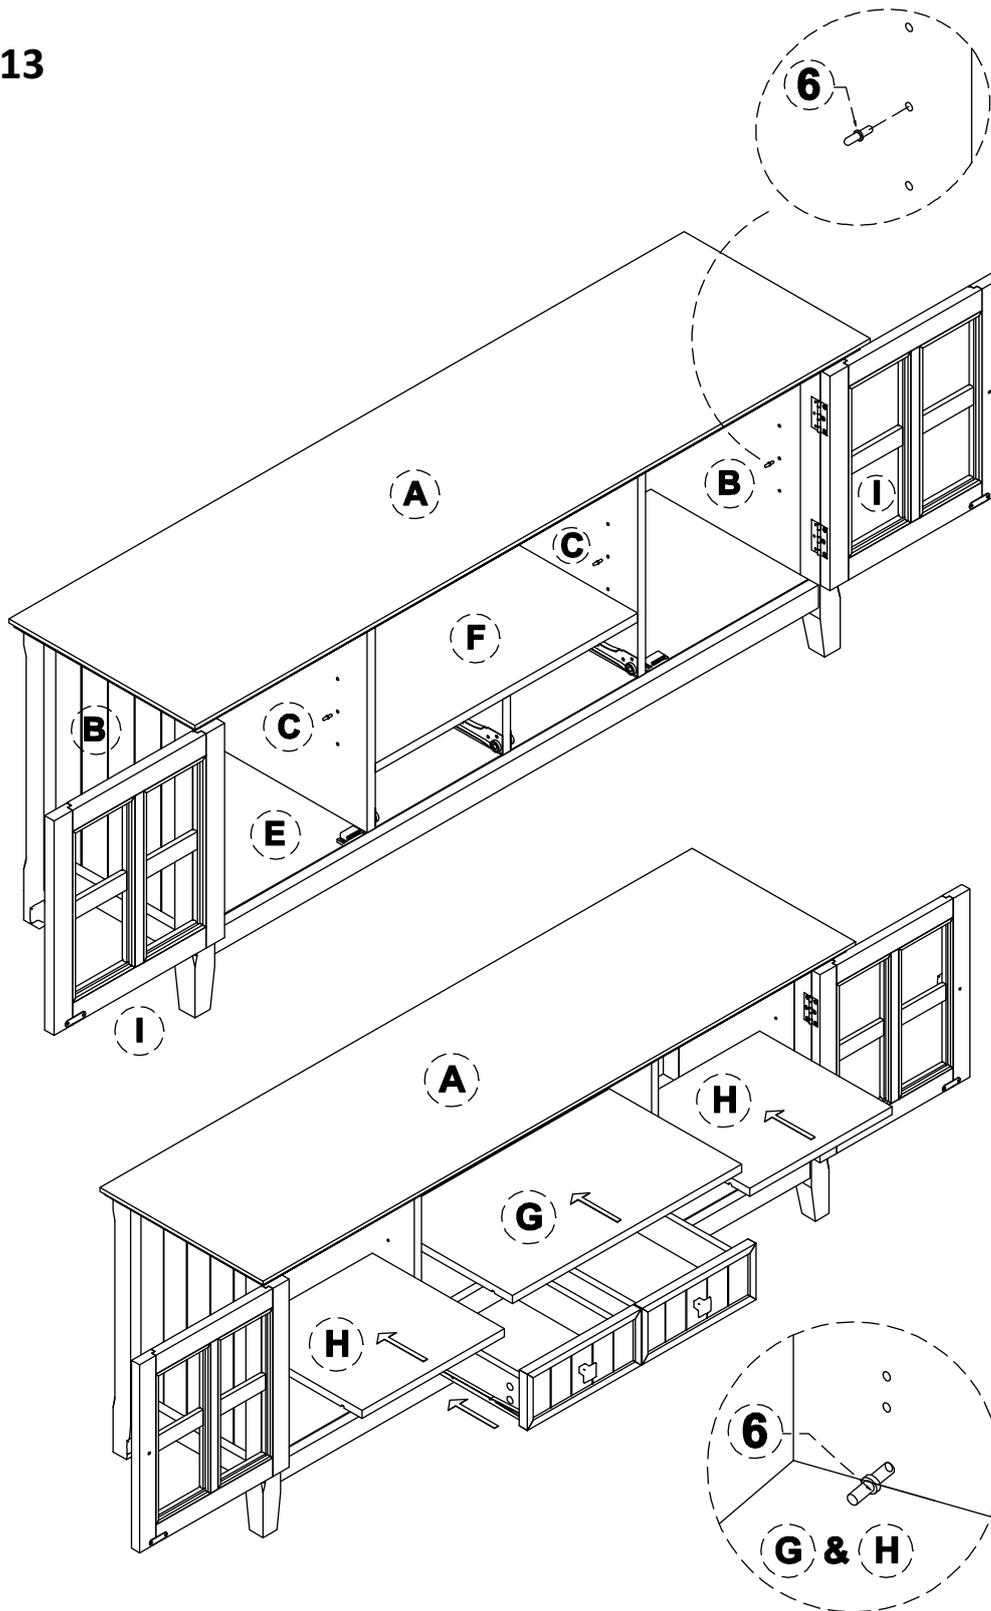


1. Use 4 Shelf Supports ⑥ for each Shelf ⑦ & ⑧ in desired location.
2. 2 Shelf Supports ⑥ may be used on back top of each Shelf ⑦ & ⑧ as a tipping restraint.

STEP 14

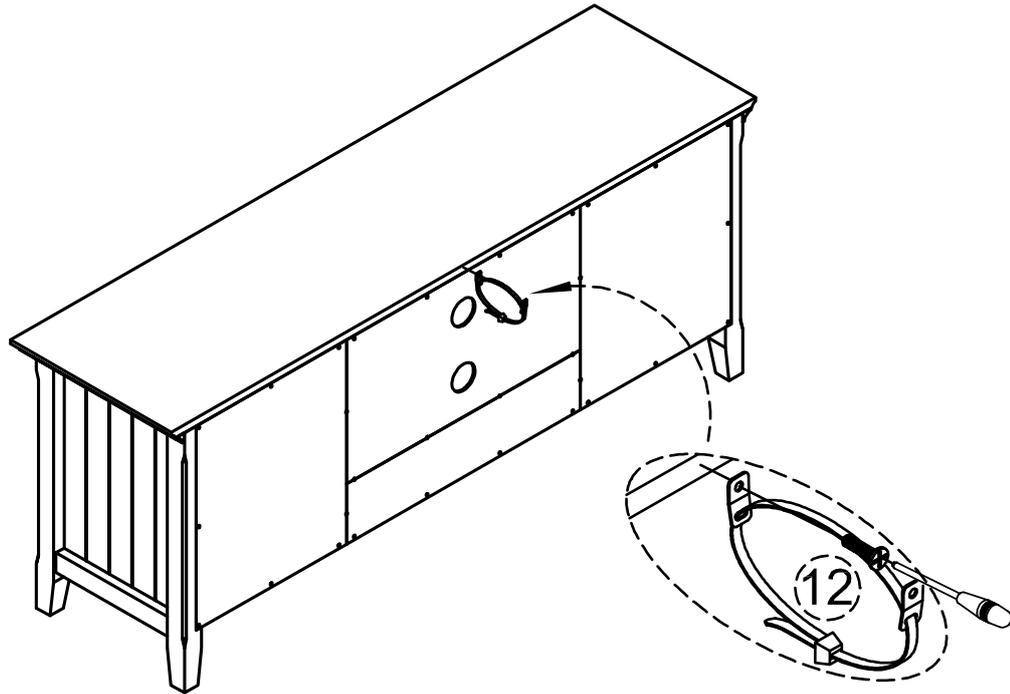

STEP 15

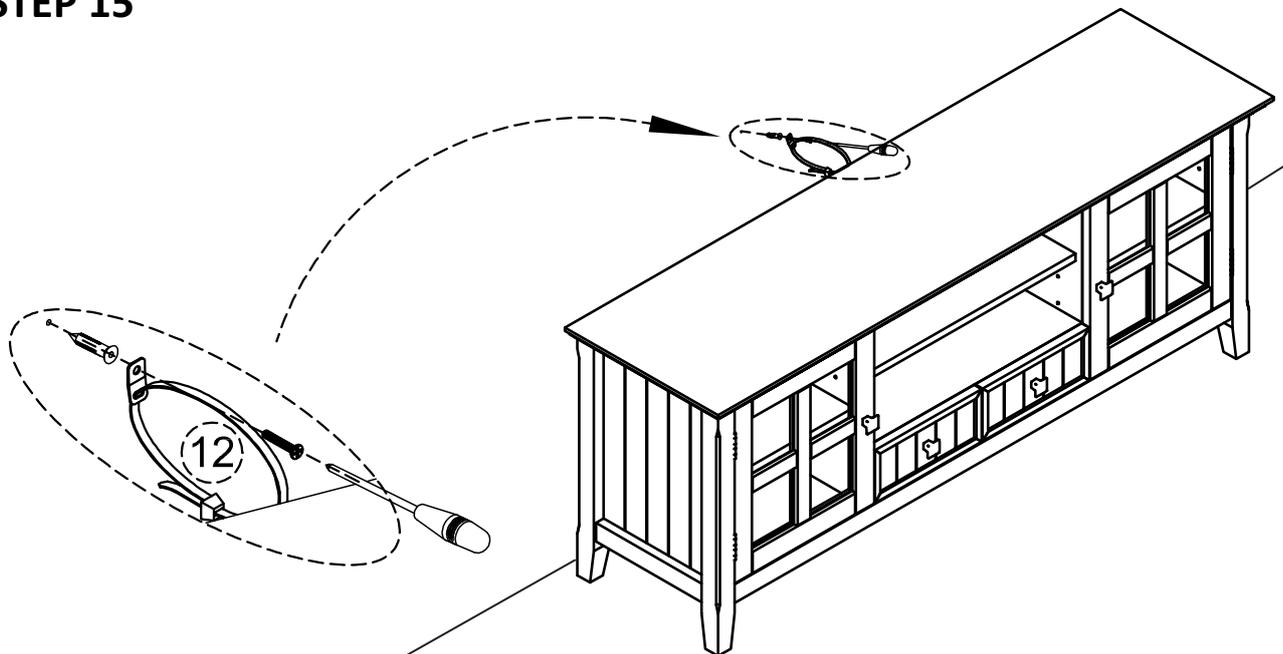

STEPS 14 & 15

1. To attach Tipping Restraint (12), follow instructions on Tipping Restraint package.



WARRANTY

Thank you for purchasing a **Simpli Home – Wyndenhall – Brooklyn + Max** product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

In case of any malfunction of your product (failure, missing parts, etc.) please contact us at our toll free service line at 1-866-518-0120 ext. 262 from 9 am to 5 pm, Monday to Friday, Eastern Standard Time or by email at simpli-home.com/customer-support.

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.

PLEASE NOTE: This item is hand-crafted and hand-finished with utmost care. As such, variations and imperfections should be expected and should be welcomed as the natural beauty of the wood.



Question, problems, missing parts?

Before returning please email Customer Support at
simpli-home.com/customer-support

or call

Customer Service at 1-866-518-0120 ext. 262
Monday to Friday between 9 am – 5 pm EST

For more information visit us on our website
www.simpli-home.com

Like us on facebook
www.facebook.com/simplihomefurnishings

SIMPLI[™]
H O M E

WyndentHall[™]
HOME DECOR
brooklyn + max[™]

**ENTER
TO WIN**

Upload an image of our furniture in your home with a short review to our facebook page and have a chance to

**Win your choice of any one of
Simpli Home furniture pieces
Free!!!**

www.facebook.com/simplihomefurnishings

(draws monthly – shipping included)

(vanities not included)

