



NS-GNSUCGPK19_18-0230_QSG_V1_ENSP.ai 1 6/19/2018 8:23:48 AM

INSIGNIA™

QUICK SETUP GUIDE

Ultimate Grip Case

NS-GNSUCGPK19

PACKAGE CONTENTS

- Ultimate Grip Case
- Quick Setup Guide

FEATURES


- Soft-touch grips for improved feel
- Single-piece frame construction for added durability and protection
- Allows for easy docking

Before using your new product, please read these instructions to prevent any damage.




ATTACHING THE GRIP CASE

- 1 Without the Joy-Cons™ attached, place the top of your Switch console into the grip case.
- 2 Gently press the bottom of your Switch into place.
- 3 Slide the Joy-Cons into place onto your Switch, one at a time.

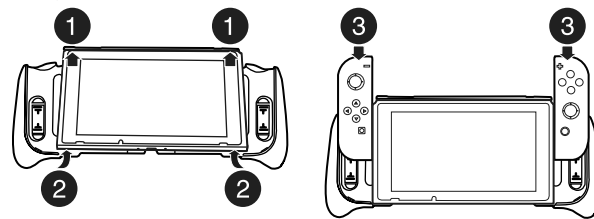

REMOVING THE GRIP CASE

- 1 Press the release button on the back of your Joy-Cons and slide them up to remove them from the grip case.
- 2 Pull your Switch console out of the grip case.

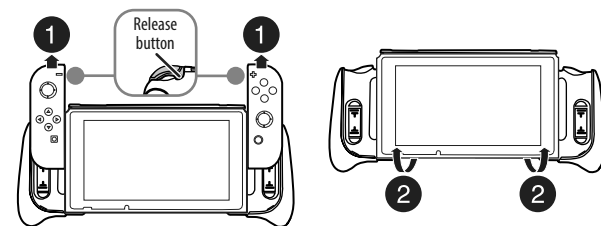


Flat size (W×H): 16.54 × 3.54 in. (420 × 90 mm)
Final folded size: 8.26 × 3.54 in. (210 × 90 mm)

CHANGING THE GRIPS


Removing grips:

- 1 Firmly hold the grip case and squeeze the tab locks.
- 2 Remove the grip as shown.

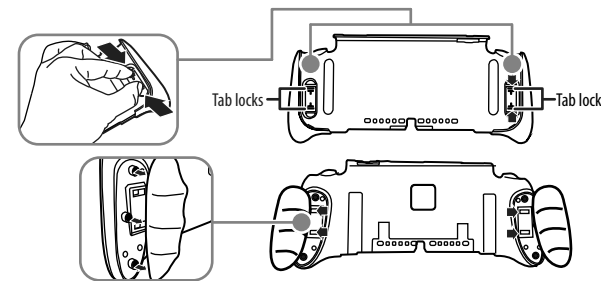

Installing grips:

- 1 Align the grips with the holes on the grip case and press inward until you feel a click.

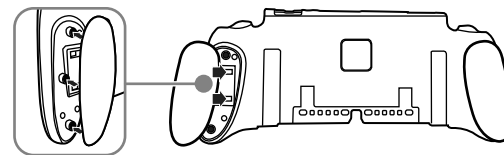

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)
www.insigniaproducts.com


INSIGNIA is a trademark of Best Buy and its affiliated companies.
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2018 Best Buy. All rights reserved.
Made in China

V1 ENGLISH 18-0230





NS-GNSUCGPK19_18-0230_QSG_V1_ENSP.ai 2 6/19/2018 8:23:54 AM

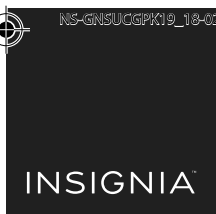

GUÍA DE INSTALACIÓN RÁPIDA

Estuche Grip perfecto

NS-GNSUCGPK19

CONTENIDO DEL PAQUETE

- Estuche Grip perfecto
- Guía de instalación rápida

CARACTERÍSTICAS


- Agarres suaves al tacto para mejorar la sensación
- Marco de una pieza para más durabilidad y protección
- Permite una inserción práctica en la base

Antes de usar su producto nuevo, lea este instructivo para evitar cualquier daño.




INSTALACIÓN DEL ESTUCHE GRIP

- 1 Sin sujetar los Joy-Cons™, coloque la parte superior de su consola Switch en el estuche Grip.
- 2 Presione delicadamente la parte inferior de su Switch en su lugar.
- 3 Deslice los Joy-Cons en su lugar en la Switch, uno a la vez.

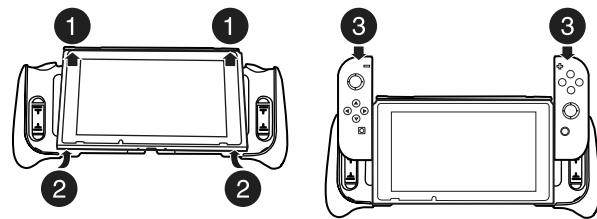

EXTRACCIÓN DEL ESTUCHE GRIP


- 1 Presione el botón de liberación situado en la parte posterior de sus Joy-Cons y deslícelos para retirarlos del estuche Grip.
- 2 Extraiga su consola Switch del estuche Grip.

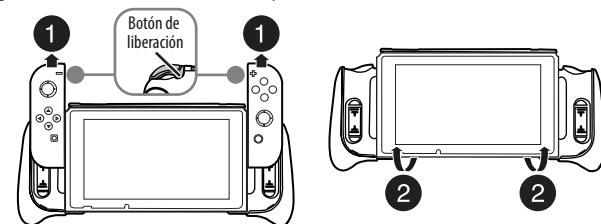

CAMBIO DE LOS AGARRES


Quitar los agarres:

- 1 Mantenga firmemente el estuche Grip y presione las lengüetas de bloqueo.
- 2 Quite el agarre tal como se muestra.

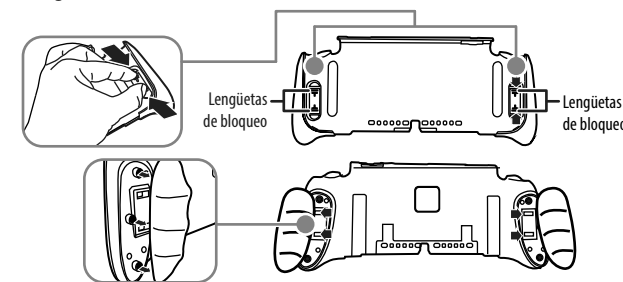

Instalación de los agarres:

- 1 Alinee los agarres con los agujeros en el estuche Grip y presione hacia adentro hasta que se oiga un clic.

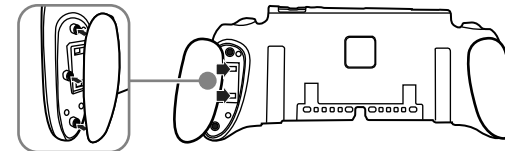

GARANTÍA LIMITADA DE UN AÑO

Visite www.insigniaproducts.com para obtener más detalles.

COMUNÍQUESE CON INSIGNIA:

Para obtener servicio al cliente, llame al 1-877-467-4289 (EE.UU. y Canadá) o 01-800-926-3000 (México) o www.insigniaproducts.com

INSIGNIA es una marca comercial de Best Buy y sus compañías asociadas.
Distribuida por Best Buy Purchasing, LLC
7601 Penn Av. South, Richfield, MN 55423 E.U.A.
© 2018 Best Buy. Todos los derechos reservados.
Hecho en China

V1 ESPAÑOL 18-0230

