

INCLUDED ACCESSORIES

 
Remote control and
two AAA batteries




TV Stand



M4 screws (10mm length) (4 pcs.)



Power adapter

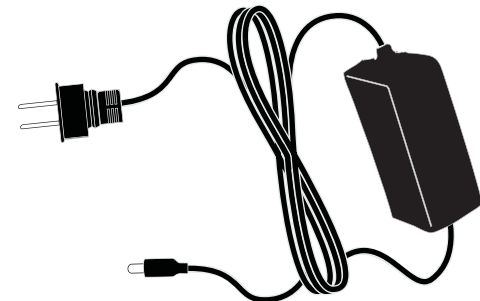

FIND YOUR USER GUIDE ONLINE!

Go to www.insigniaproducts.com, then click **Support & Service**. Enter **NS-32D312NA15** in the box under *Manual, Firmware, Drivers & Product Information*, then click ►.



Roku Ready®

Your TV is certified to work with the Roku Streaming Stick™. Instantly stream 1000+ entertainment channels, including Netflix, Hulu Plus, Pandora, and more. Connect the Streaming Stick (not included) to the MHL jack on your TV and enjoy.



STOP


Do not plug your power cord in until all other devices have been connected.

1 START HERE



How do I attach the stand to my TV? (not for wall mounting)

You'll need: Soft surface and Phillips screwdriver

A Carefully place your TV face-down on a cushioned, clean surface.

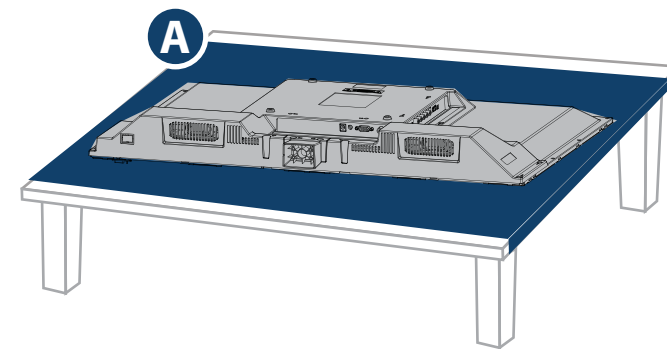

 B Secure the stand to the TV with the four provided screws.

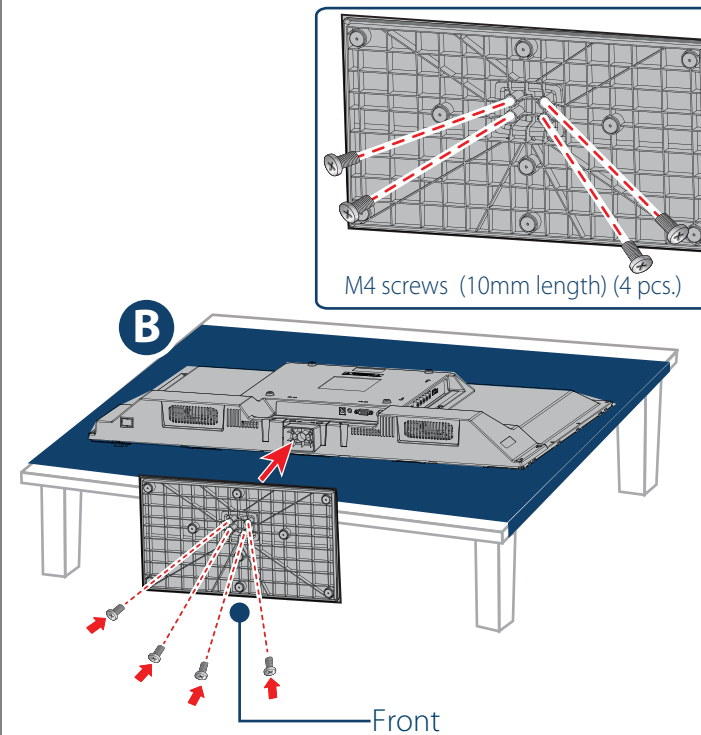

WALL MOUNT


How do I prepare my TV for wall mounting? (not for use with a TV stand)

You'll need: Soft surface and Phillips screwdriver

OR


A Carefully place your TV face-down on a cushioned, clean surface.

B Remove the three screws that secure the stand column to the TV.

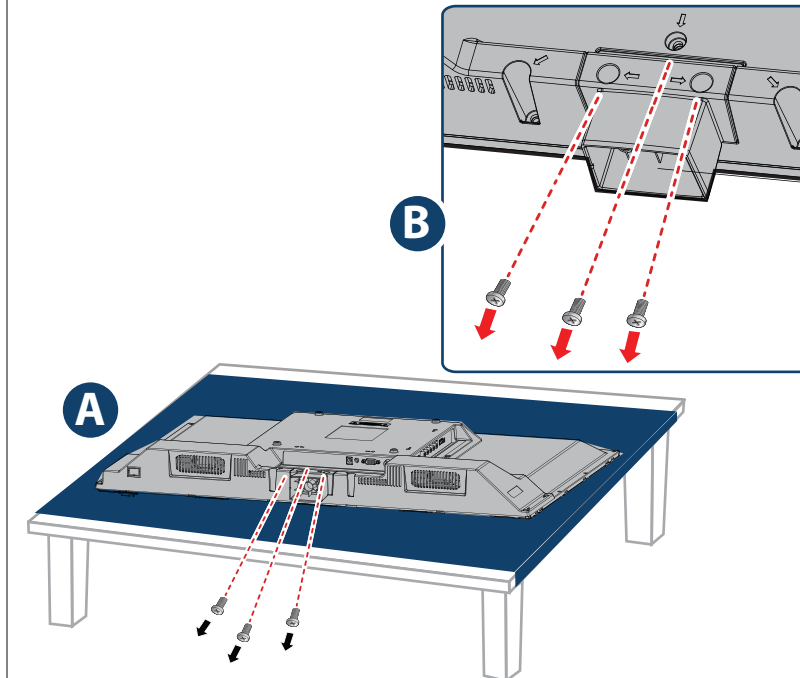

C Remove the stand column.


D See the instructions that came with your wall mount for more information about how to correctly mount your TV.

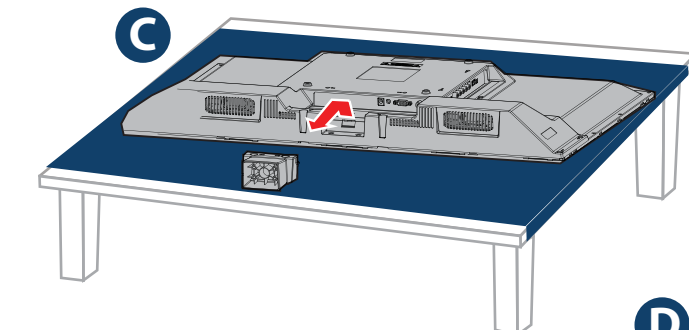

D

Your TV has four VESA mounting holes on the back. If you attach a wall-mount bracket to the back of your TV, **the bracket must be securely attached, using all four holes**. If you do not use all four mounting holes, your TV may fall and cause property damage or personal injury. See the documentation that came with your wall mount for complete mounting instructions.

FEATURES

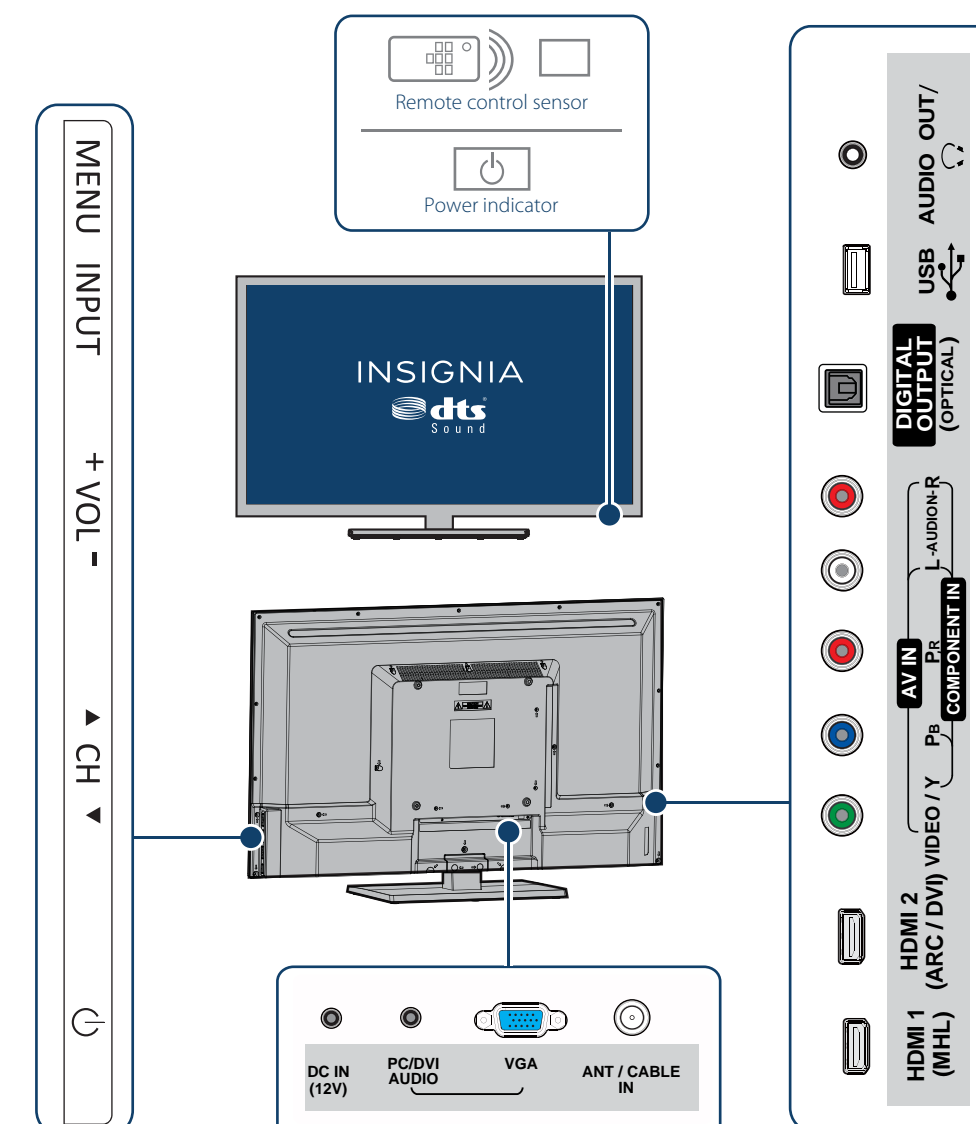



Before using your new product, please read these instructions to prevent any damage.

2 MAKING CONNECTIONS


How do I watch TV (cable, satellite, or antenna) or connect a device such as a DVD or Blu-ray disc player, game console, Roku Streaming Stick™, MHL-enabled device, or tablet?

WHICH CABLES DO YOU HAVE?

HDMI (BEST)
Best video quality

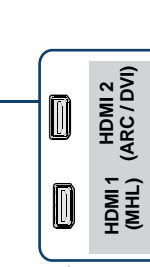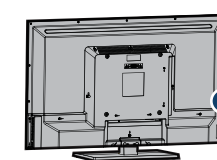


Multi-purpose jacks: You can plug any device that uses HDMI into any HDMI jack. However, certain devices must be connected to the **ARC** or **MHL** jacks. See the instructions that came with your Roku® Streaming Stick™ or ARC or MHL-enabled device for more information.

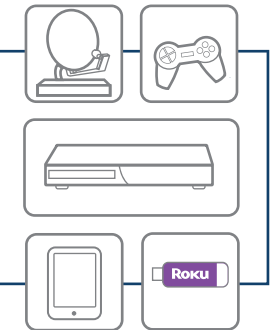



COMPONENT (BETTER)








Note: The component and AV jacks are shared. This means you can connect only one component or AV device at a time. We suggest upgrading to HDMI (BEST) if your device supports it.

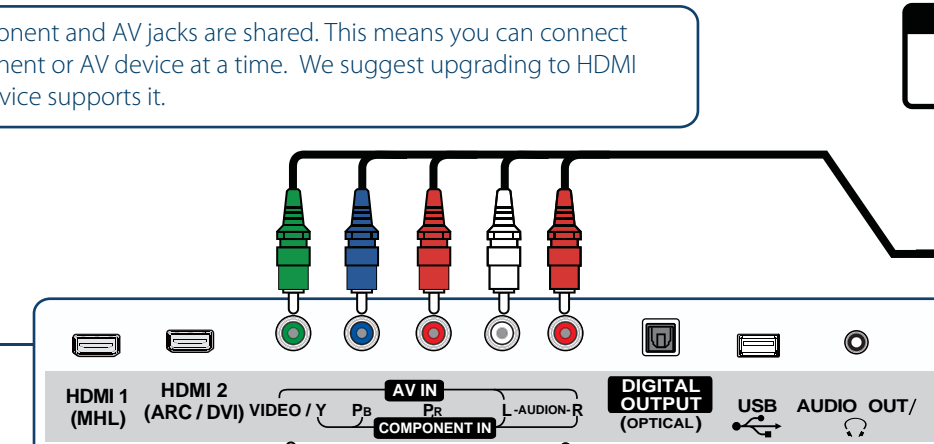

Note: Connect the yellow video cable to the green VIDEO/Y jack.

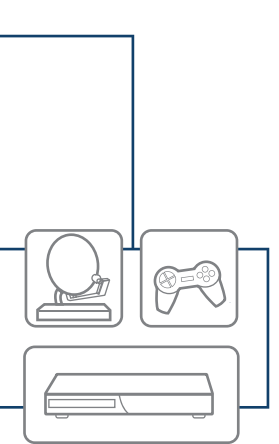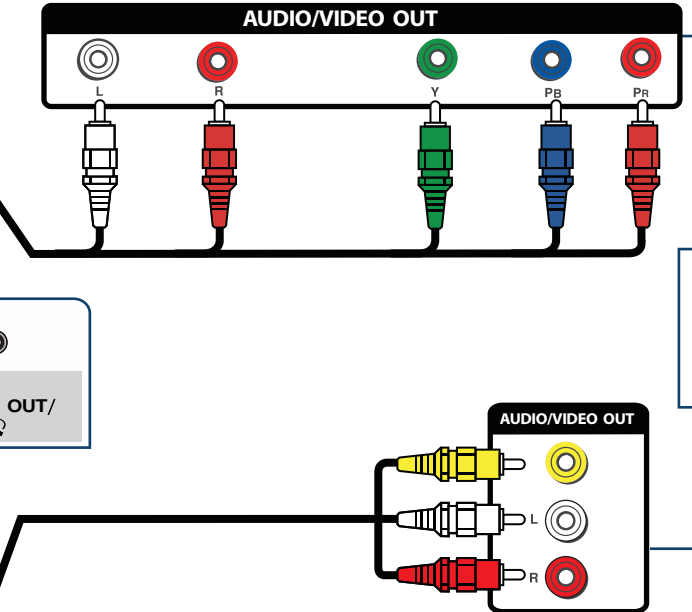


COAXIAL (GOOD)

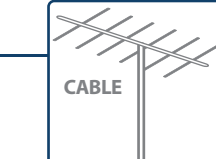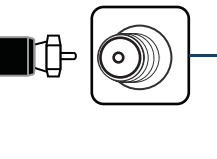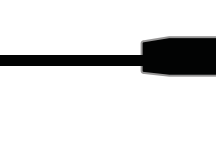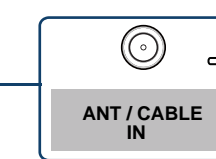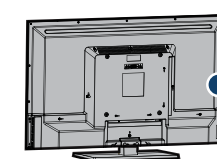


3 CONNECTING AUDIO DEVICES

How do I connect my TV to external speakers?

USING DIGITAL AUDIO

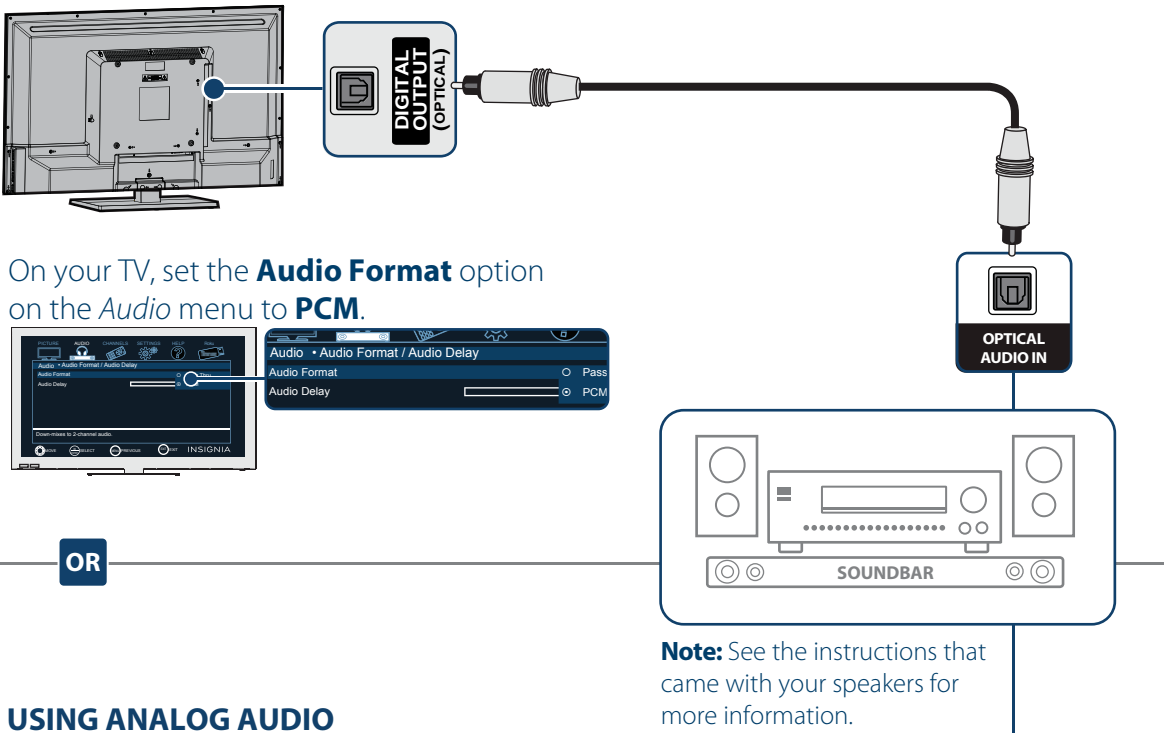

USING ANALOG AUDIO

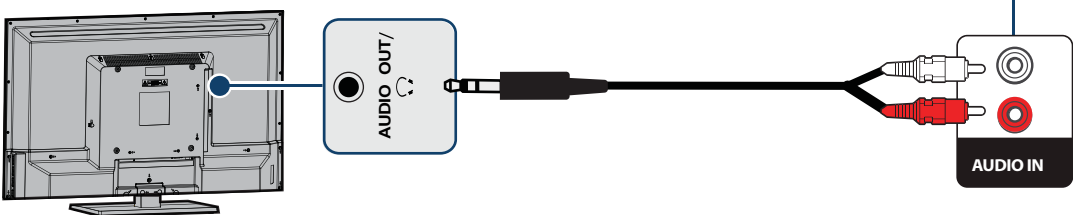


4 TURNING ON MY TV


When can I turn on my TV?

WHEN YOUR TV IS IN PLACE:

- 1 Plug one end of the power cord into the **DC IN** connector on the back of your TV and the other end into a power outlet.

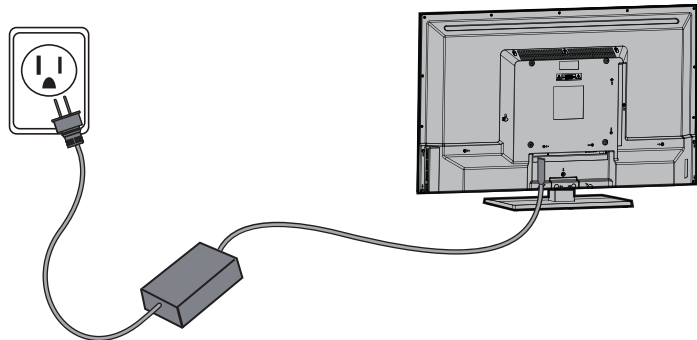

- 2 Remove the remote control cover and install the batteries.

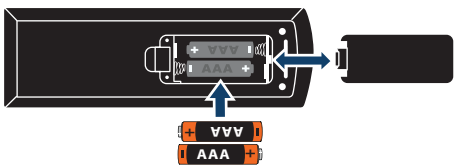


- 3 Press  (power) on your remote control.

- 4 Follow the on-screen instructions.



USING YOUR REMOTE CONTROL

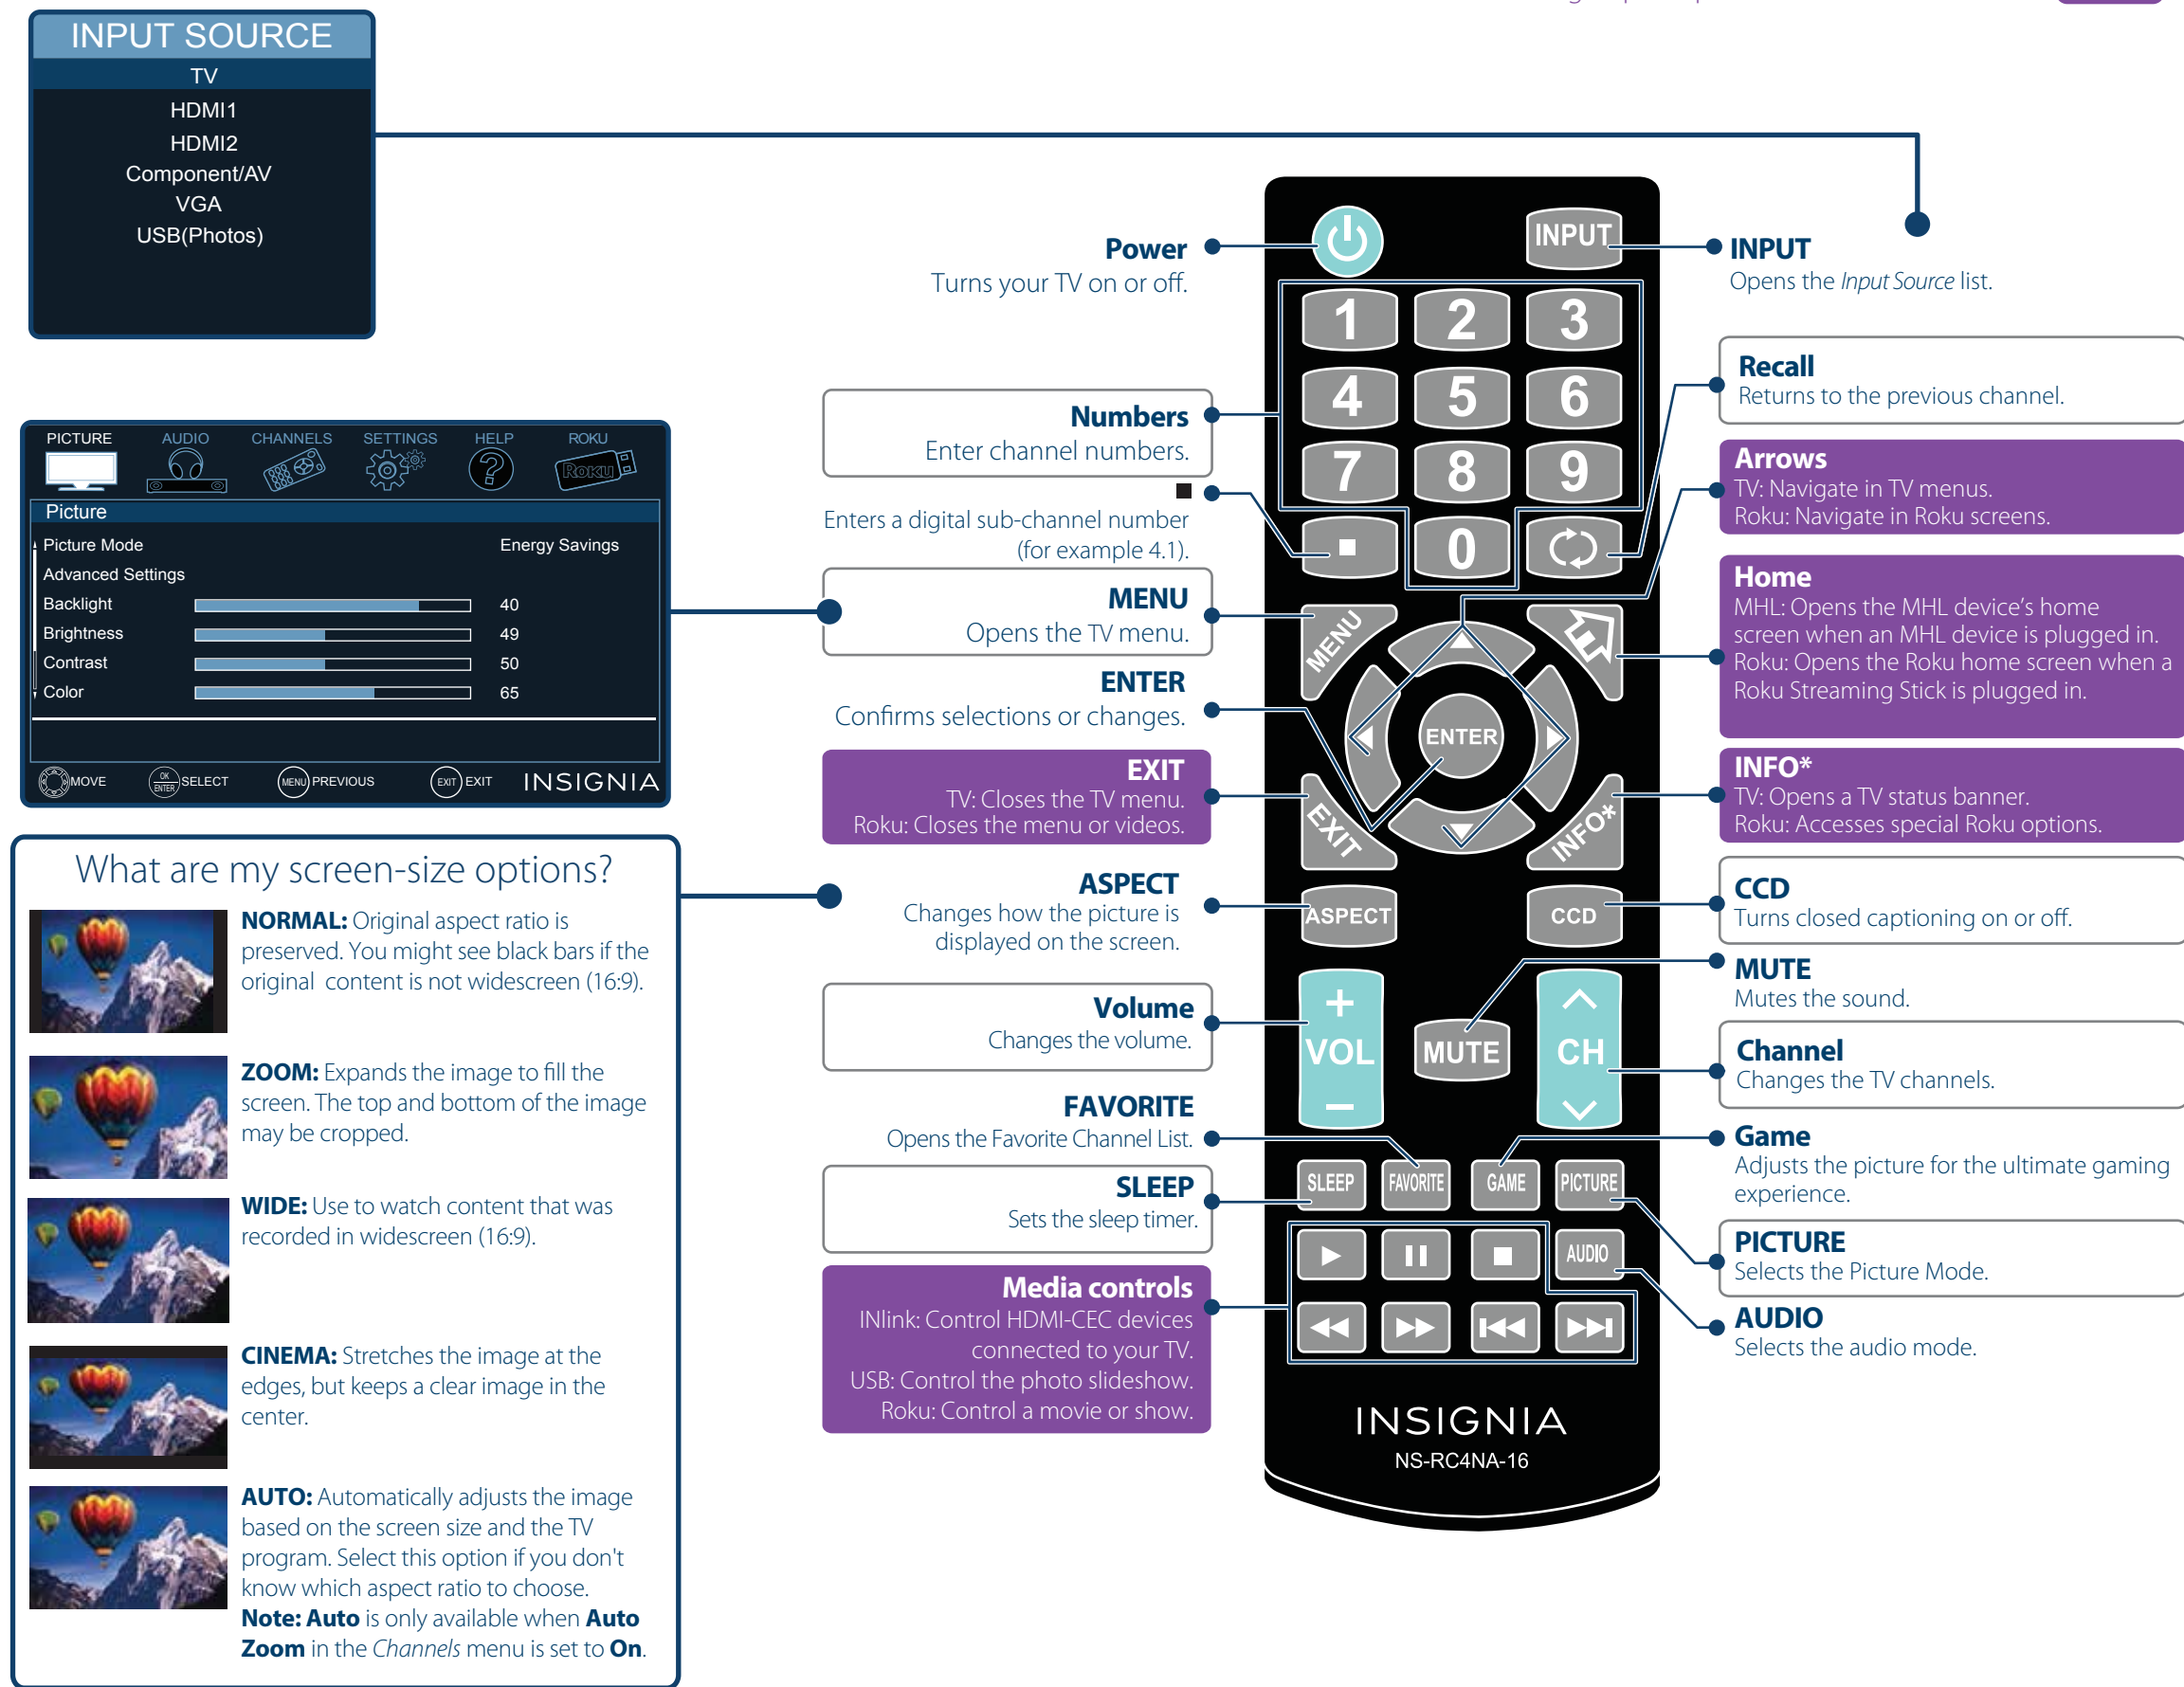

Roku Ready® means you can use your Insignia remote to control the Streaming Stick without having to pick up a different remote control.



INSIGNIA™

ONE-YEAR LIMITED WARRANTY
Visit www.insigniaproducts.com for details.

NEED ADDITIONAL HELP?
See your online **User Guide!** This comprehensive guide includes everything from basic how-to steps to more advanced features. A copy of your *User Guide* is not provided in the box but is available online. Go to www.insigniaproducts.com, then click **Support & Service**. Enter **NS-32D312NA15** in the box under *Manual, Firmware, Drivers & Product Information*, then click ►.

Check out our **Support Community** <http://community.insigniaproducts.com/> for helpful information from other Insignia TV owners.

WE'RE HERE FOR YOU
www.insigniaproducts.com
For customer service, call:
877-467-4289 (U.S./Canada)

INSIGNIA is a trademark of Best Buy and its affiliated companies.
Registered in some countries.
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2014 Best Buy. All rights reserved.
Made in China

I already have a universal remote control. How do I make it control this TV?

If you already have a universal remote control that you would like to program to work with your TV and don't want to use the included Insignia remote control, see the table for common codes.

UNIVERSAL REMOTE TV CODES	
CABLE BOX, SATELLITE BOX, OR OTHER SET-TOP BOX	
Cablevision	068, 069, 078, 096, 100, 164, 168, 229, 026
Charter	2002, 1204, 1423, 1517, 0171, 1963, 0463, 1463, 0842, 1326, 167, 415, 424, 450, 456, 461, 507, 523, 567, 577, 586
Comcast	10171, 11204, 11326, 11463, 11517, 11641, 11780, 11785, 11892, 11963, 12002
Cox	1326, 1463
Direct TV	10171, 11204, 11326, 11517, 11564, 11641, 11963, 12002
Dish Network	720
Time Warner	400, 450, 461, 456, 10463, 1463, 0463
Tivo	0091
Verizon	0198, 0490
UNIVERSAL REMOTE CONTROLS	
One for All	0054
Philips	0198, 0490
RCA	135
Sony	068, 069, 078, 096, 100, 164, 168, 229, 026



For an up-to-date list of codes for other cable providers and universal remote brands, scan this **QR code** or visit www.insigniaproducts.com/remotecodes