

Cuisinart®

INSTRUCTION
BOOKLET



BC

Wine Opener

CWO-48

For your safety and continued enjoyment of this product, always read the Instruction Book carefully before using.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be taken, including the following:

1. **READ ALL INSTRUCTIONS.**
2. Remove all packaging materials and any promotional labels or stickers from the appliance before first use. Do not allow children access to the plastic packaging bags.
3. **Do not operate appliance with a damaged cord or plug, after the appliance malfunctions or if it has been dropped or damaged in any manner. Return appliance to the nearest Authorized Service Center for examination, repair or electrical or mechanical adjustment, or phone Cuisinart™ Consumer Service at 1-800-726-0190.**
4. To protect against risk of electric shock, do not put the electric appliance in water or other liquids. This may cause personal injury and/or damage to the product.
5. To protect against fire, do not operate the unit in the presence of explosive and/or flammable fumes.
6. Do not use the electric wine opener for other than its intended use.
7. This product is intended for normal domestic household use only.
8. When using or charging the electric wine opener, keep your workspace clean and free from potential hazards.
9. For indoor use only. Do not expose the electric wine opener or charging unit to rain or other extreme conditions.
10. Never force the electric wine opener onto a bottle or attempt to speed up the mechanism. The electric wine opener will work best when it is operated at its intended speed.
11. Do not touch or adjust the electric wine opener's mechanism or the corkscrew spiral. Hold the electric wine opener by its housing only.
12. Do not attempt to open bottles if the switch is not working correctly.
13. Do not attempt to open the electric wine opener or the charging base. They have no user-serviceable parts. Charge the electric wine opener only by using the charging base and power cord supplied.
14. Never remove the plug from the socket by pulling the power cord.
15. Use of attachments not recommended or sold by Cuisinart may cause fire, electric shock, injury or damage to the product.
16. Do not use any accessories or attachments with this appliance other than those recommended by Cuisinart. Use only the power adapter supplied with this product.
17. Do not let cord hang over edge of table or counter or touch hot surfaces.
18. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
19. Do not place the appliance on or near a hot gas or electric burner or in a heated oven.
20. Do not operate your appliance in an appliance garage or under a wall cabinet. **When storing in an appliance garage, always unplug the unit from the electrical outlet.** Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

PARTS

1. Wine Opener

A. Down Arrow – Press to remove
cork from bottle

B. Up Arrow – Press to release
cork from opener

2. Power indicator light

3. Charge indicator light

4. Charging base

5. Foil cutter

6. Power adapter



OPERATING INSTRUCTIONS

Connection and Use

This appliance is for 120 volts only and should not be used with a converter.

We recommend that you charge your electric wine opener for at least 10 hours before using for the first time. Please follow the instructions for charging as stated below:

Charging Your Electric Wine Opener

Plug one end of the adapter cord into the back of the charging base and the other end into an electrical outlet. The red power indicator light will illuminate. Place the electric wine opener into the charging base, making sure that it is firmly in position and that it is fully engaged with the charging connection. The green charge indicator light will flash indicating that the unit is charging. It will take approximately 12 hours to charge your electric wine opener. When your electric wine opener is fully charged, the green light will stop flashing and become a solid green light.

Your wine opener can open approximately 50 bottles of wine on a full charge.

Foil Cutter

For your convenience, this unit has a foil cutter, which can be stored in the base of the unit. Before removing the cork, you must remove foil to expose top part of cork surface (see Fig. 1). Attach foil cutter to the top of the wine bottle. Keep hand on lower part of bottle and turn foil cutter in twisting motion to remove foil. Remove foil to expose top part of cork surface.

CAUTION: Blade on foil cutter is sharp. Please keep fingers away from cutter's sharp edges.



(Fig. 1)

To Operate Your Wine Opener

Press the lower part of the switch (indicated by a down arrow) to remove a cork from the bottle. Press the upper part of the switch (indicated by an up arrow) to release a cork from the mechanism after you have removed the cork from the bottle. (see fig. 2)



(Fig. 2)

1. Place the wine opener on top of the wine bottle, making sure that it remains as straight/upright as possible at all times. If you hold the electric wine opener at an angle to the bottle it will not remove the cork properly.
2. Hold the wine opener and bottle firmly and depress the lower part of the switch (indicated by a down arrow, see fig. 3). The corkscrew spiral will turn in a counterclockwise direction and enter the cork, then gradually remove it from the bottle. When the mechanism has stopped, the cork has been fully removed from the bottle.
3. Lift the wine opener up and away from the bottle (see fig. 4). To remove the cork, depress the upper part of the switch (indicated by up arrow). The spiral will turn in a clockwise direction and release the cork.



(Fig. 3)



(Fig. 4)

4. Always return the wine opener to the charging base when done. This will protect the unit while not in use.

CLEANING AND MAINTENANCE

Always unplug the appliance from the main outlet before cleaning.

Make sure all the parts are clean and dry before storing.

To clean housing, wipe with a clean, damp cloth.

Never immerse power adapter, charging base or housing in water or any other liquids.

Never submerge the motor base in water or other liquids, or place in a dishwasher.

AFTER USE

We recommend that you return your appliance to the charging base so that it is fully charged and available for use at any time.

Any other servicing should be performed by an authorized service representative.

18-MONTH LIMITED WARRANTY

This warranty is available only to U.S. consumers who purchase products directly from Cuisinart or an authorized Cuisinart reseller. You are a consumer if you own a Cuisinart® Wine Opener that was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers, owners or consumers who purchase from unauthorized Cuisinart® resellers. We warrant that your Cuisinart® Wine Opener will be free of defects in materials and workmanship under normal home use for 18-Month from the date of original purchase.

We recommend that you visit our website, <https://cuisinart.registria.com> for a fast, efficient way to complete your product registration. However, product registration does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits.

In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture.

CALIFORNIA RESIDENTS ONLY

California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product (A) to the

store where it was purchased or (B) to another retail store that sells Cuisinart products of the same type. The retail store shall then, according to its preference, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If neither of the above two options results in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility, if service or repair can be economically accomplished. Cuisinart and not the consumer will be responsible for the reasonable cost of such service, repair, replacement, or refund for nonconforming products under warranty. California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair or, if necessary, replacement by calling our Consumer Service Center toll-free at **1-800-726-0190**. Cuisinart will be responsible for the cost of the repair, replacement, and shipping and handling for such nonconforming products under warranty.

HASSLE-FREE REPLACEMENT WARRANTY

Your ultimate satisfaction in Cuisinart® products is our goal, so if your Cuisinart® Wine Opener should fail within the generous warranty period, we will repair it or, if necessary, replace it at no cost to you. To obtain a return shipping label, please visit us at <https://www.cuisinart.com/customer-care/product-assistance/product-inquiry/>. Or call our toll-free customer service department at **1-800-726-0190** to speak with a representative.

Your Cuisinart® Wine Opener has been manufactured to the strictest specifications and has been designed for use only in 120-volt outlets and only with authorized accessories and replacement parts. This warranty expressly excludes any defects or damages caused by attempted use of this unit with a converter, as well as use with accessories, replacement parts or repair service other than those authorized by Cuisinart. This warranty does not cover any damage caused by accident, misuse, shipment or other than ordinary household use. This warranty excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of these damages, so these exclusions may not apply to you. You may also have other rights, which vary from state to state.

Important: If the nonconforming product is to be serviced by someone other than Cuisinart's Authorized Service Center, please remind the servicer to call our Consumer Service Center at **1-800-726-0190** to ensure that the problem is properly diagnosed, the product is serviced with the correct parts, and to ensure that the product is still under warranty.

FEDERAL COMMUNICATIONS COMMISSION NOTICE

WARNING: Changes or modifications to this unit expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SUPPLIER'S DECLARATION

OF CONFORMITY

Brand: Cuisinart

Model No.: CWO-48XX, CWO-48XXX, CWO-48XXXX, CWO-48XXXXX, CWO-48XXXXXX

Description: Electric Wine Opener

Responsible Party: Conair Corporation - 1 Cummings Point Road - Stamford, CT 06902 - (203) 351-9000

Standards: FCC Part 15 Subpart B, ANSI C63.4-2014.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesirable operation.

DATE OF ISSUE: 08/17/2022

This image shows a single page of white paper with horizontal blue or grey ruling lines. The lines are evenly spaced and run across the width of the page, leaving small margins at the top and bottom. There are no vertical margin lines, text, or other markings on the page.

©2022 Cuisinart
Glendale, AZ 85307
Printed in China

16CE017383

IB-14024-ESP-F