

Anybuds Dots (款式1) 线上快速指引

69mm*69mm

Thank you for purchasing the anybuds authentic product.

FC RoHS CE

4 Reset

If you accidentally get only one earbud work, or fail to pair each other, please reset it:

1. Take out two earbuds from the charging compartment, and when the red and blue lights alternate, quickly touch any earbuds 5 times.
2. If the red light remains on for a long time and goes out, and the earbuds are turned off, it indicates that the factory settings have been successfully restored.

Note: If there is a prompt indicating unsuccessful connection on your phone, please delete all [anybuds Dots] connection records and try connecting again.

5 Charging

Charge the case via USB-C connector. (USB-C cable included)

• • • • 0~25%
• • • • 25%~50%
• • • • 50%~75%
• • • • 75%~100%

Don't put wet earbuds into the charging case, fully dry off the earbuds before charging.

anybuds®

anybuds Dots

Quick Guide

1 Bluetooth Pairing and Wearing

Bluetooth Pairing

1. Take out the two earbuds from charging case, they will turn on automatically and will connect each other within 10 seconds.
2. The two earbuds flash alternately in red and blue (pairing mode).
3. Search for pairing name [anybuds Dots] and select it in your mobile.

Wearing

1. Ensure the eartip facing downwards, then place the earbuds into your ears.
2. Rotate the earbuds back to the auricleside to fit snugly.

Select your fit

Correct Wearing

1. Ensure the eartip facing downwards.
2. Rotate the earbuds back to the auricleside to fit snugly.

Wrong Wearing

* Eartip facing upwards is the incorrect way to wear the earbuds.

2 Smart Touch Control

EN | JP | DE | FR | IT | ES | NL | SE

X1: Press once X2: Press twice X3: Press three times Hold: Press and hold for 2 seconds

X2 L Previous song 前の曲 Vorheriges lied Chanson précédente Canzone precedente Canción anterior Vorig nummer Foregående låt	X2 R Next song 次の曲 Nächstes lied Chanson prochaine Canzone prossima Canción siguiente Volgende nummer Nästa låt
Hold L Volume down 音量を下げる Lautstärke runter Baisser le volume Volume basso Bajar volumen Volume vermindern Sänk volymen	Hold R Volume up 音量を上げる Lauter Monter le son Alza il volume Sube el volumen Volume omhoog Høj volymen
X1 L Play/Pause 再生/一時停止 Spielen/Pause Jouer/Pause Giocare a/Pausa Tocar/Pausa Tooneluik/Pauze Spela/Paus	X1 R Answer 答え Antworten Réponse Rispondere Responder Antwoorden Svar
Hold L Hang up 電話を切る Auflegen Raccrocher Appendere Colgar Ophangen Lägga på	Hold R Reject 拒絶 Ablehnen Rejeter Rifiutare Rechazar Afwijzen Avvisa
X3 L Activate the voice assistant 音声アシスタントをアクティブにする Aktivieren Sie den Sprachassistenten Activer l'assistant vocal Attiva l'assistente vocale Activar el asistente de voz Activeer de stemassistent Aktivera röstassistenten	

3 Power on/off

EN Power on: Take out the earbuds from the charging case; or press and hold 3 seconds. Power off: Place the earbuds back into the charging case; or press and hold 5 seconds.

DE Ein: Nehmen Sie die Ohrhörer aus dem Ladekoffer; oder 3 Sekunden gedrückt halten. Ausschalten: Legen Sie die Ohrhörer wieder in das Ladeetui; oder 5 Sekunden gedrückt halten.

IT Accensione: Estrarre gli auricolari dalla custodia di ricarica; oppure tener premuto per 3 secondi. Spegni: Rimetti gli auricolari nella custodia di ricarica; oppure tener premuto per 5 secondi.

NL Aanzetten: Haal de oordopjes uit de oplaadcassette; of houd 3 seconden ingedrukt. Uitschakelen: Plaats de oordopjes terug in de oplaadcassette; of houd 5 seconden ingedrukt.

JP 電源オン: 充電ケースからイヤフォンを取り出します。または、3秒間押し続けます。電源を切る: イヤフォンを充電ケースに戻します。または、5つのセンソンドを押し続けます。

FR Allumer: Sortez les écouteurs de l'étui de chargement; ou appuyez et maintenez 3 secondes. Éteindre: Remettez les écouteurs dans l'étui de chargement; ou appuyez et maintenez 5 secondes.

ES Encendido: Saque los auriculares del estuche de carga; o mantenga presionado 3 segundos. Apagado: Vuelva a colocar los auriculares en el estuche de carga; o mantenga presionado 5 segundos.

SE Ström på: Ta ut öronsnäckorna från laddningsfodralet; eller tryck och håll ned 3 sekunder. Stäng av: Sätt tillbaka öronsnäckorna i laddningsfodralet; eller tryck och håll ned 5 sekunder.