

SAMSUNG

Quick start guide

Gear IconX



2018

Unboxing



Charging Case




Earbuds



USB connection
(Type B & Type C)



USB cable

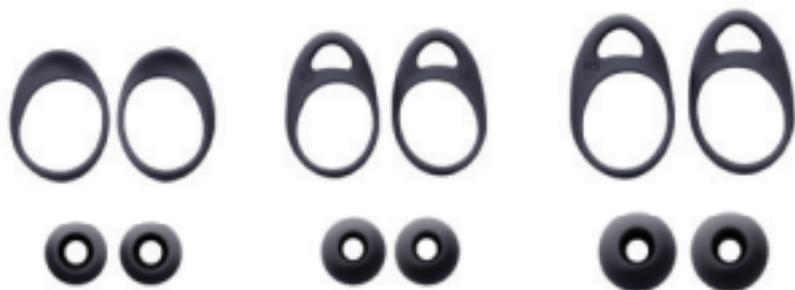

Wingtips & Eartips (S, M, L)

Know your device

Earbuds



Charging Case



Backside of Case

USB/Charging port



Pairing button

Earbud Indicators

● Red

Charging

● Green

Fully Charged

● Flashing Red

Charging disabled due to low charging case battery, abnormal temperatures, or an error connecting to charging contacts.



Charge Your Gear IconX

1. Wipe any sweat from the earbuds and open the charging case.
2. Insert the earbuds into the charging case and close.
3. Connect the USB cable to a USB power adapter (sold separately), and the USB/Charging port on the back of the charging case.

Note: The earbuds and the charging case charge simultaneously. The charging case can be used as a standalone charger.



USB cable



USB power adapter

Charger Case Indicators

- **Red** Charging or below 30% battery
- **Green** Fully Charged or above 60% battery
- **Yellow** Between 30% and 60% battery
- ☀ **Flashing Red** Charging disabled or error due to abnormal temperatures or low charging case battery
- **Blue** Updating firmware
- → ● → ● **Alternates** In pairing mode



Connections

Compatible with Android 4.4 and later with at least 1.5GB RAM or more.

For best compatibility, connect with Samsung Galaxy devices.

To initiate Bluetooth pairing, open the charging case.

Gear Manager

To connect your Gear and smartphone, install the Samsung Gear app. Download the Samsung Gear app from Galaxy Apps or Playstore. With Gear Manager view the earbud status which includes connection, battery, volume, exercise information, music file information, memory, and various setting options.






Pair your device

1. Open the charging case to initiate pairing.

Note: If pairing doesn't start automatically, close the charging case and press and hold the pairing button on the back of the case for 3 to 5 seconds.

2. From your smartphone, tap **CONNECT** to initiate pairing.
3. The Samsung Gear  app will launch automatically.

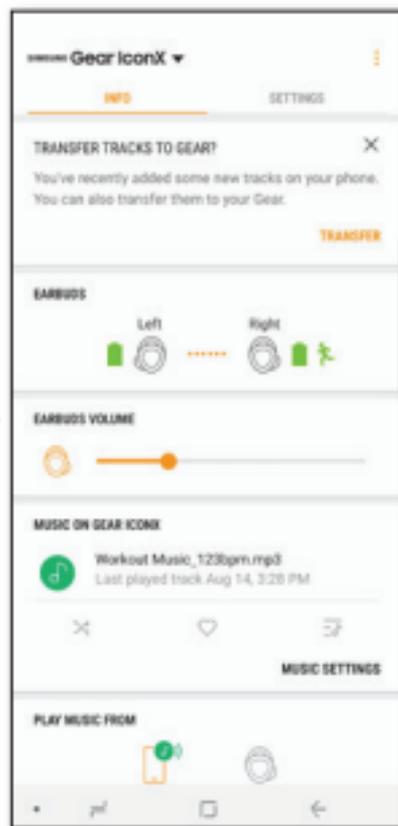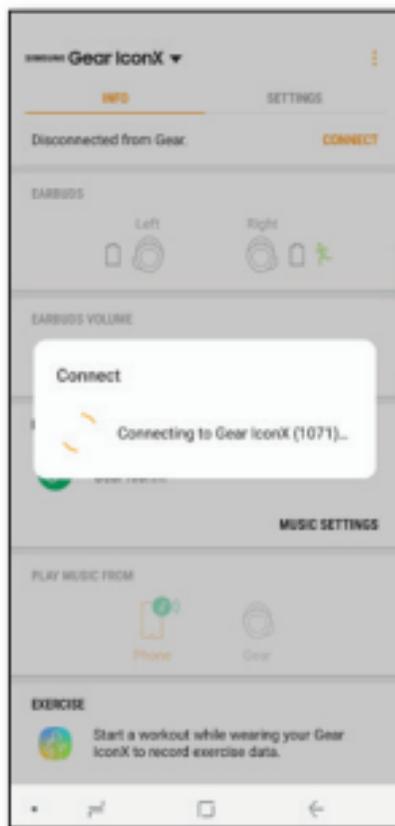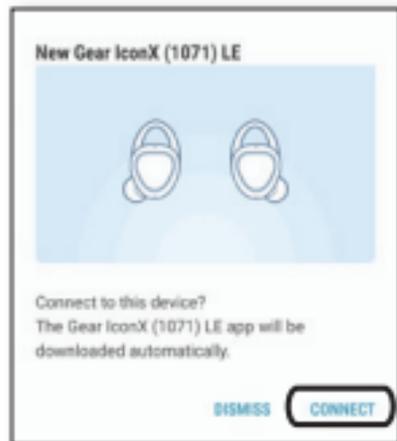

Touchpad



Single Tap

Play/Pause music



Double Tap

Next track
Answer/End call



Triple Tap

Previous track



Swipe

Volume Up/Down



Tap & Hold

Launch your default
Voice Command setting
(Bixby, Google Voice, S Voice)
Ambient Sound mode,
Reject a call



Double Tap & Hold

Next playlist

Listening Safety

Ambient Sound

In an environment where ambient noise can keep you more aware, use the Gear Manager app to turn on Ambient sound. This permits outside sound for a safe listening experience.


Note: Ambient sound can also be turned on/off through the readout menu – tap and hold the touchpad to open.




Transfer Music Files From Phone

1. Insert earbuds into the charging case and close the cover.
2. Connect the charging case to your phone using the USB to Micro USB cable and adapter.
3. Open the Gear Manager app and select **Gear IconX**.
4. Tap **Settings** > **Music** > **Transfer tracks to Gear**
5. Tap **ADD** or **DELETE** to manage the tracks.

Note: IconX has 3.4GB of usable memory. For information about compatible audio file types, visit samsung.com/us/support/owners/product/gear-iconx-2018

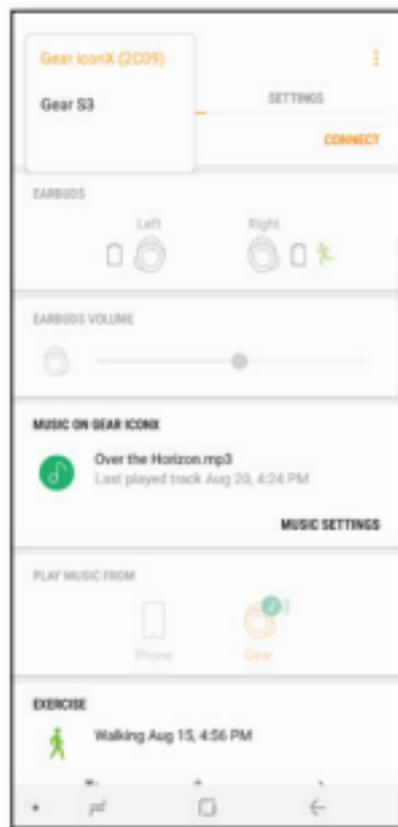


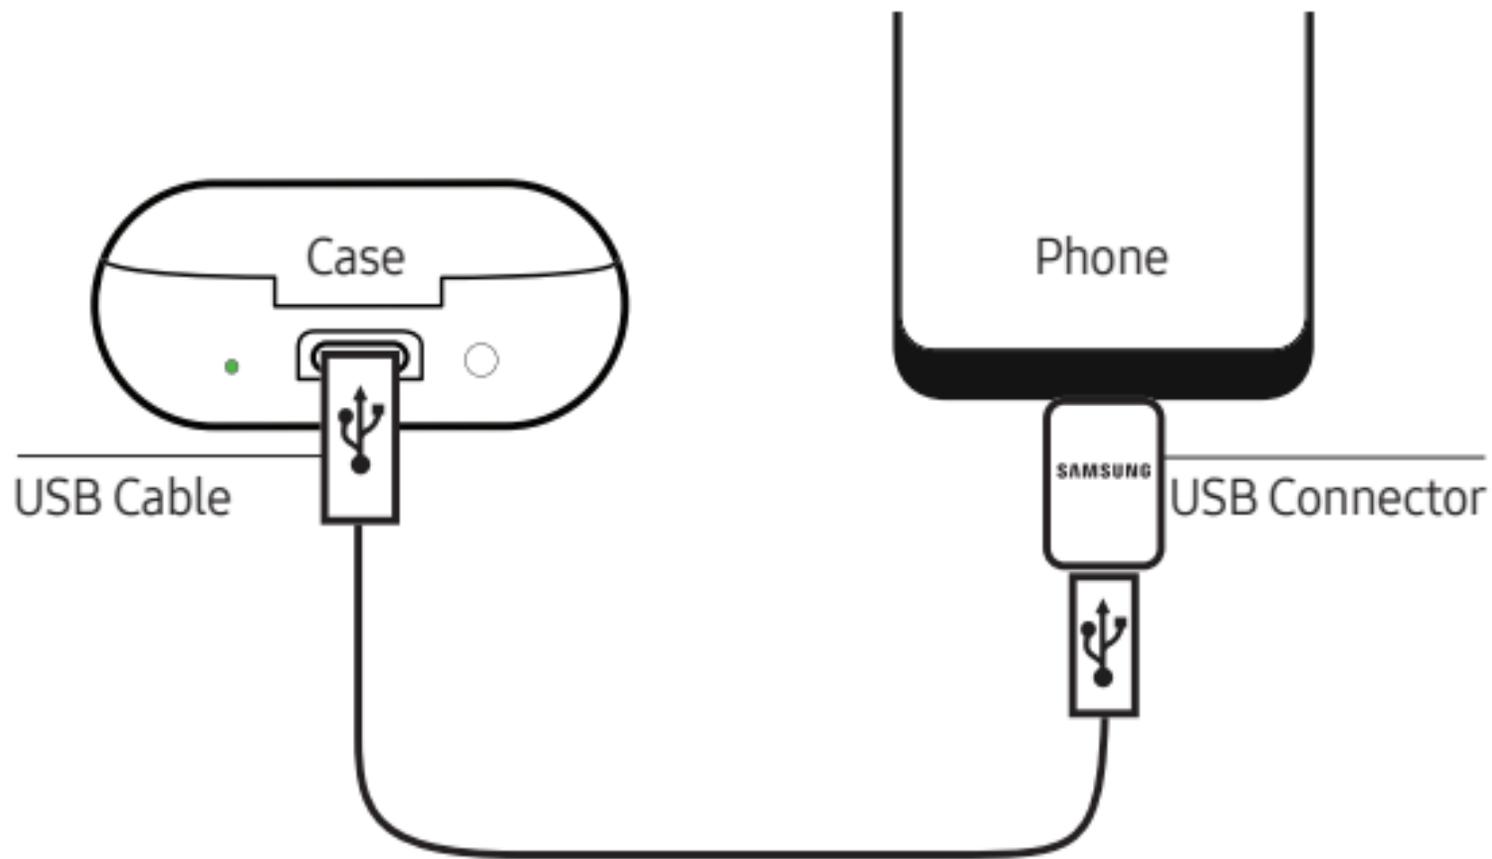

Transfer Music Files From PC

1. Insert earbuds into the charging case and close the cover.
2. Connect the charging case to the computer using the USB cable.
3. On your computer's desktop, click **COMPUTER**.
4. Open **ICONX_R** or **ICONX_L > TOOLS**, double-click the Gear IconX PC Manager installation file and follow the prompts to complete installation.
5. Transfer your music files using Gear IconX PC Manager.

Note: Music files not transferred using the Gear IconX PC Manager may not play or be visible on the device.

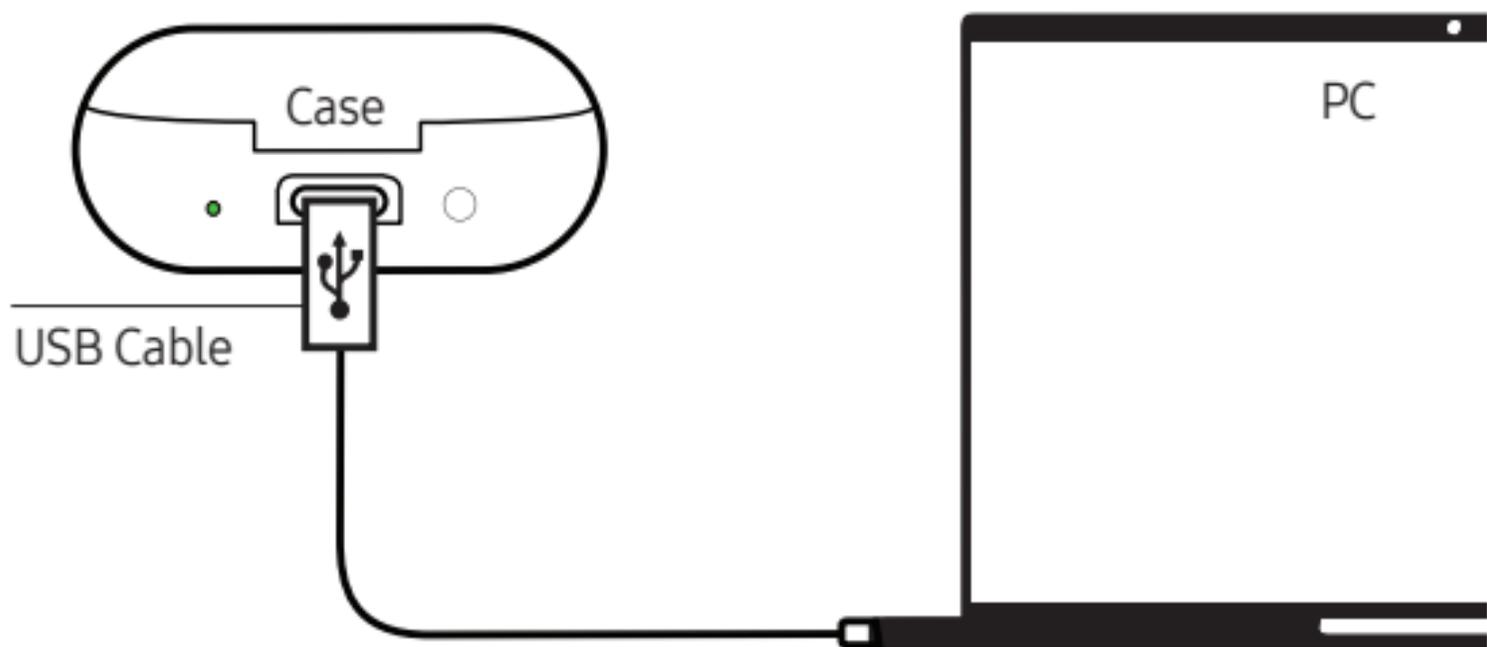

Software Updates

The Samsung Gear app will mediate software updates. If updates are available, reminders will be displayed in Gear Manager and notification panel of the connected smartphone.

Note: Software updates can also be performed using the IconX PC Manager. For more information, visit samsung.com/us/support/owners/product/gear-iconx-2018