

FOR CUSTOMER SERVICE
QUESTIONS OR COMMENTS
PLEASE CALL
888.552.0033

Gourmia

GOURMIA.COM



1500 WATTS

**CORDLESS
SPEED KETTLE
PLUS 1.7L**

MODEL#GK-200



Gourmia

CORDLESS SPEED KETTLE PLUS 1.7L

MODEL#GK-200

Safety Precautions	4
Product Specs	6
Using Your Device	6
Cleaning and Care	8
Storage and Disposal	9
Warranty Details	9

**USER
MANUAL**

SAFETY PRECAUTIONS:

Disclaimer: Manual instructions should always be read and implemented prior to product use. Manufacturer/ importer advisory board are not reliable for inadequate use due to instruction manual negligence or failure to follow direction.

This product is intended for indoor household use only!

Children: Keep this device out of the reach of children or other disqualified persons, since the misuse of contents and packaging materials may result in hazard or death.

- Read all instructions carefully and thoroughly before any operation of the kettle.
- Close supervision is necessary when any appliance is used by or near children.
- Before connecting the kettle, check whether the voltage indicated on the appliance (underside of kettle and base unit) corresponds with the voltage in your home. If this is not the case, contact your dealer and not use the kettle.
- Switch off and unplug from the outlet before filling, emptying or cleaning or when not in use.
- If the kettle is overfilled, boiling water may be ejected. Fill with cold water only.
- Do not operate or place any part of this appliance on or near hot surfaces, such as gas or electric burners or in a heated oven.
- Do not let the cord hang over the edge of a table or a counter. Do not let the cord touch hot surfaces.
- Never pull on the cord as this may damage the cord and eventually cause a risk of electric shock.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
- Avoid touching the surface of the hot kettle, use the handle and knobs.
- To avoid possible steam damage do not face the spout towards you when operating the kettle.
- If operated on wood furniture, use a protective pad to prevent damage to delicate finishes.
- To avoid scalding, always ensure the lid is correctly positioned before operation.

- Scalding may occur if the lid is removed while heating.
- Carefully open the lid when it is hot.
- Extreme caution must be used when moving the kettle containing hot water. Never lift the kettle by its lid. Always use the body handle to lift the kettle.
- Do not switch your kettle on while it is empty.
- To protect from electrical hazard, do not immerse this kettle, power base or cord in any liquid.
- The kettle is only to be used with the stand provided.
- To protect against fire, do not operate in the presence of explosive and/or flammable fumes.
- The appliance should not be immersed in water.
- This product is not designed for any other uses other than those specified in this booklet.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised when using the appliance.
- The appliance is only intended for short term operation. After an operation time of 5 minutes let it cool for at least 30 minutes. Do not overload the appliance.

PRODUCT SPECS



USING YOUR DEVICE

BEFORE FIRST USE

- 1)** Before first use, fill the kettle with clean water to maximum capacity and boil. Discard the water and repeat the process.
- 2)** The kettle should always be unplugged when filling or adding water.
- 3)** Fill the kettle with water to desired level. Do not overfill or there will be a risk of spillage or spitting. The water level indicator will assist you to measure the correct

amount. You can fill the kettle via the spout or after opening the lid. Do not forget to close the lid after filling, otherwise the kettle will not automatically switch off after use.

- 4)** Do not fill kettle with less than 0.5 liters of water (to “min” indication) to prevent the kettle running dry while operating.
- 5)** Do not fill with more than 1.7 liters of water (to “max” indication) .
- 6)** An automatic safety cut-out has been fitted for protection against overheating. it will operate when the kettle is switched on and it contains insufficient water.
- 7)** Always ensure the water inside the kettle covers the minimum mark on the water level indicator gauge. If the automatic safety cut-out has operated, switch the kettle off, disconnect from the power outlet and allow the kettle to cool down for 5 to 10 minutes. Then refill and switch on, and the kettle will work as usual.
- 8)** Place the power base on a dry, flat surface. Place the kettle on the power base. The electrical connection will be made automatically as the kettle slides onto the power base.
- 9)** Plug the cord set on the power base. The electrical connection will be made automatically as the kettle slides onto the base.
- 10)** Plug the cord set into a grounded power socket and switch on by pushing the switch of the kettle to the “on” position.
- 11)** When the water has boiled, the kettle will switch off automatically. After allowing the kettle to cool down for 15-20 seconds, the water can be brought back to boil by pushing the switch back to the “on” position. During the cooling down time do not force the on/off switch into the “on” position as this can damage the operating mechanism.
- 12)** Do not remove the kettle from the power base without switching off first.
- 13)** Remember, if you do not wish to re-boil the kettle, switch it off.
- 14)** The kettle may be switched off manually at any time by setting the on/off switch into the “off” position.

CLEANING AND CARE

HOW TO CARE FOR YOUR KETTLE

- Wipe the exterior of the kettle with a soft, damp cloth or sponge. Remove stubborn spots with a cloth moistened with mild liquid detergent.
- Do not use abrasive scouring pads or powers.
- Never immerse the kettle in water or other liquids.
- From time to time, depending on the nature of your water supply, a boiled scale deposit will naturally form and will be found mostly adhered to the heating element, thus reducing the heating efficiency.
- The amount of boiled scale deposited (and subsequently the need to clean or rescale) largely depends on the water hardness in your area and the frequency with which the kettle is used.
- Boiled scale is not harmful to your health. But if poured into your beverage, it can give a powdery taste to your drink. Therefore, the kettle should be descaled periodically as indicated below.

DESCALING

Descale kettle regularly. With normal use, descale at least twice a year.

- Fill the kettle up to “max” with a mixture of one part ordinary vinegar and two parts water. Switch on and wait for the appliance to switch off automatically.
- Let the mixture remain inside the kettle overnight.
- Discard the mixture the next morning.
- Fill the kettle with clean water up to “max” mark and boil again.
- Discard the boiled water to remove any remaining scale and vinegar.
- Rinse the inside of the kettle with clean water.

STORAGE AND DISPOSAL

STORAGE

Ensure product is dry before storing. Place in a cool, dry area to avoid humidity if not used for long periods of time.

DISPOSAL

This product may not be disposed of along with ordinary household waste, as electrical and electronic waste must be disposed of separately.

Contact your retailer, distributor or the municipal authorities for further information on product disposal.

WARRANTY DETAILS

This product is guaranteed under the premise of a 1 year limited warranty period, applicable to the original purchaser and not transferable to a third party user.

Repair or replacement of defective parts are at the seller's discretion. In the event that repair isn't possible, the seller will replace the product/ part. If product repair/ replacement won't suffice, the seller has the option of refunding the cash value of the product or component returned.

Product defects not covered under the warranty provisions include normal wear and damage incurred from use or accidental negligence, misuse of instruction specifications, or repair by unauthorized parties. The manufacturing company is not liable for any incidental or consequential damages incurred by such circumstances.