

Disc Repair Kit

Quick Setup Guide

BE-HCL304

BEST BUY.
essentials™

Before using your new product, please read these instructions to prevent any damage.

 
Package contents

- Disc Repair Kit with FlexiWheel™
- Rejuvenating fluid (1oz.)
- Blue drying cloth
- White buffing square
- *Quick Setup Guide*

Warning: Not for use with Blu-ray™, PlayStation® 3 or 4, Xbox® One, or 80 mm CD discs.

Features

- Fixes scratched CDs, DVDs, and some game and data discs (see “Compatibility”) that will not play, that skip, or that freeze in a DVD or CD player
- Repairs and smooths surface scratches to renew the disc’s protective layer and leave disc data unaffected
- FlexiWheel™ repairs up to 25 discs, and works gently enough to safely repair the same disc multiple times

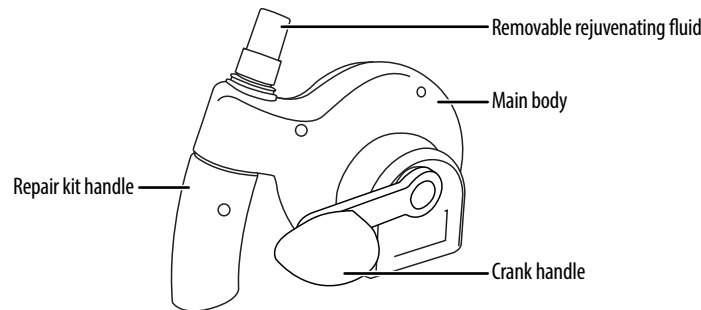


Compatibility

- CDs and DVDs
- Wii
- Xbox and Xbox 360
- Playstation and Playstation 2

Using your disc repair kit


- 1 Align the four tabs on the crank handle with the slots on the main body, then push in on the crank handle until it clicks into place.

 Note: The click lets you know that it’s installed correctly.

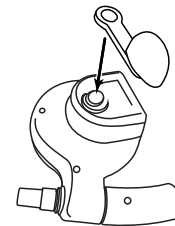


- 2 Lightly spray rejuvenating fluid (included) on the play side (shiny side) of the disc. **Do not** spray the label side of the disc.

 CAUTION: Keep discs wet during the resurfacing process, or discs may become damaged.

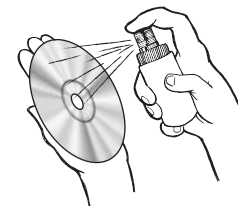

- 3** Insert your disc into your repair kit with the play side facing the FlexiWheel, then turn the crank handle clockwise until your disc completes two full rotations. Repeat as necessary.

 
Note: The disc moves at a much slower rate than the crank handle.

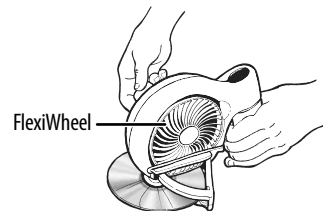


- 4** Remove your disc from the kit, then dry the play side with the blue drying cloth, which is stored in the repair kit handle.
- 5** Place your disc on the blue drying cloth and use a corner of the cloth to hold the disc. Use the white buffing square to buff the play side of the disc in a straight line from the center of the disc to the outer edge.

Do not buff or wipe the disc in a circular pattern.

 Note: Streaks may be left on the disc but will not affect how the disc plays.

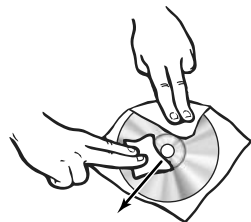

 - 6** Store the drying cloth and buffing square inside the repair kit handle.

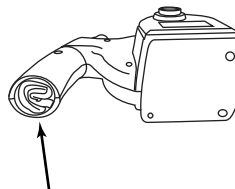

Disc repair tips

- The final buffing step helps prevent future damage. Streaks may be left on the disc but will not affect how the disc plays.
- Keep the buffing square clean and free from debris which can cause scratches.
- If your disc continues to skip, freeze, or not play, repeat the repair process.
- If your disc continues to skip, freeze, or not play, try using another disc player.
- You can repair the same disc multiple times without damaging the disc's data layer.
- A disc's play side is usually the "shiny" side, and the label side is the "dull" or "graphics" side.
- Discs with label-side damage cannot be repaired by any method. When you view a disc from the play side, visible scratches may actually be on the label side of the disc.
- Store your repair kit at room temperature in a dust-free environment.
- Use manufacturer-recommended replacement parts and accessories only. Using generic or non-recommended parts may cause damage to your repair kit or disc.

Safety information

- Do not drink or spray the rejuvenating fluid in your mouth.
- Do not spray the rejuvenating fluids in your eyes.
- If the rejuvenating fluid gets in your eyes, immediately flush your eyes with water.

One-year limited warranty

Visit www.bestbuy.com/bestbuyessentials for details.

Contact Best Buy Essentials

For customer service, call 866-597-8427 (U.S. and Canada)

www.bestbuy.com/bestbuyessentials

Best Buy Essentials is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2022 Best Buy. All rights reserved.