



PN50-R851-26U / PN50-R851-26C  
PN75-R851-26U


### INCLUDED ACCESSORIES

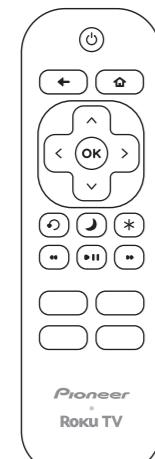

Remote and two AAA batteries

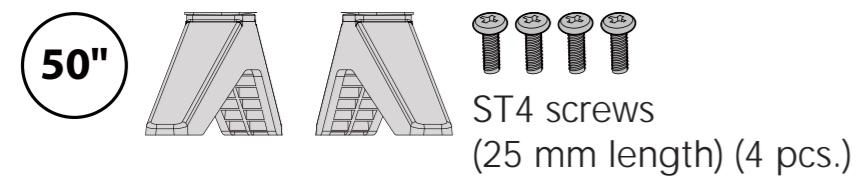

50" VESA mounting screws  
(25 mm length) (4 pcs.)

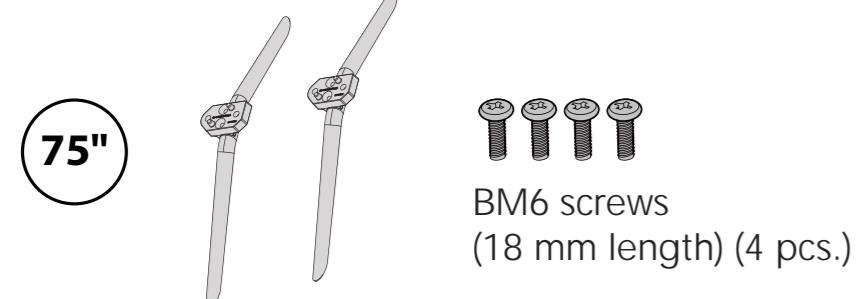

75" BM6 screws  
(18 mm length) (4 pcs.)

### WHAT YOU NEED (not included)

- Phillips screwdriver
- Computer, tablet, or smart phone (to connect with a Roku account)
- Roku account and internet connection (for streaming)

\*Subscription or other payment may be required to access certain content.

**IMPORTANT:** Roku never charges for activation. A Roku account and internet connection are required for activation. A paid subscription or other payments may be required for some streaming app content. App availability subject to change and varies by country.

### FIND YOUR USER GUIDE ONLINE!

Go to [www.usca.pioneer-tv.com](http://www.usca.pioneer-tv.com) and search for  
PN50-R851-26U / PN50-R851-26C / PN75-R851-26U.

For Roku OS features, the manual can be found at  
[go.roku.com/tvmanual](http://go.roku.com/tvmanual)




Before using your new TV, read these instructions to prevent any damage.  
Do not plug your power cord in until all other devices have been connected.

## 1 START HERE

### How do I attach the stands to my TV? (not for wall mounting)

Carefully place your TV face-down on a cushioned, clean surface. Use a Phillips screwdriver to secure each TV stand to the bottom of your TV with two of the provided screws.

### USING THE STANDS

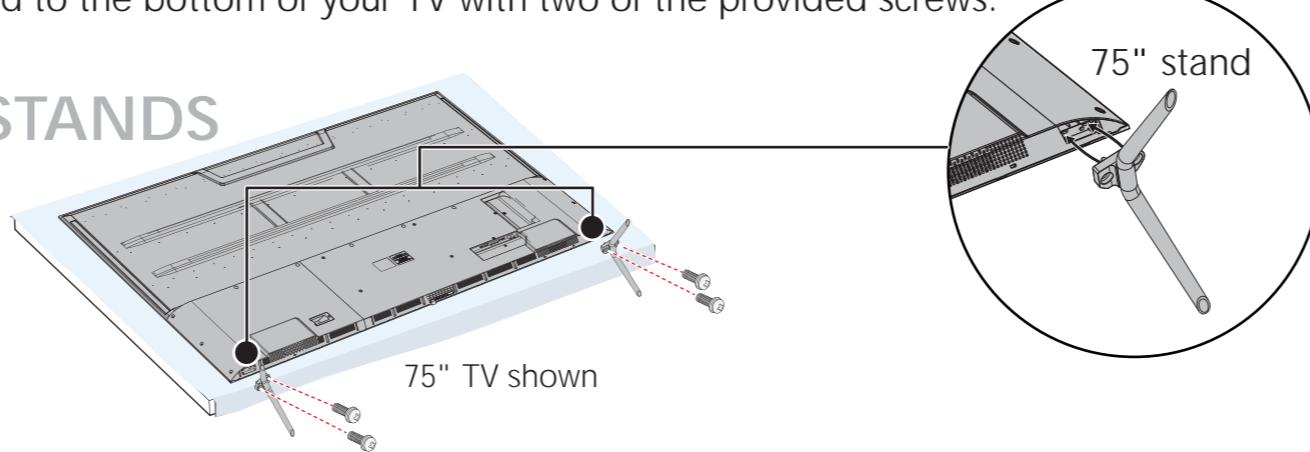

### WALL MOUNTING


Before you mount your TV, make sure that:

- You remove the stands if you have already installed them.
- The wall-mount bracket supports the weight of your TV.

See the instructions that came with your wall mount for more information about how to correctly mount your TV.

**WARNING:** Your TV has four VESA mounting holes on the back. **You must secure a wall-mount bracket to all four holes.** If you do not use all four holes, your TV may fall and cause property damage or personal injury.

**Note:** Wall-mount screws are not included.

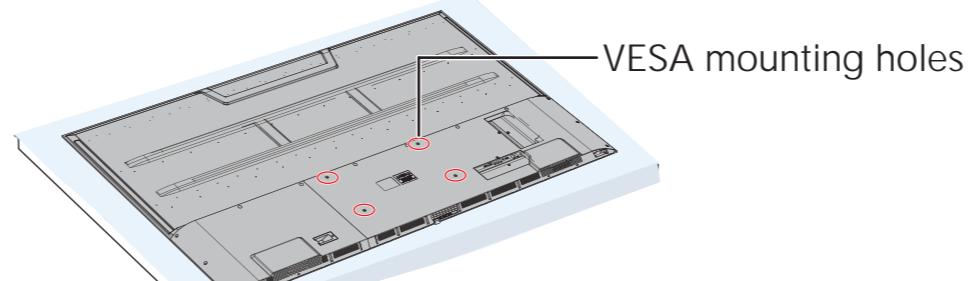


**50" VESA Mounting Pattern**  
400 x 300 mm  
Screws: Type M6,  
10 mm (4 pcs) length  
depending on the wall mount


**75" VESA Mounting Pattern**  
400 x 200 mm  
Screws: Type M8,  
20 mm (4 pcs) length  
depending on the wall mount

### FEATURES

Front

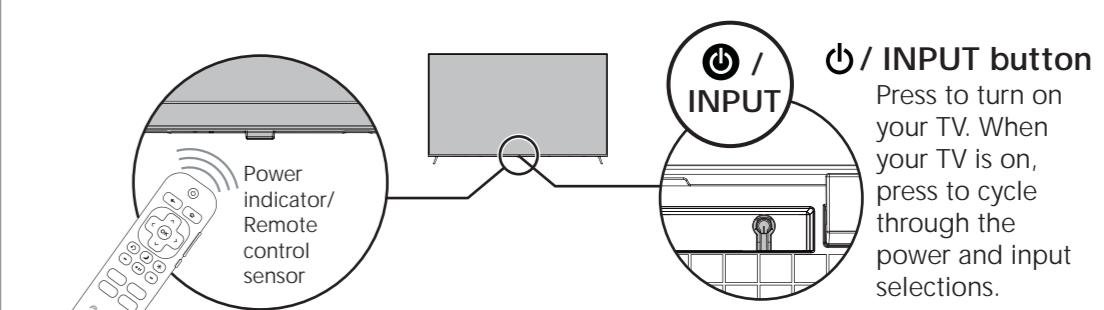


Bottom

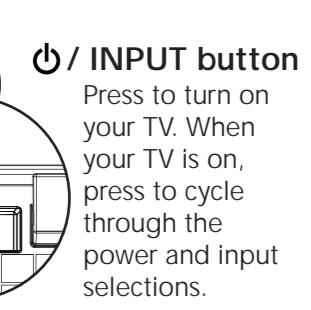

**INPUT** button

Press to turn on your TV. When your TV is on, press to cycle through the power and input selections.

Back

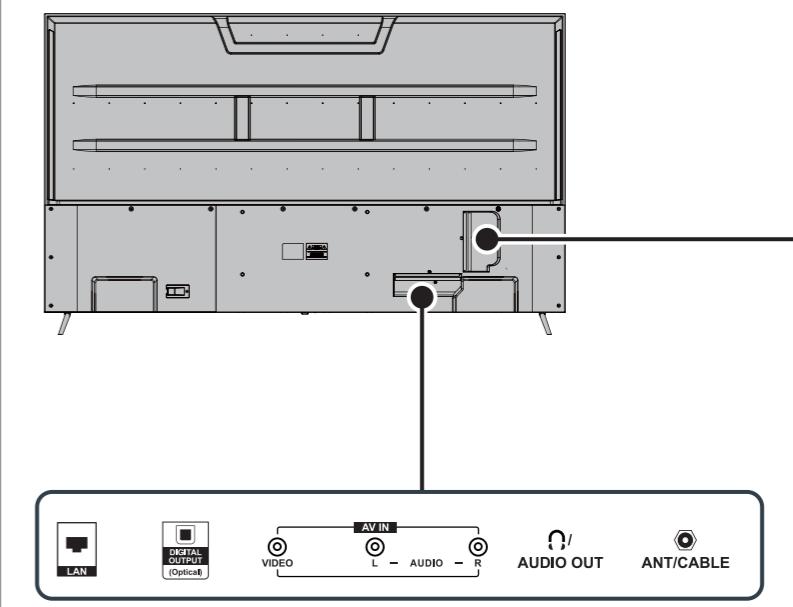

**Note:** Images do not necessarily represent the exact design of your television.



## 2 MAKING CONNECTIONS

### How do I watch TV (cable, satellite, or antenna) or connect a device such as a DVD or Blu-ray disc player or game console? How do I connect to the internet?

#### VIDEO OPTIONS

##### HDMI (BEST)


**Note:** You can use HDMI to connect to other HDMI devices. To use eARC/ARC functionality the connected device must also have HDMI eARC/ARC. Both devices need to be plugged into eARC/ARC HDMI ports.

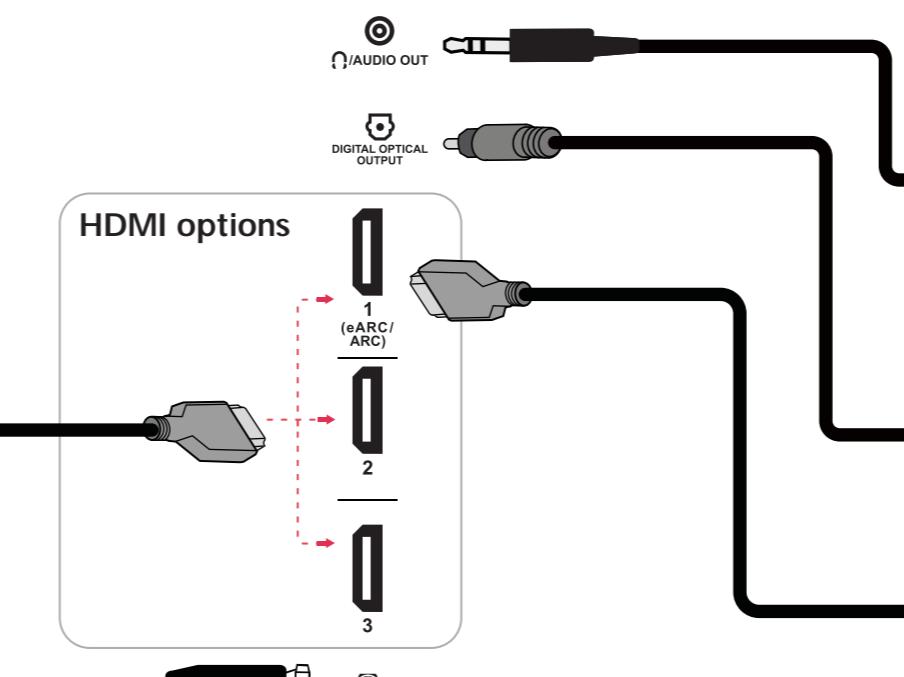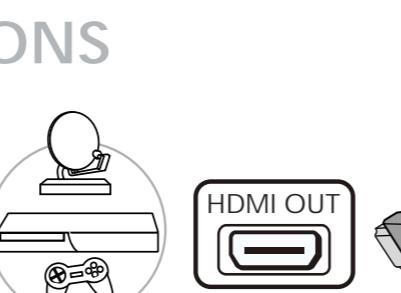

#### AUDIO OPTIONS USING HEADPHONES



#### USING DIGITAL AUDIO

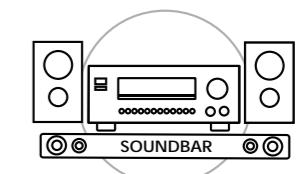


For best audio clarity use **HDMI 1 (eARC/ARC)** for audio output. Surround sound signal from the TV/source can be compressed when using non-HDMI connections.

**Note:** If you need to change the digital audio format, go to **Home**, select **Settings**, and then select **Audio**. Next, select **Digital Audio Output**, then select **Digital Audio Format**, and change the setting to **PCM** or your preferred audio format.


##### COAXIAL (GOOD)

**Note:** Connect an HD antenna or clear cable (via a wall jack).

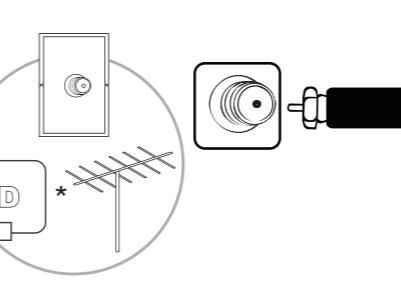

**Note:** USB flash drives can be plugged into the **USB** ports to watch multimedia. It can also be used for the Live TV Pause feature, while watching Live TV channels via the antenna.

##### AV (GOOD)

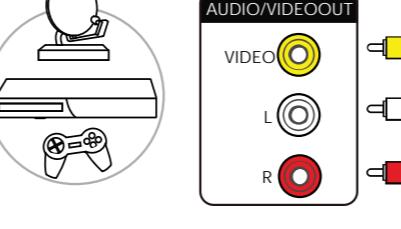

#### ETHERNET (optional)


**Note:** You can use a wired Ethernet connection to access the internet instead of a Wi-Fi connection. Plug an Ethernet cable into the **ETHERNET** jack on your TV and your Ethernet connection.

## 3 TURNING ON MY TV


### When can I turn on my TV?

WHEN YOUR TV IS IN PLACE:

- 1 Plug in your TV.

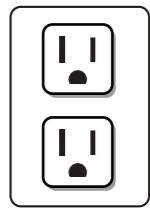

- 2 Remove the remote cover and install the batteries.

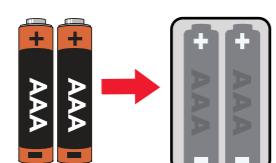

**Tip:** Always replace dead batteries with two brand-new AAA batteries from the same manufacturer. Never use damaged batteries. If your remote gets hot during use, stop using and contact customer support immediately.


## 4 COMPLETE GUIDED SETUP

### How do I activate my Pioneer Roku TV?

- 1 Press  on your remote.

- 2 Follow the on-screen instructions on your Pioneer Roku TV by using your computer or smartphone to link to a Roku account. If you are not ready to connect to the internet now, you can still use your TV to view content accessible through other connected input sources.

**Note:** When powering on the TV for the very first time, the Guided Setup screens will guide you through the Wi-Fi setup steps.

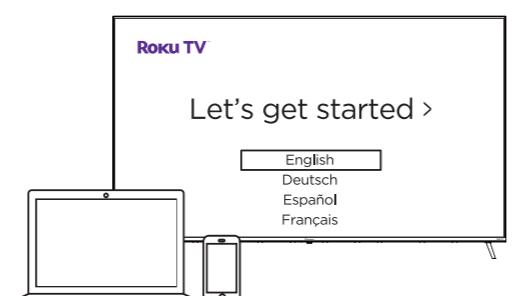

**Note:** Wi-Fi set up screens may change.

## FREQUENTLY ASKED QUESTIONS

### Why do I need an internet connection?

You will need an internet connection to stream your favorite apps and for automatic software updates.

### Why should I enter a payment method?

Saving a payment method makes it easy to rent or buy movies, subscribe to popular channels, and start free trials in just a click. No charges will be made without your authorization. Roku never charges for activation.

### WARNING


#### Stability hazard

A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- **ALWAYS** use cabinets or stands or mounting methods recommended by the manufacturer of the television set.
- **ALWAYS** use furniture that can safely support the television set.
- **ALWAYS** ensure the television set is not overhanging the edge of the supporting furniture.
- **ALWAYS** educate children about the dangers of climbing on furniture to reach the television set or its controls.
- **ALWAYS** route cords and cables connected to your television so they cannot be tripped over, pulled or grabbed.
- **NEVER** place a television set in an unstable location.
- **NEVER** place the television set on tall furniture (for example, cupboards, or bookcases) without anchoring both the furniture and the television set to a suitable support.
- **NEVER** place the television set on cloth or other materials that may be located between the television set and supporting furniture.
- **NEVER** place items that might tempt children to climb, such as toys and remote controls, on the top of the television or furniture on which the television is placed.

If the existing television set is going to be retained and relocated, the same considerations as above should be applied.

## USING YOUR REMOTE

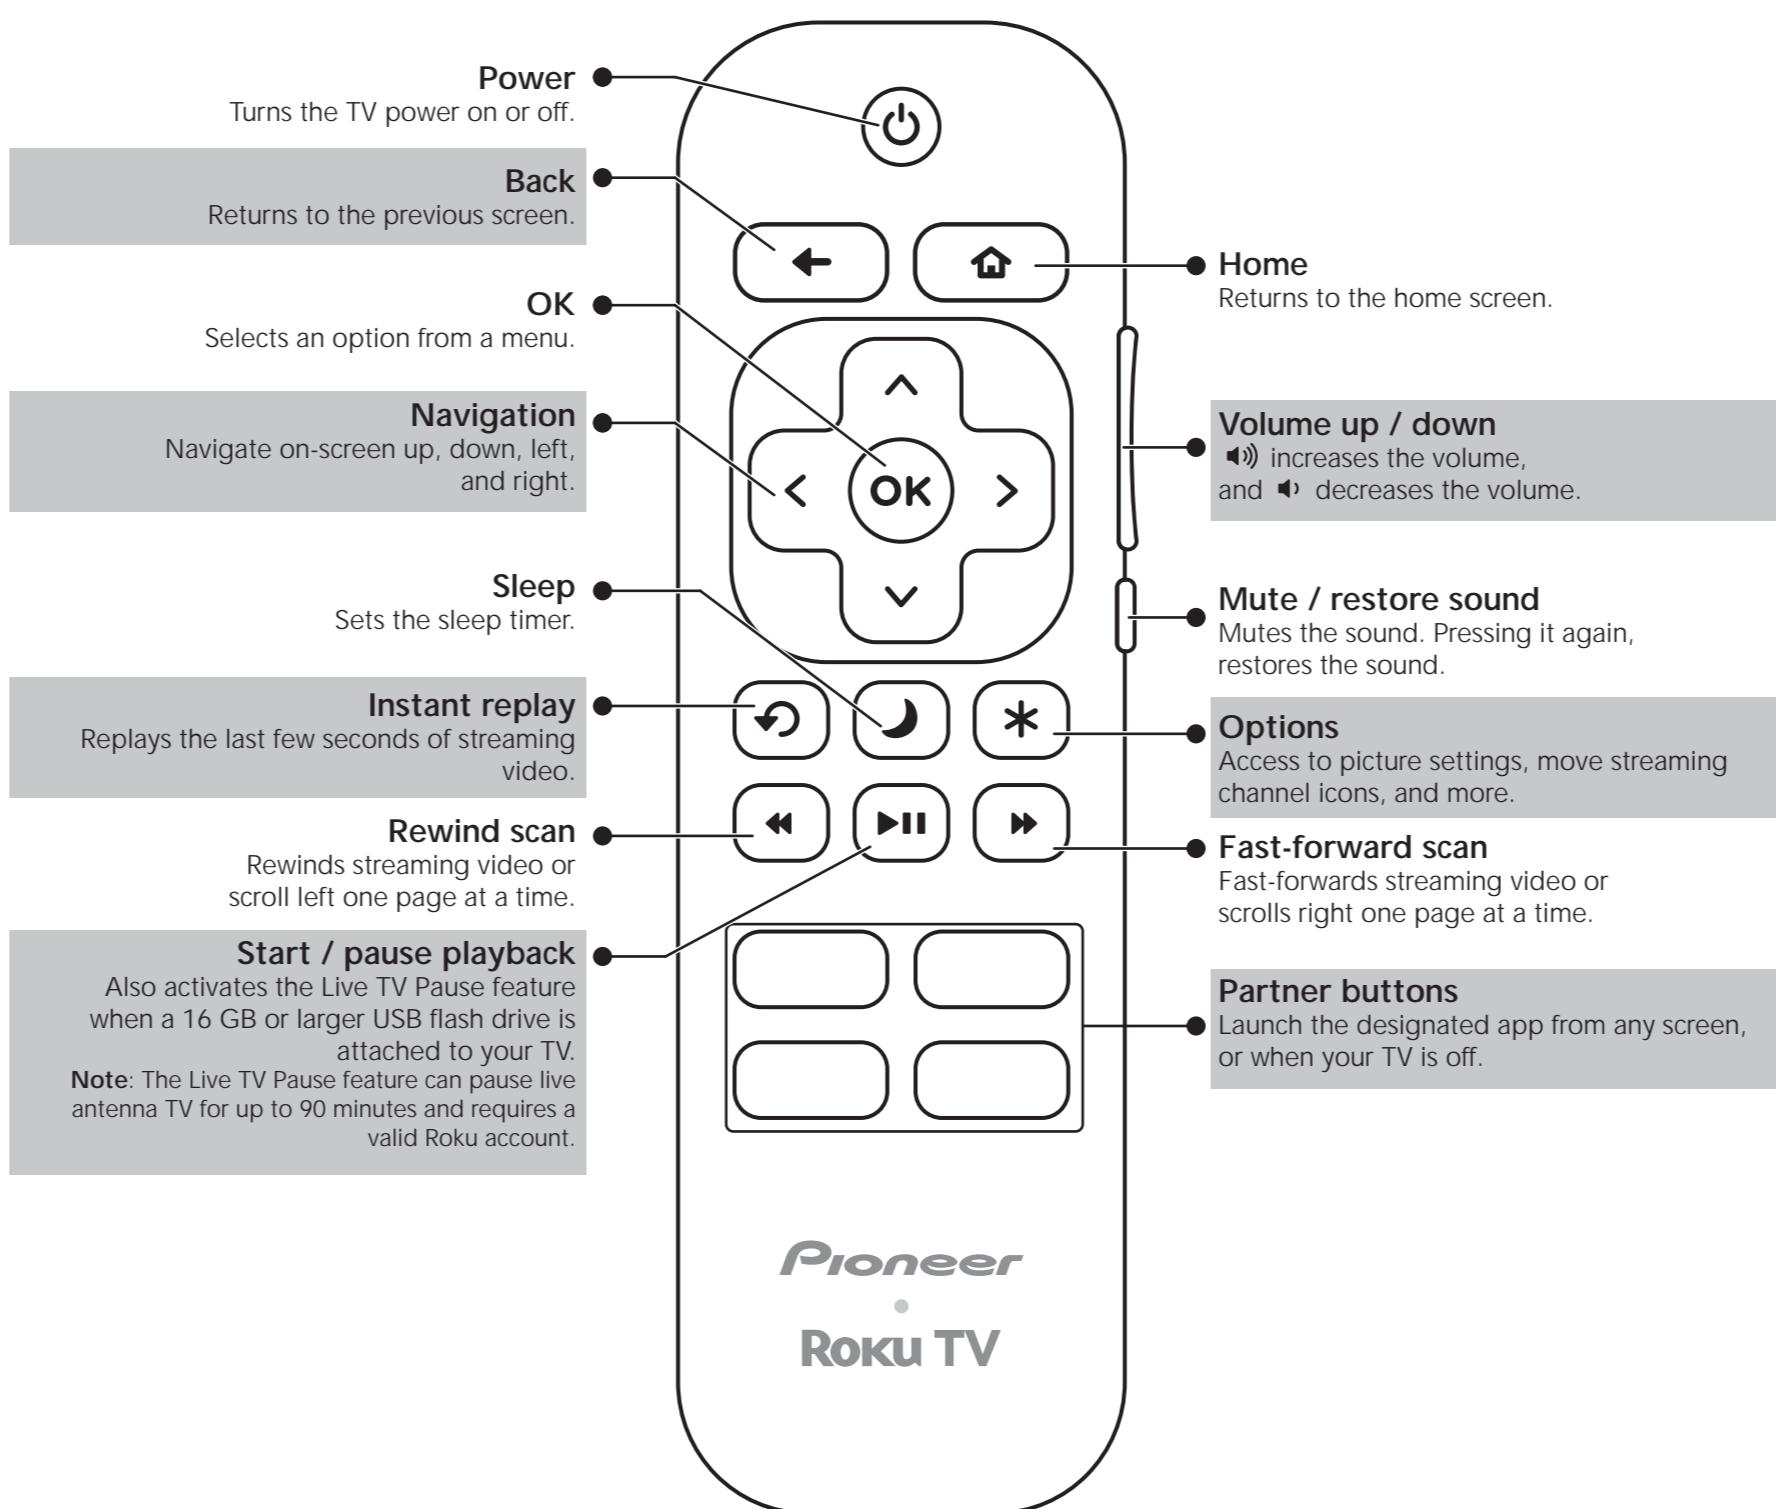

**Pioneer** • **Roku TV**

### Access the Pioneer TV User Guide

Access the online *User Guide*. Go to [www.usca.pioneer-tv.com](http://www.usca.pioneer-tv.com) and search for your model number. Many questions regarding parts, service, and warranties can be answered by visiting the Support section of our website: [www.usca.pioneer-tv.com](http://www.usca.pioneer-tv.com).

### Access the Roku TV User Guide

Visit [go.roku.com/tvmanual](http://go.roku.com/tvmanual) for details.

### Contact Pioneer TV Customer Support Center:

1-888-287-7658 (U.S. or Canada)

### One-Year Limited Warranty

Visit [www.bestbuy.com](http://www.bestbuy.com) for details.

### Quebec Availability Guarantee

For Quebec Residents Only: No guarantee of replacement parts, repair services, or maintenance/repair information. Visit [www.bestbuy.com](http://www.bestbuy.com) for details.

### Need Additional help?

Check out our Support Community at [www.bestbuy.com](http://www.bestbuy.com) for helpful information from other Insignia TV owners.

### We're Here For You

[www.bestbuy.com](http://www.bestbuy.com)

For customer service, call: 1-877-467-4289 (U.S./Canada)

**HDMI**  
HIGH-DEFINITION MULTIMEDIA INTERFACE

**Dolby**  
AUDIO

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 1992-2019 Dolby Laboratories. All rights reserved.

PIONEER and the Pioneer logo are registered trademarks of Pioneer Corporation, and are used under license.

Not all apps and content available in LED TV (UHD).

Roku, Roku TV, the Roku logo, and the purple d-pad design are the trademarks or registered trademarks of Roku, Inc. in the United States and other countries. All other trademarks and logos herein are the property of their respective owners.

**BEST BUY** Distributed and warranted by Best Buy Purchasing LLC  
Richfield, MN 55423  
©2025 Best Buy. All rights reserved.