


BR001-55 BEVERAGE REFRIGERATOR

User Manual

SKU: BR001-55BL-USZX

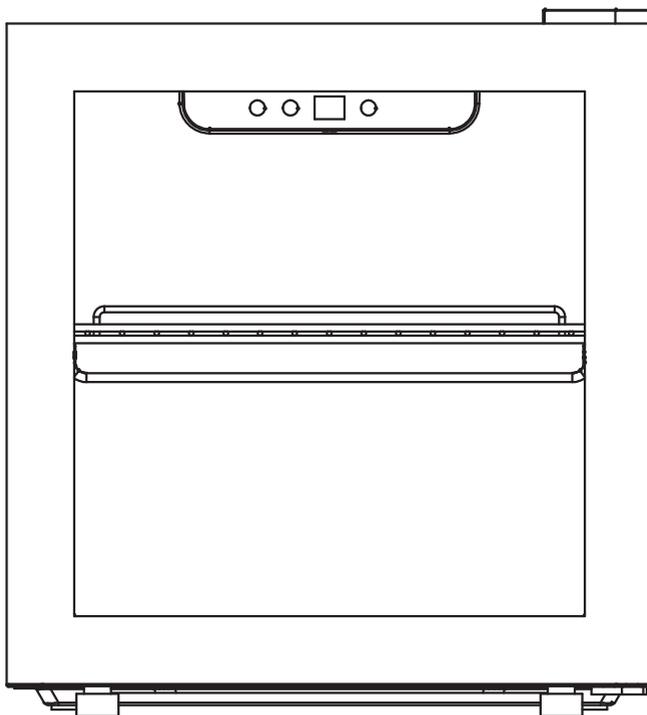

For Customer Service Support
Call: 1-833-632-0897
Email: support@homyd.com

THANK YOU FOR CHOOSING US

Thank You for Choosing Our Product

Thank you for choosing our product.

We sincerely appreciate your trust and support. Your satisfaction is our top priority, and we are committed to delivering high-quality products and attentive service.

If you have any questions or suggestions during use, please **DO NOT** hesitate to contact us. We are always here to assist you.

Contact Information

Email: support@homyd.com (Replies within 24 hours on business days)

Toll-Free: 1-833-632-0897 (Monday to Friday, 9:00 AM – 6:00 PM ET)

We hope this product brings ease and enjoyment to your daily life.

Warranty Statement

This product is covered by a limited warranty that protects against defects in materials and workmanship under normal household use.

If your product develops a fault after the return period of your purchase platform has ended, please contact us directly. We will do our best to assist you based on the warranty terms.

For warranty-related inquiries, please reach out using the contact details listed above.

Contents

Important Safety Instructions	01
Key Components and Structure	04
Installation Guide	05
Door Reversal Instructions	07
Getting To Know Your Beverage Refrigerator	10
Cleaning And Maintenance	12
FAQs	13
Troubleshooting	15
Specs	17
Warranty Policy	18
Return Policy	19

IMPORTANT SAFETY INSTRUCTIONS

 Read and review instructions to understand the operation and use of the product.

 Indicates the presence of a hazard that can cause personal injury, death, or substantial property damage if the warning included with this symbol is ignored.

WARNINGS

Failure to follow these instructions could result in electric shock, fire, or burn hazards, which could cause property damage, personal injury, or death. When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before using the appliance.
2. Only use this appliance for its intended purpose as described in this user manual.
3. Please ensure that this product is properly installed in accordance with the installation instructions before use.
4. **DO NOT** pull on the power cord when disconnecting the power plug of the appliance. Firmly grasp the plug and pull it out from the socket directly.
5. Please repair or replace immediately any electrical cords that are frayed or damaged. **DO NOT** use cords that show cracks or abrasion along their length, on the plug, or at the connector end.
6. Please unplug the appliance before cleaning or servicing. If the appliance requires repair for any reason, we strongly recommend that it be serviced by a certified technician.
7. If you will not use the appliance for an extended period, plan to store it, or dispose of it, please remove the doors and keep the shelves in place to prevent children from easily climbing inside and reduce the risk of entrapment.
8. This appliance is designed for freestanding installation only and should not be recessed or built into an enclosed cabinet.
9. **DO NOT** use the device in the presence of flammable gases.
10. This appliance is not designed to store perishable foods. Store only bottled or canned beverages.

11. Before plugging in the appliance, please allow it to stand upright for **at least 24 hours** to let the refrigerant settle. If the appliance has been tilted for any reason, wait **24 hours** before plugging it in.
12. This appliance is for indoor use only.
13. To avoid the risk of electric shock, always unplug the appliance before cleaning. Failure to do so may result in serious injury.
14. Before using cleaning products, be sure to carefully read and strictly follow the operating instructions and safety warnings to avoid personal injury or product damage.
15. **DO NOT** use an extension cord with this appliance. However, if you must use an extension cord, it is absolutely necessary that it be a UL-listed, 3-wire grounding type appliance extension cord having a grounding type plug and outlet and that the electrical rating of the cord is 115 volts and at least 15 amperes.
16. Make sure there is a suitable power outlet (115V/60Hz, 15A) with proper grounding to power the appliance.
17. **DO NOT** use an adapter or cut off the grounding prong to fit a two-prong outlet, as this is a dangerous practice that eliminates proper grounding and may result in electric shock.

Risk of Fire or Explosion-Flammable Refrigerant Used

Dispose of the appliance following federal or local regulations. Follow all handling instructions to ensure safe disposal.


- **DO NOT** use mechanical devices to defrost the unit.
- **DO NOT** puncture refrigerant tubing.
- Servicing must be performed by trained personnel only.
- Clean and maintain the appliance regularly according to this manual's Cleaning & Maintenance section.

KEY COMPONENTS AND STRUCTURE

- ① Hinged Cover
- ② Operation Panel
- ③ Shelf
- ④ Adjustable Leveling Legs
- ⑤ Double-Pane Transparent Glass Door
- ⑥ Protective Film

(The machine is covered with a protective film that does not affect its functionality. You may remove it if desired.)

- ⑦ Drip Tray in Back

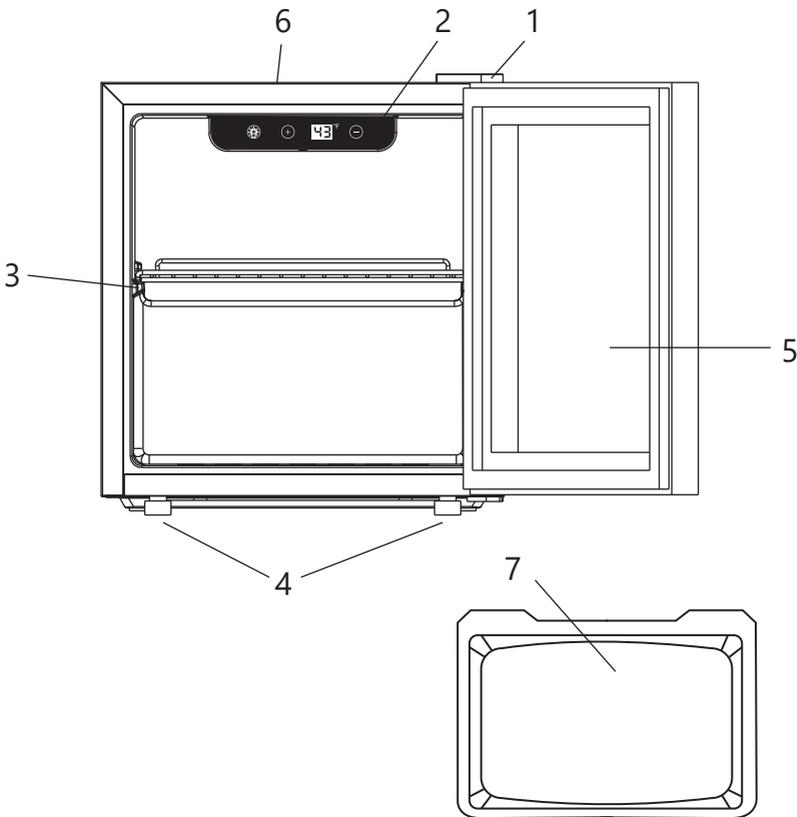


INSTALLATION GUIDE

Unpack

1. Carefully remove all packing materials, including the foam base and any adhesive tape securing accessories both inside and outside the appliance.
2. Inspect and remove any remaining packing materials, tape, or printed materials before powering on the beverage refrigerator.
3. Before connecting the appliance to the power source, let it stand upright for approximately 24 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.

Level the device

1. The beverage refrigerator is equipped with two leveling legs located at the front bottom corners. Once the appliance is properly positioned in its final location, you may level it as needed.
2. Please turn the leveling legs clockwise to lower the appliance or counterclockwise to raise it.

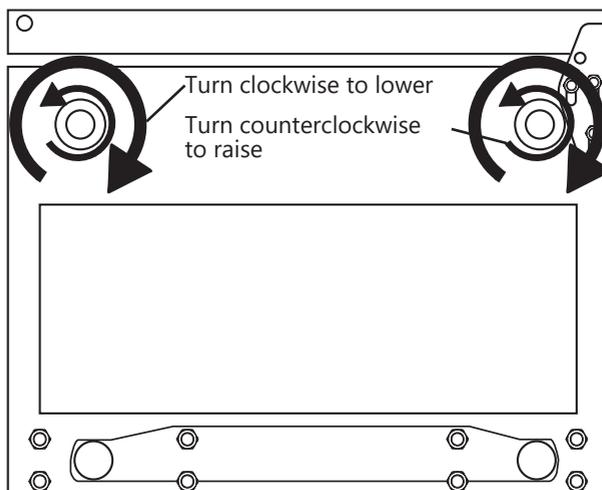

Proper Installation and Air Circulation

To ensure this beverage refrigerator performs at its best, please follow these guidelines:

1. Freestanding Installation

This appliance is designed for freestanding use. It can be placed in any location, as long as the recommended clearances are maintained.

2. Ventilation Requirements

Always install the appliance in an open and well-ventilated area. **DO NOT** place it in an enclosed space (such as a closed cabinet).

To ensure proper air circulation, maintain the following minimum clearances around the unit:

Sides: 5 cm (**2 inches**)

Top: 5 cm (**2 inches**)

Back: 5 cm (**2 inches**)

3. Avoid Overloading

DO NOT overfill the beverage refrigerator, as this may restrict airflow and affect cooling performance.

4. Drip Tray

Check the drip tray screws through the ventilation metal cover at the rear of the device to see if they are loose, missing, or misaligned.

Installation Limitations

1. **DO NOT** install the appliance in any area that is not properly insulated or heated (e.g., a garage).
2. This appliance is designed to operate in ambient temperatures between **10°C(50°F)** and **32°C(90°F)**.
3. Place the appliance on a hard, level surface, away from direct sunlight or heat sources (such as radiators, baseboard heaters, or cooking appliances). If the floor is uneven, use the leveling legs located at the front bottom corners to make adjustments.

DOOR REVERSAL INSTRUCTIONS

Tools Required


- 1.#2 Phillips screwdriver
- 2.Flat head screwdriver
- 3.Hex wrench



#2 Phillips
screwdriver



Flat head
screwdriver

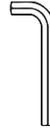

Hex wrench


Precautions Before Reversing the Door

1. The beverage refrigerator is shipped with the door hinge bracket installed on the right side by default, allowing the door to open from the left. However, if necessary, the door can be reversed to open from the right side.
2. **DO NOT** plug the beverage refrigerator into the power outlet prior if you plan to reverse the door hinge
3. Remove the shelf before beginning the door reversal process.
4. **DO NOT** place the beverage refrigerator upside down during installation, as this may cause damage to the appliance.


Door Reversal Procedure

Before operation, please take care to **store all parts** properly for later use.

Step 1: Gently remove the four plastic plugs from the left side of the top of the beverage refrigerator using a flat-head screwdriver.

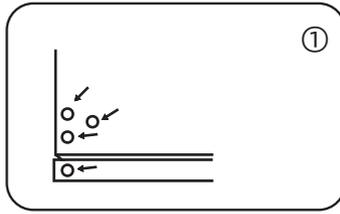

Step 2: Please first push the the hinge cover on the top right backward, lift it up, and slide it forward to remove. Next, use a #2 Phillips screwdriver to unscrew the three screws, and then remove the upper hinge.

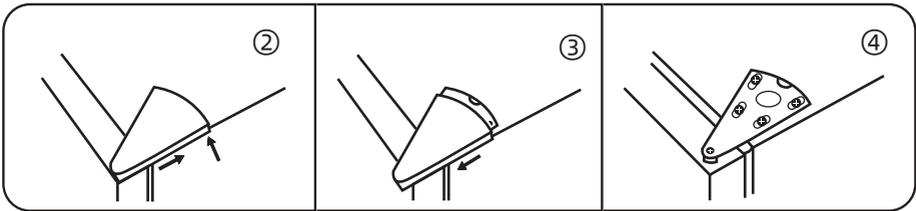


Step3:

First, gently tilt the appliance 90° so that the door is facing upwards, use a #2 Phillips screwdriver to remove the 3 screws from the bottom right hinge and take off the hinge.

Then, use a hex wrench to turn the hinge shaft counterclockwise and remove it. Rotate the hinge shaft 180° and reinstall it into the hinge.

Next, use the #2 Phillips screwdriver to remove the 2 screws from the left side and install them into the corresponding holes on the right side.

Finally, rotate the hinge 180° and attach it to the left side using the 3 screws previously removed from the right side.

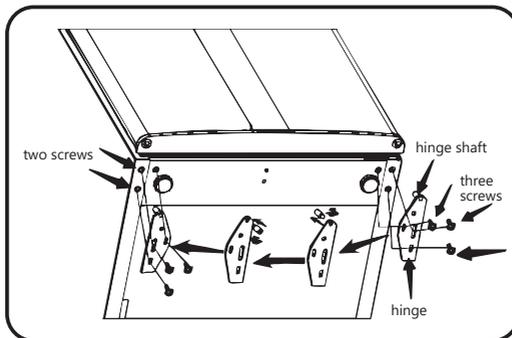


Step4:

Reinstall the top right hinge that was previously removed onto the left side, aligning its holes with the holes on the top of the cabinet. Tighten the three screws to secure it. Then, press down on the hinge cover to complete the installation.

Step5:

Finally, insert the plastic plug (previously removed from the left side) into the hole on the upper right side of the appliance and place the appliance upright.

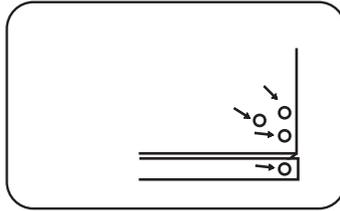

IMPORTANT

After completing the door reversal process, **DO NOT** plug in the beverage refrigerator for **at least 24 hours**. During the reversal procedure, the refrigerant and compressor oil may become mixed.

It is essential to allow sufficient time for these fluids to separate and settle, ensuring the compressor functions properly.

Failure to follow this instruction may result in serious mechanical damage—including potential failure of the compressor or motor—and will void the product warranty.

GETTING TO KNOW YOUR BEVERAGE REFRIGERATOR



Startup

Connect the power cord to a standard wall outlet. Once connected, you will immediately hear a short beep.

Display Controls

The default temperature is 6°C (43°F). Use the ⊕ and ⊖ buttons to set the desired temperature between the range of 4°C (40°F) – 16°C (61°F).

The display will flash while the temperature is being set. The temperature display shows the actual internal temperature of the beverage refrigerator, and the digital display will adjust as the unit cools.

While the unit is adjusting to the new setting, press the ⊕ or ⊖ buttons to view the selected temperature setting.

If there is a power outage, the unit will revert to the last temperature setting once power is restored.

Led Light

Press the  button to turn the LED light on or off.

To extend the lifespan of the LED light and conserve energy, it is recommended to turn on the light only when selecting or placing beverages. At other times, keep the light turned off.

Loading Beverages

When first filling the beverage cooler to full capacity, we recommend the following steps to effectively cool a large number of beverages.


1. Use the Adjustable Thermostat Control to set the temperature to 6°C (43°F) (also the default temperature).
2. Allow the beverage Refrigerator to cool for a minimum of two hours.
3. Load the beverages.
4. After initially filling with beverages, the internal temperature will rise as indicated on the display.
5. Once the beverage refrigerator has cooled the beverages to 6°C (43°F), use the Adjustable Thermostat Control to select a desired cooler internal temperature, please note that the lowest temperature setting is 4°C (40°F).
6. Allow several hours for the beverage cooler to cool to the desired lower temperature.

Note:

Temperature variations inside the unit are normal. Areas near the door may be slightly warmer than the interior.

Removing or Reinserting the Shelf

1. To remove the shelf, gently tilt it upward and slide it forward until it is completely removed.
2. To reinsert the shelf, gently slide it back into its original position.

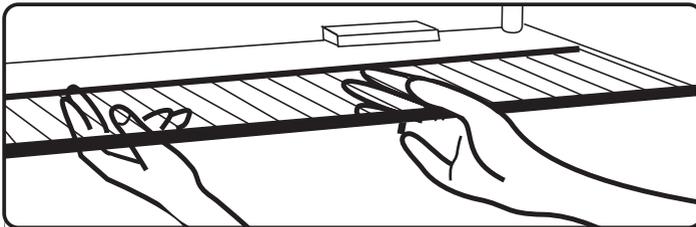

CLEANING AND MAINTENANCE

Cleaning the machine

Disconnect the plug: Always unplug the power plug from the socket to disconnect the appliance before cleaning.

Clean the machine: Dissolve 3-4 teaspoons of baking soda in warm water. Use it to moisten a sponge or soft cloth and wipe the unit. Rinse with clean, warm water and dry with a soft cloth. Please avoid using hard brushes, wire brushes, abrasives, organic solvents, boiling water, or acidic or alkaline substances, as they may damage the surface and interior of the appliance.

Clean the door seal: Clean the door seal every three months. Apply a thin layer of petroleum jelly on the hinge side to keep it soft and ensure a proper seal.

Defrosting the Appliance

1. The appliance is equipped with a defrosting system.
2. After unplugging the power cord, the surface will defrost automatically. The water inside is directed to the drip tray located on the compressor, where it evaporates due to the compressor's heat.

Handling Power Interruptions

1. Occasional power interruptions may occur due to storms or other causes.
2. When a power interruption happens, unplug the power cord from the AC outlet. Once power is restored, plug the power cord back into the AC outlet.
3. After any power interruption, the appliance will resume the last set temperature. Please reset your temperature settings if needed.

Maintenance Preparation Before Holidays and Relocation

1. For extended holidays or when the beverage refrigerator is empty, unplug the power cord and clean both the interior and the door seal.
2. Keep the door open to ensure proper air circulation.
3. When moving the appliance, always keep it upright, as lying it flat may damage the sealed system.

1. Is this rated for outdoor use? I see pictures in an outdoor island.

No, this beverage refrigerator is primarily designed for indoor use. You can place it on a balcony or near a door, but please avoid using it in open outdoor environments to ensure its proper operation and longevity.

2. Has anyone installed this under the counter? And does that void the warranty?

This model is not designed for under-counter installation. Placing it under the counter may affect its performance.

3. What is the temperature range of a wine cabinet?

The temperature of the beverage refrigerator can be set between **4°C (40°F) – 16°C (61°F)**, but due to the influence of internal and external environment, there may be slight variations in the actual displayed temperature.

4. Is this unit quiet enough to keep in a bedroom?

This beverage refrigerator features a low-noise design that produces only 36 dB of noise when running, so it's quiet enough to put in your bedroom or any other quiet environment without disturbing your sleep.

5. Is it possible to change the direction of the door?

Yes, the orientation of the beverage refrigerator door can be changed. Our manual contains detailed tutorials.

6. Does this beverage refrigerator need to be installed?

No, the beverage refrigerator does not require installation. After receiving the unit, let it stand for 24 hours before powering it on.

7. What are the warranty specifications?

We provide a **12-month** warranty and lifetime technical support for this beverage refrigerator. If you would like to learn more, please contact our customer service team.

8. Can the shelves inside the wine cabinet be moved?

The shelf can only be left inside the beverage refrigerator or removed entirely.

9. Is it normal for a wine cabinet to get hot outside?

Yes, it is normal for a beverage refrigerator to emit some heat on the outside. This happens because beverage refrigerators work by transferring heat from inside the unit to the outside, keeping the inside cool.

10. Does it keep food securely cold?

Hi there, our beverage refrigerator is primarily designed to store drinks, especially for chilling wine, beer, and other beverages. It features different temperature settings to keep drinks at their ideal temperatures.

It can also be used to store some food items that **DO NOT** require specific temperature settings.

However, for food items that need to be frozen, we recommend the safest practice is to use a freezer that is specifically designed for food storage.

TROUBLESHOOTING

Problem	Possible cause(s)	Solution
The appliance does not operate	There is a power failure, or the appliance is not plugged in	Ensure the appliance is plugged in and the power outlet has power
	A house fuse has blown, or the circuit breaker is tripped	Replace the broken fuse or reset the breaker
The appliance is not cold enough	The appliance is placed too close to a heat source	Adjust the temperature. Keep the appliance away from sunshine or other heat sources
	The door is opened too often, or the door is not closed completely	Close the door tightly and DO NOT open the door too frequently or for a long period of time
	The door gasket does not seal properly	Ensure the door gasket is not loose
The appliance makes too much noise	The noise may come from the flow of the refrigerant, and expansion of the inside walls may cause popping and crackling noises	It is normal that as each cooling cycle ends, you may hear rattling or gurgling sounds caused by the flow of refrigerant in the appliance. The high-efficiency compressor may make a pulsating or high-pitched sound
	Contraction and expansion of the inside walls may cause popping and crackling noises	Some popping or cracking noises are normal . They are caused by the expansion and contraction of the inside walls due to temperature changes
The door does not close properly	The appliance is not level	Ensure the unit is placed on a hard, level surface. Avoid placing it on carpeted or soft surfaces, and level the unit properly
	Something might be blocking the door	Check the door for any obstructions and remove them
Moisture build-up on interior or exterior of the unit	Ambient temperature or humidity is high	Lower the room humidity by a dehumidifier or air conditioner
	Open the door frequently	Open the door less frequently
	Poor door seal	Check door gaskets for proper seal

Problem	Possible cause(s)	Solution
The temperature is too low	The temperature setting is too low	Adjust the temperature control to a higher setting and wait a moment until the temperature stabilizes
The unit is running too frequently	More cooling is required for the environmental conditions	In high temperature and high humidity environments, it may be normal for the unit to run continuously to maintain a constant temperature
	Frequent opening of the door allows warm air to enter	Reduce the frequency of opening the door
	Poor sealing causes cold air to leak	Check that the door seal is properly sealed
	A door that is not completely closed increases the running time	Make sure that the door is completely closed

SPECS

BR001-55 Beverage Refrigerator	
SKU	BR001-55BL-USZX
MODEL	BR001-55
VOLTAGE	115V~60HZ
RATED CURRENT	1.0A
REFRIGERANT	R600A,0.49Oz/14g
FOAMING	Cyclopentane
DIMENSIONS	16.9*16.2*18.5 in
NET WEIGHT	32.7LBS
GROSS WEIGHT	38.0LBS

WARRANTY POLICY

1-Year Limited Warranty

Toll-Free Call: 1-833-632-0897 Mon to Fri, 9AM - 6PM (ET)

Email: support@homyd.com

Thank you for choosing our products. We provide a 1-Year Limited Warranty for items purchased through our official channels. Please kindly note that this warranty is for the original purchaser and is non-transferable. If you purchase from an unauthorized seller, please get in touch with them directly.

We are committed to ensuring that our products are free from defects in materials and workmanship for one year from the date of purchase, as long as they are used under normal household conditions and maintained according to the User Manual. **Please note that certain conditions and exclusions apply:**

Should you find any defects in the original product or its non-wearable parts, we will be happy to repair or replace the item within one year of purchase. If a replacement is necessary, the warranty period will continue from the original purchase date. Please be aware that normal wear and tear, or damage due to mishandling, accidents, or failure to follow instructions, are not covered. However, replacement parts are available for purchase. Feel free to contact us for more information.

Please also note that this warranty does not cover damage caused by exposure to liquids or foreign materials, unauthorized repairs or modifications, or use in commercial or non-household environments (unless specified for commercial use).

If you encounter any issues with your product, we are here to help. You can reach us by phone at **1-833-632-0897** or email us at **support@homyd.com**. For certain product categories, we also offer the option to upgrade your warranty to our VIP service.

Our friendly phone support team is available from **Monday to Friday, 9 AM - 6 PM (ET)**. To assist you more efficiently, please have your product with you when you call. Besides, we aim to respond to emails within 24 business hours. If you don't receive a reply within this timeframe after sending us an email, kindly check your spam folder to ensure you don't miss our response.

In addition to the one-year warranty, we also offer lifetime technical support. After the warranty period, service is still available at an additional cost. Please don't hesitate to contact us with any questions or concerns.

RETURN POLICY

We offer a 30-day return policy for purchases made directly through our company. This policy is separate from and does not override the return policies of third-party platforms.

Return Eligibility

Items must be returned within 30 days of purchase.

Products should be in new or like-new condition, with original packaging and all accessories (manuals, handles, keys, etc.).

Returns not related to quality issues will require the buyer to cover return shipping costs, which will be deducted from the final refund.

How to Initiate a Return

Contact our customer service team for return authorization.

Provide the following information:

Proof of purchase (e.g., screenshot with platform name, order number, date, item, and amount)

After approval, we will send a return shipping label. Attach it to the product box and return via the designated carrier.

Once we receive and inspect your return, we will process your refund within **2–3 business days** (excluding original processing or handling fees).

***Note:**

- Returned products that are damaged or missing parts may not qualify for a refund.
- This return policy does not affect your warranty rights.
- For details, please refer to the “Return Policy” section of this manual or the return policy on your purchase platform.

SKU: BR001-55BL-USZX

