 


INSIGNIA™

# INSTALLATION GUIDE

## 91" Projector Kit

NS-SCR79KIT

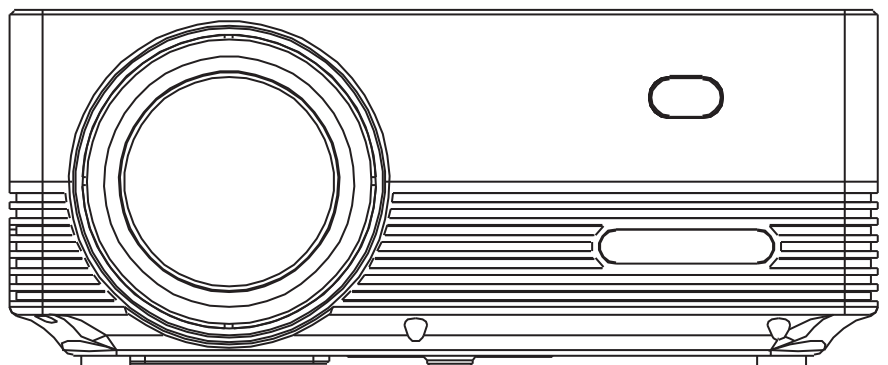

Before using your new product, please read these instructions to prevent any damage.

## Contents

IMPORTANT SAFETY INSTRUCTIONS .....	3
Features .....	3
Package contents .....	3
Components .....	4
Top .....	4
Back .....	5
Sides .....	5
Remote control .....	6
Setting up your projector kit .....	7
Connecting devices .....	11
Connecting an HDMI device .....	11
Connecting a USB device .....	11
Connecting an A/V device .....	12
Connecting headphones .....	12
Connecting a speaker system .....	12
Connecting a Bluetooth speaker (wire connection) .....	13
Connecting a VGA device .....	13
Connecting the power adapter .....	13
Positioning your projector .....	14
Using your projector .....	14
Turning your projector on and off .....	14
Selecting the video source .....	14
Adjusting the picture .....	16
Adjusting the contrast .....	16
Adjusting the brightness .....	16
Adjusting the tint .....	17
Adjusting the color temperature .....	17
Selecting the aspect ratio .....	17
Adjusting the noise reduction .....	17
Adjusting the display size .....	18
Selecting the sound mode .....	18
Adjusting the treble or bass .....	19
Adjusting the balance .....	19
Turning the Auto Volume control on or off .....	19
Setting the sleep timer .....	19
Selecting the OSD language .....	20
Restoring factory defaults .....	20
Rotating the picture .....	20
Updating the USB software .....	21
Specifications .....	21
Legal notices .....	22
ONE-YEAR LIMITED WARRANTY .....	23

# IMPORTANT SAFETY INSTRUCTIONS

READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

**WARNING:** THIS IS NOT A TOY! THIS PRODUCT CONTAINS SMALL PARTS WHICH COULD CAUSE CHOKING IF SWALLOWED. FOR INDOOR OR OUTDOOR USE WITH COVER. DO NOT EXPOSE THE PROJECTOR OR REMOTE CONTROL TO RAIN OR OTHER WET CONDITIONS.

DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. IF SERVICING IS NEEDED, SEND TO QUALIFIED SERVICE PERSONNEL. PLEASE ADHERE TO THE FOLLOWING:

- Read Instructions - All safety and operating instructions should be read before the item is operated. Please adhere to the instructions and warnings for your safety.
- Heat - The item should be situated away from heat sources such as radiators, hairdryers, heat registers, stoves, or other appliances that produce heat.
- Power Sources - The item should be connected to a power supply only like the one that is provided with the item.
  - Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
  - Do not hang objects from cord.
  - Do not close doors or windows on the product or product cords as this may damage the wire insulation.
  - Unplug the product when leaving the house, retiring at night, or if left unattended.
- Damage Requiring Service – Refer all servicing to a qualified service personnel. Have a qualified service personnel service this item when:
  - The power-supply cord or plug has been damaged.
  - Objects are loose inside and the unit no longer works.
  - All troubleshooting techniques have been tried and the item will not work or has stopped working.
  - The item has been dropped or the enclosure damaged.
  - Do not leave the product outside after use.
- This product is intended for short term use throughout the year. It is not intended for permanent installation or use.
- To avoid risk of fire, burns, personal injury, and electrical shock, this item should not be played with or placed where small children can reach it.
- Do not use this product for other than its intended use.
- Do not cover the product with cloth, paper, or any material not part of the product when in use.

## SAVE THESE INSTRUCTIONS

### Features

- Matte white screen with a 16:9 aspect ratio is ideal for both home and outdoor viewing
- Projector displays visuals up to 720p for high-definition visuals
- 180° viewing angle provides a large range of seating arrangements
- Portable speaker includes both Bluetooth and wired connection options
- Storage case protects your equipment from the elements
- Remote control lets you control your projector from up to 13 ft. (4 m)


### Package contents

Make sure that you have all the items to set up your projector kit:

- Projector (1)
- Power adapter for the projector (1)
- Remote control (1) with AAA alkaline batteries (2)
- Bluetooth speaker (1)
- USB cable for charging a Bluetooth speaker (1)
- Audio cable for a Bluetooth speaker (1)
- Screen (1)
- HDMI cable (1)
- 3.5mm AV cable
- Bungee cords (6)
- Stakes (4)
- Strings with hooks (4)
- Carrying case (1)
- A poles (4)
- B poles (2)
- C poles (2)
- D poles (1)


## Components

Top

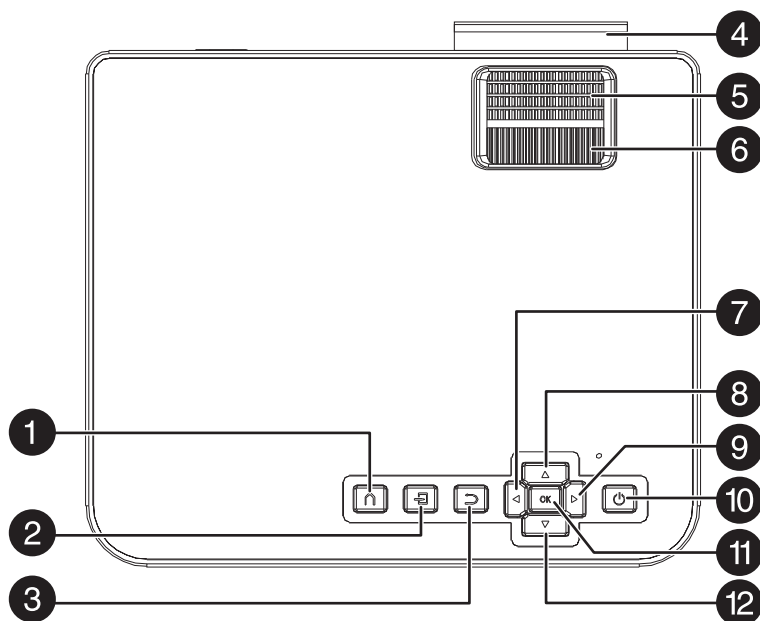


NO.	COMPONENT	DESCRIPTION
1	⏮ (menu)	Press to open or close the menu.
2	📺 (source)	Press to select an external video device.
3	⏪ (return)	Press to go back to the previous screen.
4	Lens	Projects the image onto the screen.
5	Focus wheel	Turn to focus the image on the screen.
6	Keystone wheel	Turn to adjust the vertical position of the image on the screen by $\pm 15^\circ$ .
7	⏮ (left)	Press to decrease the volume. In menus, press to move left.
8	⬆ (up)	In menus, press to move up.
9	⏭ (right)	Press to increase the volume. In menus, press to move right.
10	⏻ (power)	Press to turn your projector on or off.
11	OK	Press to confirm menu selections.
12	⬇ (down)	In menus, press to move down.

## Back

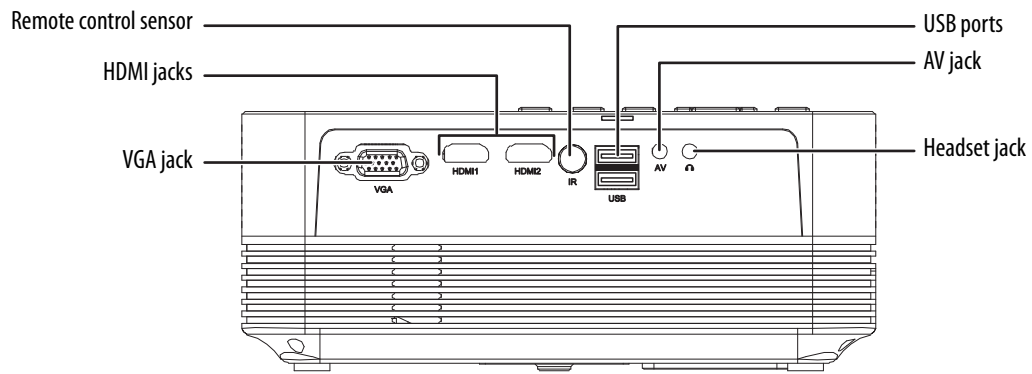


## Sides

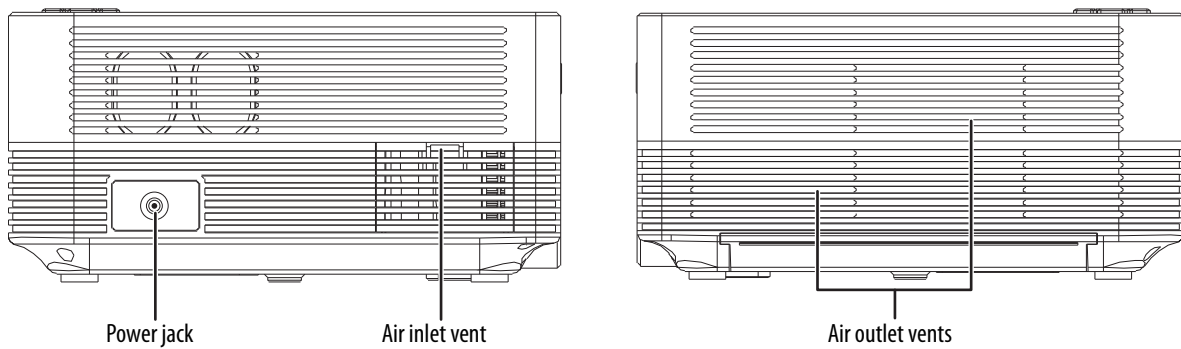

**CAUTION:** Do not block the vent openings. Your projector may overheat and be damaged.

## Remote control

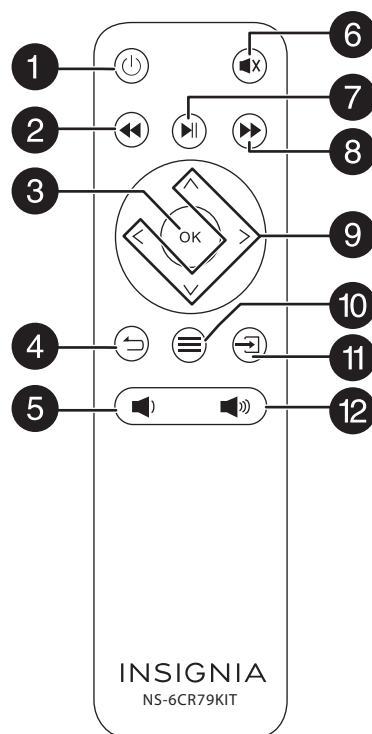

NO.	COMPONENT	DESCRIPTION
1	⏻ (power)	Press to turn your projector on and off.
2	⏮ (fast rewind)	Press to fast rewind video from an external device.
3	OK	Press to confirm menu selections.
4	⏪ (return)	Press to go back to the previous screen.
5	🔊 (volume down)	Press to decrease the volume.
6	🔊x (mute)	Press to mute or unmute the sound.
7	⏩ (play/pause)	Press to start or pause playback.
8	⏭ (fast forward)	Press to fast forward video from an external device.
9	⬆ ⬇ ⬅ ➡ (arrows)	Press to navigate in menus.
10	☰ (menu)	Press to open or close the menu.
11	📺 (source)	Press to select an external video device.
12	🔊 (volume up)	Press to increase the volume.


**CAUTION:** Do not expose the remote to rain or other wet conditions.

### Notes:


- Always point the remote at the remote sensor on the front or back of your projector.
- Make sure that there are no obstacles between the remote and the remote sensor.
- The remote works up to a distance of 13 ft. (4 m).
- Remove the batteries if you don't plan to use your projector for a long time.
- Replace the batteries with new batteries when the current batteries are exhausted.
- Store the remote in a cool and dry environment.

## Setting up your projector kit


- 1 Place the carrying case on a flat surface with the logo facing upward.

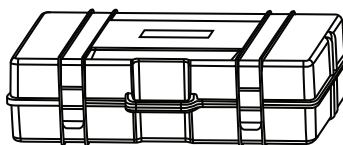


- 2 Open the carrying case, then remove the foam packaging that holds all the parts.

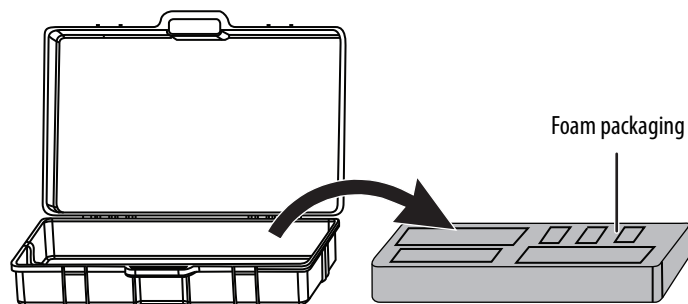

- 3 Pull up the two bottom poles. These poles are hinged and permanently attached to the carrying case.

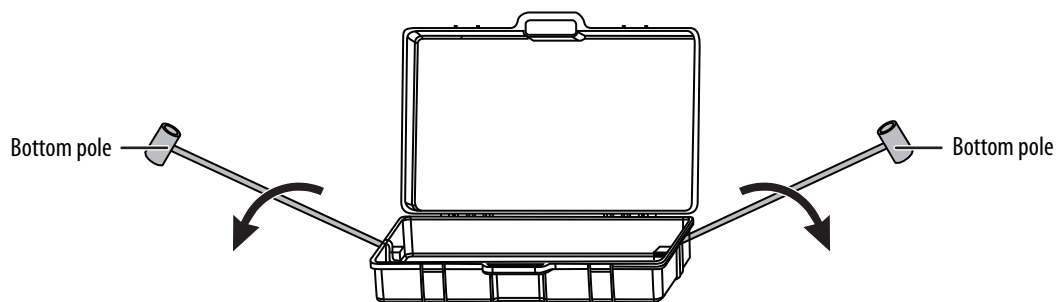


- 4 Insert one A pole into both ends of the bottom poles.

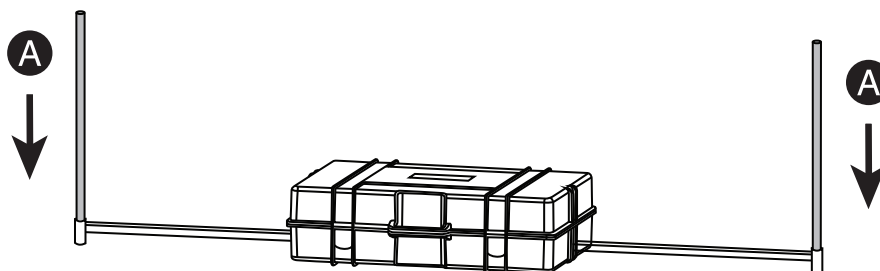


**Note:** The A, B, C, and D poles are labeled for easy identification.


5 Insert a B pole into each A pole.

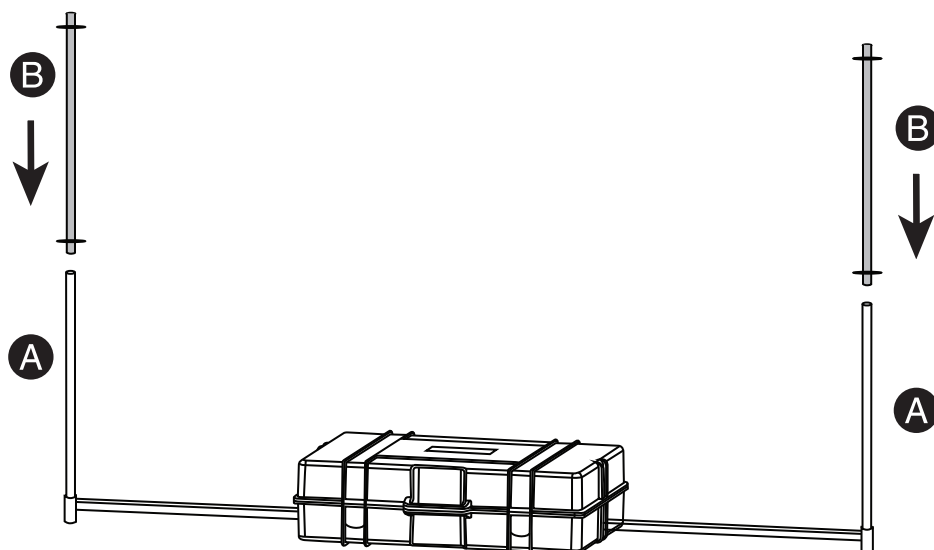

6 Insert an A pole into each B pole.

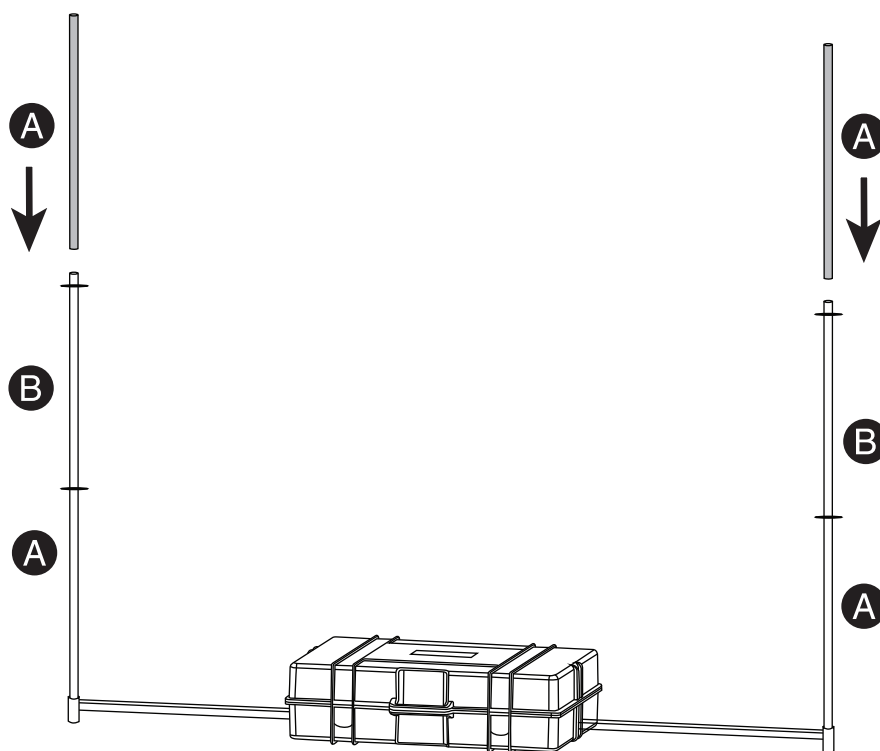


7 Insert a D pole into one C pole.

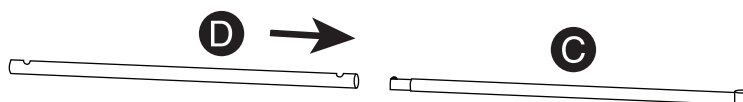





- 8** Slide the sleeve at the top of the screen over the D and C pole combination.

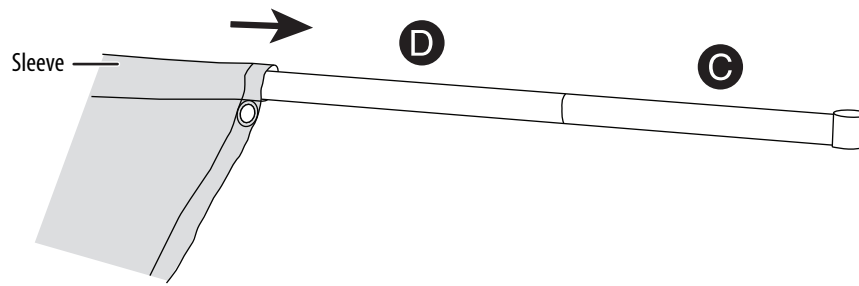


- 9** Insert the other C pole into the end of the D pole.

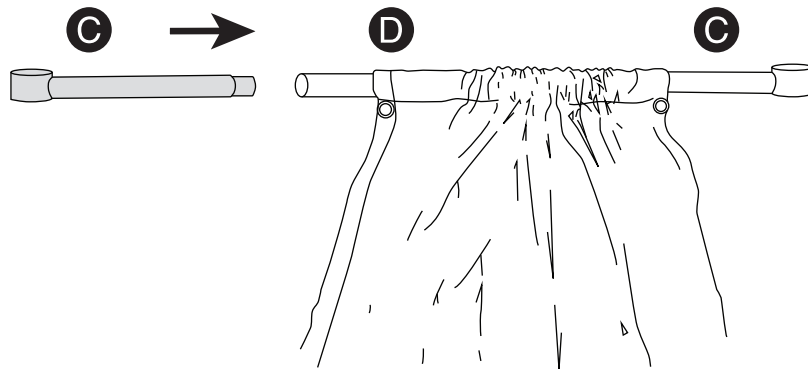

- 10** Slide the ends of the C poles onto the ends of the A poles.

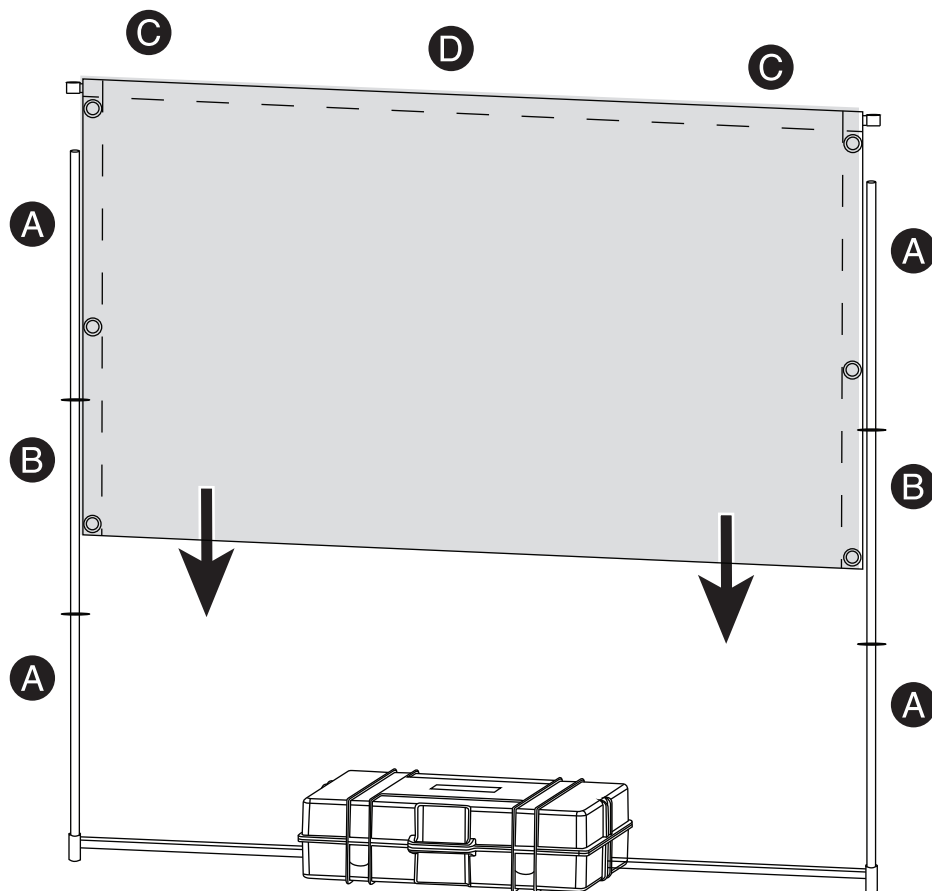


- 11** To secure the screen to the poles, insert a bungee cord through the grommet on the screen, wrap it around the pole, then insert the plastic ball through the loop on the cord. Attach the other five cords.

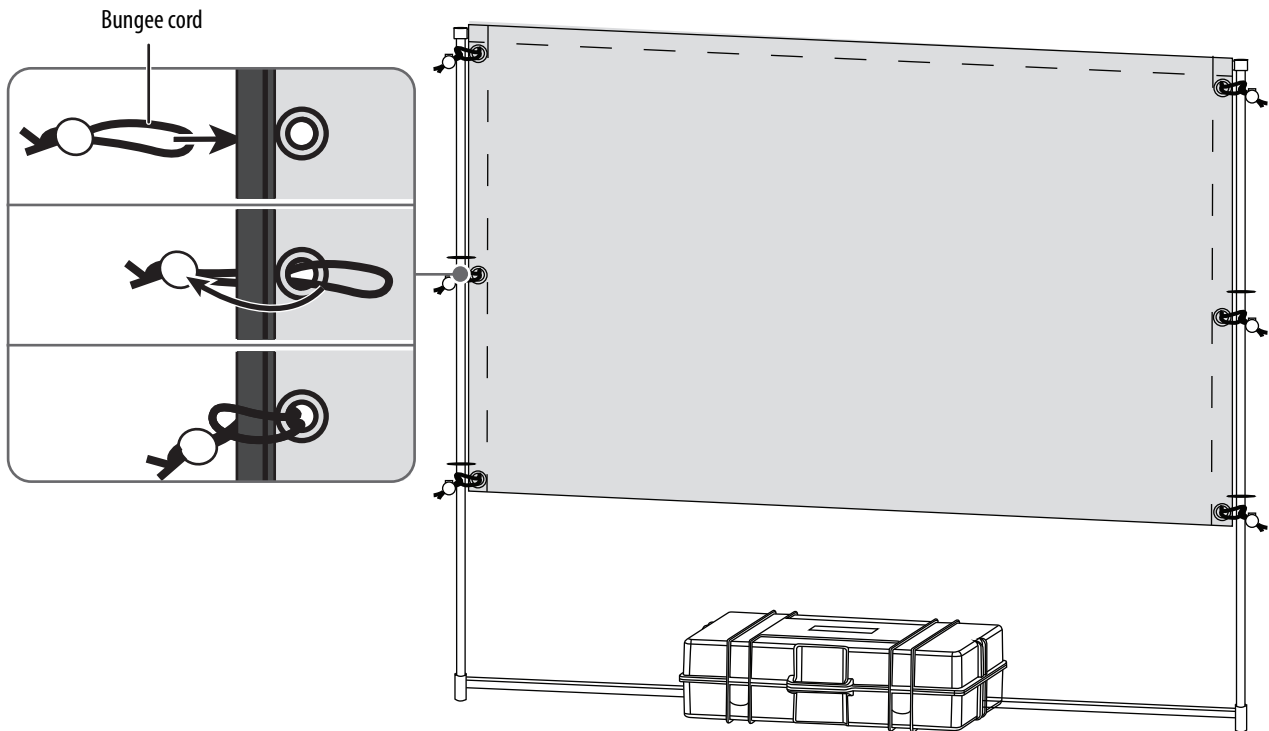

- 12** To secure the screen to the ground, attach the hook at one end of the string to the hole midway up the B poles. (We recommend that you attach to the holes furthest up the pole.) Attach the hook at the other end of the string to the ground stake. Repeat until all four strings are attached to the poles and stakes. Step firmly on the stakes to insert into the ground. Make sure that the strings are taut and there is no slack.

**Note:** If you are using your projector on a solid surface (like concrete) or inside, you don't need to do the next step.


**CAUTION:** Always take the weather into consideration when setting up. Take your projector and screen down under severe weather conditions such as high winds or heavy rain. Take down and repack your projector and screen when not in use. Do not leave outside for an extended amount of time.

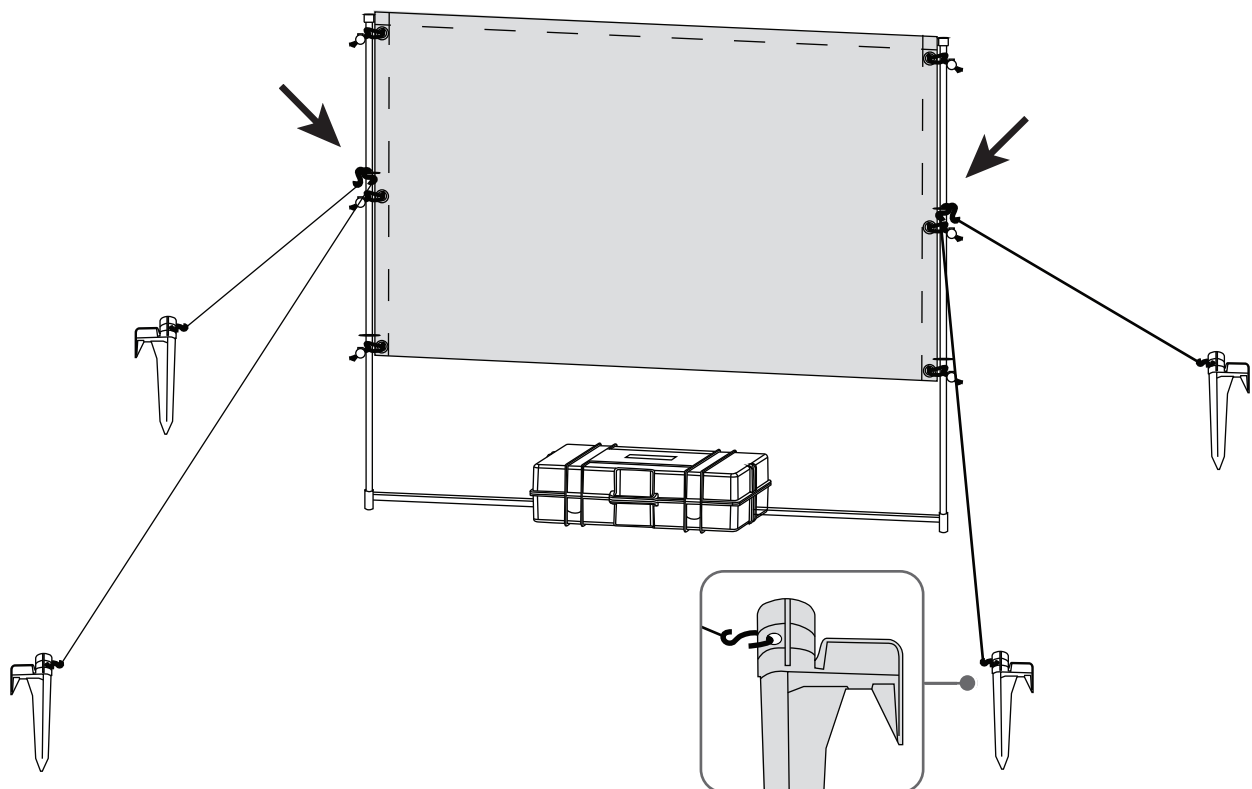

# Connecting devices


## Connecting an HDMI device

- Plug the included HDMI cable into one of the HDMI jacks on the back of your projector and the HDMI OUT jack on your HDMI device.

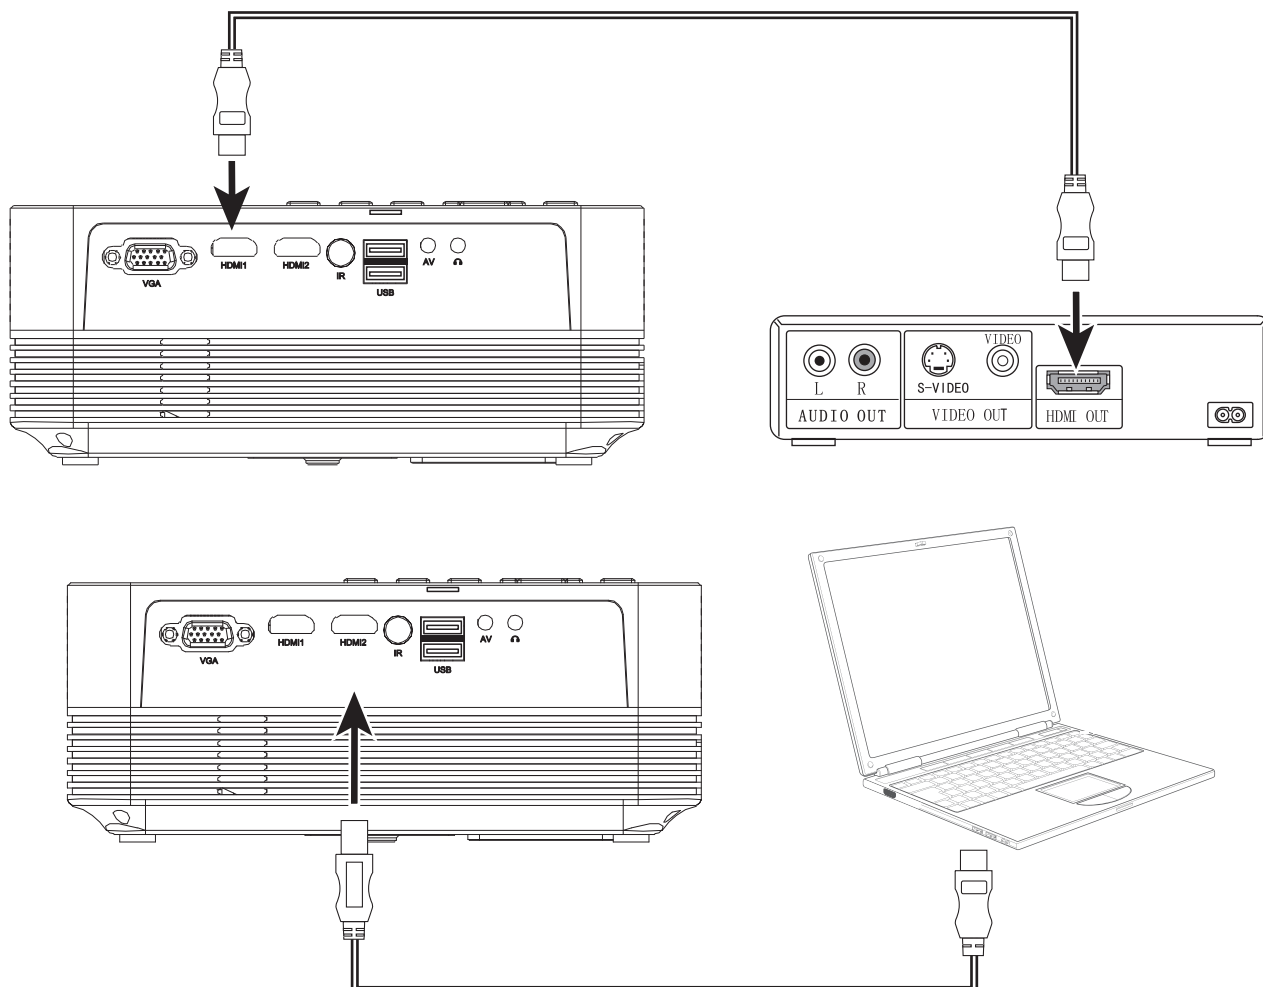


## Connecting a USB device

- Connect your USB device to one of the USB ports on the back of your projector.

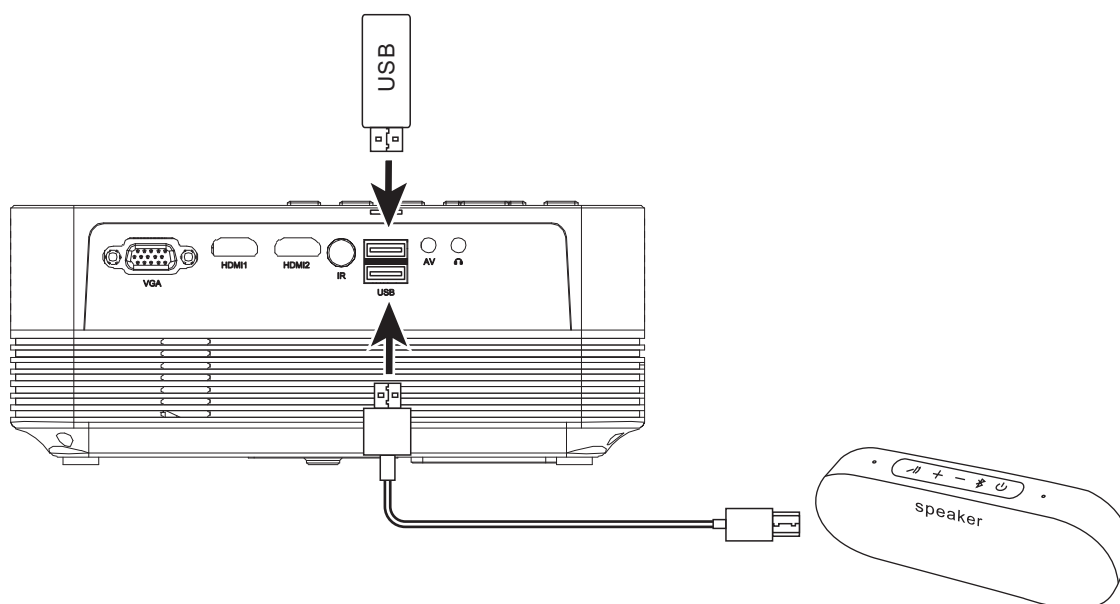


## Connecting an A/V device

- Plug an A/V cable into the A/V jack on the back of your projector and into the A/V jacks on your device.

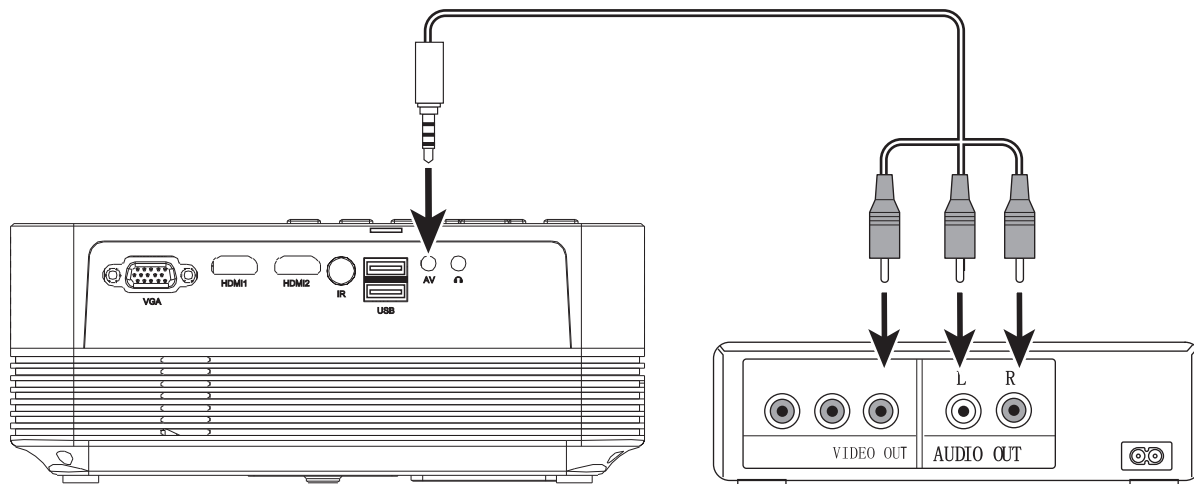


## Connecting headphones

- Plug your headphones (not included) into the headphone jack on the back of your projector.

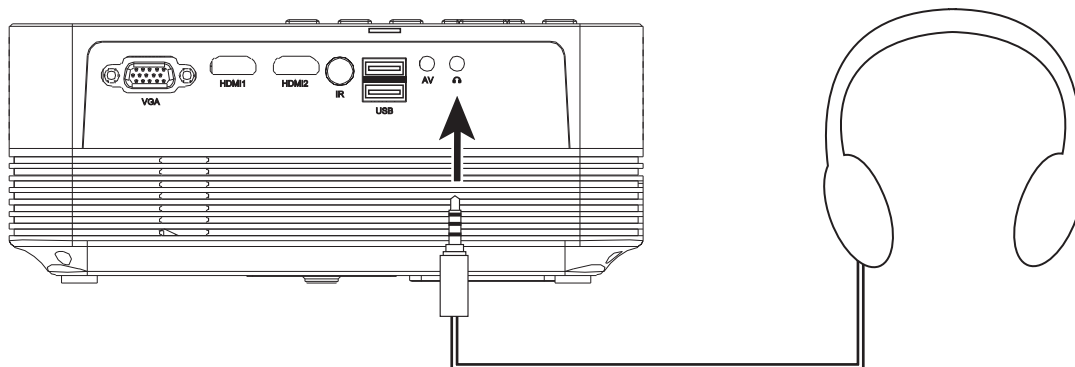


## Connecting a speaker system


- Plug an audio cable (not included) into the headphone jack on the back of your projector and into the left and right audio jacks on your speaker system.

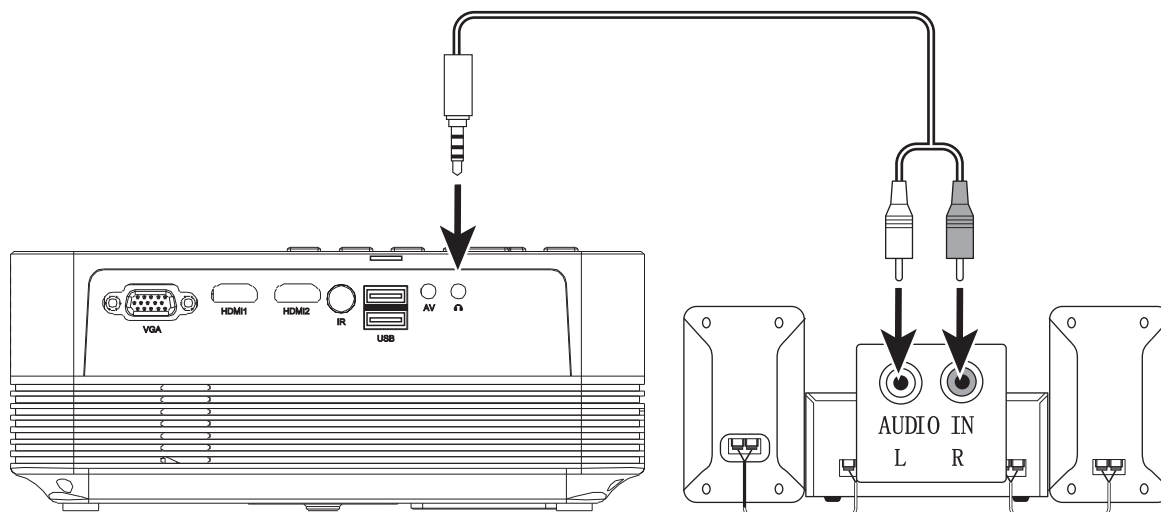

## Connecting a Bluetooth speaker (wire connection)

- 1 Connect the included audio cable to the headphone jack on the back of your projector and to the headphone jack on the Bluetooth speaker.

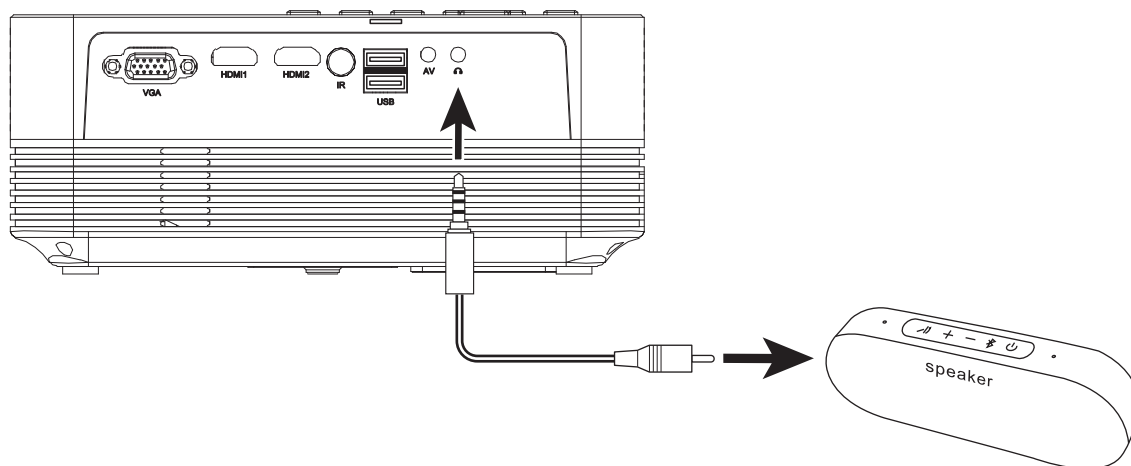


- 2 Press  (power) on the speaker to turn on the speaker.

**Note:** You can use the included USB charging cable to charge a Bluetooth speaker.


## Connecting a VGA device

- Plug the VGA cable (not included) into the VGA jack on your projector and into the VGA jack on your device.

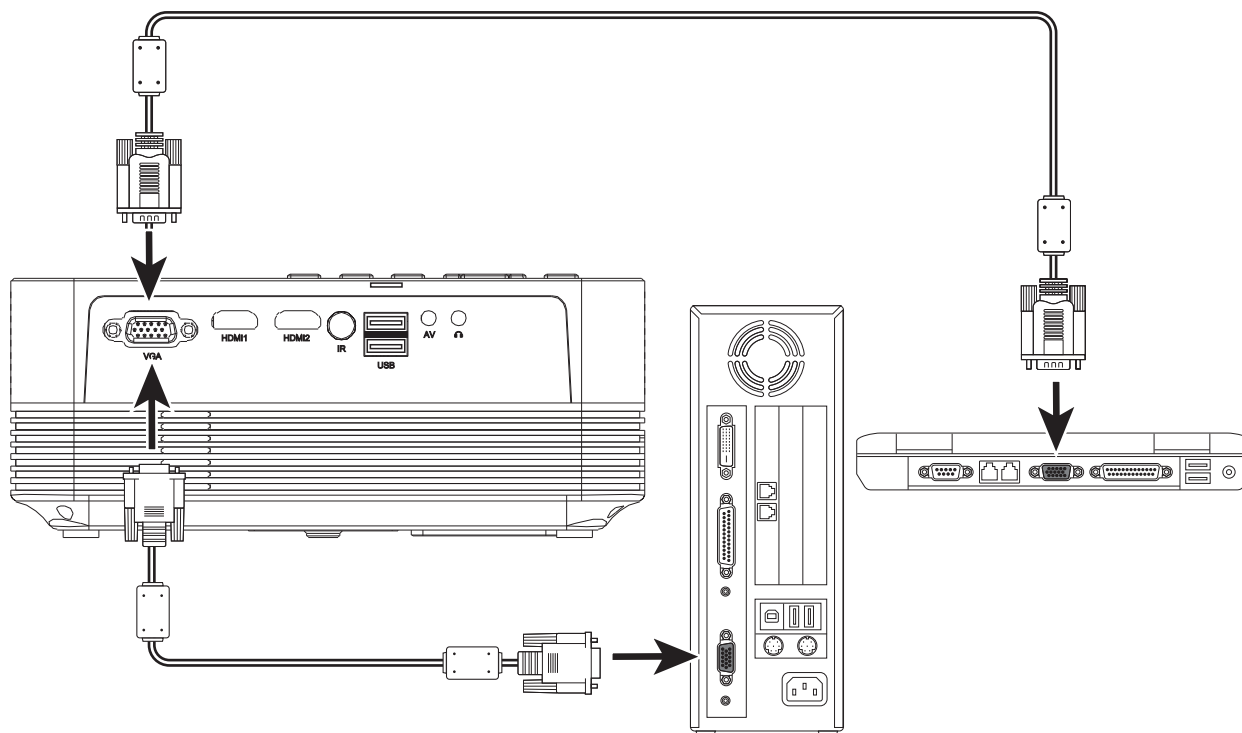

## Connecting the power adapter


- Plug the power adapter into the power jack on the side of your projector, then plug the other end into a power outlet or an extension cord.

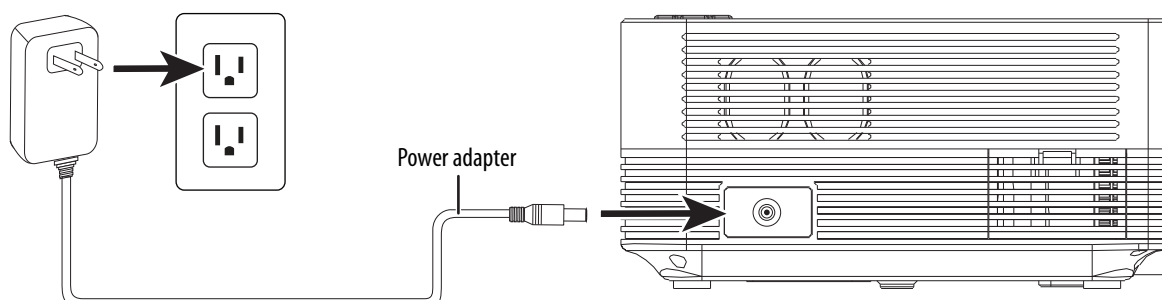

## Positioning your projector

You can use your projector both indoors and outdoors (under a cover).


- Place your projector 8 ft. (2.5 m) from the screen and at a height of 4ft. (1.2 m) to use the full screen.
- Turn the keystone wheel on the front of your projector or the adjustment screw on the bottom of your projector to adjust the projected image angle by  $\pm 15$  degrees.
- For best results, use your projector in a dark environment.

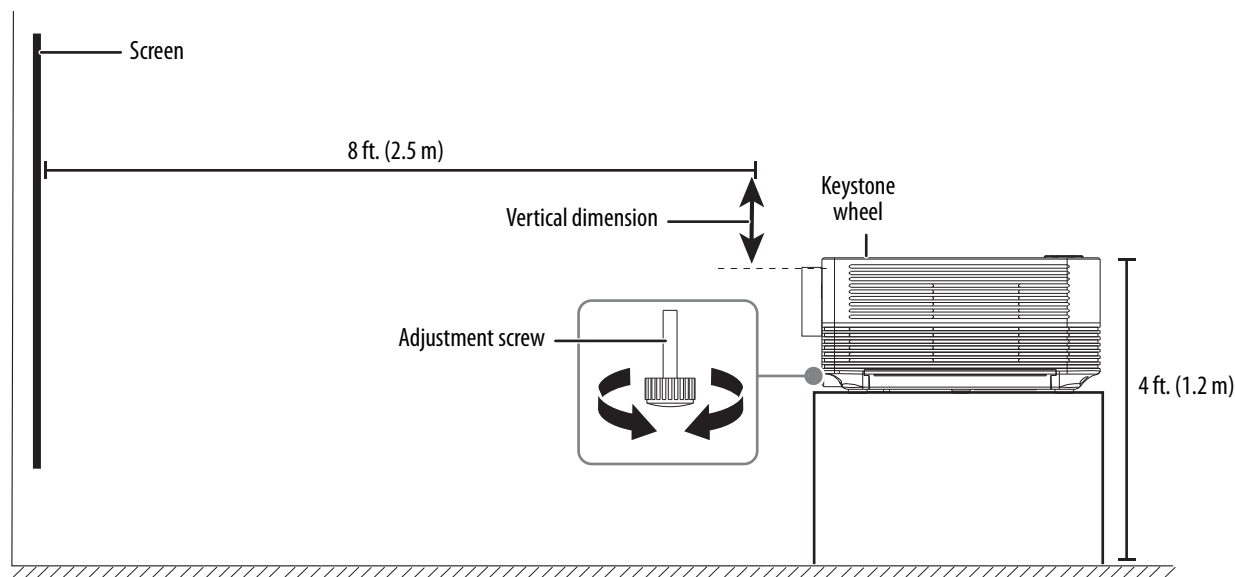



**Note:** Your projector is not intended for either ceiling or wall mounting.

## Using your projector

 
 
### Turning your projector on and off

- Press  (power) on the remote or on top of your projector to turn your projector on or off.

### Selecting the video source

- 1 Make sure that the video device is connected to your projector.
- 2 Make sure that both your projector and video device are turned on.
- 3 Press  (source) on the remote or  (source) on the top of your projector. The *Input Source* list opens.

Input Source
VGA
HDMI1
HDMI2
AV
USB1
USB2
OK

- 4 Press  or  to on the remote or projector to select the video source, then press **OK**. You can select **VGA**, **HDMI1**, **HDMI2**, **AV**, **USB1**, or **USB2**.

**Selecting VGA**

- Press ▲ or ▼ to select **VGA**, then press **OK**.

**Selecting HDMI**


- Press ▲ or ▼ to select **HDMI1** or **HDMI2**, then press **OK**.

**Selecting AV**

- Press ▲ or ▼ to select **AV**, then press **OK**.

**Selecting USB**

- 1 Press ▲ or ▼ to select **USB1** or **USB2**, then press **OK**.

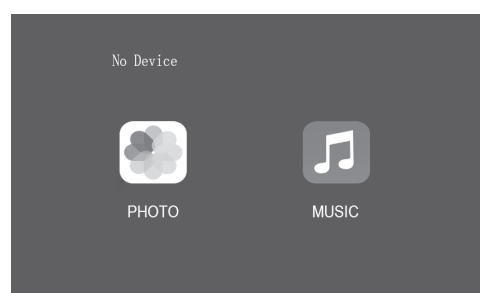


- 2 Press ◀ or ▶ to select **PHOTO** to view JPG image files or **MUSIC** to listen to MP3 music files, then press **OK**.


**Note:** Your projector only plays JPG or MP3 files.

## Adjusting the picture

- 1 Make sure that both your projector and video device are turned on.
- 2 Turn the focus wheel on the front of your projector to adjust the focus.
- 3 Press **≡** (menu) on the remote or **⏏** (menu) on the top of your projector. The *PICTURE* menu opens.

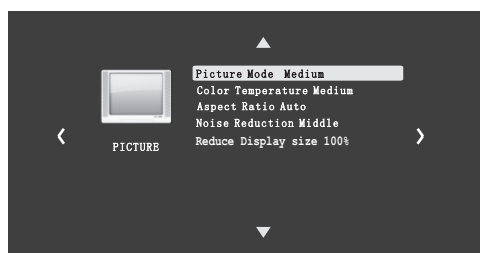

- 4 Press **▲** or **▼** to select **Picture Mode**, press **◀** or **▶** to select the picture mode, then press **OK**. You can select **Soft**, **User**, **Vivid**, or **Medium**. The option menu that opens varies based on the picture mode you selected.
- 5 Press **▲** or **▼** to select an option, then press **◀** or **▶** to adjust the option.  
If you selected **Soft**, **Vivid**, or **Medium**, you can't adjust any options.  
If you selected **User**, you can adjust **Contrast**, **Brightness**, **Color**, and **Sharpness**.

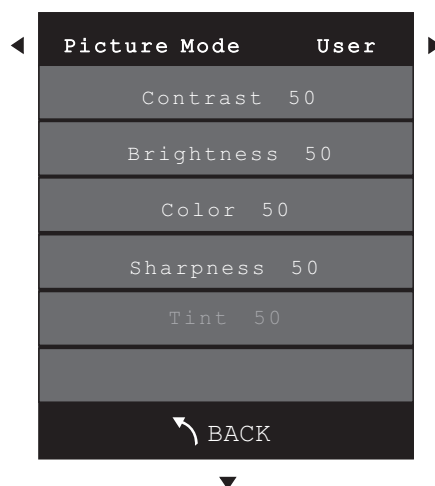

- 6 Press **◀** or **▶** to select a picture mode, then press **OK**. You can select **Soft**, **User**, **Vivid**, or **Medium**.

**Note:** To adjust the other picture options, you must set **Picture Mode** to **User**. The other picture modes are preset and can't be changed.

- 7 Press **≡** or **⏏** to close the menu.

**Note:** If a movie or video stops after you adjust the brightness or contrast, plug a mouse (not included) into the USB port, then use the mouse to press **PLAY** on the screen. Do not press **▶||** (play/pause) on the remote.

## Adjusting the contrast

- 1 Press **≡** (menu) on the remote or **⏏** (menu) on the top of your projector. The *PICTURE* menu opens.
- 2 Press **▲** or **▼** to select **Contrast**, then press **◀** or **▶** to adjust the contrast, then press **OK**.
- 3 Press **≡** or **⏏** to close the menu.

## Adjusting the brightness

- 1 Press **≡** (menu) on the remote or **⏏** (menu) on the top of your projector. The *PICTURE* menu opens.
- 2 Press **▲** or **▼** to select **Brightness**, then press **◀** or **▶** to adjust the brightness, then press **OK**.
- 3 Press **≡** or **⏏** to close the menu.




## Adjusting the tint

- 1 Press (menu) on the remote or (menu) on the top of your projector. The *PICTURE* menu opens.
- 2 Press or to select **Tint**, then press or to adjust the tint, then press **OK**.
- 3 Press or to close the menu.

## Adjusting the color temperature


- 1 Press (menu) on the remote or (menu) on the top of your projector. The *PICTURE* menu opens.
- 2 Make sure that the **Picture Mode** is set to **User**. See [Adjusting the picture](#) on page 16.
- 3 Press or on the remote or projector to select **Color Temperature**, then press **OK**.

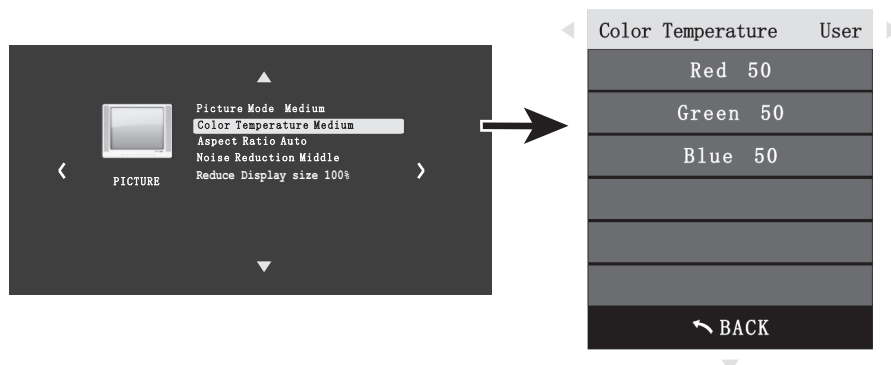

- 4 Press or to select a color to adjust, press or to adjust the color, then press **OK**. You can select **Red**, **Green**, or **Blue**.
- 5 Press or to close the menu or press to return to the option list.

## Selecting the aspect ratio

- 1 Press (menu) on the remote or (menu) on the top of your projector. The *PICTURE* menu opens.
- 2 Make sure that the **Picture Mode** is set to **User**. See [Adjusting the picture](#) on page 16.
- 3 Press or to select **Aspect Ratio**, then press **OK**.

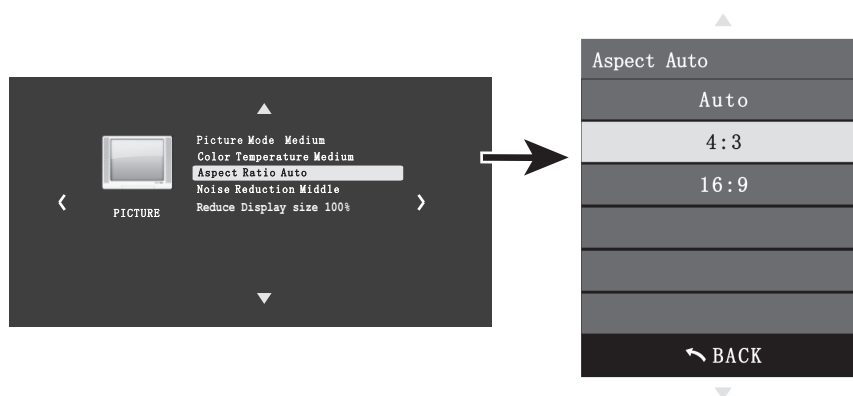


- 4 Press or to select an aspect ratio, then press **OK**. You can select **Auto**, **4:3**, or **16:9**.
- 5 Press or to close the menu or press to return to the option list.

## Adjusting the noise reduction

- 1 Press (menu) on the remote or (menu) on the top of your projector. The *PICTURE* menu opens.
- 2 Make sure that the **Picture Mode** is set to **User**. See [Adjusting the picture](#) on page 16.


- Press ▲ or ▼ to select **Noise Reduction**, then press **OK**.

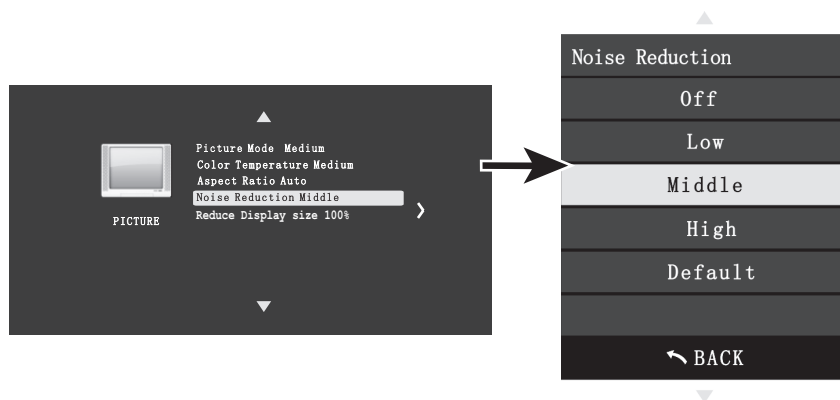

- Press ▲ or ▼ to select a noise reduction option, then press **OK**. You can select **Off**, **Low**, **Middle**, **High**, or **Default**.
- Press ≡ or ⏏ to close the menu or press ◀ to return to the option list.

## Adjusting the display size

 
- Press ≡ (menu) on the remote or ⏏ (menu) on the top of your projector. The *PICTURE* menu opens.
- Make sure that the **Picture Mode** is set to **User**. See [Adjusting the picture](#) on page 16.
- Press ▲ or ▼ to select **Reduce Display**, then press **OK**.

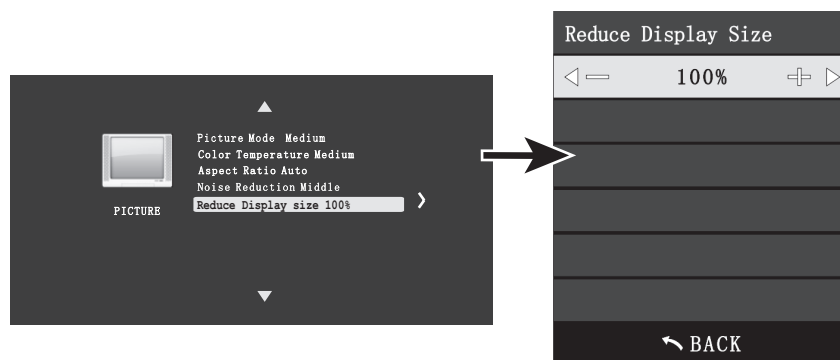

- Press ◀ or ▶ to adjust the display size between 75% and 100%, then press **OK**.
- Press ≡ or ⏏ to close the menu or press ◀ to return to the option list.

## Selecting the sound mode

 - Press ≡ (menu) on the remote or ⏏ (menu) on the top of your projector. The *PICTURE* menu opens.
- Press ◀ or ▶ to select the *Sound* menu, then press **OK**.

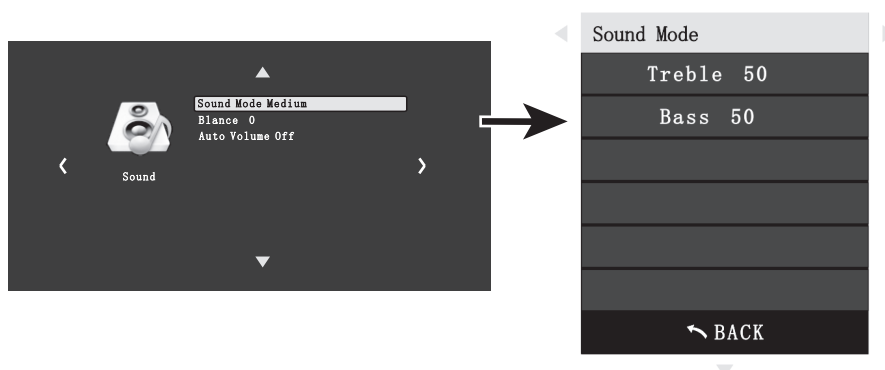

- Press ▲ or ▼ to select **Sound Mode**, press ◀ or ▶ to select a sound mode, then press **OK**. The option menu that opens varies based on the picture mode you selected.

If you selected **Medium**, **Music**, **Movie**, or **Sports**, you can't adjust any options.

If you selected **User**, you can also adjust the **Treble** and **Bass**.

- 4 Press  $\equiv$  or  $\wedge$  to close the menu or press  $\blacktriangleleft$  to return to the option list.


**Note:** To adjust the other sound options, you must set **Sound Mode** to **User**. The other picture modes are preset and can't be changed.

## Adjusting the treble or bass

 - 1 Press  $\equiv$  (menu) on the remote or  $\wedge$  (menu) on the top of your projector. The *PICTURE* menu opens.
- 2 Press  $\blacktriangle$  or  $\blacktriangledown$  to select **Treble** or **Bass**, press  $\blacktriangleleft$  or  $\blacktriangleright$  to adjust the option, then press **OK**.
- 3 Press  $\equiv$  or  $\wedge$  to close the menu or press  $\blacktriangleleft$  to return to the option list.

## Adjusting the balance

- 1 Press  $\equiv$  (menu) on the remote or  $\wedge$  (menu) on the top of your projector. The *PICTURE* menu opens.
- 2 Make sure that the **Sound Mode** is set to **User**. See [Selecting the sound mode](#) on page 18.
- 3 Press  $\blacktriangle$  or  $\blacktriangledown$  to select **Balance**, then press **OK**.

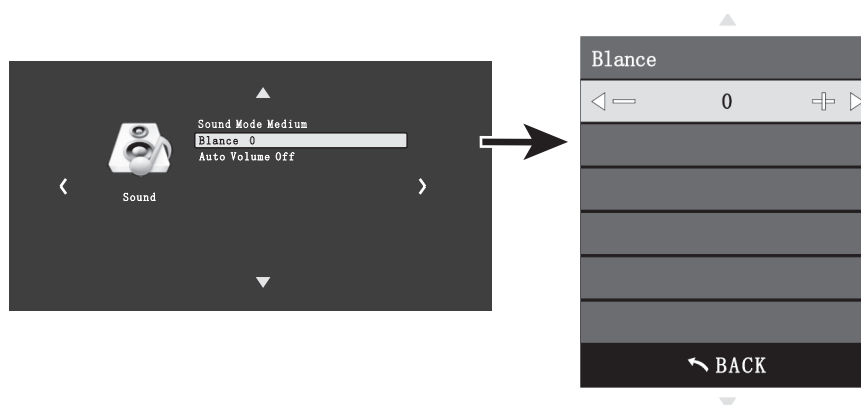

- 4 Press  $\blacktriangleleft$  or  $\blacktriangleright$  to adjust the balance between 0 to 50, then press **OK**
- 5 Press  $\equiv$  or  $\wedge$  to close the menu or press  $\blacktriangleleft$  to return to the option list.

## Turning the Auto Volume control on or off

- 1 Press  $\equiv$  (menu) on the remote or  $\wedge$  (menu) on the top of your projector. The *PICTURE* menu opens.
- 2 Make sure that the **Sound Mode** is set to **User**. See [Selecting the sound mode](#) on page 18.
- 3 Press  $\blacktriangle$  or  $\blacktriangledown$  to select **Auto Volume**, then press **OK** to toggle between **Off** and **On**.




- 4 Press  $\equiv$  or  $\wedge$  to close the menu or press  $\blacktriangleleft$  to return to the option list.

## Setting the sleep timer

- 1 Press  $\equiv$  (menu) on the remote or  $\wedge$  (menu) on the top of your projector. The *PICTURE* menu opens.
- 2 Press  $\blacktriangleleft$  or  $\blacktriangleright$  to select the *TIME* menu, then press **OK**.

- Press ▲ or ▼ to select **Sleep Timer**, then press **OK**.

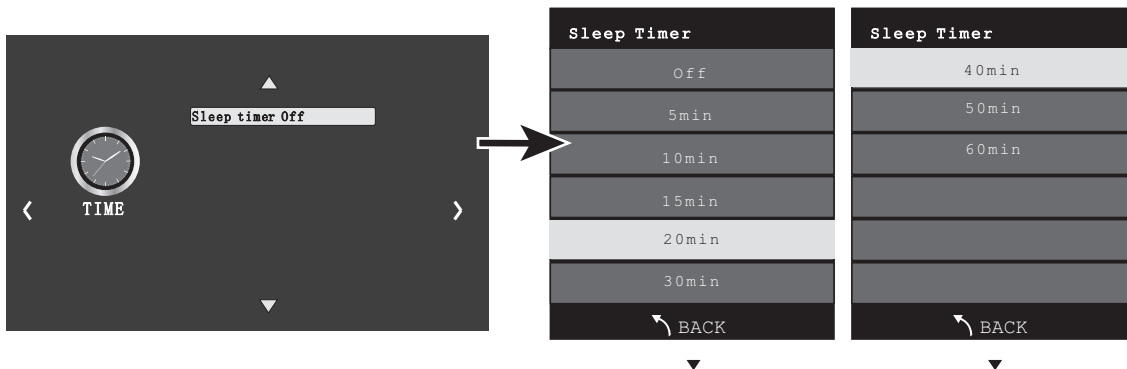

- Press ▲ or ▼ to select the sleep timer time, then press **OK**. You can select **Off**, **5min**, **10min**, **15min**, **20min**, **30min**, **40min**, **50min**, or **60min**.
- Press ≡ or ⏏ to close the menu or press ◀ to return to the option list.

## Selecting the OSD language

 
- Press ≡ (menu) on the remote or ⏏ (menu) on the top of your projector. The *PICTURE* menu opens.
- Press ◀ or ▶ to select the *OPTION* menu, then press **OK**.
- Press ▲ or ▼ to select **OSD Language**, then press **OK**.



- Press the arrows to select the language you want, then press **OK**.
- Press ≡ or ⏏ to close the menu or press ◀ to return to the option list.

## Restoring factory defaults

- Press ≡ (menu) on the remote or ⏏ (menu) on the top of your projector. The *PICTURE* menu opens.
- Press ◀ or ▶ to select the *OPTION* menu.
- Press ▲ or ▼ to select **Restore Factory Default**, then press **OK**.

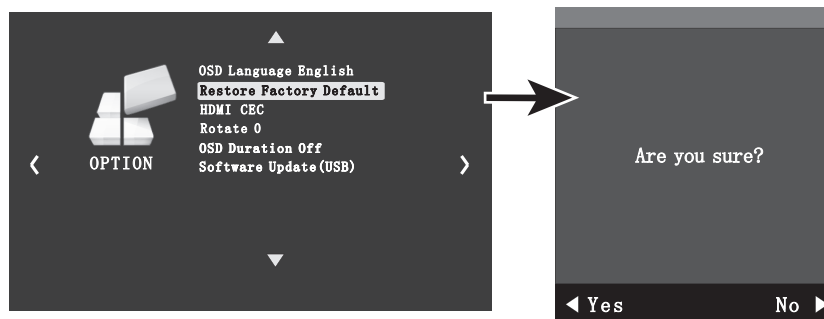

- Press ◀ or ▶ to select **Yes** or **No**, then press **OK**.
- Press ≡ or ⏏ to close the menu or press ◀ to return to the option list.

## Rotating the picture

- Press ≡ (menu) on the remote or ⏏ (menu) on the top of your projector. The *PICTURE* menu opens.
- Press ◀ or ▶ to select the *OPTION* menu.

 
- 3 Press ▲ or ▼ to select **Rotate**, then press **OK** one or more times to select how you want the picture to rotate. You can select **Rotate 0**, **Rotate 1**, **Rotate 2**, or **Rotate 3**.



- 4 Press **≡** or **⏏** to close the menu or press **◀** to return to the option list.

## Updating the USB software

- 1 Insert a USB device into a USB port on your projector.
- 2 Press **≡** (menu) on the remote or **⏏** (menu) on the top of your projector. The **PICTURE** menu opens.
- 3 Press **◀** or **▶** to select the **OPTION** menu.
- 4 Press ▲ or ▼ to select **Software Update(USB)**, press **◀** to select **Yes** or **▶** to select **No**, then press **OK**.

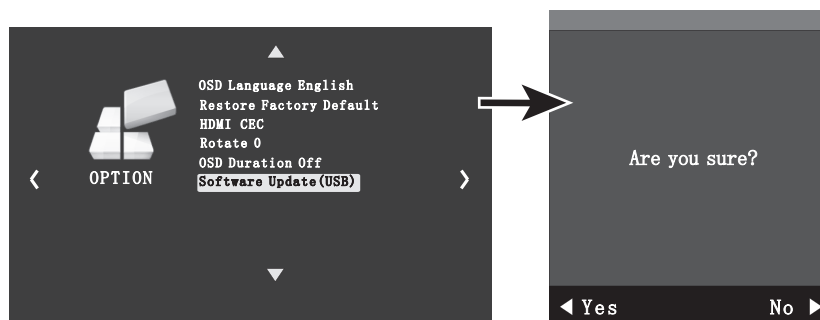

- 5 Press **≡** or **⏏** to close the menu or press **◀** to return to the option list.

## Specifications

Projector dimensions (H × W × D)	2.8 × 9 × 4.5 in. (32.6 × 22.8 × 11.4 cm)
Total weight	20.3 lbs. (9.2 kg)
Screen diagonal	91 in. (231.1 cm)
Power requirements	Adapter input: 100-240 V~50/60 Hz 1.5 A Output: 19 V/3.4 A
Bluetooth	5.0
Viewing angle	180°
Screen material	Polyester

## Legal notices

### **FCC ID**

The FCC ID for the included Bluetooth speaker is HBONSSONIC20.

### **FCC statement**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

### **FCC Caution**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC and Industry Canada radiation exposure limits set forth for an uncontrolled environment.

RG1 IEC 62471-5:2015

# ONE-YEAR LIMITED WARRANTY

## Definitions:

The Distributor\* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacture of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at [www.bestbuy.com](http://www.bestbuy.com) or [www.bestbuy.ca](http://www.bestbuy.ca) and is packaged with this warranty statement.

## How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

## What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

## How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location or from a Best Buy online website ([www.bestbuy.com](http://www.bestbuy.com) or [www.bestbuy.ca](http://www.bestbuy.ca)), please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States and Canada call 1-877-467-4289. Call agents may diagnose and correct the issue over the phone.

## Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the country where the original purchase was made.

## What does the warranty not cover?

This warranty does not cover:

- Food loss/spoilage due to failure of refrigerator or freezer
- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in). Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

**1-877-467-4289**

[www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

\*Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2021 Best Buy. All rights reserved.

# INSIGNIA™

**For product inquiries, please contact us with the information below:**

**1-877-467-4289**

**[www.insigniaproducts.com](http://www.insigniaproducts.com)**

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2021 Best Buy. All rights reserved.

V3 ENGLISH  
21-0704