

# QUICK START GUIDE



 
*Element, the Element Logo, and Bring it home are trademarks of  
Element Brand Holding, LLC. ©2021, Element Brand Holding, LLC, All Rights Reserved.*



# WHAT'S INCLUDED




**Your new TV!**


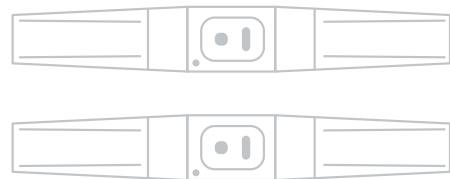


**TV Stand**

 **4 Stand Screws**



**Remote**

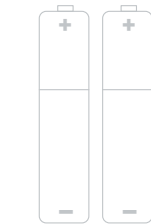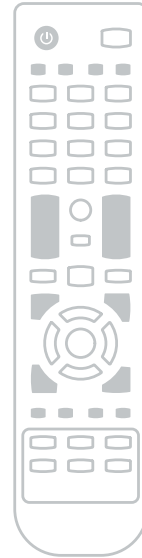  

**2 AAA Remote Batteries**

# WE'RE HERE TO HELP

Find resources and get help with product setup, connecting devices, technical issues, downloading manuals and more!

**We're available 24 hours a day, 7 days a week**



**[elementelectronics.com](http://elementelectronics.com)**



**1.888.842.3577**



**[customerservice@elementelectronics.com](mailto:customerservice@elementelectronics.com)**

# CONNECT DEVICES TO YOUR TV

Check to ensure that you have selected the right cables for the ports and that they are connected securely (*cables and external devices not included*). Loose connections can affect your picture and audio quality. Actual connections may vary by model. Please refer to the actual product.

## ANTENNA



Connect an outdoor or indoor antenna.

## HDMI



 
Connect a Blu-ray or DVD player, gaming console, streaming device or other external devices to your TV. Highest quality audio/visual connection.

## OPTICAL



Connect an optical cable from an external digital audio system.

## HEADPHONE

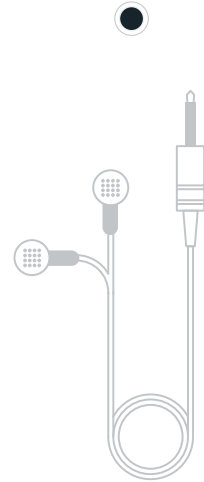

Connect headphones or external speakers.

## USB

 


Connect a USB device for browsing photos, music, movies, or pausing live TV.

# CONNECT DEVICES TO YOUR TV

(continued)

## composite (good quality)

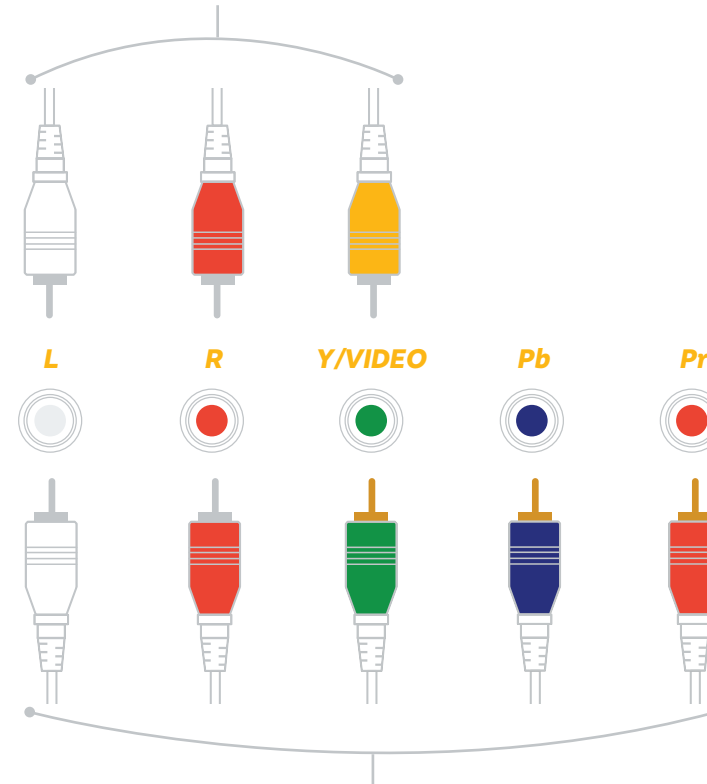

## component (better quality)

Connect a composite video (yellow) or component video (green/blue/red) and left-right audio cables from an external AV device.

# SETTING UP YOUR TV

1

 
## Place Batteries in Remote

Power your TV remote by inserting the included batteries carefully matching (+) and (-) indicated inside the battery compartment.

**TIP:** Always replace dead batteries with two brand-new batteries from the same manufacturer. Never use damaged batteries.

If your remote gets warm/hot during use, discontinue use and contact customer support immediately.

2

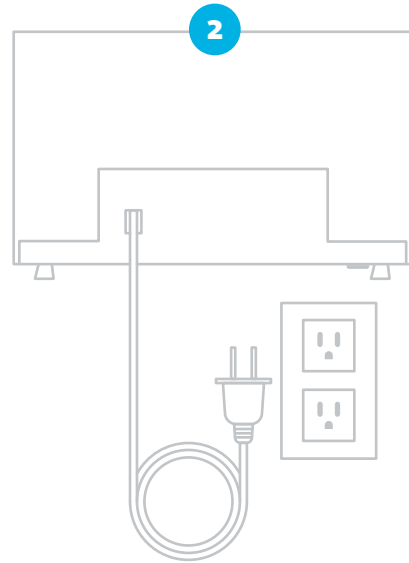

## Plug in and turn on TV

Plug your TV into the wall outlet and press the power button on your remote control.

 
## Power button



# SETTING UP YOUR TV

(continued)

3

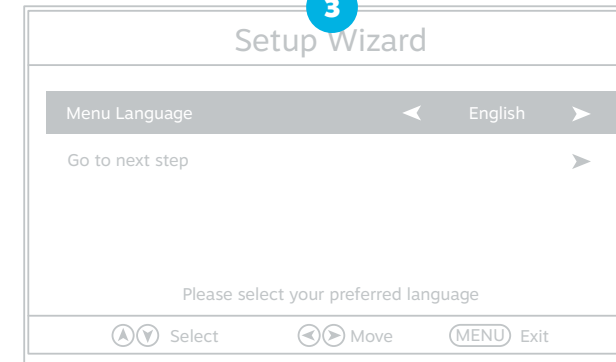

Press the ▼▲◀▶ buttons on your remote to select or change a setting. When you're finished, press MENU to exit the Setup Wizard.

**Menu Language:** Select the language you want to be displayed in the menu. The default language is English.

**Time:** Select the time zone and daylight saving time.

**Air/Cable:** Select whether you want to watch TV with an antenna (Air) or through a cable/satellite box (Cable).

**Auto Scan:** Search and store available channels automatically.

# LET'S REGISTER YOUR PRODUCT



*It's super easy, just head on over to [elementelectronics.com/register](https://elementelectronics.com/register)*

## **BENEFITS OF REGISTERING YOUR PRODUCT:**



### **Support**

Get assistance quickly by pre-registering your product.



### **News & Offers**

Take advantage of the latest news and special offers from Element.



### **Updates**

Stay current with important product updates and notifications.



### **Warranty**

Receive a 2 year warranty with product registration.\*

\*1 year manufacturer warranty with purchase or 2 year warranty with product registration within 90 days of purchase.