

## FEATURES

- Wirelessly activates a camera
- Eliminates vibration from manual shutter depression
- Improves digital picture clarity
- Compatible with most Canon, Nikon, Sony, Pentax, and Olympus cameras.

## COMPATIBILITY

Visit [www.bestbuy.com/ptwscu21](http://www.bestbuy.com/ptwscu21) for a list of compatible devices.

PT-WSCU21

# WIRELESS SHUTTER CONTROL

## QUICK SETUP GUIDE

Before using your new product, please read these instructions to prevent any damage.

## PACKAGE CONTENTS

- Wireless Shutter Control with battery
- *Quick Setup Guide*

## USING YOUR WIRELESS SHUTTER CONTROL

- 1 Set the camera to IR mode. (See the instructions that came with the camera.)
- 2 Attach the camera to a tripod or place it on a flat, steady surface like a shelf or table.
- 3 Point your wireless shutter control directly at the camera's IR receiver, then press the shutter button on your wireless shutter control. When the camera receives the IR signal, the camera automatically focuses and takes a picture.



### NOTES:

 
- Your wireless shutter control can trigger several cameras at the same time. Make sure that the IR function on all cameras is turned on and that all the cameras are within the range of your wireless shutter control.
- If the camera is out of focus, your wireless shutter control won't work.

## CHANGING THE BATTERY


- 1 Remove the screw on the back of your shutter control.



- 2 Push the release tab in the direction of the arrow.



- 3 Pull the battery tray out of the battery compartment.
- 4 Remove the old battery, then insert a new CR2025 battery face up into the tray.

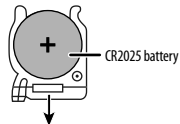

- 5 Push the battery tray into the battery compartment until the tray locks in place.

## TROUBLESHOOTING

### If the camera doesn't focus and take pictures:

- Make sure that the camera is in IR mode. (See the instructions that came with the camera.)
- Make sure that the camera has an autofocus feature. (See the instructions that came with the camera.)
- Make sure that the battery for your wireless shutter control has a charge. Replace with a CR2025 battery if necessary.
- Make sure the line-of-sight between your wireless shutter control and the IR receiver on the camera is not blocked by the lens or other obstacles.

SPECIFICATIONS

Dimensions W × H × D:

1.3 × 3.4 × .3 in. (3.3 × 8.6 × .7 cm )

Minimal: 10 ft. (3 m) ± 20°

Remote type: Trigger

Communication type: IR

IR frequency: 33.2 Khz

IR wavelength: 94 cm ± 5°

SAFETY INFORMATION

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ONE-YEAR LIMITED WARRANTY

CONTACT PLATINUM

For customer service, call 1-800-499-3964.

PLATINUM is a trademark of Best Buy and its affiliated companies  
Distributed by Best Buy Purchasing, LLC  
7601 Penn Ave South, Richfield, MN 55423 U.S.A.  
©2020 Best Buy. All rights reserved.