



## PORTABLE VACUUM SEALER

### USER MANUAL

Model : AX002S

If you are having problems using this vacuum sealer

Please email : [support@airmsen.com](mailto:support@airmsen.com)

for assistance : [www.airmsen.com](http://www.airmsen.com)

THANK YOU FOR MAKING AIRMSEN APPLIANCES A PART OF YOUR HOME.



## CONSTANT INNOVATION TO ALLOW CONSUMERS TO GET BETTER PRODUCTS

Take "technology, innovation, health" as its core value, to be the preferred brand of household products in your healthy and quality life.

AIRMOSEN focus on researching, developing and manufacturing various kinds of household supplies with advanced technologies and the idea of sustainable development, to promote the evolution and transform of our lifestyle, to make it more healthy, green, intelligent and with high quality, and to bring a happy, healthy and eco-friendly home life to around the world.

Among other things, registration of your appliance ensures that we can deliver important product information and warranty details when you need them.

Register your AIRMOSEN appliance now online.

**Website: [www.airmsen.com](http://www.airmsen.com)**

# AIRMOSEN

# CONTENTS

---

|   |   |
|---|---|
| product structure                           | 4 |
| operating instructions for vacuum bag       | 5 |
| operating Instructions for vacuum wine cork | 6 |
| technical specifications                    | 7 |
| customer support                            | 7 |
| troubleshooting                             | 8 |
| warranty information                        | 9 |

**Read the Instruction Manual before use.**


**NOTICE BEFORE USE**

- The Vacuum Sealer is not a toy. Keep out of the reach of children.
- Do not use the Vacuum Sealer on any part of the body (humans or animals).
- The Vacuum Sealer is only for use with the special Vacuum Freezer Bags.
- Do not intentionally draw liquids through the Vacuum Sealer.
- Do not immerse Vacuum Sealer in water, or any other liquid.
- Vacuum sealing system is not a substitute for refrigeration or freezing.
- Store perishable foods appropriately.
- Wash out and dry Vacuum Bags thoroughly before re-using.
- Vacuum Bags are only suitable for dried, cooked or hardened foods, not suitable for storage of small particles or sharp foods. Make sure the vacuum bag is dry before sealing shut.
- This appliance is intended for household use only. It is not suitable for industrial applications.

**NOTICE** Please remove the air from the vacuum bag with fresh fruit again after 2 days, as fresh fruit will release C02 causing the bag to fill with gas.


**product structure**

VACUUM SEALER

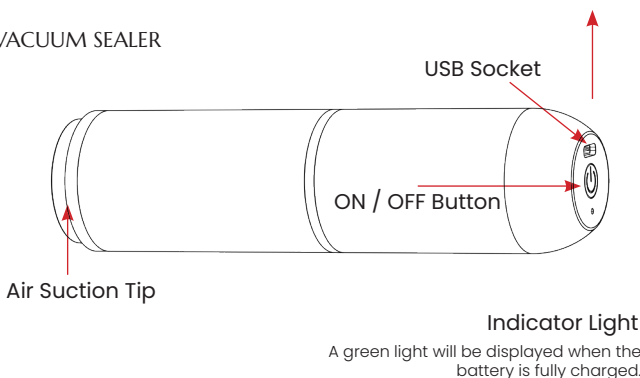

A green light will be displayed when the battery is fully charged.

VACUUM BAGS

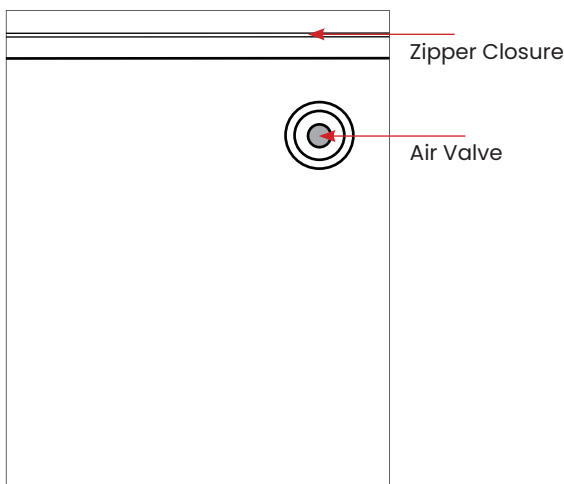

## operating instructions for vacuum bag

The USB Rechargeable Vacuum Sealer works with the Zipper Closure and Air Valve on the Vacuum Bag. Once air is removed, the Bag forms a tight seal around the food.

1. Fill and seal the Vacuum Zipper Bag with seal clip.
2. Place the sealed vacuum bag on a firm and level surface and make sure there is no food above the Maximum Fill Line or under the Air Valve.
3. Press Vacuum Sealer Tip flat against Air Valve.
4. Press the **POWER** Button to remove air from Bag. .The vacuum sealer will auto off when reach the vacuum pressure roughly  $-35$  kPa or auto off after roughly 100s.
5. Refrigerate food immediately (dry foodstuffs no need to be refrigerated).



Align and press the bottom suction port of the vacuum sealer with the suction hole



Align and press the bottom suction port of the vacuum sealer with the suction hole



Press **POWER** button to extract air from the vacuum bag .The vacuum sealer will auto off when reach the vacuum pressure roughly  $-35$  kPa or auto off after 100 s.

## operating Instructions for vacuum wine cork

The USB Rechargeable Vacuum Sealer works with vacuum wine cork. Once air is removed and reach to the setting vacuum pressure , the vacuum sealer will auto off.

1. Cover the wine bottle with vacuum wine cork.
2. Press Vacuum Sealer Tip flat against wine cork
3. Press the **POWER** Button to remove air from wine bottle. The vacuum sealer will auto off when reach the vacuum pressure roughly -35 kPa or auto off after roughly 100 s.



1. Push the wine cork center to make the air leakage before take out the wine cork .
2. Take out the wine cork then drink your wine and relax.



### Notice for Operation

- Do not run the Vacuum Sealer continuously for a long period. Draw the vacuum in short bursts, resting a few seconds before each burst.
- Do not use the Vacuum Sealer for liquid food. Pre-freeze it first so it becomes solid.
- Do not submerge the vacuum sealer under water.
- Not recommendable to store the food with sharp edges such as bones or the food with too much water or with powder (e.g. flour) in case the air valve is damaged.
- Before filling the bag, please make a note of the contents on the white Labeling Panel.
- Please do not put vacuum bag in microwave, refrain from having direct contact with fire.

**NOTICE** To ensure the Vacuum Bags can be cleaned effectively, use paper towels to absorb excess moisture for moist food, then pre-pack them and greasy food like meat and fish in a conventional freezer bag before vacuum packing.

technical specifications

|                    |   |
|--------------------|---|
| Product Dimensions | φ43*170 mm  |
| Suction Speed      | ≧ 3 L/min   |
| Rated Capacity     | 1200 mAH  |
| Rated Voltage      | 3.7 V   |
| Rated Power        | 3 W   |
| Suction Pressure   | -30 kPa ~ -40 kPa<br>(Typical value around -35 kPa) |
| USB charging       | USB-C   |
| Charging time      | 2.7 Hours   |

customer support**We're Here to Help!**

If you encounter any issues or have any questions regarding your new product, please contact our helpful Customer Support Team. Your satisfaction is our goal!

**Customer Support**

Email: [support@airmsen.com](mailto:support@airmsen.com)

Website: [www.airmsen.com](http://www.airmsen.com)

If you need to purchase product accessories, please visit [www.airmsen.com](http://www.airmsen.com).

\* Please have your order confirmation number ready before contacting Customer Support.



<https://www.facebook.com/Airmsen>



<https://www.youtube.com/@AIRMSEN>

For product operation videos,  
please subscribe to AIRMSEN's official Youtube account.

troubleshooting

| Problem   | Reason  | Solution   |
|---|---|--|
| Vacuum Sealer does not start when ON Button is pressed.                                       | Lithium batteries have no power.  | Use the USB cable to recharge the batteries.   |
| Vacuum Sealer starts but bag does not tighten around food.                                    | <ol style="list-style-type: none"> <li>1. Bag is not completely closed.</li> <li>2. Air Valve is not on flat surface.</li> <li>3. Air Suction Tip and Air Valve not making secure contact.</li> <li>4. Too much pressure is being applied to Air Valve</li> <li>5. Food is not arranged properly in bag.</li> <li>6. There's bubble on the Air Valve and has air leakage .</li> </ol> | <ol style="list-style-type: none"> <li>1. Open Bag and reclose Zipper. Run fingers across entire Zipper to ensure it is completely closed.</li> <li>2. Reposition Bag so the Air Valve lies on flat counter, with no food under Air Valve.</li> <li>3. Ensure Air Suction Tip is centered and placed flat on Air Valve. Apply moderate pressure.</li> <li>4. Moderate pressure is all that is required. Too much pressure can restrict air flow.</li> <li>5. Rearrange food so that it is below the Fill Line, and is not under the Air Valve.</li> <li>6. Use hand to remove the bubble of air valve or change a new vacuum bag.</li> </ol> |
| Vacuum Freezer Bag takes longer time to tighten around food, or loosens after air is removed. | <ol style="list-style-type: none"> <li>1. Batteries are weak, Motor runs slowly.</li> <li>2. Food particles are trapped in Zipper.</li> <li>3. Zipper is not completely sealed.</li> <li>4. Air Valve has not closed.</li> </ol>  | <ol style="list-style-type: none"> <li>1. Recharge the batteries.</li> <li>2. Try another Bag if particles cannot be removed completely.</li> <li>3. Open Bag and reclose Zipper. Run fingers across entire Zipper to ensure it is completely closed.</li> <li>4. Remove air from Bag again. Immediately press center of Air Valve with finger to ensure seal.</li> </ol>  |

## warranty information

|   |               |
|---|---------------|
| Product Name  | Vacuum Sealer |
| Model Number  | AX002S        |
| Default Warranty Period   | 1 year        |
| For your own reference, we strongly recommend that you record your order number and date of purchase. |               |
| Date of Purchase  |               |
| Order Number  |               |

### TERMS & POLICY

Airmsen warrants all products to be of the highest quality in material, craftsmanship, and service, effective from the date of purchase to the end of the warranty period.

Airmsen will replace any product found to be defective due to manufacturer flaws based on eligibility. Refunds are available within the first 30 days of purchase. Refunds are only available to the original purchaser of the product. This warranty extends only to personal use and does not extend to any product that has been used for commercial, rental, or any other use in which the product is not intended for. There are no warranties other than the warranties expressly set forth with each product.

This warranty is non-transferrable. Airmsen is not responsible in any way for any damages, losses, or inconveniences caused by equipment failure by user negligence, abuse, or use noncompliant with the user manual or any additional safety or usage warnings included in the product packaging and manual.

This warranty does not apply to the following:

- Damage due to abuse, accident, alteration, misuse, tampering, or vandalism.
- Improper or inadequate maintenance.
- Damage in return transit.
- Unsupervised use by children under 18 years of age.

Airmsen assume no liability for damage caused by the use of the product other than for its intended use or as instructed in the user manual. Some states do not allow this exclusion or limitation of incidental or consequential losses, so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which may vary from state to state.

**ALL EXPRESSED AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.**

#### **Defective Products & Returns**

Should your product prove defective within the specified warranty period, please contact Customer Support via

**support@airmsen.com** with your order number. DO not dispose of your product before contacting us. Once our Customer Support Team has approved your request, please return the unit with a copy of your invoice and order number.