

QUICK SETUP GUIDE

Portable Wire Heater

NS-HTWFB8 / NS-HTWSL6 / NS-HTWPK6

IMPORTANT SAFETY INSTRUCTIONS

- 1 Read all instructions before using this heater.
- 2 This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
- 3 Extreme caution is necessary when any heater is used by or near children and whenever the heater is left operating and unattended.
- 4 Always unplug heater when not in use.
- 5 Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater, or return to authorized service facility for examination and/or repair.
- 6 Do not use outdoors.
- 7 This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- 8 Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- 9 To disconnect heater, turn controls to off, then remove plug from outlet.
- 10 Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- 11 To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- 12 A heater has hot and arcing parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.

- 13 Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- 14 Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or re-locatable power tap (outlet/power strip).
- 15 Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord shall be No.16 AWG minimum size and rated not less than 600 watts.

SAVE THESE INSTRUCTIONS


PACKAGE CONTENTS

- Portable wire heater
- Quick Start Guide


FEATURES

- Wire heating element
- Two power settings: 750 and 1200 Watt
- Silent operation
- Red LED power light
- Double over-heating protection
- Removable rear cover for easy cleaning
- Dust filter

Front

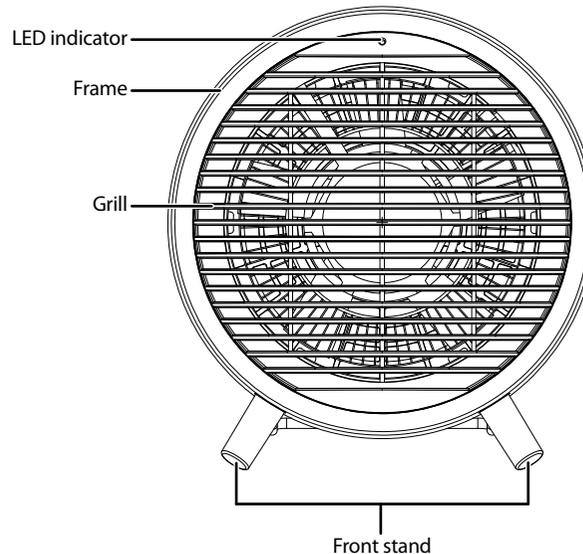

Back

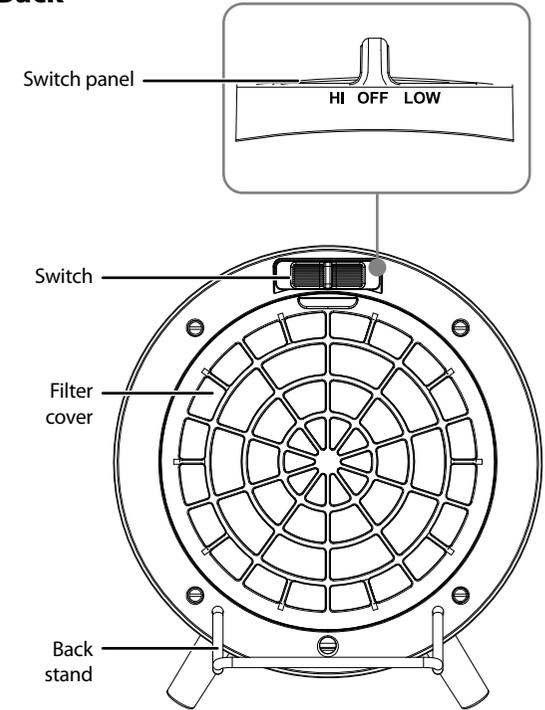

USING YOUR HEATER

- 1 Remove the heater from the package and place on a level surface, such as a floor or desktop.
- 2 Plug the power cord into a standard 120V outlet. The red LED turns on.
- 3 Slide the switch to **LOW** or **HI**.

CLEANING YOUR HEATER

- Important:** Your heater has no user-serviceable parts. Do not disassemble. This will void your warranty. Unplug the heater before you attempt to clean it.
- Clean your heater with a soft cloth, moistened with water. Do not use chemical cleaners.
 - Vacuum the air intake grill with your vacuum's brush attachment every few weeks, for optimal performance.

TROUBLESHOOTING

- If the heater isn't working, make sure that it's plugged in and that the power outlet is providing power. Check your household circuit breaker/ground fault interrupter, and reset if necessary.
- Make sure that the heater is switched to either Low or High.
- Make sure that the power cord is in good condition. If the cord is cut or frayed, do not use the heater until you have it repaired.
- If the heater runs repeatedly for several minutes and then shuts off, clean your heater.

SPECIFICATIONS

Description	Portable wire heater
Voltage/Frequency	120~60Hz
High Power (W)	1200W
Low Power (W)	750W
N.W. (kg)	1.8 lbs (0.8 kg)
Product size	8.26 × 6.29 × 8.85 in. (210 × 160 × 225 mm)

ONE-YEAR LIMITED WARRANTY

For complete warranty, visit www.insigniaproducts.com.

CONTACT INSIGNIA

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)
www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2017 Best Buy. All rights reserved.
Made in China