


# CDR002-6 COMMERCIAL BEVERAGE REFRIGERATOR

## User Manual

SKU: CDR002-6BL-USZX

MODEL: CDR002-6

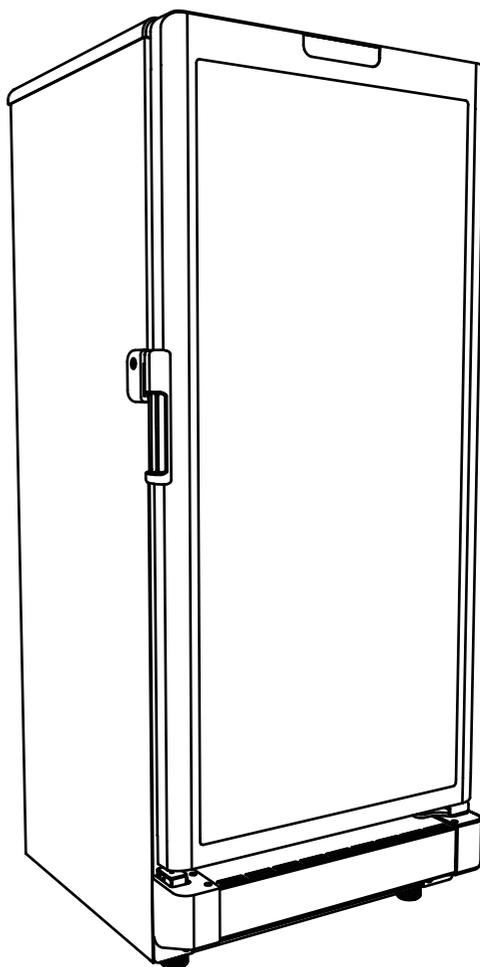

[support@homyd.com](mailto:support@homyd.com)



1-833-632-0897



# THANK YOU FOR CHOOSING US

Thank you for choosing our product.

We sincerely appreciate your trust and support. Your satisfaction is our top priority, and we are committed to delivering high-quality products and attentive service.

If you have any questions or suggestions during use, please do not hesitate to contact us. We are always here to assist you.

## Contact Information

Email: [support@homyd.com](mailto:support@homyd.com) (Replies within 24 hours on business days)

Toll-Free: 1-833-632-0897 (Monday to Friday, 9:00 AM – 6:00 PM ET)

We hope this product brings ease and enjoyment to your daily life.

## Warranty Statement

This product is covered by a limited warranty that protects against defects in materials and workmanship under normal household use.

If your product develops a fault after the return period of your purchase platform has ended, please contact us directly. We will do our best to assist you based on the warranty terms.

For warranty-related inquiries, please reach out using the contact details listed above.

# Contents

Important Safety Instructions	01
Key Components and Structure	05
Installation Guide	06
Getting to Know The Beverage Refrigerator	08
Cleaning and Maintenance	09
FAQs	12
Troubleshooting	13
Specs	14
Warranty Policy	15
Return Policy	16

# IMPORTANT SAFETY INSTRUCTIONS

-  Read and review instructions to understand the operation and use of the product.
-  Indicates the presence of a hazard that can cause personal injury, death, or substantial property damage if the warning included with this symbol is ignored.

## Warnings

*Failure to follow these instructions could result in electric shock, fire or burn hazard, which could cause property damage, personal injury, or death. When using electrical appliances, basic safety precautions should always be followed, including the following:*

## General Safety Instructions

1. Read all instructions before using the appliance.
2. Only use this appliance for its intended purpose as described in this user manual.
3. To prevent any hazards, all issues with the appliance must be resolved in accordance with the instructions in this manual.
4. Before using the appliance, it must be properly positioned and installed according to the instructions in the user manual. Please read the user manual carefully to reduce the risk of fire, electric shock, or injury during use.

## Child Safety

5. Keep the appliance and its cord out of reach of children. **DO NOT** allow the appliance to be used by children. Close supervision is necessary when using near children.
6. If you will not be using the appliance for an extended period, plan to store it, or dispose of it, please remove the doors and keep the shelves in place to prevent children from easily climbing inside and reduce the risk of entrapment.
7. Never allow children to operate, play with, or crawl inside the appliance.
8. The appliance can be used by individuals with reduced physical, sensory, or mental capabilities, or those lacking experience and knowledge, provided they have received supervision or instruction on the safe use of the appliance and understand the associated hazards.

## Electrical Safety and Power Connection

9. Before cleaning or performing maintenance, ensure the appliance is unplugged to prevent electric shock or death. **DO NOT** plug in or unplug the power cord with wet hands.
10. This refrigerator is not designed for use with an inverter.
11. **DO NOT** attempt to repair or replace any parts of the appliance unless explicitly instructed in this user manual. All other servicing must be carried out by qualified service personnel.
12. **DO NOT** twist, pinch, pull, or damage the power cord. When disconnecting, firmly grasp the plug and pull it straight out of the socket. Repair or replace any frayed or damaged cords immediately; **DO NOT** use cords with cracks or abrasion.
13. **DO NOT** use an extension cord with this appliance, as it may negatively impact its performance. If the power cord is too short, please have a qualified electrician or service technician install an appropriate outlet near the appliance.
14. If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified personnel to prevent any safety hazards.
15. Ensure the power cord is not tangled or damaged during installation or when moving the appliance; handle it with care to avoid damage.
16. Improper use of the grounded plug may result in an electric shock. This appliance must be properly grounded for your safety. Plug the power cord into a grounded 3-prong outlet. **DO NOT** remove the grounding prong, use an adapter, or use an extension cord.
17. The appliance must be connected to a standard power supply (115V/60Hz), properly grounded in accordance with the National Electrical Code and local regulations.
18. Always plug the appliance into its own individual outlet with a voltage rating that matches the rating label on the appliance.
19. Secure the power cord behind the appliance to prevent it from being exposed or dangling, which may cause accidental injury.

## Fire and Overheating Prevention

20. **DO NOT** use or store gasoline, flammable liquids, or corrosive substances (such as strong alkalis, strong acids, or organic solvents) near or inside the appliance. Never use flammable liquids to clean the appliance, as vapors may cause fire, explosion, corrosion, or safety hazards.

21. **DO NOT** block the front door or ventilation openings of the appliance. Install the appliance in a well-ventilated area with a temperature range of **10°C (50°F) to 32°C (90°F)**, ensuring it is protected from wind, rain, water spray, or drips.
22. **DO NOT** store cream, spray bottles, or any items that may contaminate food inside the unit.
23. The appliance should be stored in a room free from continuous ignition sources (e.g., open flames, operating gas appliances, or electric heaters).
24. **DO NOT** pierce or burn the appliance.
25. Component parts must be replaced with identical original components to minimize the risk of ignition caused by incorrect parts.

## Installation and Transport

26. **DO NOT** damage the refrigerant circuit during installation or transport.
27. **DO NOT** damage the walls of the unit, as this may rupture the sealed refrigerant circuit.
28. The appliance must be stored in a way that prevents mechanical damage. All wiring should be checked to ensure it is free from wear, corrosion, excessive pressure, vibration, sharp edges, or other adverse environmental effects. Long-term vibration from components such as compressors or fans must also be considered.
29. The appliance must not be installed in public corridors or lobbies.
30. This appliance is designed for use in ambient temperatures between **10°C (50°F) to 32°C (90°F)**. It must be installed according to ANSI/ASHRAE 15 safety standards, and uses A3 refrigerant per ANSI/ASHRAE 34.

## Maintenance and Cleaning

31. **DO NOT** use hard brushes, wire brushes, abrasives, organic solvents, boiling water, or acidic or alkaline substances, as they may damage the surface and interior of the appliance.
32. This unit defrosts automatically. **DO NOT** use mechanical devices or other methods to speed up the defrosting process.
33. **DO NOT** leave the door open for extended periods or open it frequently, as this may cause a rise in internal temperature and reduce cooling efficiency.
34. **DO NOT** overcrowd the refrigerator or place hot food directly inside. Allow hot food to cool to room temperature and ensure proper spacing between items for effective air circulation.

35. **DO NOT** open the door unnecessarily, especially during a power outage, to preserve cold air.
36. **DO NOT** touch the compressor, as it may cause burns.

## **Risk of Fire or Explosion—Flammable Refrigerant Used**

*Dispose of the appliance following federal or local regulations. Follow all handling instructions to ensure safe disposal.*

**DO NOT** use mechanical devices to defrost the unit.


**DO NOT** puncture refrigerant tubing.

Servicing must be performed by trained personnel only.

Clean and maintain the appliance regularly according to this manual's Cleaning & Maintenance section.

# KEY COMPONENTS AND STRUCTURE

- ① Control Panel
- ② Fan
- ③ Handle
- ④ Shelf
- ⑤ Glass Door
- ⑥ Adjustable Leveling Legs

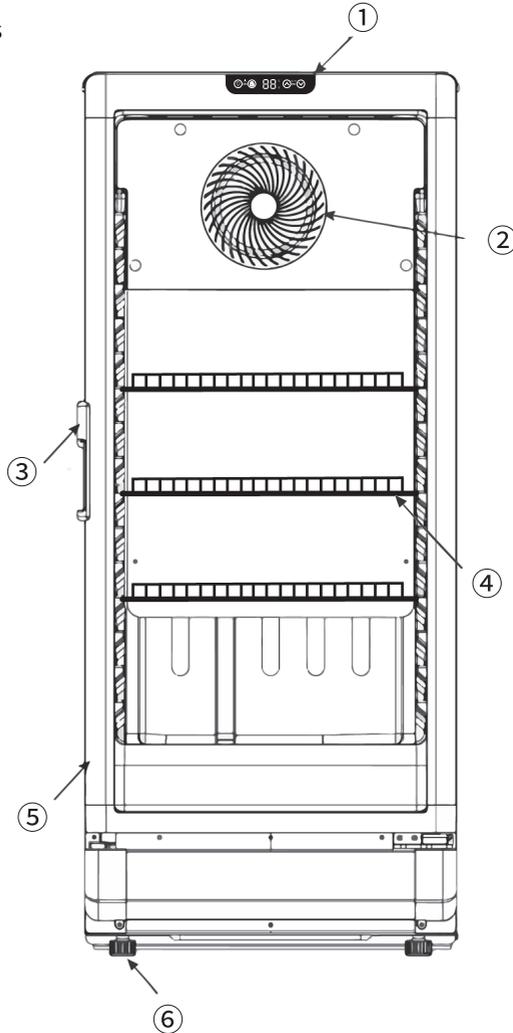

## Accessories

2 Keys



# INSTALLATION GUIDE

## Unpack

1. Please remove the internal and external packaging, and verify that all parts are included, including 2 keys and the user manual.
2. To ensure proper operation of the appliance, it's important to keep it level. Please adjust the leveling feet as needed to maintain stability.
3. Before connecting the appliance to the power source, let it stand upright for approximately **24 hours**. This will reduce the likelihood of a malfunction in the cooling system due to handling during transportation.
4. Clean the entire interior using warm water mixed with a 5% neutral soap solution. Dry thoroughly with a soft cloth. For glass components, use only designated glass-cleaning products. Avoid using plain water to prevent limescale residue.

## Proper Installation and Air Circulation

To ensure this beverage refrigerator performs at its best, please follow these guidelines:

### A. Freestanding Installation

This appliance is designed for freestanding installation.

### B. Ventilation Requirements

Always install the appliance in an open and well-ventilated area. **DO NOT** place it in an enclosed space (such as a closed cabinet or closet).

To ensure proper air circulation, maintain the following minimum clearances around the unit:

Sides: **10 cm (4 inches)**

Top: **10 cm (4 inches)**

Back: **25 cm (10 inches)**

### C. Avoid Overloading

**DO NOT** overfill the beverage refrigerator, as this may restrict airflow and affect cooling performance.


## Installation Limitations

1. To reduce the risk of fire, installation must be performed by a qualified professional.
2. Place the beverage refrigerator on a sturdy floor that can support it when fully loaded.
3. **DO NOT** place the unit near heat sources or in areas with strong airflows, such as near fans, open doors, or windows.
4. **DO NOT** expose the unit to direct sunlight or place it under a roof-mounted ventilation system.
5. Plug the beverage refrigerator into a dedicated, properly installed, and grounded wall outlet. Under no circumstances should the third (ground) prong be cut or removed from the power cord.

## Removing or Reinserting the Shelf

1. To remove a shelf, gently lift it up and slide it forward until it is completely removed.
2. To reinsert the shelf, gently slide it back into its original position.

# GETTING TO KNOW THE BEVERAGE REFRIGERATOR

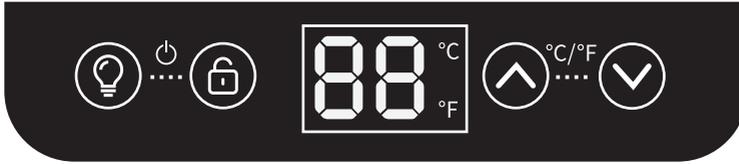

## **Light Button**

Press the  **light** button to turn the interior light on or off. The default setting is ON.

## **Power On/Off Operation**

Press and hold the  **Light** and  **Unlock** buttons for 3 seconds to turn the unit on or off. The default setting is power on. When turned off, the display will alternate between "OF" and the internal temperature.

## **Screen Lock/Unlock**

The screen is unlocked by default and does not lock automatically. To lock or unlock, press and hold this button for 3 seconds. When locked, pressing any button will display "LC".

## **Actual Temperature Display**

The temperature display shows the actual internal temperature of the unit. When using the  or  buttons to adjust the temperature, the display will briefly show the set temperature and then return to displaying the current internal temperature.

## **Temperature Increase Touch Button**

Press the button once to increase the set temperature by 1 degree.

## **Temperature Decrease Touch Button**

Press the button once to decrease the set temperature by 1 degree.

## °C/°F **Celsius/Fahrenheit Switch**

Press and hold both  and  buttons simultaneously to switch between Celsius (°C) and Fahrenheit (°F).

## Temperature Range

The adjustable temperature range is 0°C (32°F) to 10°C (50°F).

## Tip for First-Time Use

For better cooling performance, set a lower temperature and let the unit run for at least 2 hours before loading beverages.

# CLEANING AND MAINTENANCE

## Cleaning the Machine

1. Turn off the appliance and unplug it from the power outlet. Then, remove all items inside, including the shelves.
2. Clean the entire interior using warm water mixed with a 5% neutral soap solution. Wipe with a soft cloth or sponge and dry thoroughly. For glass components, use only designated glass-cleaning products. Avoid using plain water to prevent limescale residue. **DO NOT** use hard brushes, wire brushes, abrasives, organic solvents, boiling water, or acidic or alkaline substances, as these may damage the appliance. It is recommended to clean the appliance every 30 - 45 days.
3. When cleaning around the control panel and any electrical components, make sure the sponge or cloth is thoroughly wrung out to prevent moisture damage.
4. Clean the door seal every three months to maintain its effectiveness. Apply a thin layer of petroleum jelly on the hinge side to keep it soft and ensure a proper seal.
5. Regularly clean the interior walls and shelves of the appliance. If the unit has not been used for more than 48 hours, clean the drip tray located at the back of the unit.

## Handling Power Interruptions

1. Power outages may occasionally occur due to storms or other causes.
2. Most interruptions are resolved within a few hours and should not significantly affect the appliance's temperature. During this time, try to keep the door closed as much as possible to help maintain a stable internal environment.
3. In the event of a power outage, unplug the appliance from the power outlet. When power is restored, plug it back in.
4. If the power outage lasts for an extended period, take appropriate measures to protect the contents.

## Moving the Appliance

1. Remove all beverages from the appliance.
2. Secure any loose parts inside the refrigerator, such as shelves, with tape.
3. Turn all adjustable leveling legs upward toward the base to prevent damage during transport.
4. Please securely tape the door closed and ensure the appliance remains upright during transport. If horizontal transport is necessary, keep the door facing upward and wrap the exterior of the appliance with a blanket or similar protective material.

## Defrosting the Appliance

1. Remove the drinks. Unplug the unit to allow the frost to melt. (**DO NOT** use mechanical devices or non-manufacturer-recommended methods to speed up defrosting.)
2. Allow the frost to melt naturally. Ensure the internal drain is not blocked.
3. During defrosting, the melted frost will flow through the internal drain tube into the drip tray located at the back of the unit. The heat from the compressor will help evaporate the water. (If the drip tray becomes too full, it must be emptied manually.)
4. Clean the interior using warm water and a soft cloth. Dry thoroughly, reset the temperature, and allow the unit to cool for **2 hours**.
5. Reload beverages and adjust to your desired temperature.

## Maintenance Preparation Before Holidays and Relocation

1. For extended holidays or when the beverage refrigerator is empty, unplug the power cord and clean both the interior and the door seal.
2. Keep the door open to ensure proper air circulation and prevent the formation of mildew and associated odors.
3. The surface and interior of the showcase should be kept dry and clean. Prolonged exposure to moisture may lead to gradual rusting, and surface stains may develop over time.
4. When moving the appliance, always keep it upright, as lying it flat may damage the sealed system.

**Energy Saving Tip:** Place the appliance in the coolest area of the room, away from heat sources and direct sunlight.

## CORRECT DISPOSAL OF THIS PRODUCT



When the unit is taken out of service, its disposal and the handling of its materials must comply with national regulations.

## **1.Is this rated for outdoor use?**

Yes, the Commercial Refrigerator with double-tempered glass doors is suitable for outdoor use. However, it should not be exposed to extreme weather conditions or direct rain. If you have any further questions or need assistance, please don't hesitate to ask!

## **2.What are the warranty specifications?**

We provide a 12-month warranty and lifetime technical support for this refrigerator. For more information, please contact our customer service team.

## **3.Can the shelves inside the Commercial Refrigerators be moved?**

The shelves inside the refrigerator are adjustable and can be moved.

## **4.Does it keep food consistently cold?**

Yes, it keeps food consistently cold with a temperature range of 0°C(32°F) to 50°F (10°C). This range is suitable for preserving the freshness of various food and beverage items. However, for long-term or optimal food storage, it is recommended to use a dedicated refrigerator. If you have any more questions, feel free to ask!

# TROUBLESHOOTING

Problem	Possible Cause	Solution
The indicator is not on, or the compressor does not start	The plug is not properly connected to the socket	Reinsert the plug securely
	No power supply	Connect the socket to power
The indicator is on, but the compressor doesn't work and only makes a buzzing sound	Voltage is lower than 97V	Verify that the power supply voltage is stable and appropriate
The compressor stops within a minute of starting and restarts after a few minutes, repeatedly	Voltage is higher than 130V	Verify that the power supply voltage is stable and appropriate
The compressor works normally, but the temperature inside the cabinet drops too slowly	The door is opened too often	Close the door tightly and <b>DO NOT</b> open the door too frequently or for a long period of time
	Too much food is stored or it's placed improperly	Arrange food properly and leave space for cold air circulation
	Frost buildup is too thick	Remove food and defrost the unit
	Condenser surface is too dirty	Turn off the unit and clean the condenser
	The door seal is not tight	Adjust or replace the door seal
The noise is too loud	The unit is not placed steadily	Place the unit on a stable surface
	Loose components inside the refrigerator	Tighten all loose parts
	Pipes are touching each other	Ensure proper spacing between the pipes to avoid contact
The product arrived damaged or with missing parts	Damage may have occurred during transport	If you encounter this issue, please contact our customer service team. We will provide assistance to resolve the matter as efficiently as possible

# SPECS

<b>CDR002-6 Commercial Beverage Refrigerator</b>	
SKU	CDR002-6BL-USZX
MODEL	CDR002-6
VOLTAGE	115V~60HZ
RATED CURRENT	2.1A
REFRIGERANT	R600A, 1.06 Oz/30g
DIMENSIONS	21.3*20.9*50.4 inches
NET WEIGHT	96.1 LBS
GROSS WEIGHT	122.1 LBS

<b>CDR002-8 Commercial Beverage Refrigerator</b>	
SKU	CDR002-8BL-USZX
MODEL	CDR002-8
VOLTAGE	115V~60HZ
RATED CURRENT	2.4A
REFRIGERANT	R600A, 1.41 Oz/40 g
DIMENSIONS	21.1*20.9*65.6 inches
NET WEIGHT	115.9 LBS
GROSS WEIGHT	141.5 LBS

# WARRANTY POLICY

## 1-Year Limited Warranty

**Toll-Free Call: 1-833-632-0897 Mon to Fri, 9AM - 6PM ( ET )**

**Email: [support@homyd.com](mailto:support@homyd.com)**

Thank you for choosing our products. We provide a **1-Year Limited Warranty** for items purchased through our official channels. Please kindly note that this warranty is for the original purchaser and is non-transferable. If you purchase from an unauthorized seller, please get in touch with them directly.

We are committed to ensuring that our products are free from defects in materials and workmanship for one year from the date of purchase, as long as they are used under normal household conditions and maintained according to the User Manual. Please note that certain conditions and exclusions apply:

We are committed to ensuring that our products are free from defects in materials and workmanship for one year from the date of purchase, as long as they are used under normal household conditions and maintained according to the User Manual. **Please note that certain conditions and exclusions apply:**

Should you find any defects in the original product or its non-wearable parts, we will be happy to repair or replace the item within one year of purchase. If a replacement is necessary, the warranty period will continue from the original purchase date. Please be aware that normal wear and tear or damage due to mishandling, accidents, or failure to follow instructions are not covered. However, replacement parts are available for purchase. Feel free to contact us for more information.

Please also note that this warranty does not cover damage caused by exposure to liquids or foreign materials, unauthorized repairs or modifications, or use in commercial or non-household environments (unless specified for commercial use).

If you encounter any issues with your product, we are here to help. You can reach us by phone at **1-833-632-0897** or email us at **[support@homyd.com](mailto:support@homyd.com)**. For certain product categories, we also offer the option to upgrade your warranty to our VIP service.

Our friendly phone support team is available from **Monday to Friday, 9 AM - 6 PM (ET)**. To assist you more efficiently, please have your product with you when you call. We aim to respond to emails within **24 business hours**. If you don't receive a reply after sending us an email within this time frame, kindly check your spam folder to ensure you don't miss our response.

In addition to the one-year warranty, we also offer lifetime technical support. After the warranty period, service is still available at an additional cost. Please don't hesitate to contact us with any questions or concerns.

# RETURN POLICY

We offer a 30-day return policy for purchases made directly through our company. This policy is separate from and does not override the return policies of third-party platforms.

## Return Eligibility

Items must be returned within 30 days of purchase.

Products should be in new or like-new condition, with original packaging and all accessories (manuals, handles, keys, etc.).

Returns not related to quality issues will require the buyer to cover return shipping costs, which will be deducted from the final refund.

## How to Initiate a Return

Contact our customer service team for return authorization.

Provide the following information:

Proof of purchase (e.g., screenshot with platform name, order number, date, item, and amount)

After approval, we will send a return shipping label. Attach it to the product box and return via the designated carrier.

Once we receive and inspect your return, we will process your refund within **2–3 business days** (excluding original processing or handling fees).

### **\*Note:**

- Returned products that are damaged or missing parts may not qualify for a refund.
- This return policy does not affect your warranty rights.
- For details, please refer to the "Return Policy" section of this manual or the return policy on your purchase platform.