




Start in the folded position to open the Garden Kneeler /Seat for use



Raise legs by pulling upwards and click into lock position



Ensure the legs 'lock' into place securely as diagram indicates

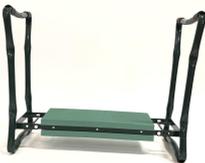

Unlock the leg by squeezing the spring handle out from the locking position



While squeezing the spring handle, fold down the leg to rest on seat



Repeat the process for the other leg ready for storage.

kneeling position



seated position



Warning

- Keep away from children, this is not a toy
- Ensure the Garden Kneeler/Seat is on a level, firm surface
- When using in the seated position there is a risk of toppling over.
- Do not lean on a single handle when rising from the kneeling position, always use both handles for support
- Be careful not to trap fingers or hands in any of the moving parts when opening and closing the Garden Kneeler/Seat.
- Do not leave outside, always store in a dry, frost-free place at all times.
- If the Garden Kneeler/Seat gets wet, wipe down and ensure it is dry before storage

Packaging

- Dispose of the packaging at your local recycling centre**
- Dispose of paper and box separately from plastic bags at your local recycling centre**
- Dispose of the item at the end of its lifespan at your local authorised household waste recycling centre.**

Have a Question/Concern?

Quality products and first-class customer service are the cornerstone of long-lasting consumer relationships. We strive toward excellence in all we do and want you to be completely satisfied with your purchase.

Please contact our exceptional Customer Experience Agents at the email address or phone number shown below to assist you with any product questions or issues before requesting a return.

We look forward to serving you in a friendly, efficient manner to resolve any issues you may have.

Customer Service Email: CustomerExperience@belnick.com

Customer Service Phone: 866-552-2810

Our Warranty Statement

This warranty covers manufacturing defects associated with your new product. The product is warranted from the original purchase date and to the original purchaser for normal usage, according to the below-referenced specifications and limitations.

- Non-moving metal parts are warranted for 5 years.
- Component parts including pneumatic cylinder, control mechanism, base and casters are warranted for 2 years.
- All other items are warranted for 1 year.

Normal usage means use in compliance with the restrictions and weight limits specified for the product. In the absence of product-specific restrictions and weight limits, normal usage means use for no more than forty hours per week by persons weighing 250 lbs. or less. Coverage terminates if the product is sold or otherwise transferred. Repairs made by parties other than Belnick also void this warranty.

This warranty will not cover: (1) labor, freight, or damage from misuse, abuse, negligence, alteration, assembly, installation, attachments, accident, vandalism, acts of nature or any other event beyond the control of Belnick; (2) tearing, scratching, scuffing, or blemishing of leather or fabric; (3) cosmetic damage that may result from normal usage; (4) damage attributable to use by persons exceeding specified weight limits or commercial use exceeding forty hours per week; or (5) rust or other damage caused by exposure to moisture. The user assumes all risk of injury resulting from use of this product. Liability for incidental or consequential damage is excluded. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.