


***SUPERSONIC***®

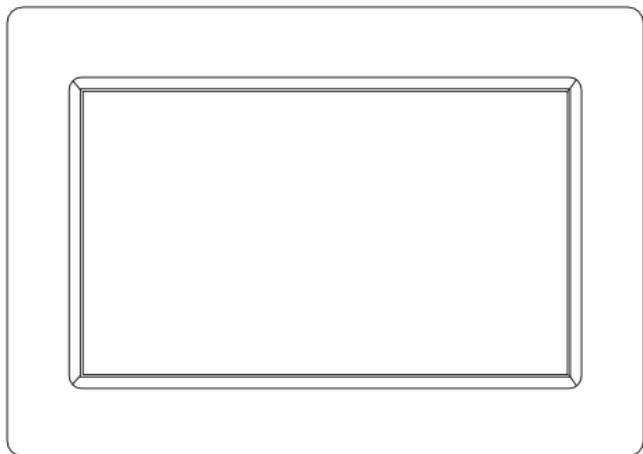

**Smart WiFi Digital Photo Frame  
SC-7110W**

ENGLISH

## Content

Foreword .....	26
Before First Use .....	26
Explanation of Symbols.....	26
Safety Instructions .....	27
What's in the Box .....	29
Product Overview .....	29
Mounting .....	30
Operation .....	31
– Setup of the Digital Photo Frame .....	31
– Setup of the App .....	36
– Connection of the Digital Photo Frame with the Frameo App on the Smartphone or Tablet .....	37
– Sending of Photos and Videos from the Smartphone or Tablet to the Digital Photo Frame.....	38
– Additional Options.....	39
– Settings .....	40
Technical Data.....	45
Data Protection.....	46
FCC Statement .....	47
Warranty .....	47

Receive wonderful photos and videos from friends and family with the Smart WiFi Digital Photo Frame with built-in Frameo software. Use the free Frameo app to send photos and videos directly from your smartphone or tablet to the Smart WiFi Digital Photo Frame wherever you are in the world. The photos or videos will appear on the digital photo frame within seconds, so you can enjoy the moments right as they happen.

## **Before the First Use**

Please read the operating instructions and safety instructions carefully before using the device for the first time.

Keep the operating instructions together with the device for later use. If other persons use this device, make this user manual available to them. If you sell the device, this manual belongs to the device and must be supplied with it.

## **Explanation of Symbols**

The following symbols are used in these operating instructions, on the device or on the packaging.



Products marked with this symbol comply with part 15 of the FCC rules.



Products marked with this symbol are operated with direct current.



Products marked with this symbol are operated with alternating current.

## Explanation of Symbols



Products with this symbol have additional or reinforced insulation and comply with protection class II.



For indoor use only. Devices with this symbol may only be operated indoors (dry environment).



Products marked with this symbol have a positive polarity. They may only be connected to products that also have a positive polarity.

## Safety Instructions

- Only connect the product if the mains voltage of the input or power supply matches the specifications on the type plate on the back of the product.
- Do not use the product if it is visibly damaged or if the power cable is defective.
- Use only the supplied power cable.
- If the product or the accessories are damaged, they must be replaced or repaired by the manufacturer, its customer service, or a similarly qualified person in order to prevent hazards.
- The housing must not be opened and repairs must only be carried out by a specialist. Contact a specialist workshop for this purpose. All liability and warranty claims are excluded in the event of repairs by the user, improper connection or incorrect operation.
- Do not insert any objects into the product.
- Do not leave the product unattended during operation.
- Protect the product from moisture. Do not touch it with wet / damp hands and do not immerse it in water.
- This product is not waterproof! Do not use this product in the rain or in wet environments.
- Do not use or store the product in high temperatures or in enclosed spaces with direct sunlight. Do not use the product at ambient temperatures above 40° C.

## 5 Safety Instructions

- Ensure adequate ventilation during operation. Never cover the product.
- If the product is used in ambient temperatures that are too cold or too hot, the product will switch off automatically.
- Do not use the product in the vicinity of flammable gases or liquids, as this can lead to explosions.
- The product is not a toy. Keep the product, accessories and packaging materials away from children and pets to prevent accidents and suffocation.
- Please have the product inspected by an authorized service center if a problem occurs. You are not allowed to disassemble the product in case of malfunction. Doing so will void your warranty.
- Turn off the power before connecting or disconnecting a memory card or USB storage device. Failure to do so may result in damage to the memory card, USB storage device and the device.
- The display is made of glass and is therefore fragile and can be scratched.
- Handle the display with care.
- You can remove fingerprints and dust on the display with a soft cleaning cloth.
- If you sell the product to another person, also pass on these operating instructions to that person.


**Note:** The product is intended for private use only and not for commercial use.

## What's in the Box

- Smart WiFi Digital Photo Frame
- Power adapter with power cable
- Holder stand
- Screw
- User manual

## Product Overview

- 1** Display
- 2** Wall mount connection
- 3** Holder stand connection
- 4** Power on / off button
- 5** Micro-USB connection
- 6** Restart button
- 7** microSD memory card slot
- 8** Power connection
- 9** Speaker

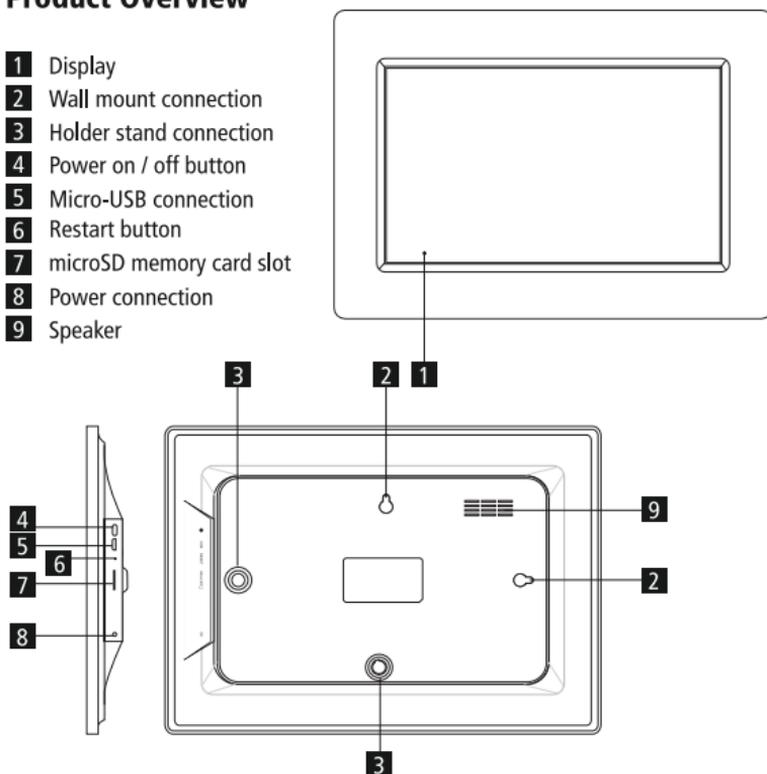

## 7 Mounting


- To place the digital photo frame on a flat surface, screw the holder stand into the holder stand connection for the horizontal or vertical position.
- To mount the digital photo frame on a wall, fasten the supplied screw with a suitable dowel to the desired wall and hook the digital photo frame onto the screw with the wall mount connection for the horizontal or vertical position.

**Note:** Electrical, gas or water lines damaged during drilling pose a significant hazard. Before attaching the digital photo frame to the wall, make sure that there are no electrical, gas or water lines behind the planned drilling points. If necessary, check this with a line detector or consult specialists.

## Operation


### Setup of the Digital Photo Frame

- Connect the power cable to the power connection of the digital photo frame and to a suitable power socket.
- The digital photo frame will then turn on automatically.
- To set the language, tap on the desired language.
- To move to the next step, tap on >.

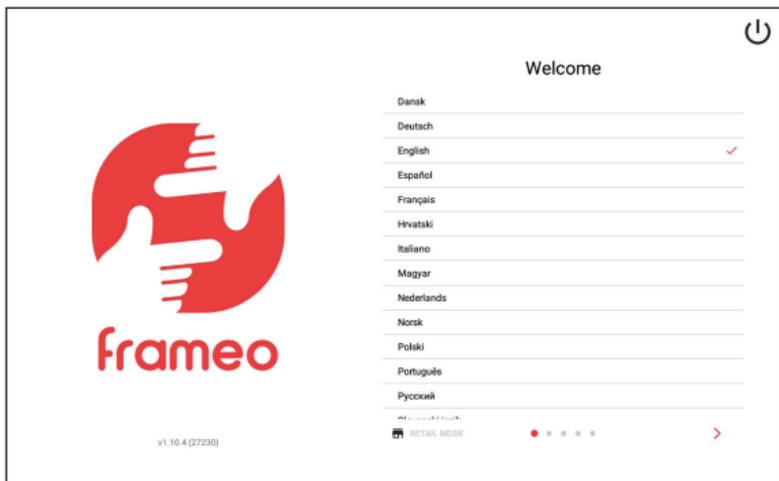


## 9 Operation

- To set the WiFi network, tap on the desired WiFi network, enter the password for it and tap on "Ok".
- To move to the next step, tap on >.

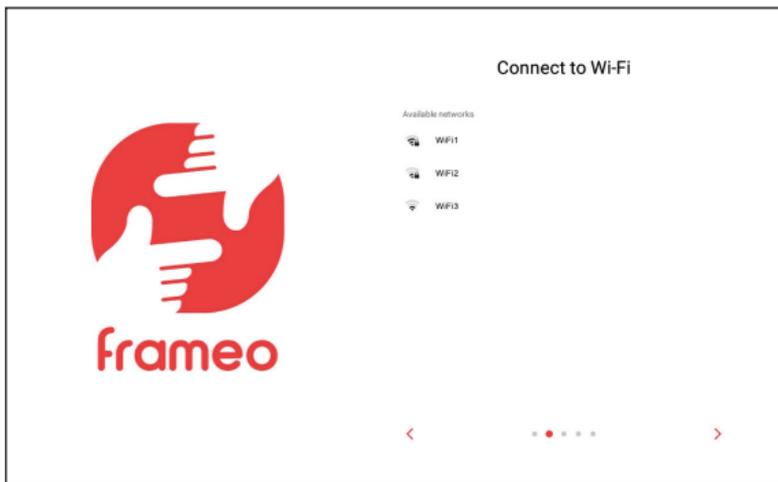


## Operation

- To set the time zone, tap on "Time zone" and on the desired time zone.
- To set the date, tap on "Date" and on the desired date.
- To set the time, tap on "Time", set the desired time, and tap on "Ok".
- To turn the 24-hour time format on or off, tap on "Use 24-hour format".
- To move to the next step, tap on >.

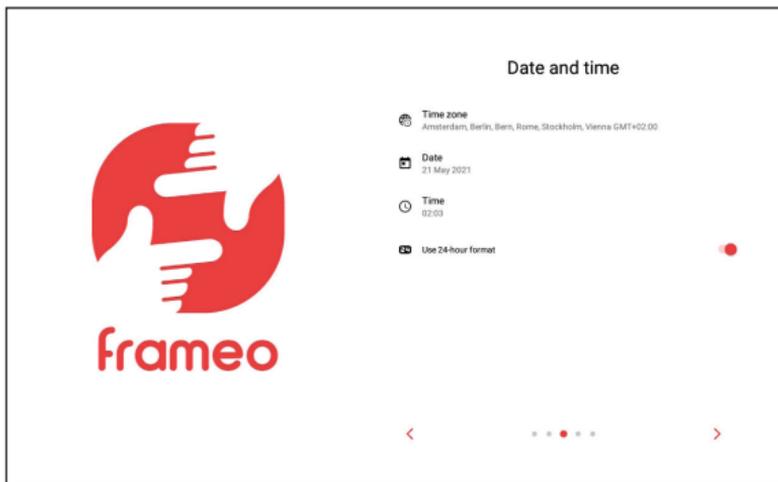


## 11 Operation

- To install a new firmware on the digital photo frame, tap on "Update". If no update is required, "Already up to date" will be displayed.
- To move to the next step, tap on >.

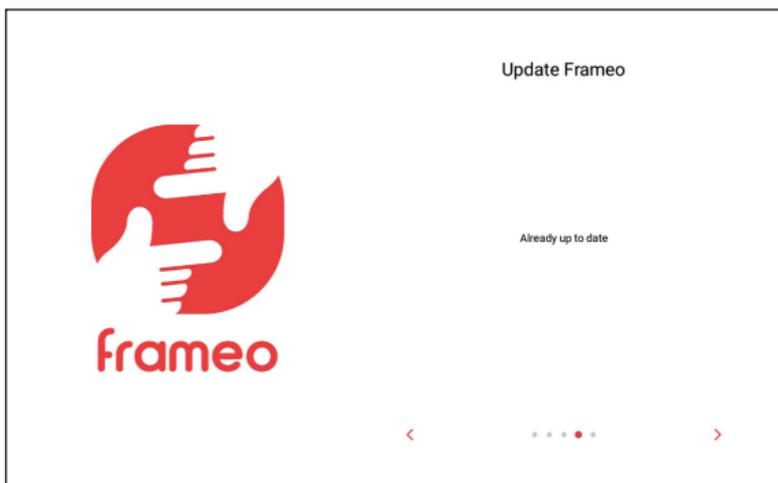

## Operation

- To set your name, tap on "Your full name" and enter your name.
- To set the location of the digital photo frame, tap on "Frame location" and enter the location.
- To finish the setup of the digital photo frame, tap on >.

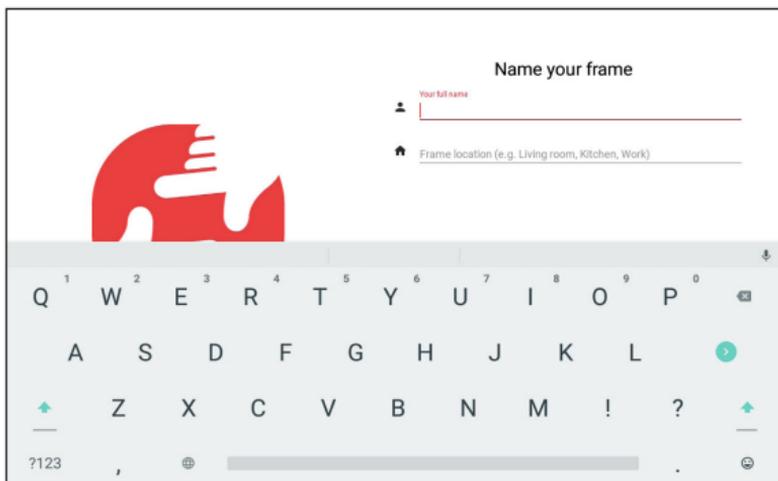


## 13 Operation

### Setup of the App

- To install the free Frameo app, scan the appropriate QR code or search for "Frameo" in the Apple App Store or Google Play Store, download the Frameo app to your smartphone or tablet, and start the Frameo app.




- To set a profile photo, tap on "Add a profile photo" and on the desired photo.
- To set your name, tap on the input field and enter your name.
- To finish setup of the Frameo app, tap on >.

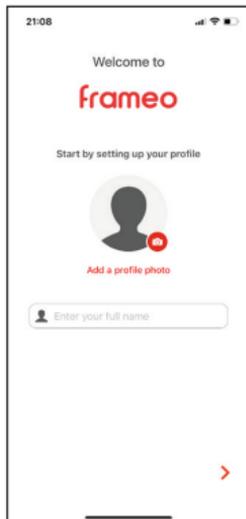


## Operation

### Connection of the Digital Photo Frame with the Frameo App on the Smartphone or Tablet

- To view the ten-digit numerical code to connect the digital photo frame to the Frameo app, tap on "Add Friend" on the digital photo frame.

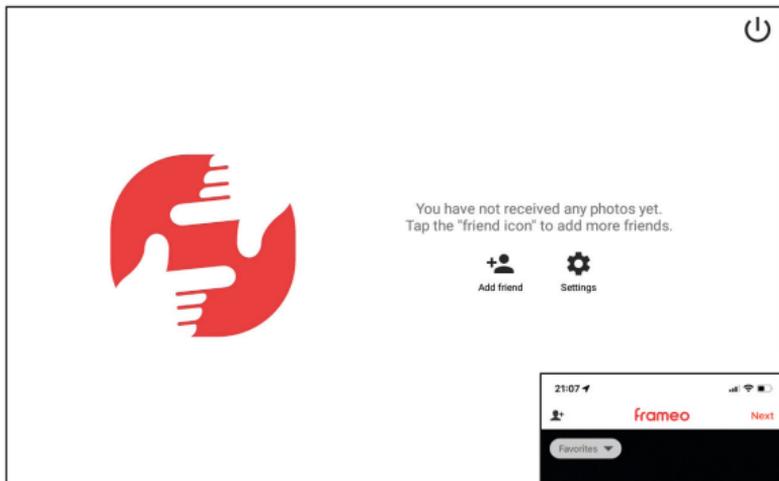




- To enter the ten-digit numerical code in the Frameo app, tap on  and on  in the Frameo app, enter the ten-digit numerical code and tap on "Ok".
- To subsequently set up the digital photo frame with the Frameo app on another smartphone or tablet, repeat the process (see above). This way, multiple smartphones or tablets can be connected to the digital photo frame.

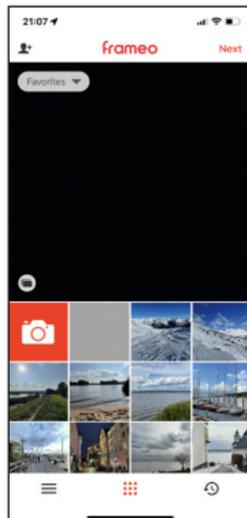

## 15 Operation

### Sending of Photos and Videos from the Smartphone or Tablet to the Digital Photo Frame

- To select photos or videos from the smartphone or tablet, tap on , on , on the desired photos or videos you want to send to the digital photo frame, and on "Next" in the Frameo app [1].
- To select one or more digital photo frames as recipients, tap on the desired digital photo frame(s) and on "Next" [2].
- To enter a caption for the photos or videos, tap on the input field, enter the desired caption and tap on "Next" [3].
- To set a picture / video crop for the photos or videos, move the crop to the desired setting and tap on "Send photos" / "Send videos" [4].

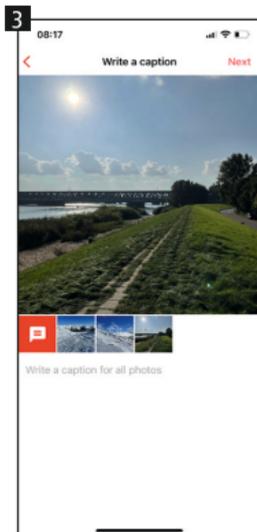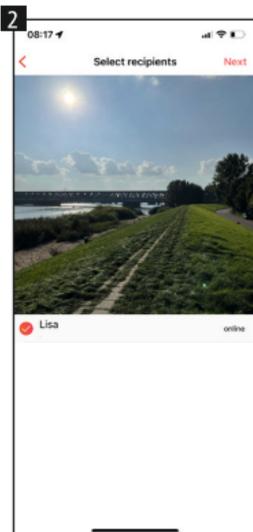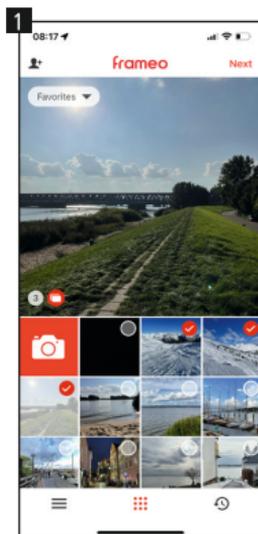


## Operation

### Additional Options

- To view the previous or next photo or video, swipe left or right on the digital photo frame display.


To get to the window for additional options, tap on the digital photo frame display.

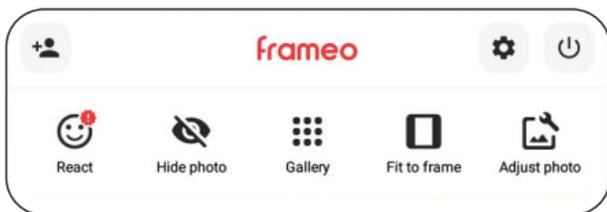

- To connect the digital photo frame with the Frameo app, tap on (see page 37).
- To respond to the displayed photo or video with emojis, tap on "React," and on the desired reaction. The reaction is then displayed in the Frameo app on the smartphone or tablet.
- To hide the displayed photo or video in the gallery, tap on "Hide photo".
- To display the gallery of all photos or videos, tap on "Gallery".
- To fit the displayed photo or video to the frame or fill the frame, tap on "Fit to frame" / "Fill frame".
- To rotate the displayed photo or video, tap on "Adjust Photo", on and on .
- To enter the settings menu, tap on .

### Settings

To adjust settings of the digital photo frame, tap on one of the desired sub-items "My frame", "Manage photos", "My friends", "Display", "Slideshow", "Wi-Fi", "Notifications", "Backup and restore", "Help" or "About".

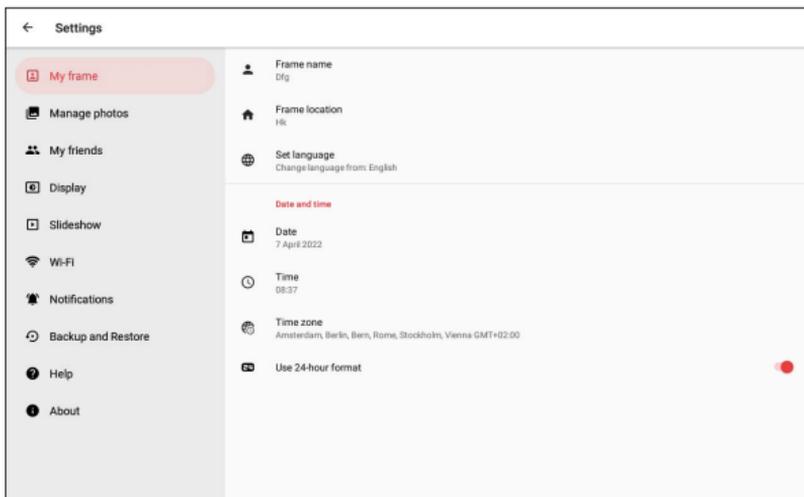

### "My frame"

- To set the name, tap on "Name of the frame", enter the desired name and tap on "OK".
- To set the location, tap on "Location of the frame", enter the desired location and tap on "OK".
- To set the language, tap on "Set language" and on the desired language.
- To set the date, tap on "Date", set the desired date and tap on "OK".
- To set the time, tap on "Time", set the desired time and tap on "OK".
- To set the time zone, tap on "Time zone" and on the desired time zone.
- To set the 24-hour time format on or off, tap on "Use 24-hour format".

## Operation

### "Manage photos"

- Here you can see the occupancy of the internal memory.
- To show or hide photos or videos, tap on "Show / hide photos" and on the desired photos and videos to show or hide.
- To delete photos or videos, tap on "Delete photos", on the desired photos and videos to be deleted, on  and on "Delete photo".
- To import photos or videos, insert a microSD memory card into the microSD memory card slot or connect an external storage to the micro USB connection of the digital photo frame when it is turned off, tap on „Import photos“, on the photos or videos you want to import, on , and on "Ok".
- To export photos or videos, insert a microSD memory card into the microSD memory card slot or connect an external storage to the micro USB connection of the digital photo frame when it is turned off, and tap on "Export photos".

### "My friends"

- To approve friends to share the code of the digital photo frame or to delete friends, tap on the respective friend and on "Allow friend to share the code to this frame" or tap on "Delete friend" and on "Delete".

### "Display"

- To adjust the brightness of the display, move the slider at "Brightness level" to the desired brightness.
- To set the sleep mode, tap on "Sleep mode", set the desired start time, tap on "Ok", set the desired end time, and tap on "Ok".

**“Slideshow”**

- To set the display duration of photos or videos, tap on “Timer”, move the slider to the desired display duration and tap on “Ok”.
- To turn the display of captions on or off for photos or videos, tap on “Show caption”.
- To adjust scaling of photos or videos, tap on “Fill frame” and on “Change for all photos”.
- To set the background, tap on „Frame background” and on „Blurred”, „Black” or „Colored gradient”.
- To adjust the order of photos and videos, tap on “Photo display order”, and on “By date received”, “By date taken”, or “Shuffle”.
- To turn reverse display order on or off, tap on “Reverse photo display order”.
- To turn auto play on or off for videos, tap on “Auto Play”.
- To set video playback for videos, tap on “Video playback” and on “Loop videos”, “Play once”, or “Play once and continue”.
- To turn auto mute on or off after 10 minutes for videos, tap on „Auto mute”.
- To adjust the volume for videos, move the slider at “Video volume” to the desired volume.

**“Wi-Fi”**

- To view the current network details, tap on your current WiFi network, on “Signal strength” or on “Connection status”.
- To set another WiFi network, tap on the desired WiFi network, enter the password, and tap on “Ok”.

## Operation

### “Notifications”

- To turn notifications on or off, tap on “Show notifications”.
- To adjust the notification volume, move the slider at “Notification volume” to the desired volume.
- To turn notifications for various events on or off, tap on “Storage space”, “Backup”, “Network connection”, “New photos”, “New friends”, “Software update”, “Feature news”, or “Date and time”.

### “Backup and restore”

- To back up photos and videos of the digital photo frame to an external storage, insert a microSD memory card into the microSD memory card slot or connect an external storage to the Micro USB connection of the digital photo frame when it is turned off, and tap on “Backup frame to external storage”.
- To turn an automatic backup on or off, tap on “Automatic backup”.
- To restore from backup to external storage, tap on “Reset frame”, follow the instructions, insert a microSD memory card into the microSD memory card slot or connect external storage to the micro USB connection on the digital photo frame when it is turned off, and tap on “Restore from backup”.
- To reset the digital picture frame, tap on “Reset frame” and on “Ok”.

### “Help”

- Here you can see internet addresses for help or data protection for the Frameo app.
- To view open source libraries, tap on “Open source libraries”.
- To turn sharing of anonymous analytics data on or off, tap on “Share anonymous analytics data”.
- To view a quick setup guide, tap on “Guide”.

## 21 Operation

### "About"

- Here you can see details about the Android version, peer ID, display resolution, RAM, MAC address or app version.
- To check the digital photo frame for updates, tap on "Check for update".
- To join or leave the beta program, tap on "Beta program" and on "Accept".

### Switching On and Off

- To turn on the digital picture frame, press the power on / off button on the back of the digital photo frame long.
- To turn off the digital photo frame, tap on the display, on  and on "Power Off", or press the power on / off button on the back of the digital picture frame long and tap on "Power Off".
- To turn off only the display, but not the digital photo frame, tap on the display, on  and on "Sleep", or briefly press the power on / off button on the back of the digital photo frame.

### Restart

- To restart the digital photo frame, tap on the display and on "Restart", or press the restart button on the back of the digital picture frame long.

## Technical Data

<b>Processor</b>	Quad Core Rockchip 3126
<b>Operation system</b>	Android 6.0
<b>Power demand in standard dynamic range (SDR)</b>	4.5 W
<b>Display type</b>	LCD display with touchscreen
<b>Display panel type</b>	IPS panel
<b>Display size</b>	10.1" / 25.53 cm
<b>Display resolution</b>	800 x 1280p
<b>Display format</b>	16:10
<b>Display brightness</b>	200 – 220 cd/m <sup>2</sup> , adjustable from 0 – 100 %
<b>Viewing angle</b>	0 – 180 °
<b>Speaker</b>	1   1 W per speaker
<b>Volume</b>	96 ± 3 dB per speaker, adjustable in 15 levels
<b>File format</b>	JPEG, PNG, MP4
<b>Max. video length</b>	Up to 15 sec.
<b>Internal memory</b>	16 GB
<b>External memory</b>	External microSD memory card of memory class 10 with up to 32 GB or external memory with micro-USB connection (photos and videos must be imported from the microSD memory card or external memory to the digital photo frame)
<b>Frequency band</b>	2.4 GHz
<b>Frequency range</b>	2.412 – 2.472 GHz
<b>Max. transmission power</b>	17 dBm
<b>App compatibility</b>	Frameo app
<b>Power supply</b>	Power adapter Input: 100 – 240 V / 50 – 60 Hz / 0.3 A Output: AC 5.0 V / 2.0 A / 10.0 W

## 23 Technical Data

<b>Connection</b>	Power connection, Micro-USB connection, microSD memory card slot, 2 x holder stand connection, 2 x wall mount connection
<b>Operating temperature</b>	0 – 40 °C
<b>Mounting</b>	Horizontally or vertically with holder stand Horizontally or vertically with wall mount
<b>Additional features</b>	Import and export function, auto rotation function, manual rotation function, frame adjustment function, reaction function, caption function, hiding function, sleep mode function
<b>What's in the box</b>	Digital photo frame, power adapter with power cable, holder stand, screw, user manual

Technical data are subject to change without notice.

The presented contents and representations may differ from the real contents and representations on the digital photo frame and in the Frameo app due to updates.

### Data Protection

Information regarding the data protection of the Frameo app can be found at <https://privacy.frameo.net/>

## FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Warranty

### Basic Warranty Statement

Supersonic Inc. ("Supersonic") warrants this product to the original purchaser ONLY, to be free from defects in materials and workmanship under normal use, for ninety

(90) DAYS from the date of original purchase. Proof of purchase (receipt) required. Please visit <http://www.supersonicinc.com/warranty> for additional information.