

Operating Instructions for 2-Speed Battery Trimmer Nail Grinder and Rechargeable Nail Grinder

For more information or Product Registration, visit WahlUSA.com

1


2. This appliance can be used by children aged from 14 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction, by a person responsible for their safety, concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

4

13





7

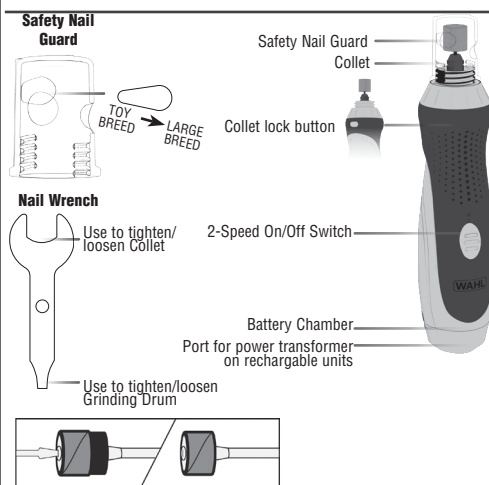


 **Course Grinding Bands** - Quickly grind down bulk of nail
Fine Grinding Band - Smooths rough edges

For replacement attachments call 800-767-WAHL (9245) or visit www.WahlUSA.com

 
- Verify Grind Band is pushed down all the way to eliminate rubbing on the safety guard preventing it from spinning

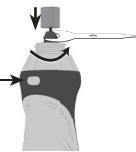


- Begin filing each nail for no more than 2-4 seconds at a time. Alternate between each nail - NEVER trim a nail completely at a time.

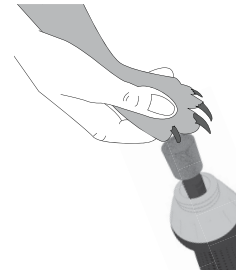

4. To round the tip of the nail, use the Grinding Stone. Gently run the nail in the top concave area as shown to round out edges and ridges.

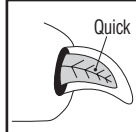

-To place batteries in correctly, look for the + and - symbols on the bottom of the unit.

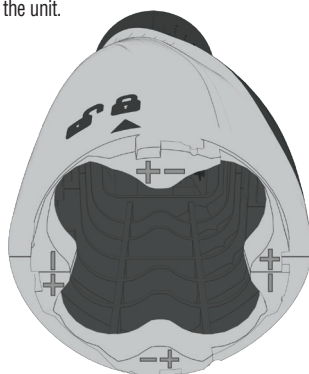

14

15