



2. Cleaning Main brush

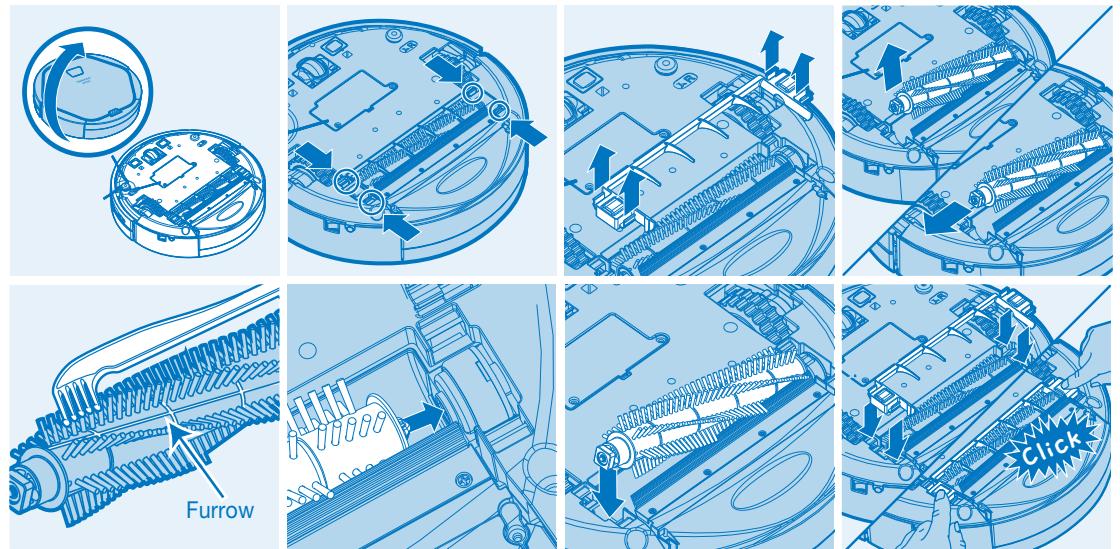


3. Check display & Solution

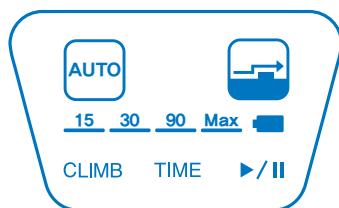

- ※ During the operation, if the window icons are blinking, please refer to the Checklist below first.
- ※ Cleaning the sensors and emptying the dustbin are required at least once a week or once every two weeks. Periodic management will extend the life of the cleaning robot.


Check display	Cause	Solution
AUTO + <u>15</u>	lifted wheel, or if the floor could not be detected	Move the robot cleaner to flat area in case the wheel is stuck on the threshold or porch.
AUTO + <u>30</u>	Wheel motor overload	Check if foreign substance such as hair or lint exists on the wheel.
AUTO + <u>90</u>	Side brush overload	Check if foreign substance such as hair or lint exists on the main brush or side-brush.
AUTO + <u>Max</u>	Main brush or suction motor overload	Empty the dustbin and clean the main brush and filter
■	Battery exhausted	Please charge

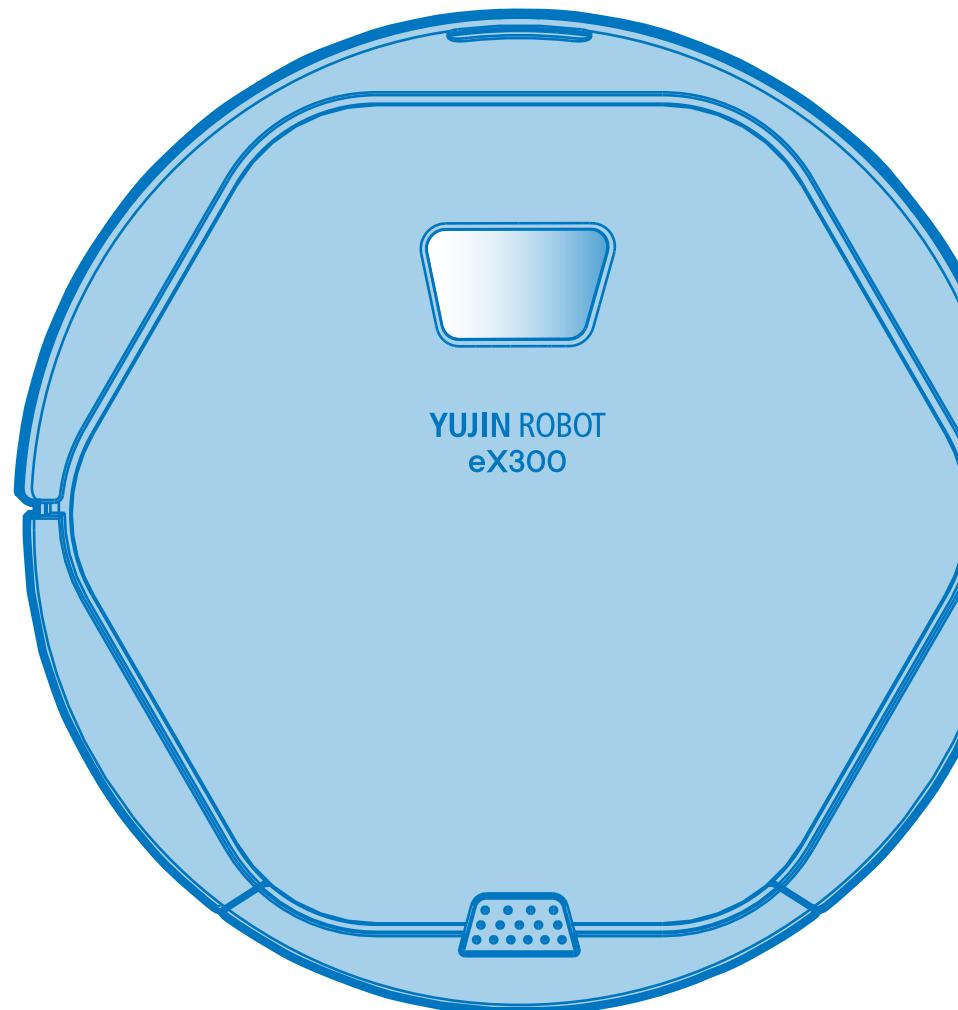YCR-M05
Quick Guide
Robotic Vacuum Cleaner eX300

※ The complete user manual also can be downloaded from our website.

INSTALLATION OF ROBOT CLEANER


1. Preparation of the vacuum cleaning robot

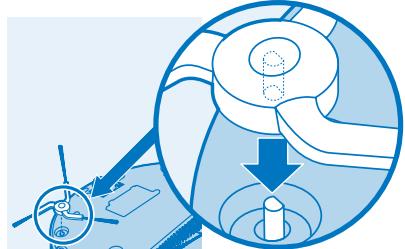

1. After flipping over the vacuum cleaning robot, check the positions of the side brush.
2. Match the groove of the side brush to the fixed pin embedded in a hollow opening of the back side of robot cleaner.



2. Installation of the charging station and charging

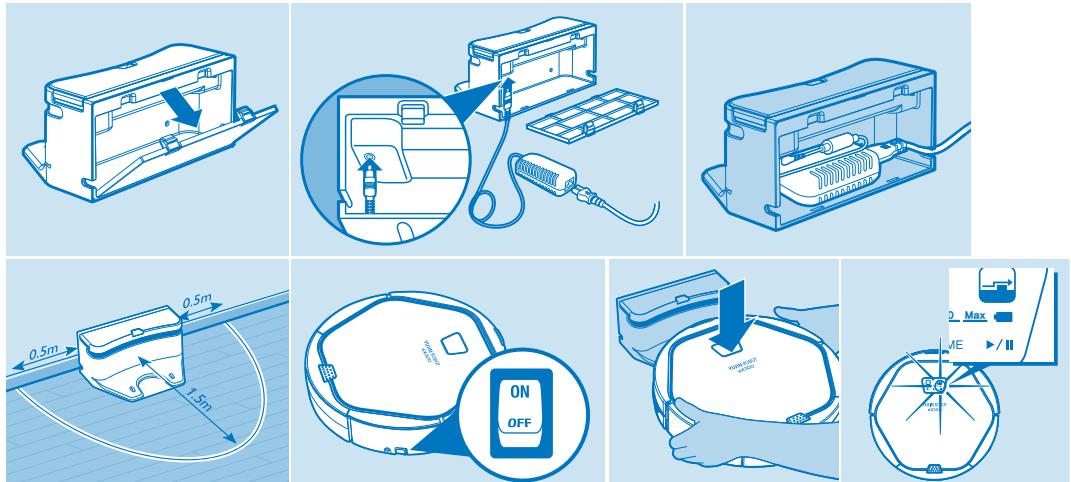

USAGE OF ROBOT CLEANER


● Basic cleaning

1. Press Start/Stop(or Power) button, (►/II)
(Turn on with alarm sound)
2. Press Start/Stop button again, (►/II)
(the robot is preset for 90 minutes in normal and starts work in random.)

ORDER	1	2
Body	►/II Start/Stop button	►/II Start/Stop button
Remote control	►/II Start/Stop button	►/II Start/Stop button

● Wet mopping


1. Turn over the robot as shown in the picture.
2. Attach mop on the mop plate after microfiber wet mop gets soaked in water and then wrung out.

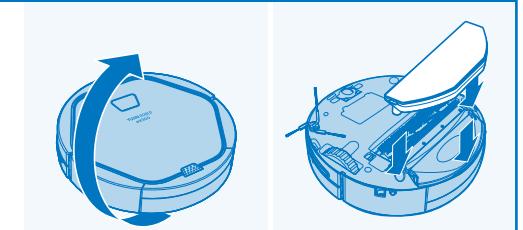

3. Turn over the cleaning robot body to its normal position and press the start button (►/II) twice please.

! Please deselect climb mode if you wish to use the robot in mopping mode (after installed mop plate on the bottom)

* If not, the robot could be hanged over on the doorsills or other obstacles, and could not be working properly.

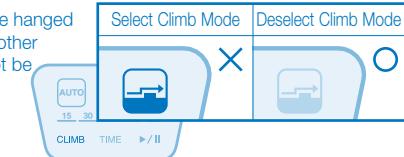

ORDER	1	2	3
Body	►/II Start/Stop button	►/II Start/Stop button	►/II Start/Stop button
Remote control	►/II Start/Stop button	►/II Start/Stop button	►/II Start/Stop button

● Spot Mode

Spot (Spiral) cleaning mode, it moves in spiral around within 1.5m radius.

1. Press Start/Stop button, (►/II)
2. Press spot mode button, (SPOT)
1. Press Start/Stop button, (►/II)



ORDER	1	2	3
Body	►/II Start/Stop button	►/II Start/Stop button	►/II Start/Stop button
Remote control	►/II Start/Stop button	►/II Start/Stop button	►/II Start/Stop button

ORDER	1	2	3
Body	►/II Start/Stop button	►/II Start/Stop button	►/II Start/Stop button
Remote control	►/II Start/Stop button	►/II Start/Stop button	►/II Start/Stop button

● Max mode

In Max mode, robot works until the battery is exhausted.

1. Press Start / Stop button, (►/II)
2. Press the time setting button(TIME) until a light on the letter Max displays (Max) on the window
3. Press Start / Stop button, (►/II)

Product Care & Maintenance

1. Regularly empty the dust bin and replace the antibacterial filter

