INSIGNIA^m



QUICK SETUP GUIDE 50"/55"/58" $| + | \rangle | \vee$ 4K ULTRA HD

NS-50F301NA22 / NS-55F301NA22 /


NS-58F301NA22





50" 55" 58"


TV stands

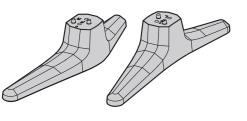


ÎÎĨĨ

50" 55" 58" M4 screws (20 mm length) (4pcs.)

 Power cord



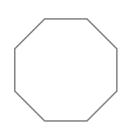

STOP Before using your new product, please

read these instructions to prevent any damage. Do not plug your power cord in until all


other devices have been connected.



INSTALLING THE STANDS OR A WALL MOUNT Place your TV face-down on a cushioned, clean surface.

STANDS

- **1** Align the TV stand screw holes with the holes on your TV's bottom.
- **2** Use a Phillips screwdriver and two provided screws to secure each stand to your TV.

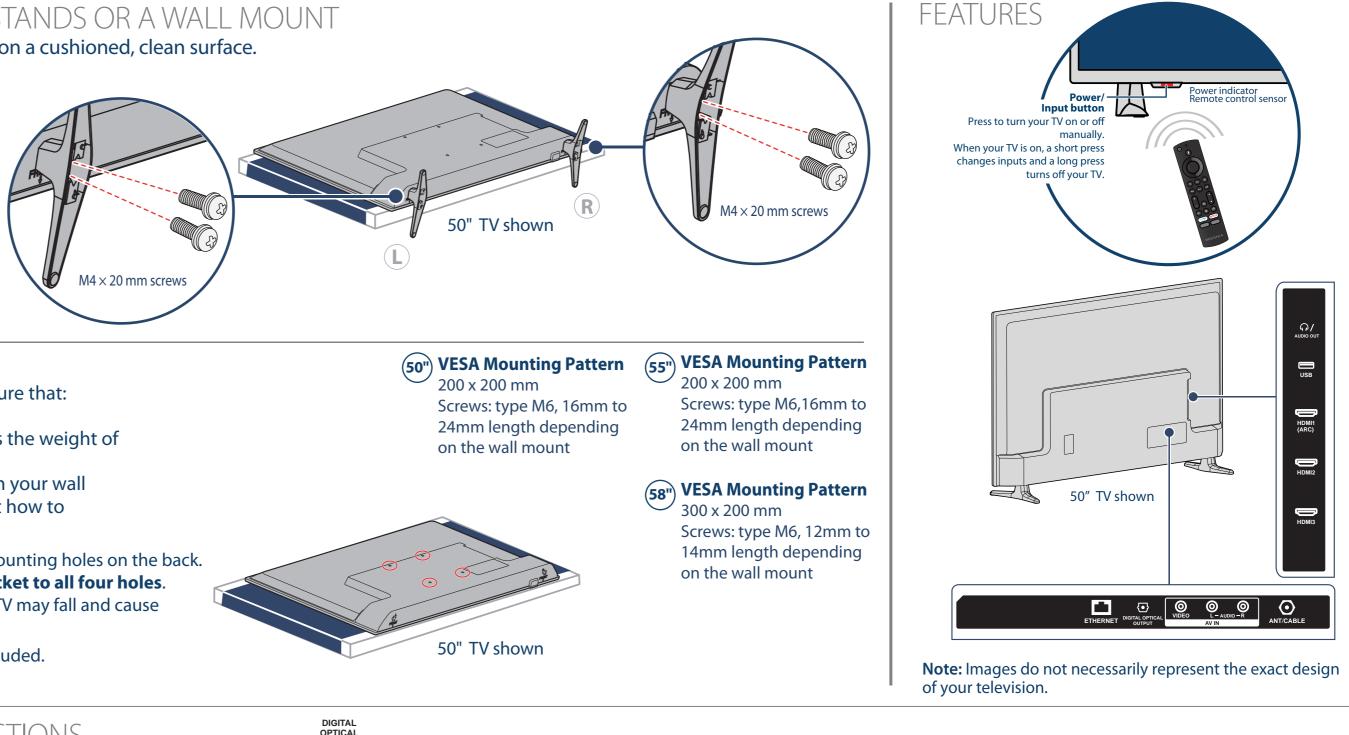


WALL MOUNT

Before you mount your TV, make sure that:


- You remove the stands.
- The wall-mount bracket supports the weight of your TV.


See the instructions that came with your wall mount for more information about how to correctly mount your TV.

 WARNING: Your TV has four VESA mounting holes on the back. You must secure a wall-mount bracket to all four holes. If you do not use all four holes, your TV may fall and cause property damage or personal injury.



Note: Wall-mount screws are not included.

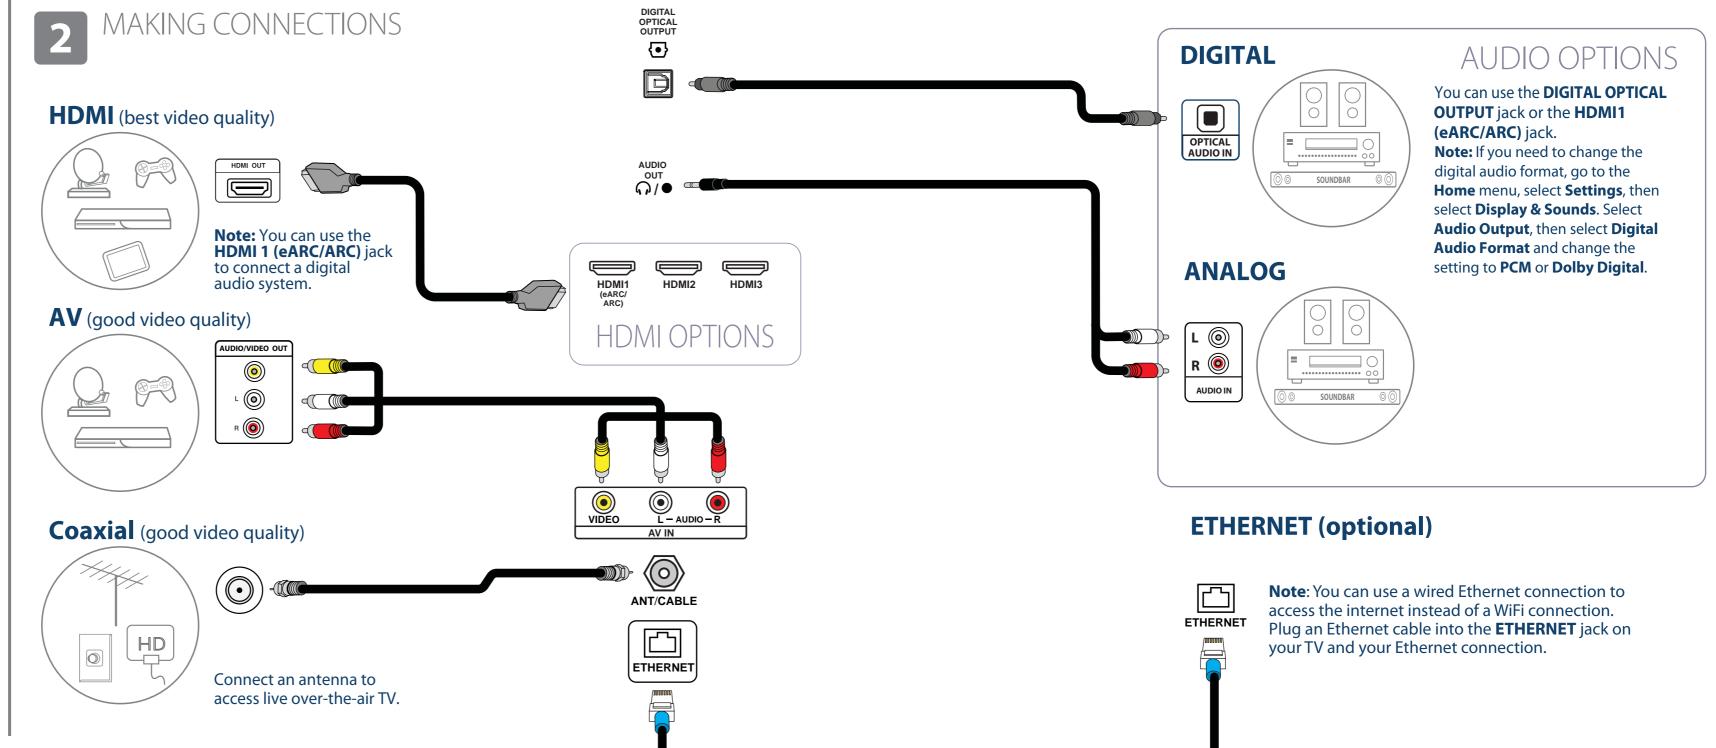

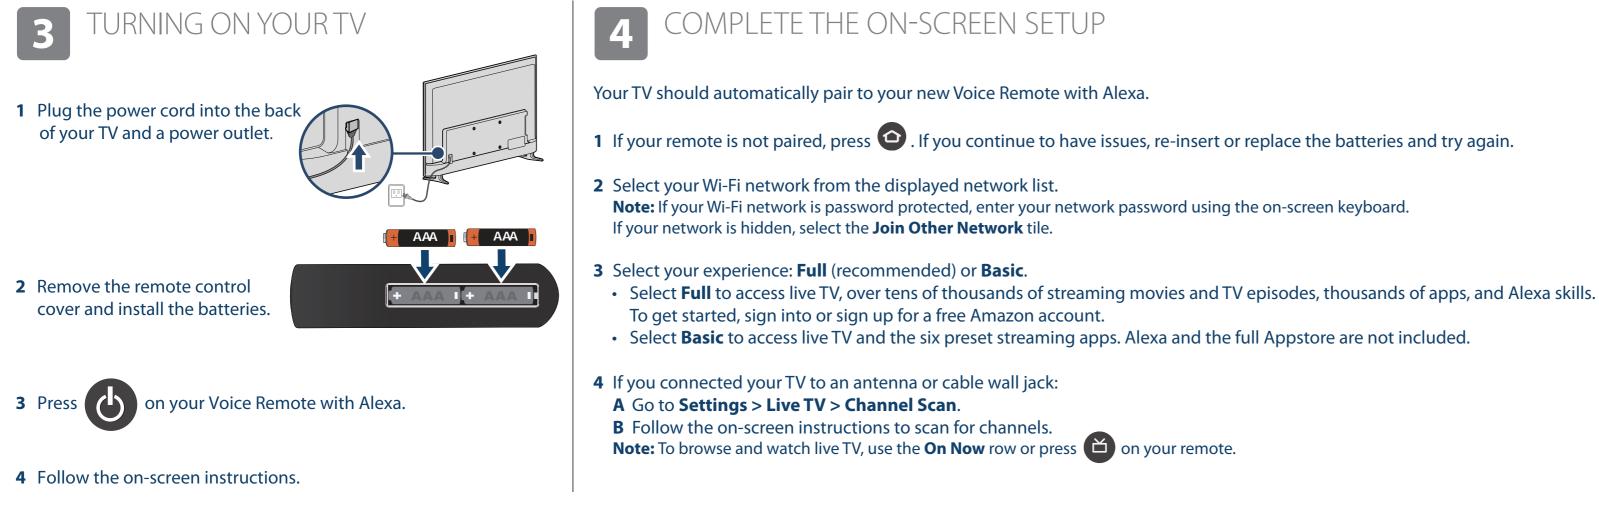

USING YOUR VOICE REMOTE WITH ALEXA

Power Turns your TV on or off. When your TV is off, the LED indicator on the front of your TV lights red.		Voice Holding down the Voice button activates the Alexa-enabled microphone on the remote, and initiates voice input. Releasing the Voice button ends voice input. With Alexa, you can use your voice to search for content, control playback, and more. (Alexa Voice Service requires an Amazon account).
Navigation Navigate on-screen (up, down, left, and right). Home		Select Confirms a selection or action.
Takes you to the Home Screen. A long press activates the Quick Settings Overlay. Back		Menu Activates contextual commands on the screen.
Returns you to the previous screen.		Play / Pause Resumes or pauses playback.
Rewind Rewind (long press) and skip back (short press). Behavior varies by app.		Forward Fast forward (long press) and skip ahead (short press). Behavior varies by app.
Volume Keys Volume + increases the volume, and Volume - decreases the volume.		Channel ← goes to the next live TV channel, and channel ← goes to the previous live TV channel.
Guide Opens the live TV Channel Guide.		Settings (gear) Activates quick settings overlay.
Mute Mutes the sound. Prime Video		Recents Opens a row of recently watched content so you can easily switch between content.
Launches Prime Video from any screen or when your TV is off.		Netflix Launches Netflix from any screen or when your
App 1 Launches App 1 from any screen or when your TV is off.		TV is off. App 2 Launches App 2 from any screen or when your TV is off.
	INSIGNIA	

FIND YOUR USER GUIDE ONLINE

1 Go to www.insigniaproducts.com

2 Use the search bar to find NS-50F301NA22, NS-55F301NA22 or, NS-58F301NA22.

3 Select Support & Downloads.

4 Next to User Guide, select the language you want.

INSIGNIA^m



A Smarter TV Is Here 4K Picture Quality, Fire TV Experience Built-in, **Voice Remote with Alexa**



Access Your Favorite Content – All Through One Home Screen

Fire TV seamlessly integrates live over-the-air TV and streaming channels on a unified home screen.



Endless Entertainment - Netflix, Prime Video, YouTube, Hulu, HBO Max, and more

Watch over 500,000 streaming movies and TV episodes with access to tens of thousands of channels, apps, and Alexa skills.



Voice Remote with Alexa

Just press and ask to easily find, launch, and control movies and TV shows.

Full Experience required to access all features described.

ONE-YEAR LIMITED WARRANTY

Visit <u>www.insigniaproducts.com</u> for details.

NEED ADDITIONAL HELP?

Check out our **Support Community** at http://community.insigniaproducts.com/ for helpful information from other Insignia TV owners.

WE'RE HERE FOR YOU

www.insigniaproducts.com For customer service, call: 1-877-467-4289 (U.S./Canada)

CONTACT AMAZON FIRE TV CUSTOMER SERVICE

www.amazon.com/deviceservices/support





For DTS patents,

see http://patents.dts.com. Manufactured under license from DTS, Inc. DTS, DTS Studio Sound, and the DTS logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2020 DTS, Inc. ALL RIGHTS RESERVED.

AMAZON TERMS & POLICIES

Before using Fire TV Edition, please read the terms located at www.amazon.com/deviceservices/support. Please also read all terms and policies for services related to Fire TV Edition, including but not limited to Amazon's Privacy Notice

located at <u>www.amazon.com/privacy</u>, Amazon's Conditions of Use located at www.amazon.com/conditionsofuse, and any other terms or usage provisions available at

www.amazon.com/deviceservices/support.

All terms, rules, notices, policies, and provisions are, collectively, the "Agreements." By using Fire TV Edition, you agree to be bound by the terms of the Agreeme

Amazon, Fire, and all related marks are trademarks of Amazon.com, Inc. or its affiliates.

Certain services are subject to change at any time, may not be available in all areas and languages, or in 4K UHD, and may require separate subscriptions or withdrawal.

Dolby AUDIO

Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 1992–2020 Dolby Laboratories. All rights reserved.

U.S. and Canada:

INSIGNIA is a trademark of Best Buy and its affiliated companies. Registered in some countries. Distributed by Best Buy Purchasing, LLC 7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2021 Best Buy. All rights reserved.